FRONT WHEEL ALIGNMENT [DIMENSIONS]

id098010898900

Front wheel alignment (Unloaded)*1

Item			Fuel gauge indication				
			Empty	1/4	1/2	3/4	Full
Maximum steering angle [Tolerance ±3°]		Inner	Vehicle equipped with 15 inch wheel: 43°00′ Vehicle equipped with 16 inch wheel: 41°00′				
		Outer	Vehicle equipped with 15 inch wheel: 35°00′ Vehicle equipped with 16 inch wheel: 34°00′				
Total toe-in	Tire [Tolerance ±4 {0.2}]	(mm {in})	2.0 {0.079}				
	Rim inner [Tolerance ±3 {0.1}]		Vehicle equipped with 15 inch wheel: 1.2 {0.047} Vehicle equipped with 16 inch wheel: 1.3 {0.051}				
	(degree)		0°11′±0°10′				
Caster angle*2 (Reference value) [Tolerance ±1°]		Normal ground clearance *3	5°7′	5°9′	5°11′	5°13′	5°14′
		High ground clearance *4	4°53′	4°55′	4°57′	4°59′	5°00′
Camber angle*2 (Reference value) [Tolerance ±1°]		Normal ground clearance *3	-0°25′	-0°25′	-0°26′	-0°26′	-0°26′
		High ground clearance *4	-0°15′	-0°15′	-0°16′	-0°16′	-0°16′
Steering axis inclination (Reference value)		Normal ground clearance *3	12°48′	12°49′	12°49′	12°50′	12°50′
		High ground clearance *4	12°29′	12°30′	12°30′	12°31′	12°31′

***1 : Engine coolant and engine oil are at specified level. Spare tire, jack and tools are in designated position.**

***2 : Difference between left and right must not exceed 1°30′.**

***3 : Distance between wheel center and fender brim is 381 mm {15.0 in} (reference value).**

***4 : Distance between wheel center and fender brim is 396 mm {15.6 in} (reference value).**

Steering Angle Adjustment


1. Loosen the tie-rod end locknuts.
2. Remove the steering gear boot clamp.
3. Rotate the tie rod and adjust the steering angle.

Note

- The travel distance of the right and left tie rods should be the same.

4. Rotate the tie rod and adjust so that dimension L shown in the figure does not exceed the specification.

   Specification
   14.8—27.8 mm {0.59—1.09 in}

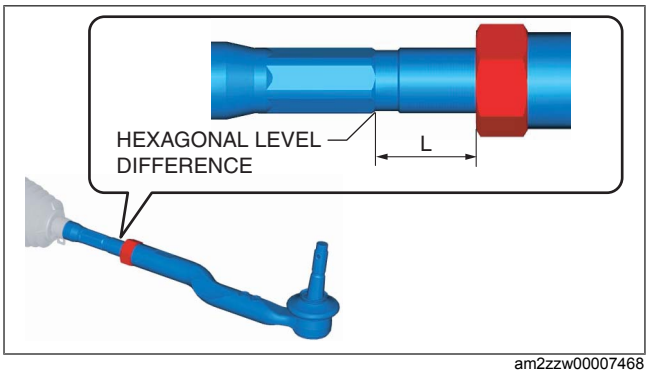

am2zzw00007468

5. Tighten the tie-rod end locknuts.

   Tightening torque
   69—98 N·m {7.1—9.9 kgf·m, 51—72 ft·lbf}

6. Verify that the boot does not have any twisting and install the boot clamp.
7. After steering angle adjustment, always inspect and adjust the total toe-in. (See Total Toe-in Adjustment.)

Total Toe-in Adjustment

1. Loosen the locknut of the tie-rod end.
2. Remove the boot clamp.
3. Adjust the total toe-in by rotating each tie rod (left and right) in the opposite directions by the same amount respectively.

   Note
   - Toe angle changes by **approx. 7 mm {0.3 in}** in per one rotation of the tie rod for one wheel.
   - Each tie rod has a right-hand thread.

4. Tighten the locknut of the tie-rod end.

   Tightening torque
   69—98 N·m {7.1—9.9 kgf·m, 51—72 ft·lbf}

5. Verify that the boot does not have any twisting and install the boot clamp.