## DETERMINING OPEN CIRCUIT LOCATION (HS-CAN) [SKYACTIV-D 1.5]

id100218000400

**Caution**

- **Perform the following malfunction diagnosis only when it is diagnosed with a open circuit by CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW. (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-D 1.5].)**
- **If the malfunctioning part is detected in the communication line, before disconnecting the related connector for inspection, press the connector in the connection direction to verify that there is no looseness or disconnection.**
- **When disconnecting the connector, verify that there is no damage, deformation, or corrosion of the connector terminals.**

1. Verify the CAN system-related module DTCs and the failed module on the M-MDS screen.
2. Apply the communication error DTC and the failed module to DTC output pattern and malfunctioning location, and select the possible cause for the diagnostic result and the reference for the inspection item. (See DTC Output Pattern And Malfunctioning Location.)

**Note**

- The open circuit location can be determined by the DTC indicated in the DTC output pattern and malfunctioning location chart. DTCs not listed in the chart are not used for the determination of the open circuit location. (See DTC Output Pattern And Malfunctioning Location.)

3. Inspect the possible cause and inspection item of the applicable malfunctioning part.
4. After repairs, return to CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW, and verify that the repairs have been completed. (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-D 1.5].)

### DTC Output Pattern And Malfunctioning Location

Cross (×): Communication error-related DTC and failed module

| M-MDS display | | DTC output pattern and malfunctioning location | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| DTC output module | DTC | | | | | | | | | | | | | | | | | | | |
| PCM (PCM) | U0101:00 | | | | × | | | | | | | | | | | | | | | |
| | U0121:00 | | × | | | | | | | | | | | | | | | | | |
| | U0131:00 | | | | | | | | | | | | | | | | × | | | |
| | U0140:00 | | | | | | | | × | | | | | | | | | | | |
| | U0151:00 | | | | | | | | | | | | | × | | | | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| | U0214:00 | | | | | | | | | | | | | | | | | | × | |
| | U0235:00 | | | | | | | | | | | × | | | | | | | | |
| | U0298:00 | | | | | | | × | | | | | | | | | | | | |
| ABS (DSC HU/CM) | U0100:00 | × | | | | | | | | | | | | | | | | | | |
| | U0101:00 | | | | × | | | | | | | | | | | | | | | |
| | U0131:00 | | | | | | | | | | | | | | | | × | | | |
| | U0151:00 | | | | | | | | | | | | | × | | | | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| | U0235:00 | | | | | | | | | | | × | | | | | | | | |
| TCM*1 (TCM) | U0100:00 | × | | × | | | | | | | | | | | | | | | | |
| | U0121:00 | | × | × | | | | | | | | | | | | | | | | |
| | U0131:00 | | | | | | | | | | | | | | | | × | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| ALM*2 (Auto leveling control module) | U0100:00 | × | | × | | × | | | | | | | | | | | | | | |
| | U0140:00 | | | | | | | | × | | | | | | | | | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| DCDC*3 (DC-DC converter (i-ELOOP)) | U0100:00 | × | | × | | × | | | | | | | | | | | | | | |
| | U0140:00 | | | | | | | | × | | | | | | | | | | | |
| | U0151:00 | | | | | | | | | | | | | × | | | | | | |


| M-MDS display | | DTC output pattern and malfunctioning location | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| **DTC output module** | **DTC** | | | | | | | | | | | | | | | | | | | |
| BCM (BCM) | U0100:00 | × | | × | | × | | | × | | | | | | | | | | | |
| | U0101:00 | | | | × | × | | | × | | | | | | | | | | | |
| | U0121:00 | | × | × | | × | | | × | | | | | | | | | | | |
| | U0151:00 | | | | | | | | | | | | | | × | | | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| | U0214:00 | | | | | | | | | | | | | | | | | | × | |
| | U023A:00 | | | | | | | | | | | | × | | | | | | | |
| SCBS*4 (Laser sensor) | U0100:00 | × | | × | | × | | | × | | × | | | | | | | | | |
| | U0121:00 | | × | × | | × | | | × | | × | | | | | | | | | |
| | U0131:00 | | | | | | | | | | | | | | | | × | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| FSC*5 (FORWARD SENSING CAMERA (FSC)) | U0100:00 | × | | × | | × | | | × | | × | | | | | | | | | |
| | U0121:00 | | × | × | | × | | | × | | × | | | | | | | | | |
| | U0131:00 | | | | | | | | | | | | | | | | × | | | |
| | U0140:00 | | | | | | | | | × | × | | | | | | | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| | U0214:00 | | | | | | | | | | | | | | | | | | × | |
| RCM (SAS control module) | U0100:00 | × | | × | | × | | | × | | × | | | × | | | | | | |
| | U0101:00 | | | | × | × | | | × | | × | | | × | | | | | | |
| | U0131:00 | | | | | | | | | | | | | | | | × | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| CMU*6 (Connectivity master unit (CMU)) | U0100:00 | × | | × | | × | | | × | | × | | | × | | | | | | |
| | U0101:00 | | | | × | × | | | × | | × | | | × | | | | | | |
| | U0121:00 | | × | × | | × | | | × | | × | | | × | | | | | | |
| | U0131:00 | | | | | | | | | | | | | | | | × | | | |
| | U0140:00 | | | | | | | | | × | × | | | × | | | | | | |
| | U0151:00 | | | | | | | | | | | | | | × | | | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| | U0182:00 | | | | | | × | | × | | × | | | × | | | | | | |
| | U0214:00 | | | | | | | | | | | | | | | | | | × | |
| | U0235:00 | | | | | | | | | | | × | | × | | | | | | |
| | U023A:00 | | | | | | | | | | | | × | × | | | | | | |
| EPS (EPS control module) | U0100:00 | × | | × | | × | | | × | | × | | | × | | | | | | |
| | U0121:00 | | × | × | | × | | | × | | × | | | × | | | | | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| | U0214:00 | | | | | | | | | | | | | | | | | | × | |
| SSU (Start stop unit) | U0028:87 | | | | | | | | | × | × | | | × | | | | × | | |
| | U0100:00 | × | | × | | × | | | × | | × | | | × | | | | × | | |
| | U0101:00 | | | | × | × | | | × | | × | | | × | | | | × | | |
| | U0121:00 | | × | × | | × | | | × | | × | | | × | | | | × | | |
| | U0121:87 | | × | × | | × | | | × | | × | | | × | | | | × | | |
| | U0131:00 | | | | | | | | | | | | | | | | × | × | | |
| | U0140:00 | | | | | | | | | × | × | | | × | | | | × | | |
| | U0146:00 | | | | | | | | | × | × | | | × | | | | × | | |
| | U0151:00 | | | | | | | | | | | | | | × | | | × | | |
| | U0155:00 | | | | | | | | | | | | | | | | | | | × |
| IC (Instrument cluster) | U0100:00 | × | | × | | × | | | × | | × | | | × | | | | × | | |
| | U0101:00 | | | | × | × | | | × | | × | | | × | | | | × | | |
| | U0121:00 | | × | × | | × | | | × | | × | | | × | | | | × | | |
| | U0131:00 | | | | | | | | | | | | | | | | × | × | | |
| | U0140:00 | | | | | | | | | × | × | | | × | | | | × | | |
| | U0151:00 | | | | | | | | | | | | | | × | | | × | | |
| | U0156:00 | | | | | | | | | | | | | | | × | | × | | |
| | U0182:00 | | | | | | × | | × | | × | | | × | | | | × | | |
| | U0214:00 | | | | | | | | | | | | | | | | | | × | |
| | U0235:00 | | | | | | | | | | | × | | × | | | | × | | |
| | U023A:00 | | | | | | | | | | | | × | × | | | | × | | |
| M-MDS display module | | [Fail] display pattern | | | | | | | | | | | | | | | | | | |
| PCM | | × | | × | | × | | | × | | × | | | × | | | | × | | |
| ABS | | | × | × | | × | | | × | | × | | | × | | | | × | | |

| M-MDS display | | DTC output pattern and malfunctioning location | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| DTC output module | DTC | | | | | | | | | | | | | | | | | | | |
| TCM*1 | | | | | × | × | | | × | | × | | | × | | | | × | | |
| ALM*2 | | | | | | | × | | × | | × | | | × | | | | × | | |
| DCDC*3 | | | | | | | | × | × | | × | | | × | | | | × | | |
| BCM | | | | | | | | | | × | × | | | × | | | | × | | |
| SCBS*4 | | | | | | | | | | | | × | | × | | | | × | | |
| FSC*5 | | | | | | | | | | | | | × | × | | | | × | | |
| RCM | | | | | | | | | | | | | | | × | | | × | | |
| CMU*6 | | | | | | | | | | | | | | | | × | | × | | |
| EPS | | | | | | | | | | | | | | | | | × | × | | |
| SSU | | | | | | | | | | | | | | | | | | | × | |
| IC | | | | | | | | | | | | | | | | | | | | × |
| Diagnostic result | | | | | | | | | | | | | | | | | | | | |
| Possible cause and inspection item | | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O | P | Q | R | S |

*1 : ATX
*2 : With headlight auto leveling system
*3 : With i-ELOOP
*4 : With smart city brake support (SCBS)
*5 : With forward sensing camera (FSC)
*6 : With center display

**A**
**Possible cause**
- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- PCM power supply voltage or body ground malfunction
- Open circuit in wiring harness between PCM and connector C-30
- Connector C-30 malfunction
- PCM malfunction

**System wiring diagram**

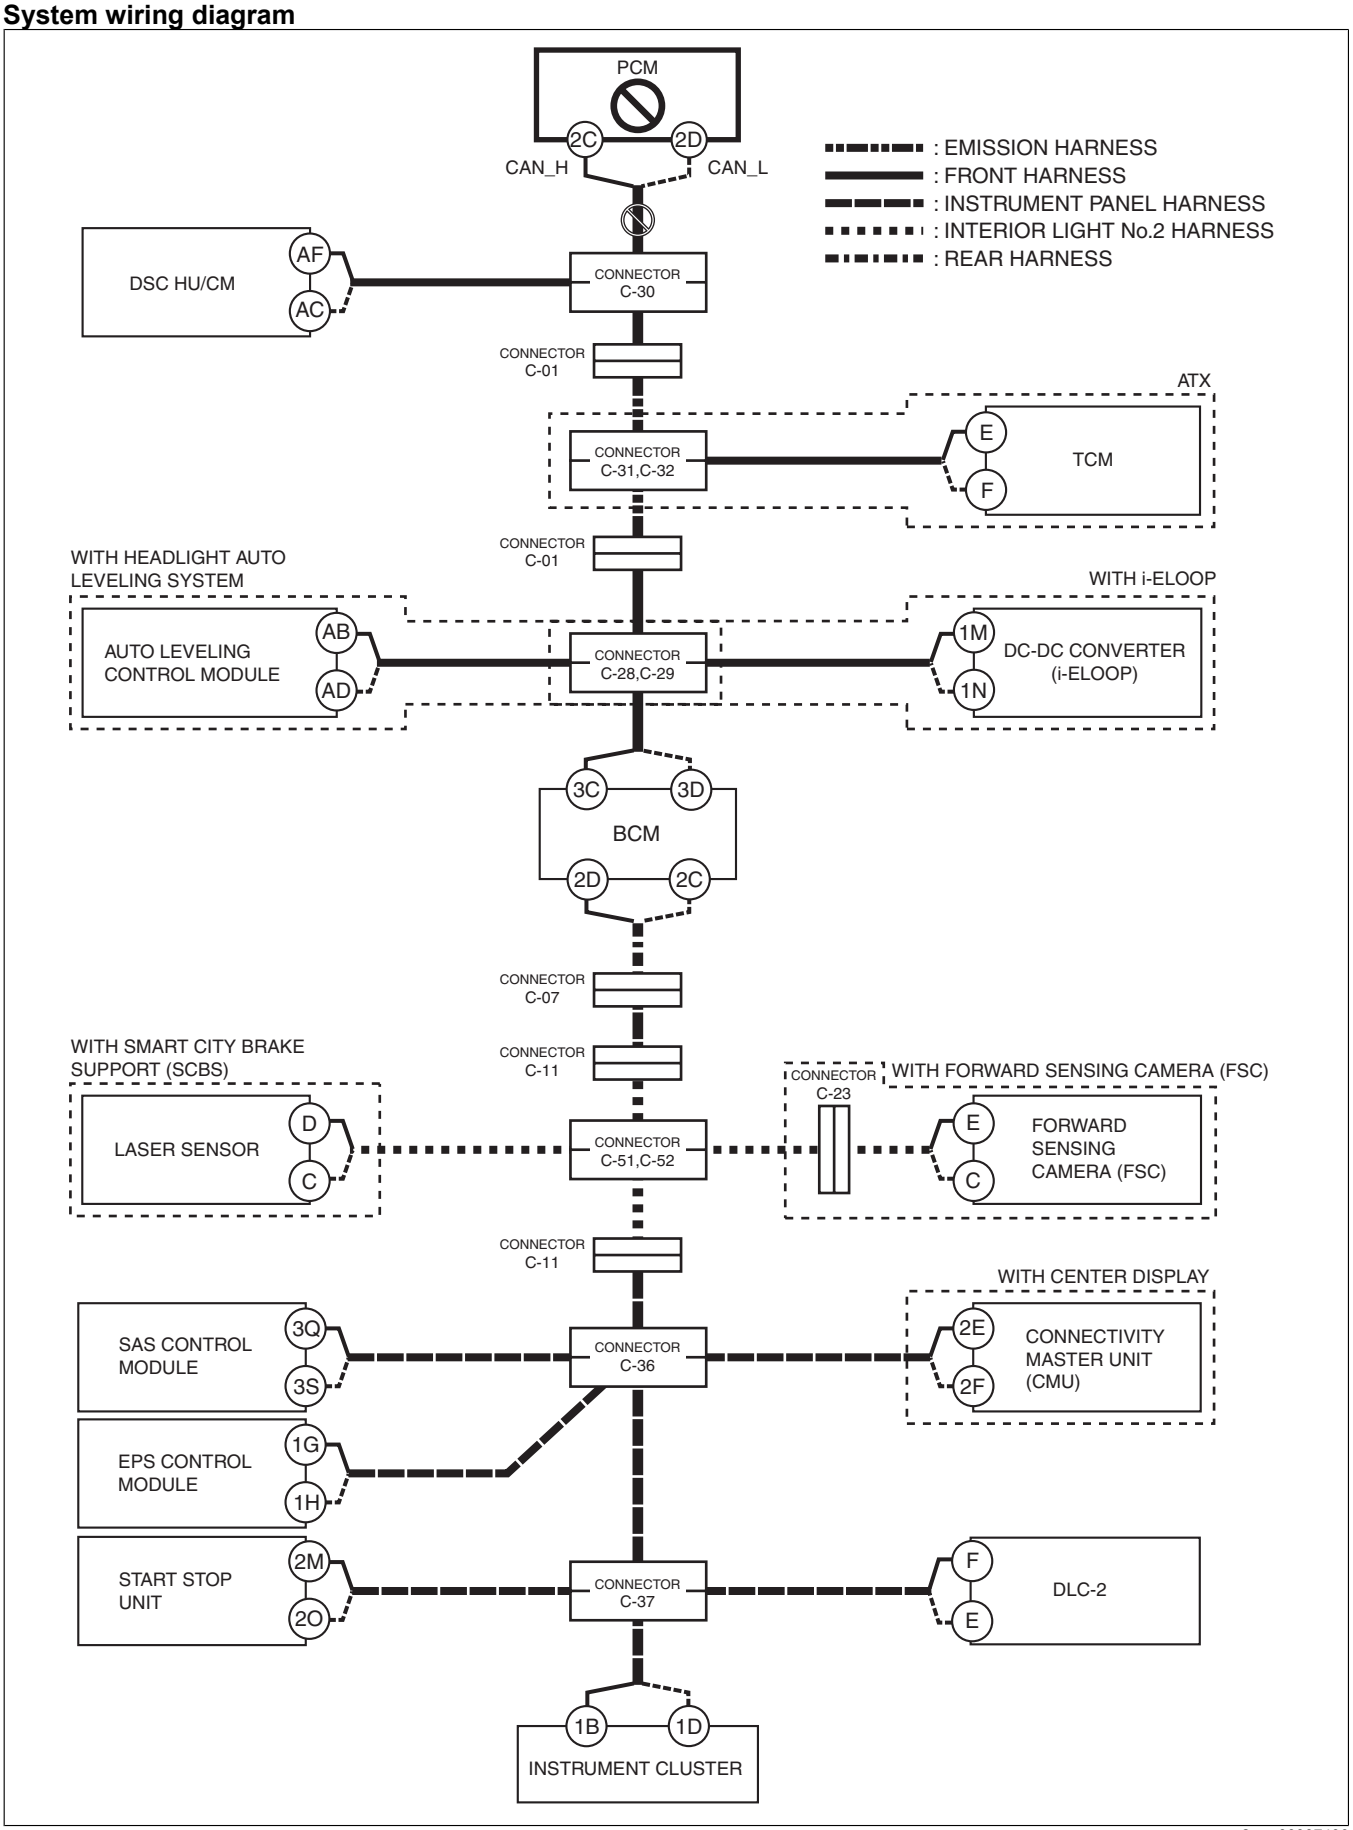



am2zzw00007490

**Inspection item**
- PCM power supply voltage or body ground malfunction
- PCM body ground related wiring harness
- PCM connector
- Connector C-30
- Wiring harness between PCM terminal 2C and connector C-30
- Wiring harness between PCM terminal 2D and connector C-30
- PCM

**B**
**Possible cause**
- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- DSC HU/CM power supply voltage or body ground malfunction
- Open circuit in wiring harness between DSC HU/CM and connector C-30
- Connector C-30 malfunction
- DSC HU/CM malfunction

## System wiring diagram

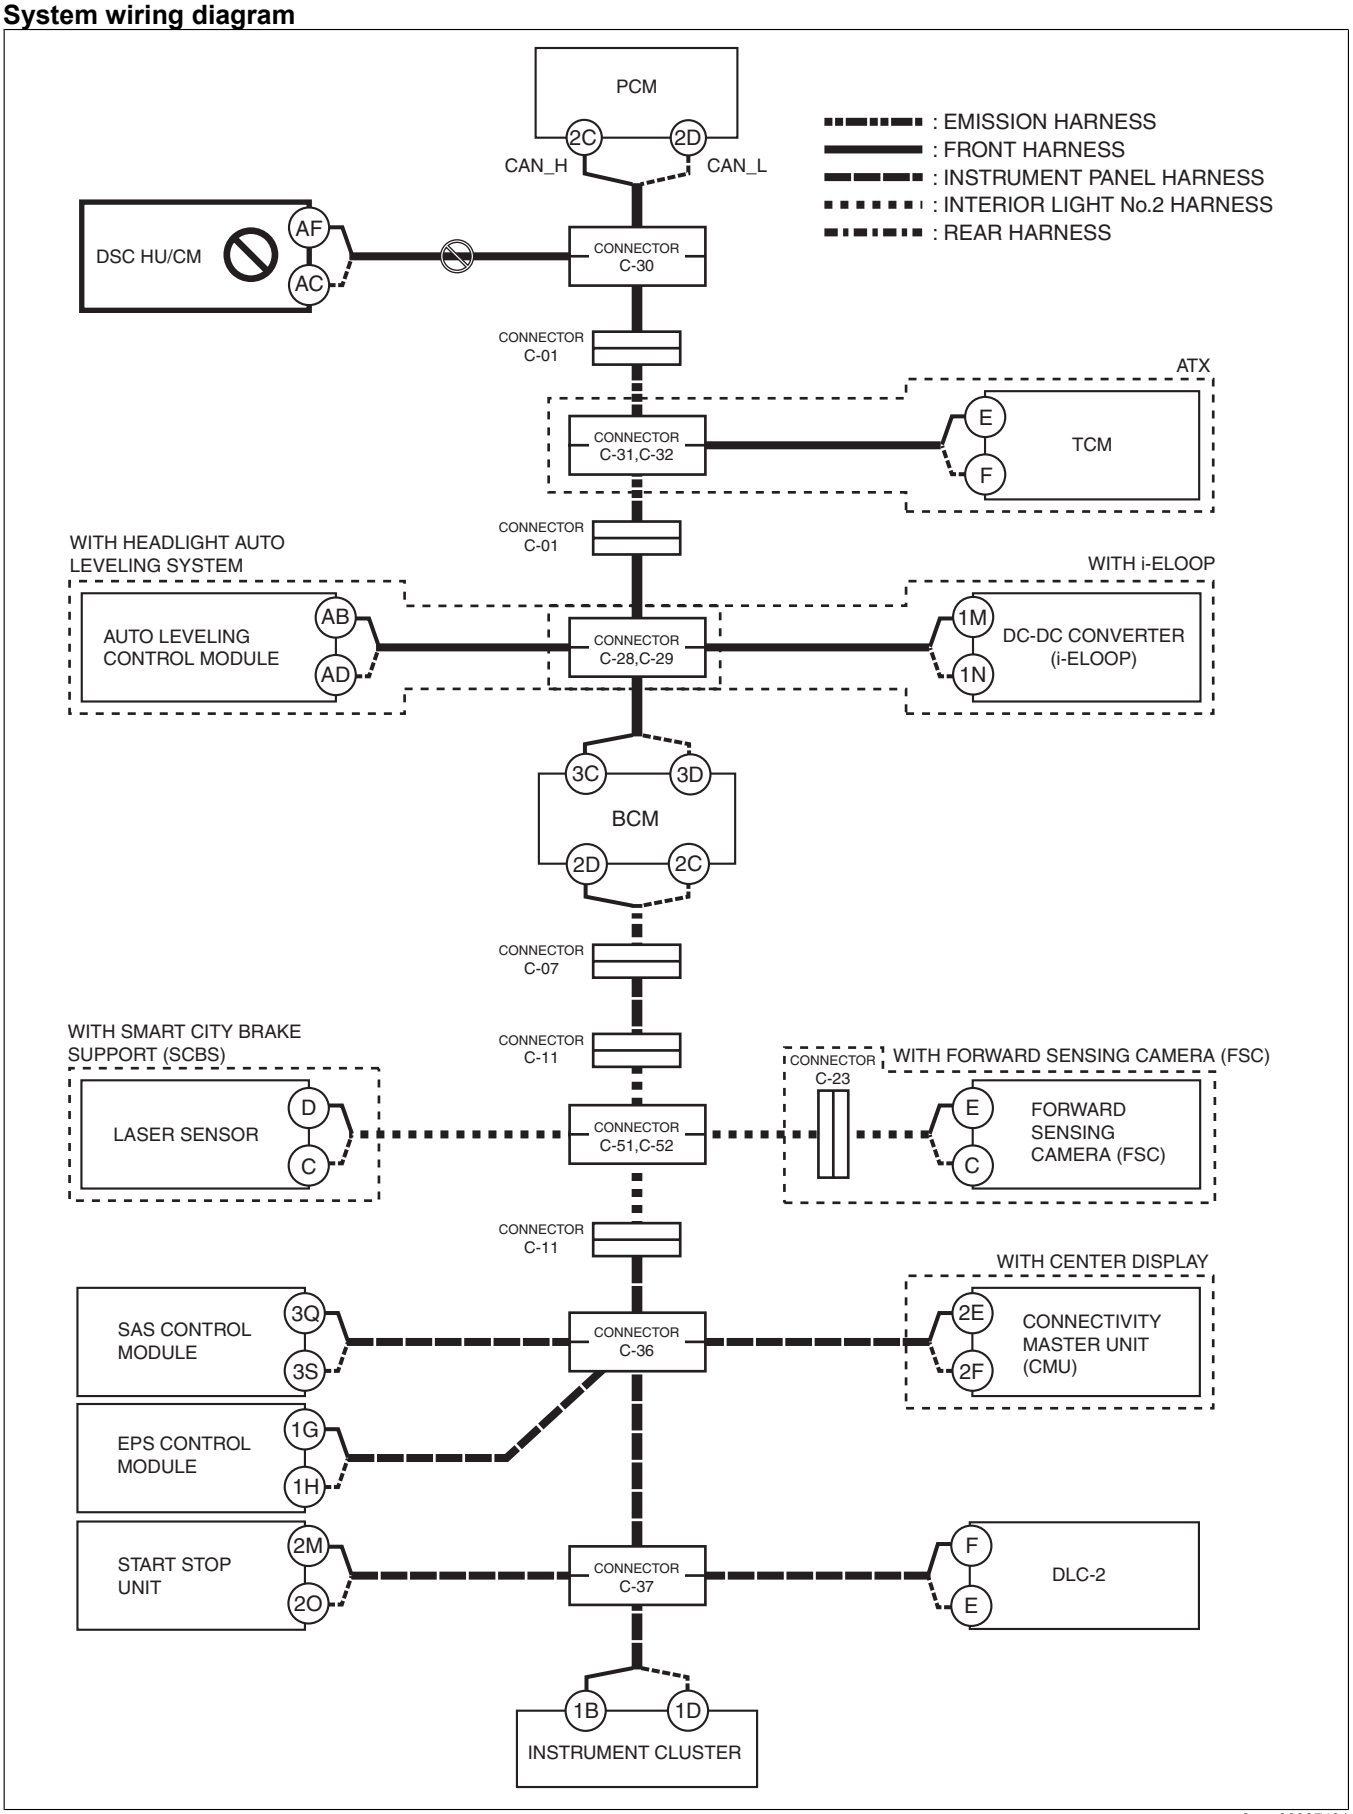


am2zzw00007491


**Inspection item**

- DSC HU/CM power supply voltage or body ground malfunction
- DSC HU/CM body ground related wiring harness
- DSC HU/CM connector
- Connector C-30
- Wiring harness between DSC HU/CM terminal AF and connector C-30
- Wiring harness between DSC HU/CM terminal AC and connector C-30
- DSC HU/CM

**C**
**ATX**
**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Open circuit in wiring harness between connector C-30 and connector C-01
- Open circuit in wiring harness between connector C-01 and connectors C-31,C-32
- Connector C-30 malfunction
- Connector C-01 malfunction
- Connectors C-31,C-32 malfunction

## System wiring diagram

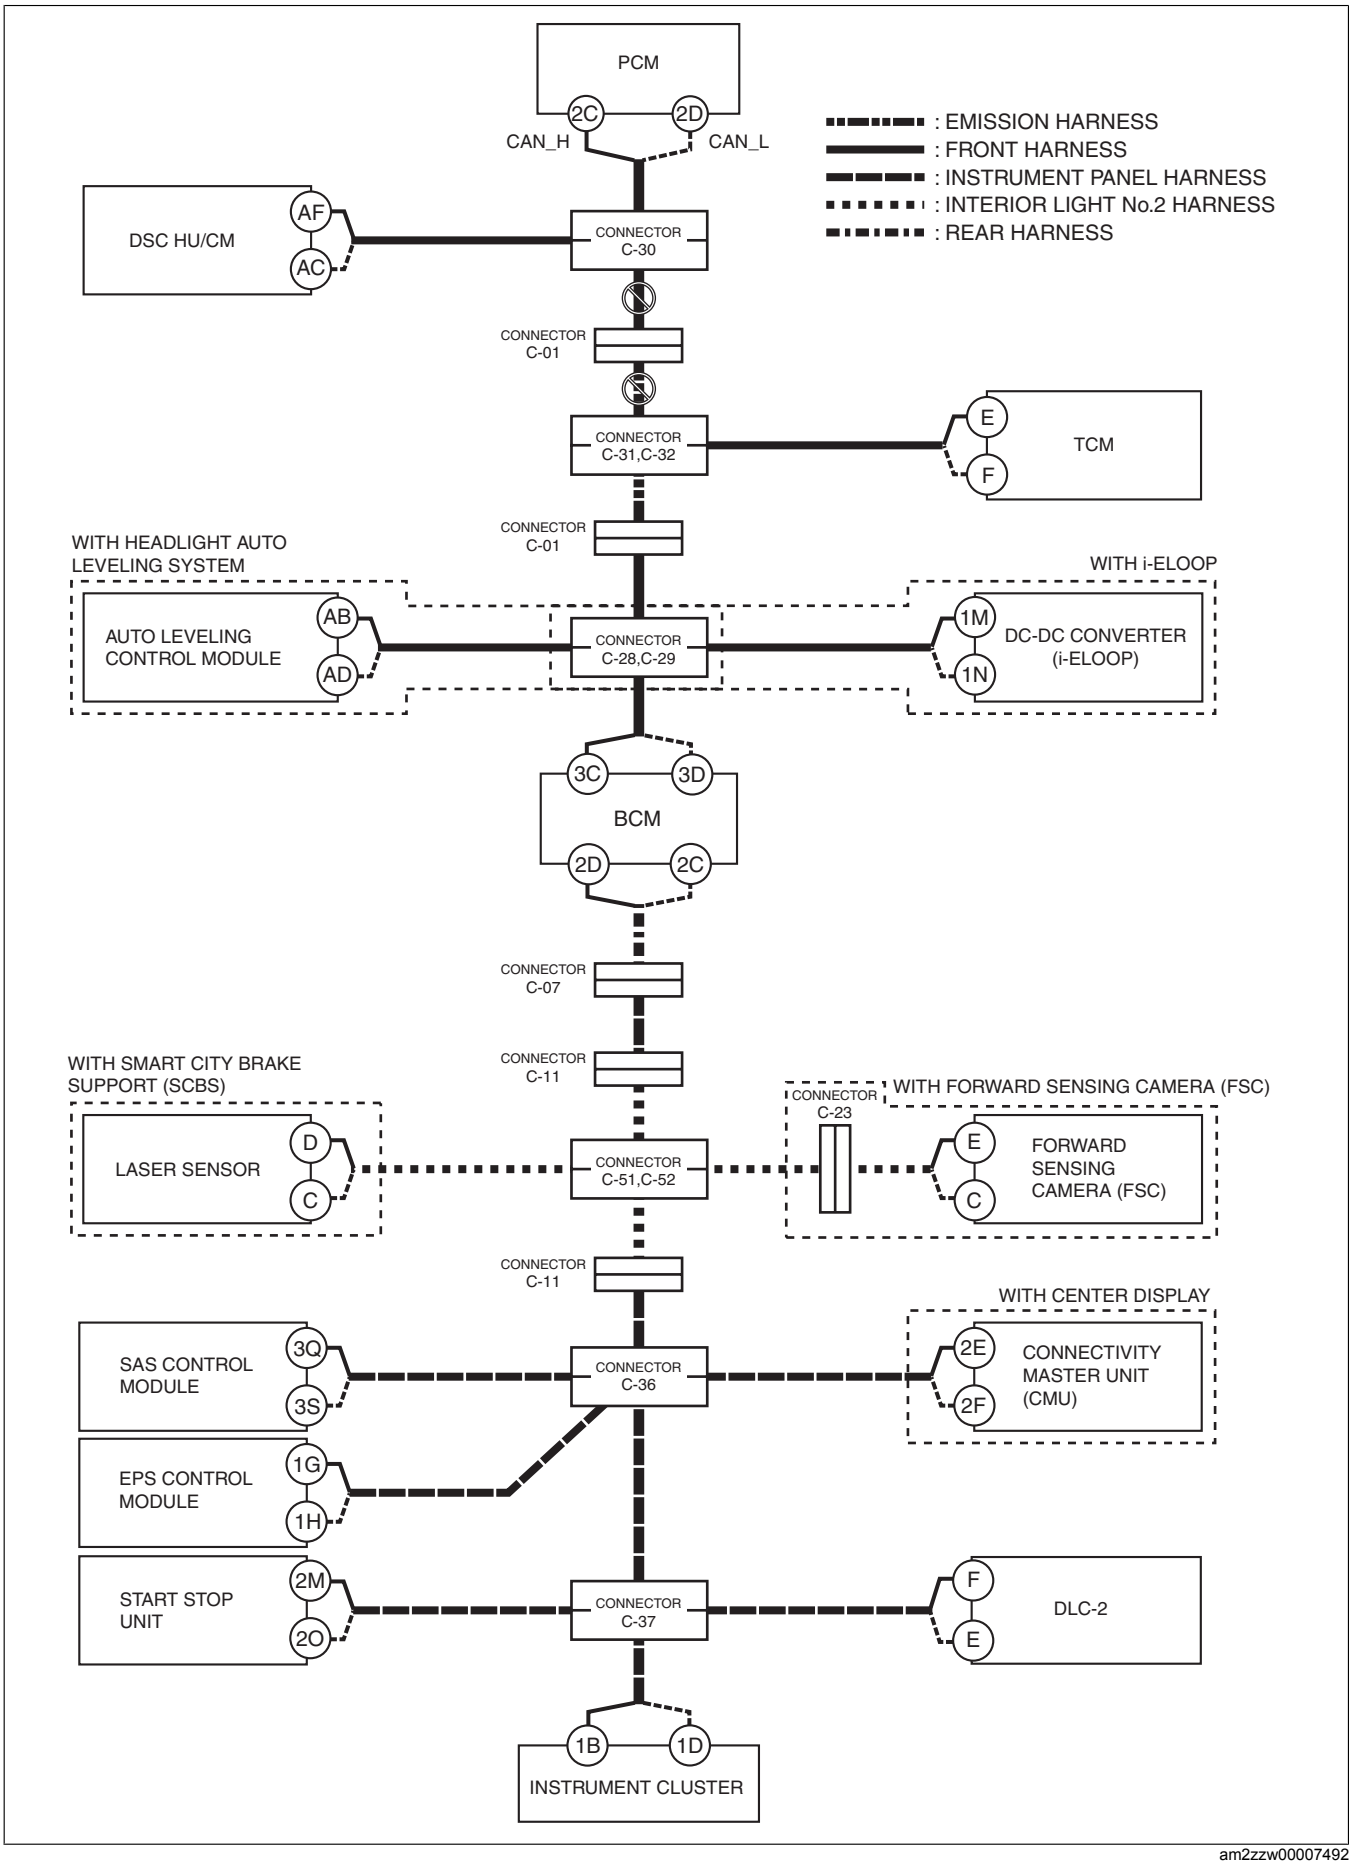



am2zzw00007492

**Inspection item**
- Connector C-30
- Connector C-01
- Connectors C-31,C-32
- Wiring harness between connector C-30 and connector C-01
- Wiring harness between connector C-01 and connectors C-31,C-32

**MTX (with headlight auto leveling system or i-ELOOP)**
**Possible cause**
- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Open circuit in wiring harness between connector C-30 and connector C-01
- Open circuit in wiring harness between connector C-01 and connector C-01
- Open circuit in wiring harness between connector C-01 and connectors C-28,C-29
- Connector C-30 malfunction
- Connector C-01 malfunction
- Connectors C-28,C-29 malfunction

## System wiring diagram

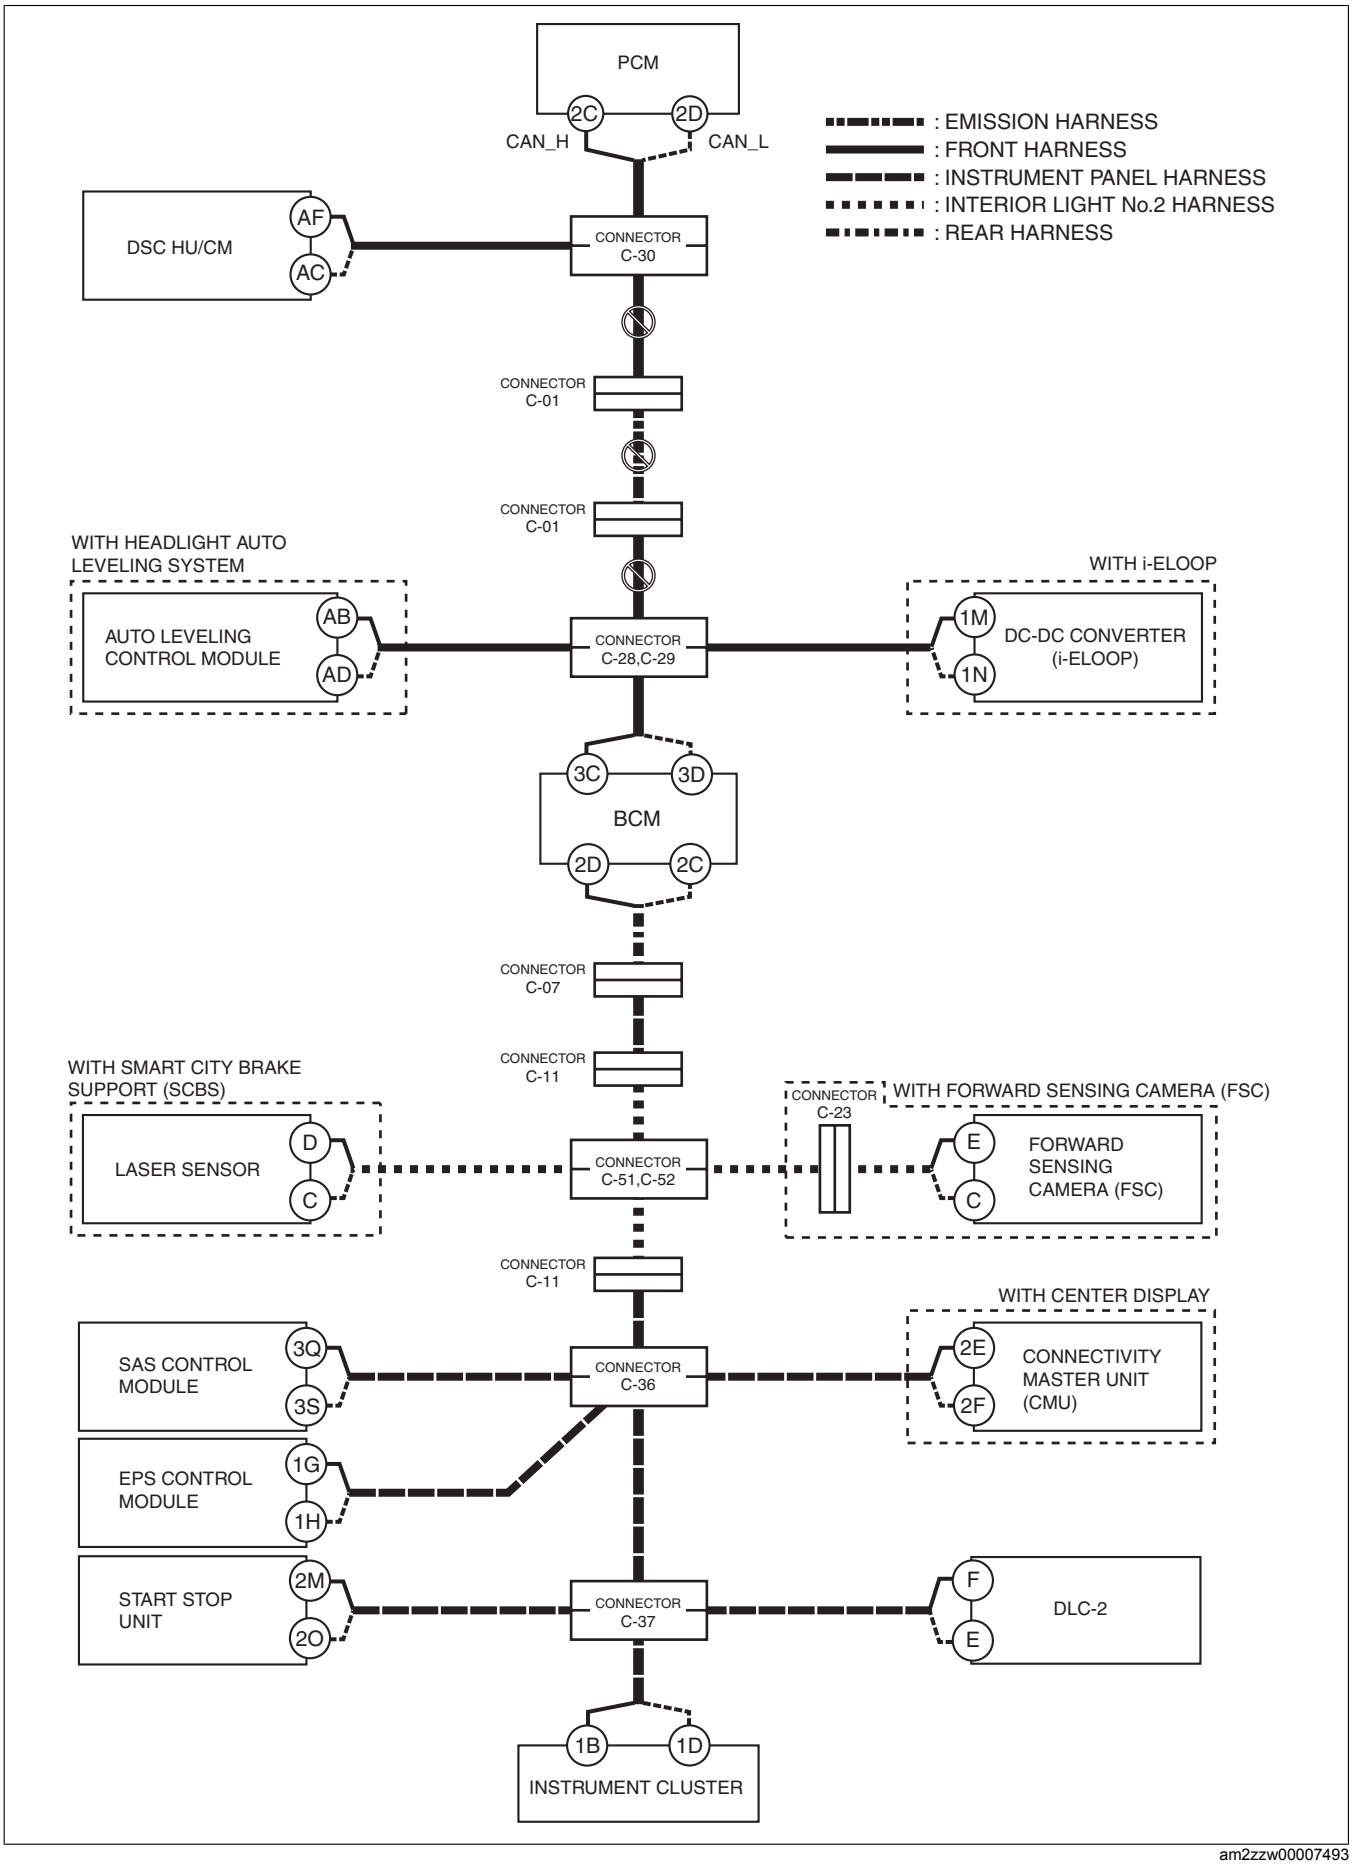



am2zzw00007493

**Inspection item**
- Connector C-30
- Connector C-01
- Connectors C-28,C-29
- Wiring harness between connector C-30 and connector C-01
- Wiring harness between connector C-01 and connector C-01
- Wiring harness between connector C-01 and connectors C-28,C-29

**MTX (without headlight auto leveling system and i-ELOOP)**
**Possible cause**
- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Open circuit in wiring harness between connector C-30 and connector C-01
- Open circuit in wiring harness between connector C-01 and connector C-01
- Open circuit in wiring harness between connector C-01 and BCM
- Connector C-30 malfunction
- Connector C-01 malfunction
- CAN circuit in BCM malfunction

## System wiring diagram

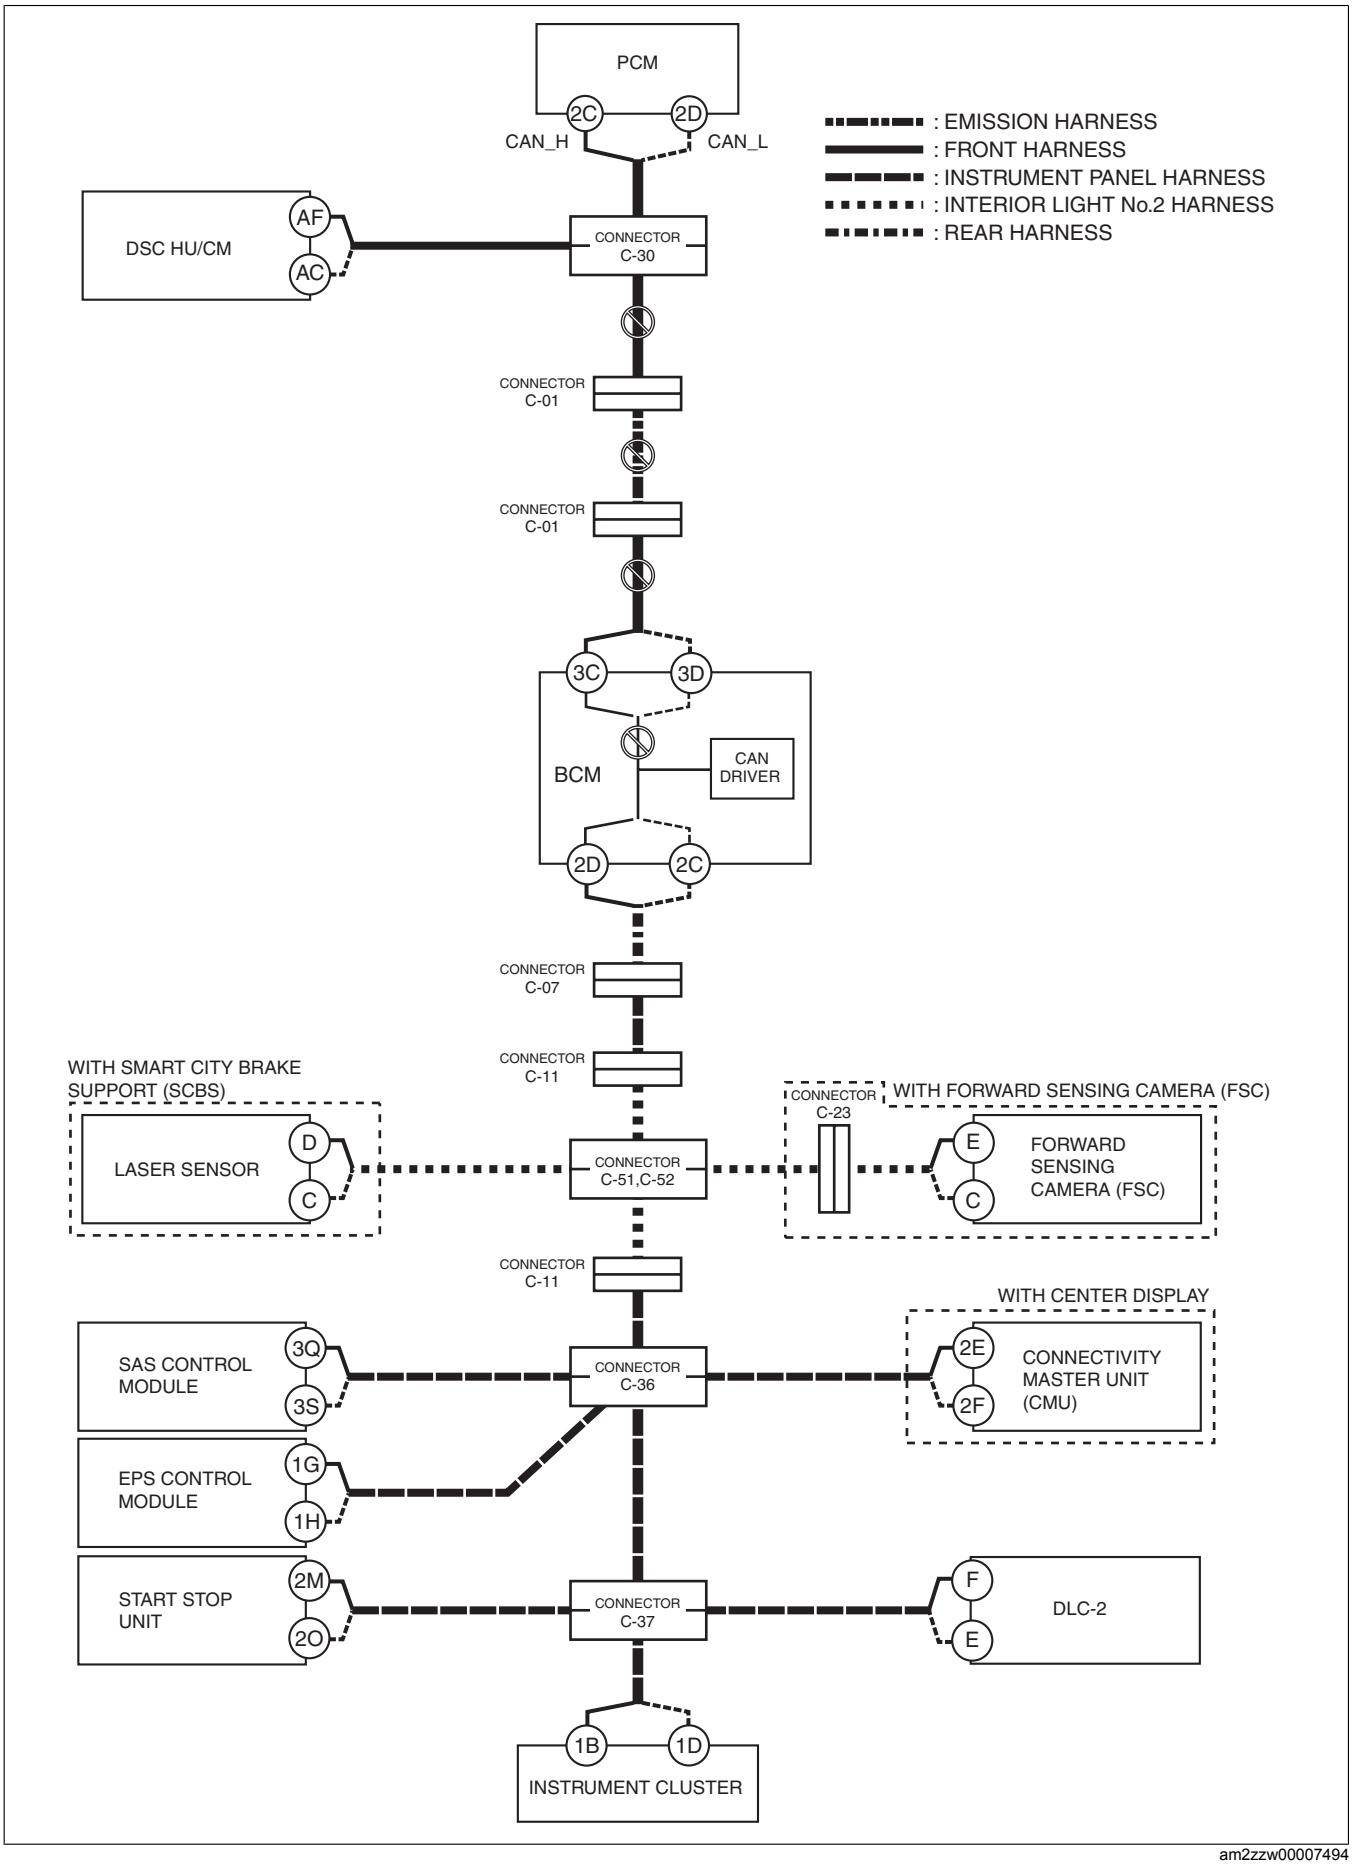


am2zzw00007494

**Inspection item**


- Connector C-30
- Connector C-01
- BCM connector
- Wiring harness between connector C-30 and connector C-01
- Wiring harness between connector C-01 and connector C-01
- Wiring harness between BCM terminal 3C and connector C-01
- Wiring harness between BCM terminal 3D and connector C-01
- BCM
  - Between BCM terminal 3C and BCM terminal 2D
  - Between BCM terminal 3D and BCM terminal 2C

**D**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- TCM power supply voltage or body ground malfunction
- Open circuit in wiring harness between TCM and connectors C-31,C-32
- Connectors C-31,C-32 malfunction
- TCM malfunction

## System wiring diagram

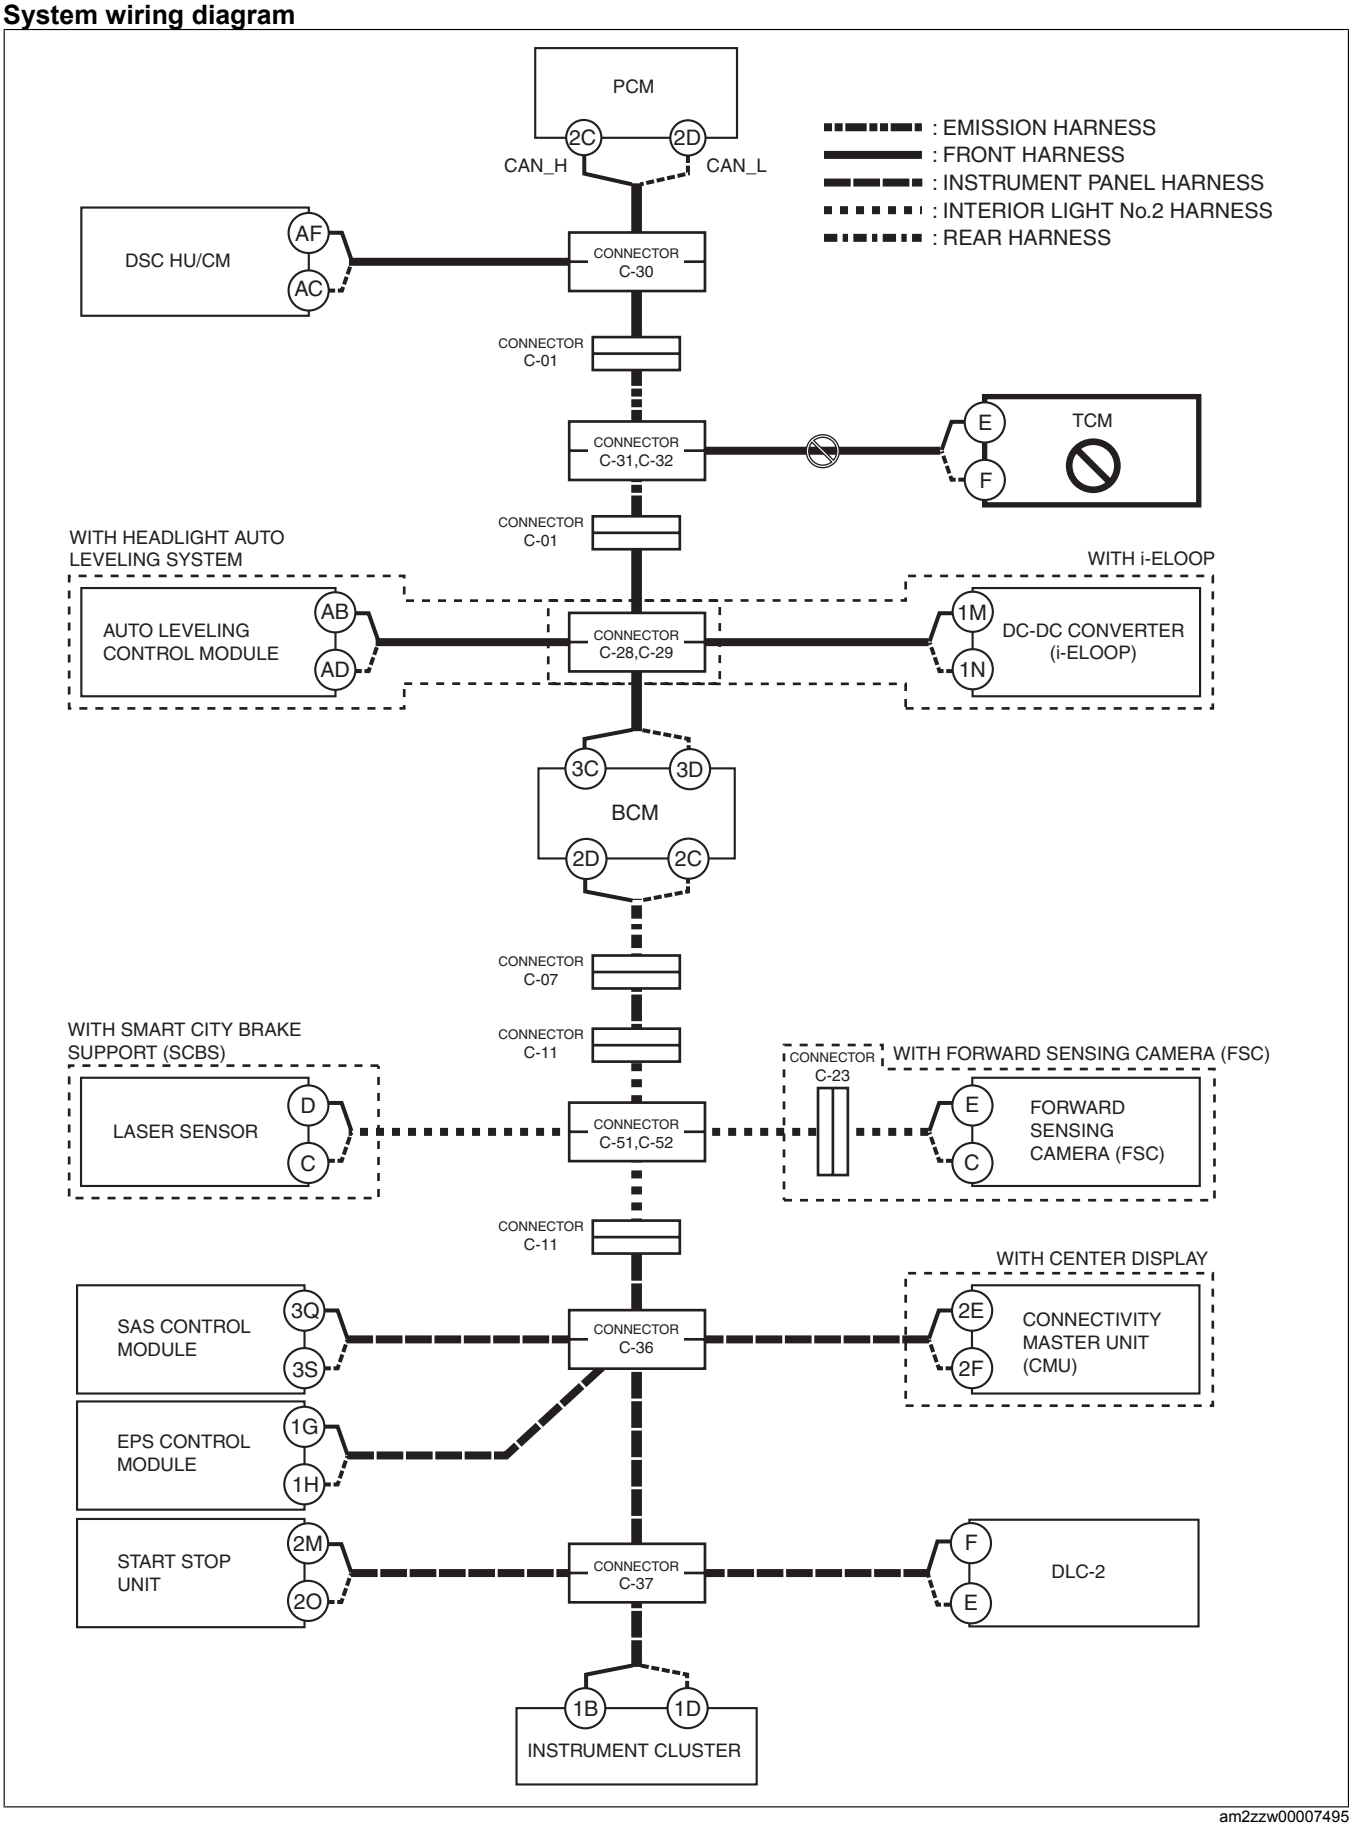


am2zzw00007495

**Inspection item**

- TCM power supply voltage or body ground malfunction
- TCM body ground related wiring harness
- TCM connector
- Connectors C-31,C-32
- Wiring harness between TCM terminal E and connector C-31
- Wiring harness between TCM terminal F and connector C-32
- TCM


**E**

**With headlight auto leveling system or i-ELOOP**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Open circuit in wiring harness between connectors C-31,C-32 and connector C-01
- Open circuit in wiring harness between connector C-01 and connectors C-28,C-29
- Connectors C-31,C-32 malfunction
- Connector C-01 malfunction
- Connectors C-28,C-29 malfunction

## System wiring diagram

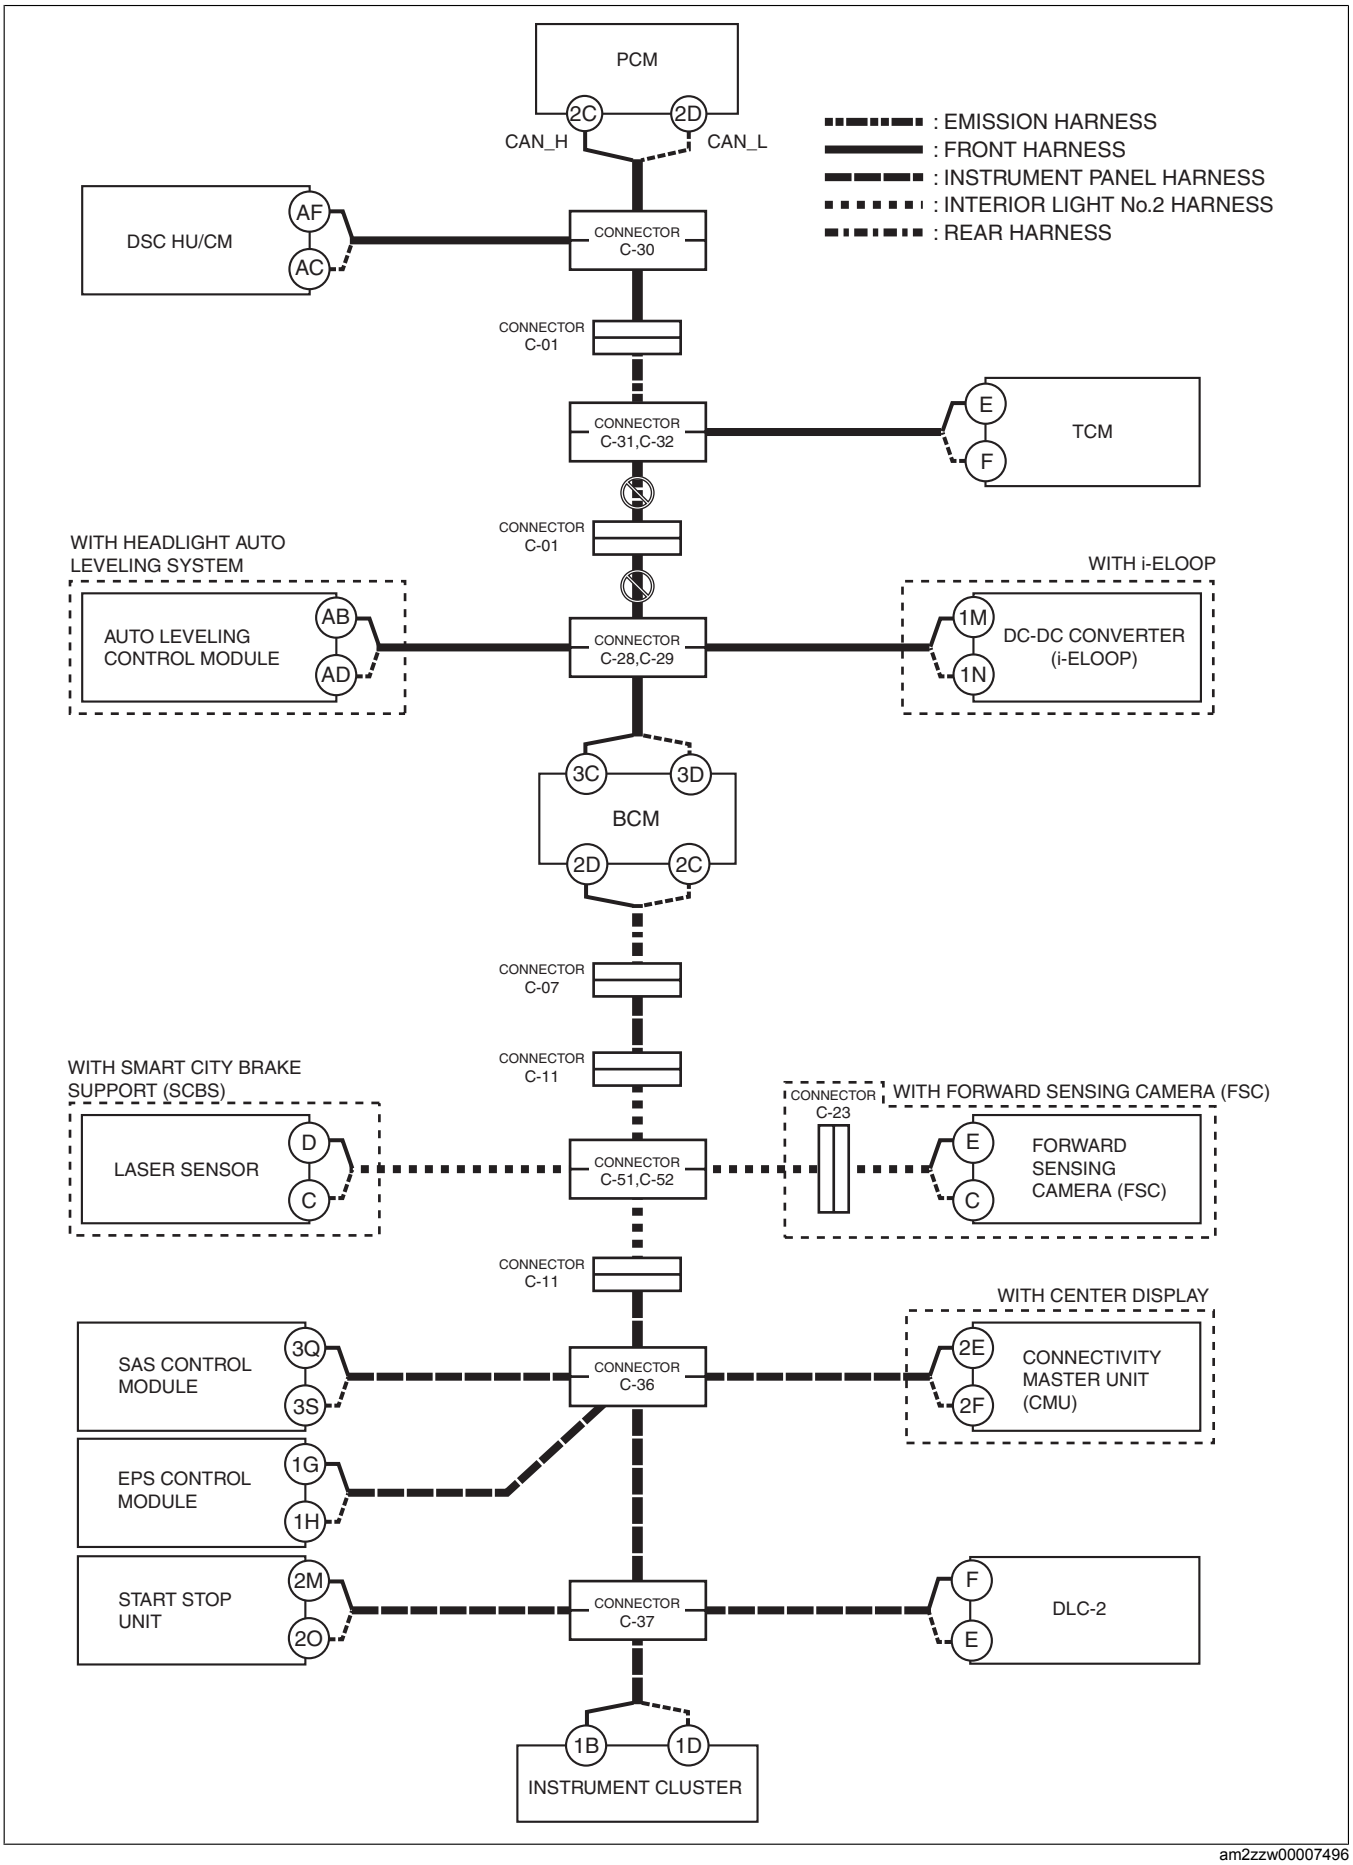



am2zzw00007496

**Inspection item**
- Connectors C-31,C-32
- Connector C-01
- Connectors C-28,C-29
- Wiring harness between connectors C-31,C-32 and connector C-01
- Wiring harness between connector C-01 and connectors C-28,C-29

**Without headlight auto leveling system or i-ELOOP**
**Possible cause**
- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Open circuit in wiring harness between connectors C-31,C-32 and connector C-01
- Open circuit in wiring harness between connector C-01 and BCM
- Connectors C-31,C-32 malfunction
- Connector C-01 malfunction
- CAN circuit in BCM malfunction

## System wiring diagram

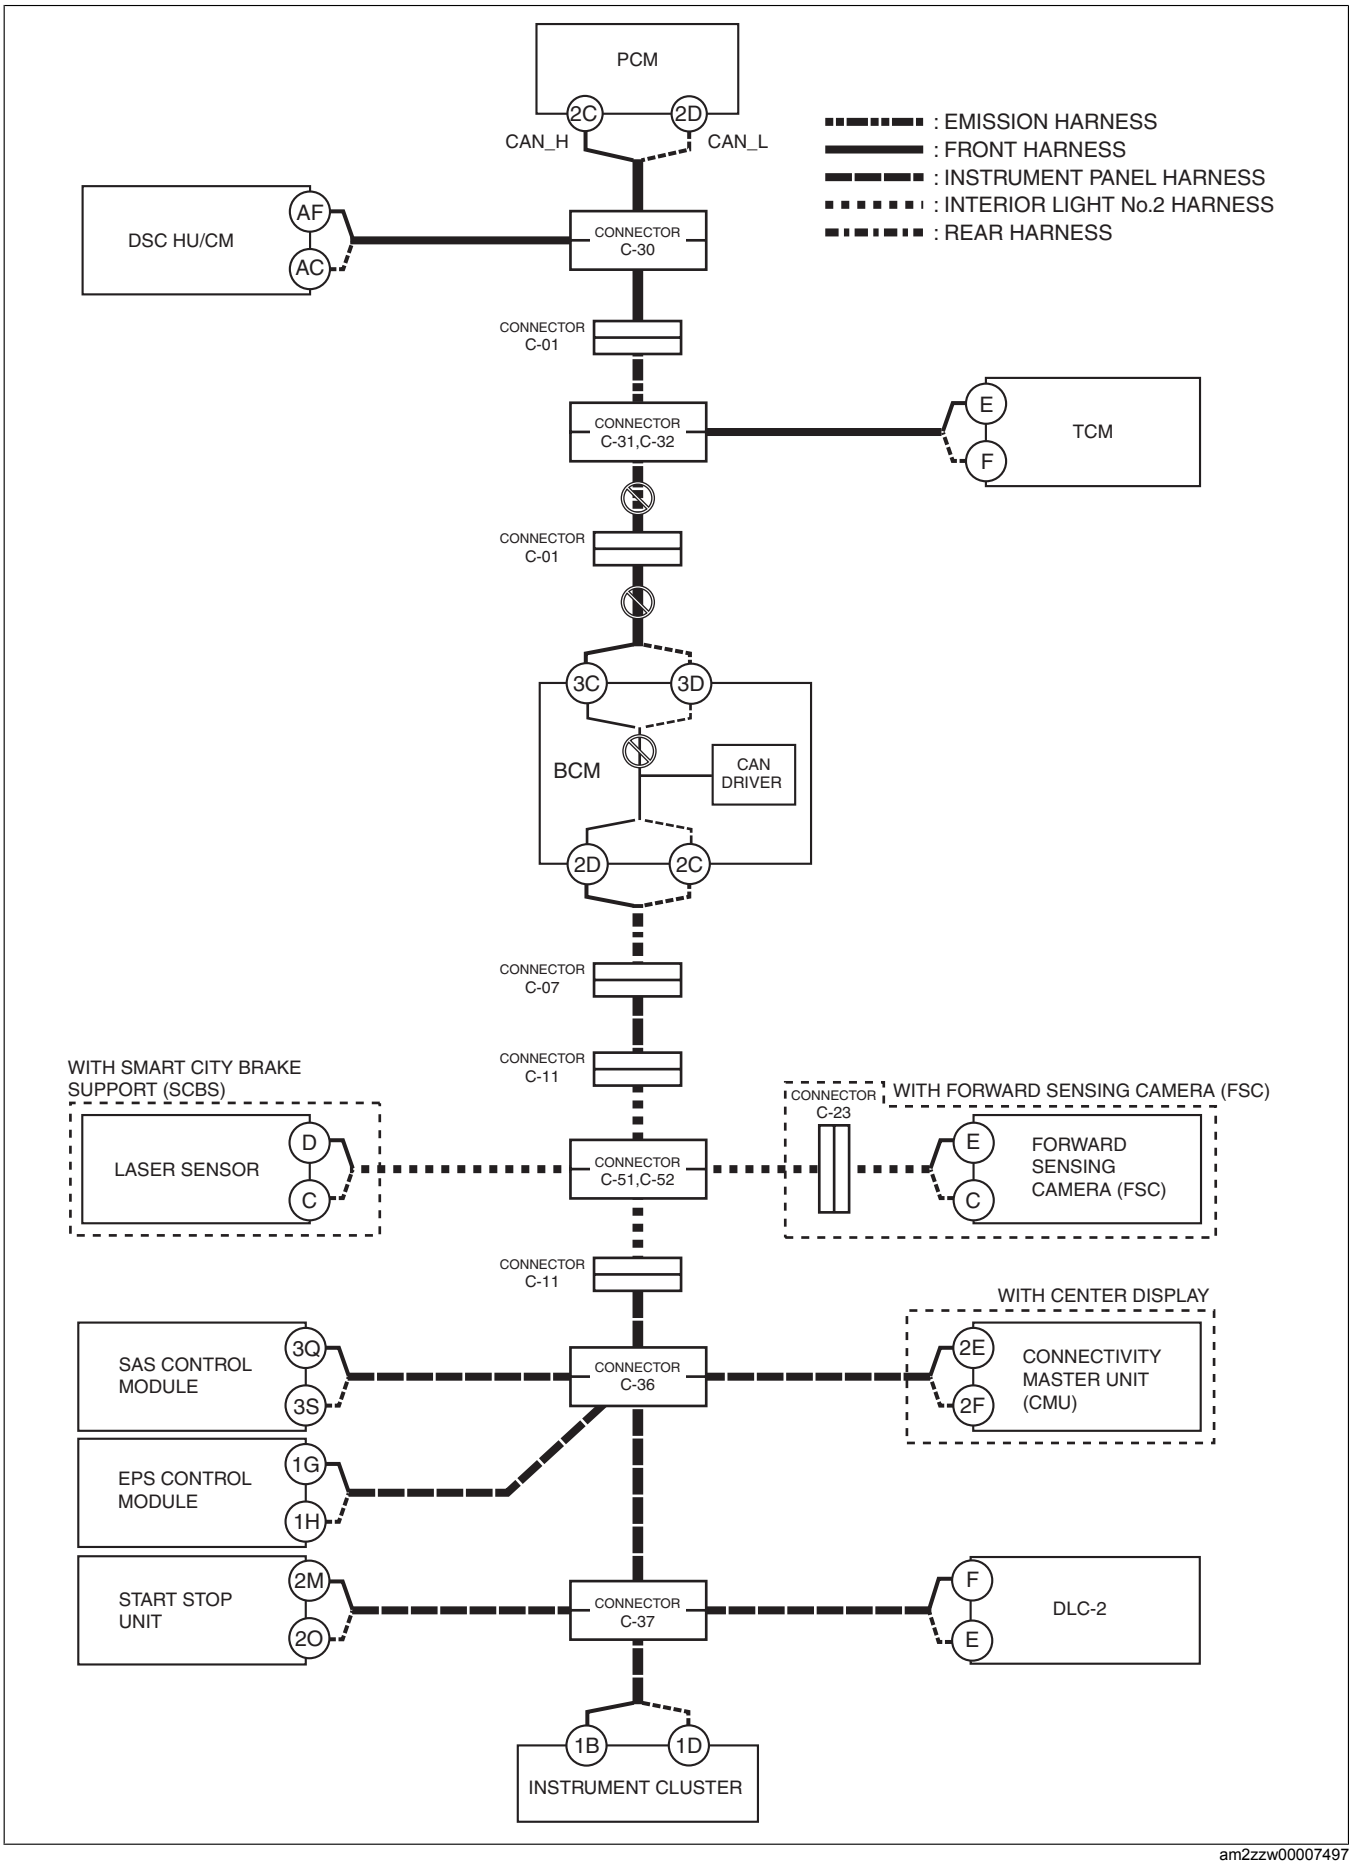


am2zzw00007497

**Inspection item**


- BCM connector
- Connector C-01
- Connectors C-31,C-32
- Wiring harness between connectors C-31,C-32 and connector C-01
- Wiring harness between BCM terminal 3C and connector C-01
- Wiring harness between BCM terminal 3D and connector C-01
- BCM
  - Between BCM terminal 3C and BCM terminal 2D
  - Between BCM terminal 3D and BCM terminal 2C

**F**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Auto leveling control module power supply voltage or body ground malfunction
- Open circuit in wiring harness between auto leveling control module and connectors C-28,C-29
- Connectors C-28,C-29 malfunction
- Auto leveling control module malfunction

## System wiring diagram

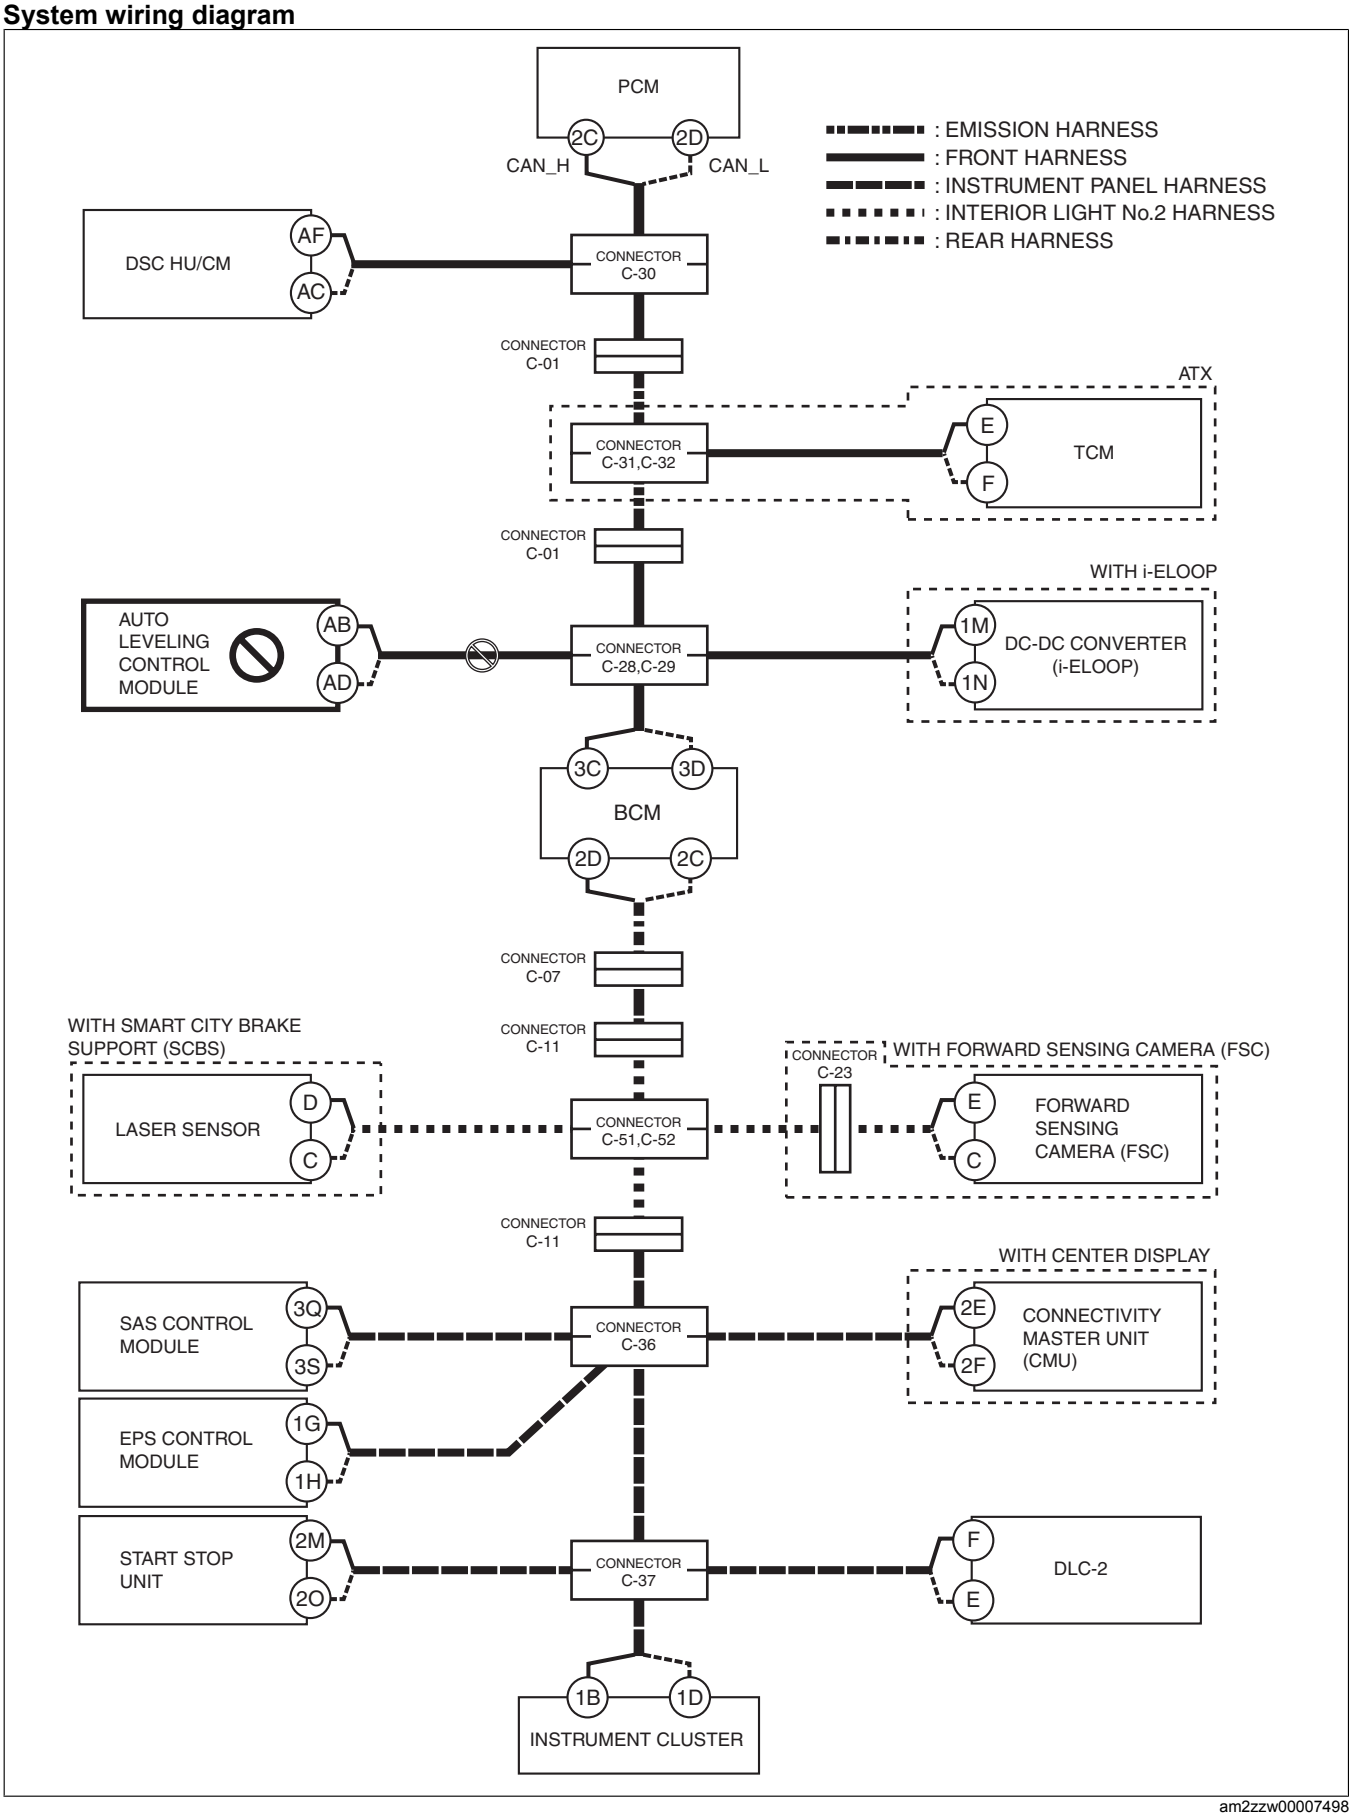


am2zzw00007498

**Inspection item**


- Auto leveling control module power supply voltage or body ground malfunction
- Auto leveling control module body ground related wiring harness
- Auto leveling control module connector
- Connectors C-28,C-29
- Wiring harness between auto leveling control module terminal AB and connector C-28
- Wiring harness between auto leveling control module terminal AD and connector C-29
- Auto leveling control module

**G**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- DC-DC converter (i-ELOOP) power supply voltage or body ground malfunction
- Open circuit in wiring harness between DC-DC converter (i-ELOOP) and connectors C-28,C-29
- Connectors C-28,C-29 malfunction
- DC-DC converter (i-ELOOP) malfunction

## System wiring diagram

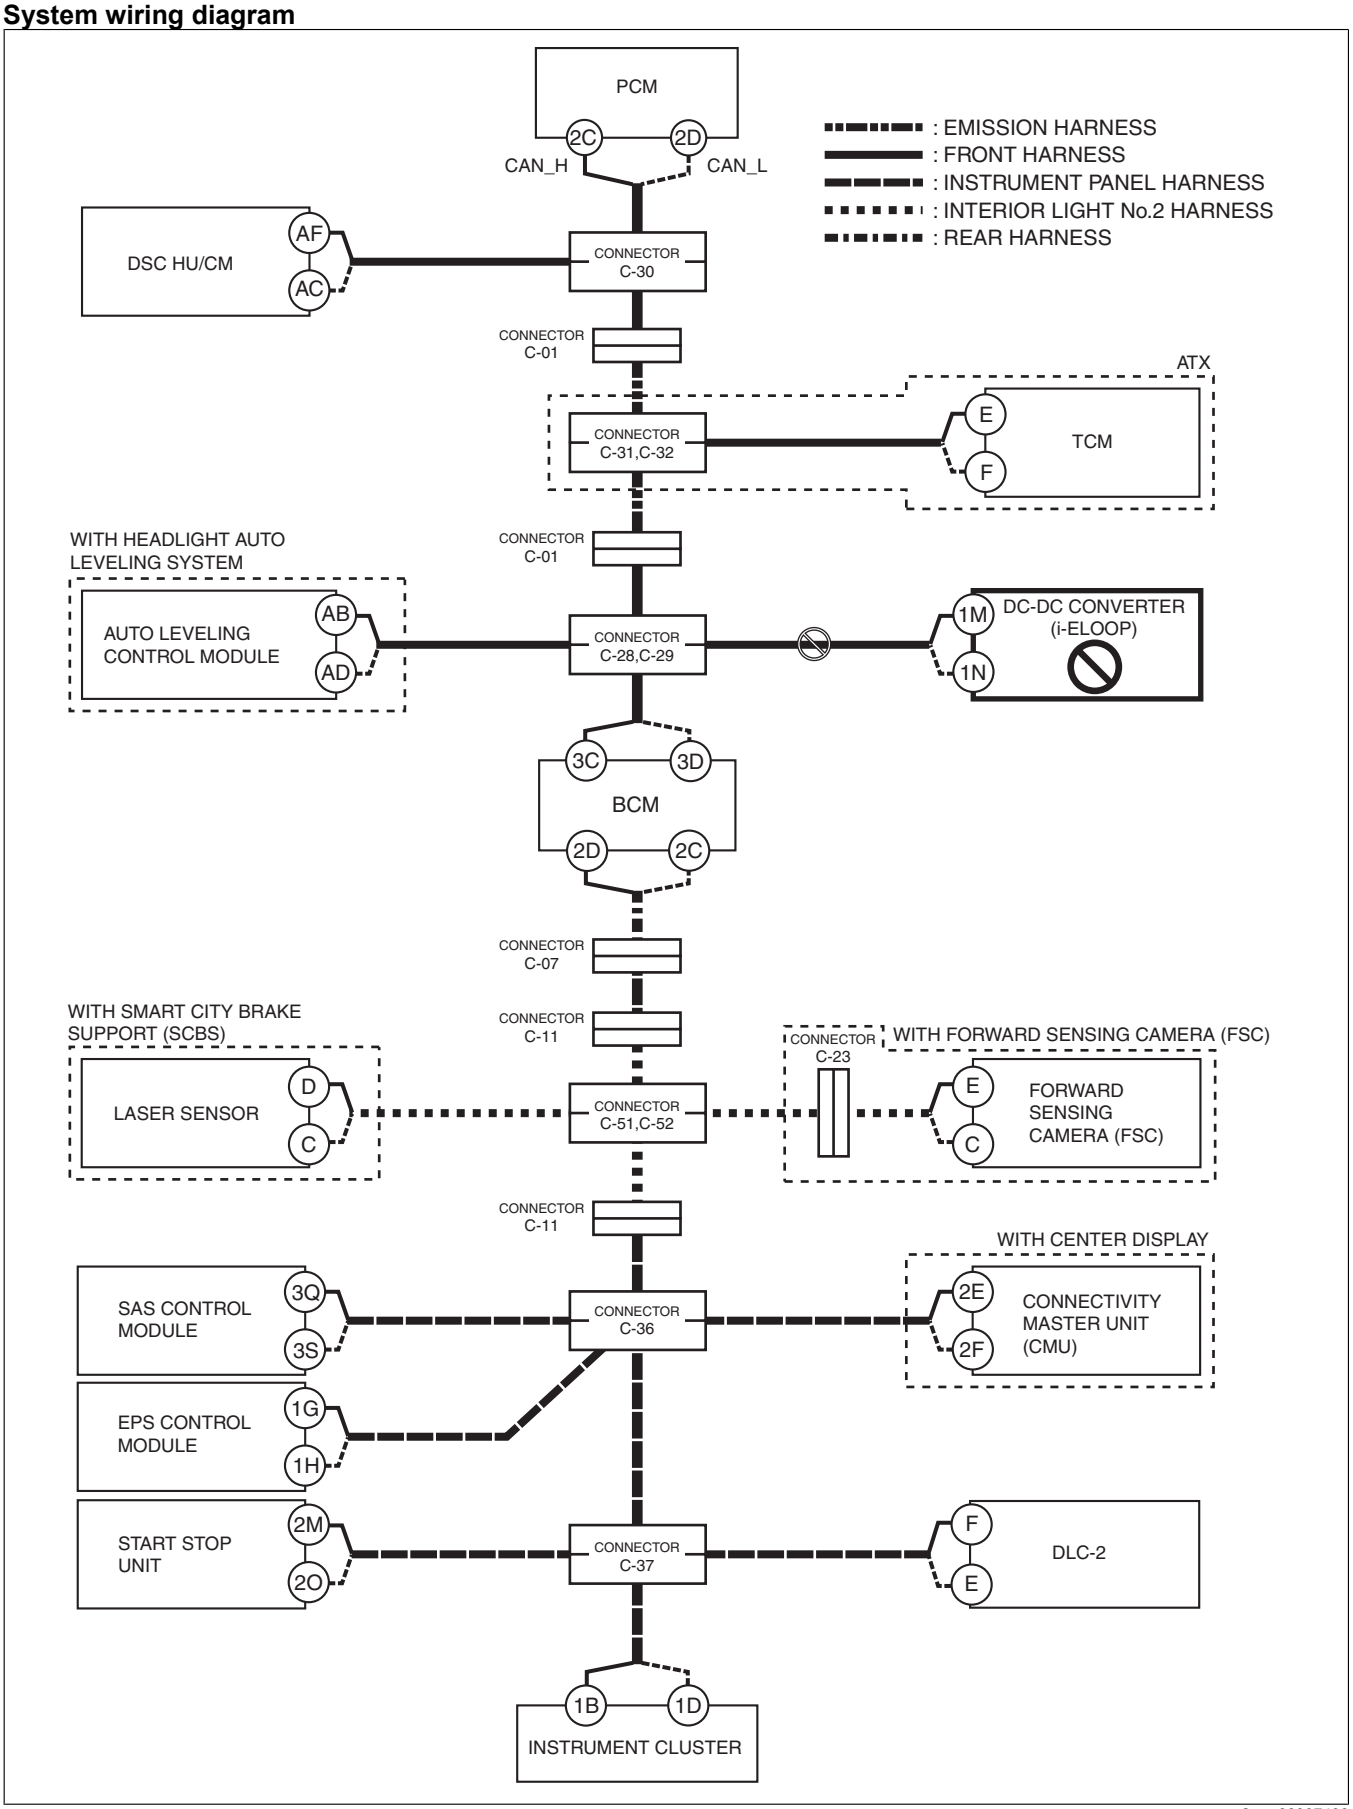


am2zzw00007499

**Inspection item**


- DC-DC converter (i-ELOOP) power supply voltage or body ground malfunction
- DC-DC converter (i-ELOOP) body ground related wiring harness
- DC-DC converter (i-ELOOP) connector
- Connectors C-28,C-29
- Wiring harness between DC-DC converter (i-ELOOP) terminal 1M and connector C-28
- Wiring harness between DC-DC converter (i-ELOOP) terminal 1N and connector C-29
- DC-DC converter (i-ELOOP)

**H**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Open circuit in wiring harness between connectors C-28,C-29 and BCM
- Connectors C-28,C-29 malfunction
- CAN circuit in BCM malfunction

## System wiring diagram

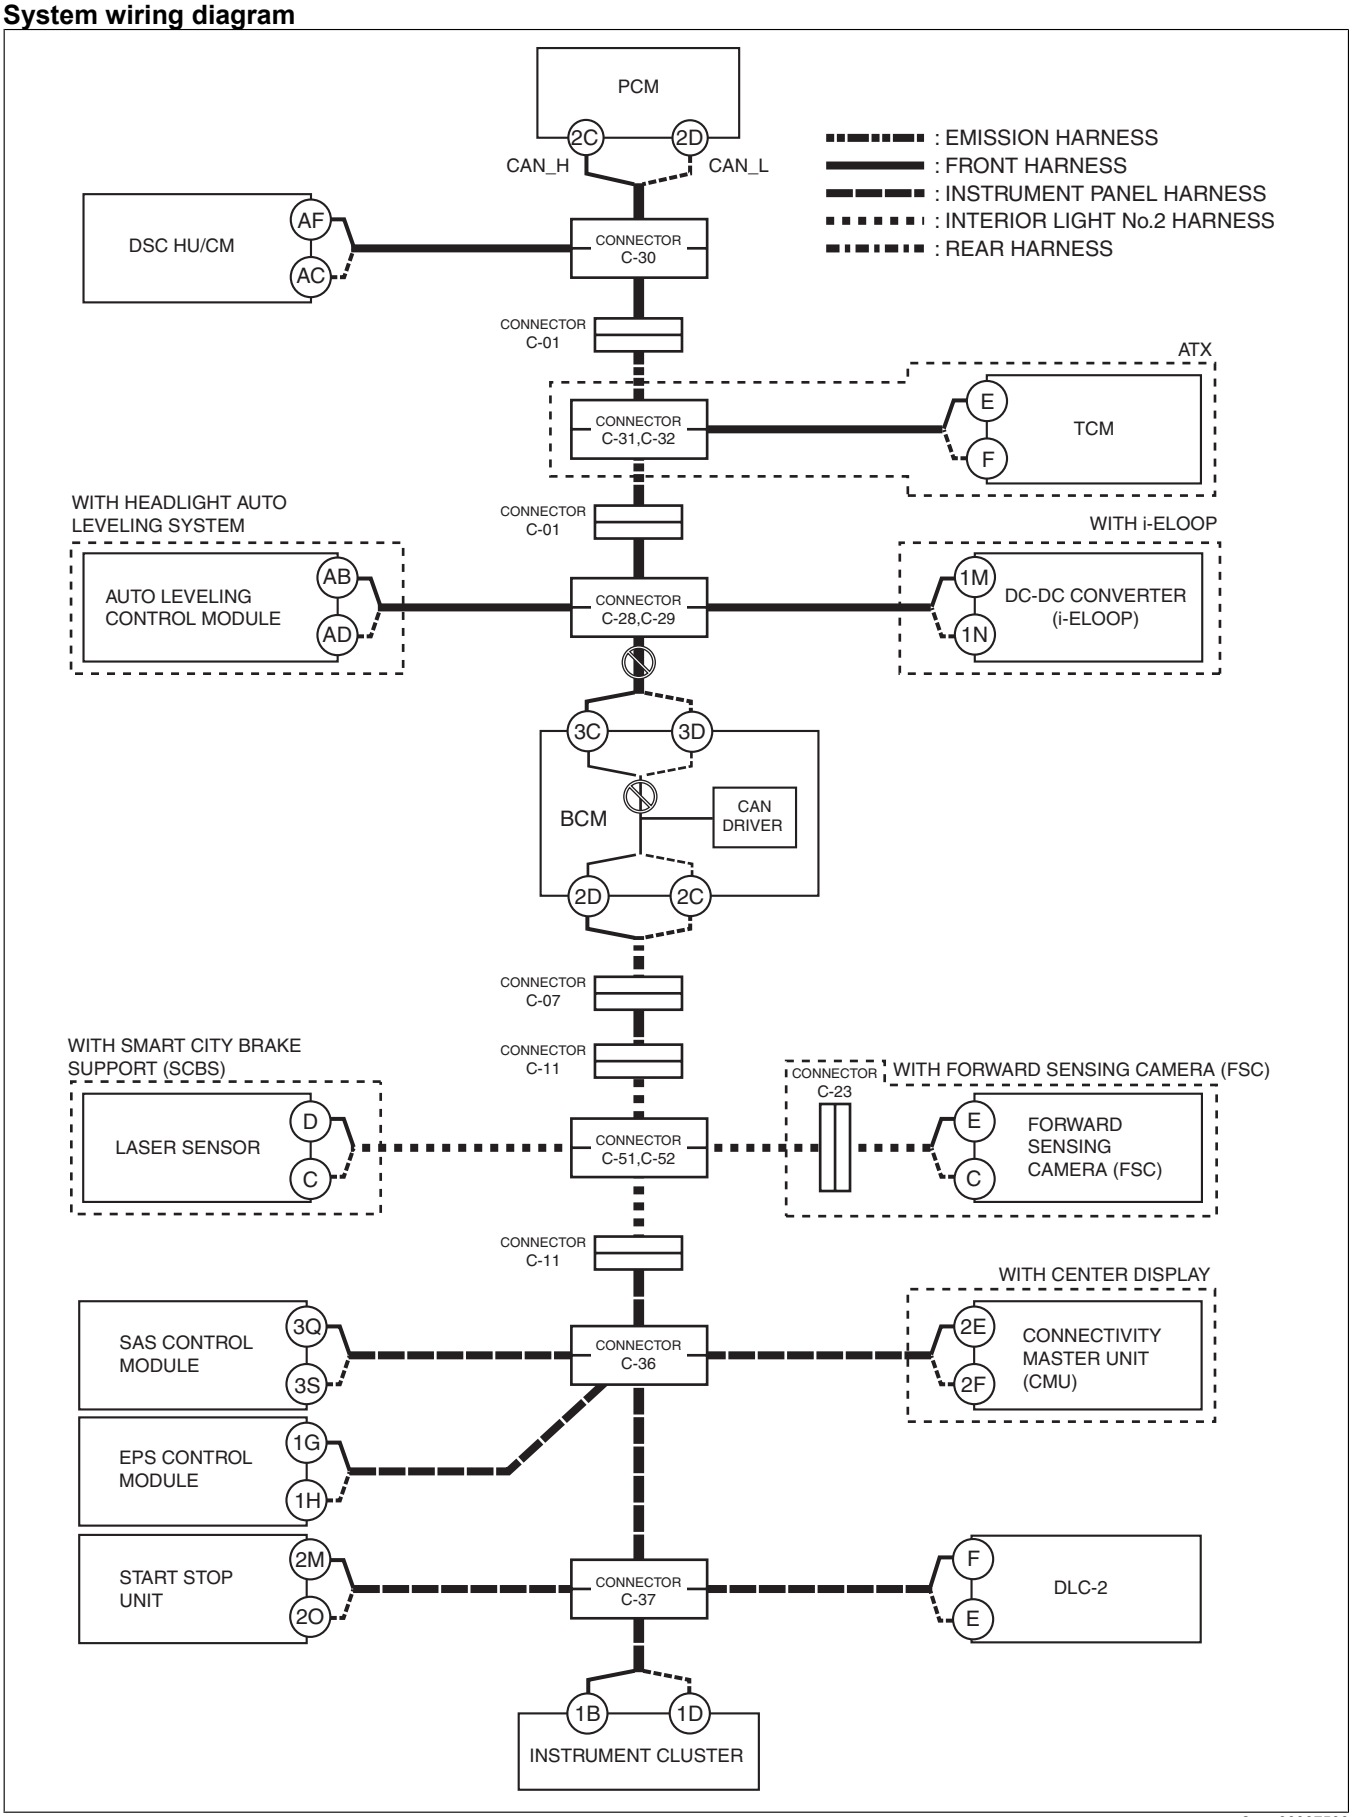


am2zzw00007500

**Inspection item**


- Connectors C-28,C-29
- BCM connector
- Wiring harness between BCM terminal 3C and connector C-28
- Wiring harness between BCM terminal 3D and connector C-29
- BCM
  - — Between BCM terminal 3C and BCM terminal 2D
  - — Between BCM terminal 3D and BCM terminal 2C

**I**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- BCM power supply voltage or body ground malfunction
- BCM malfunction

## System wiring diagram

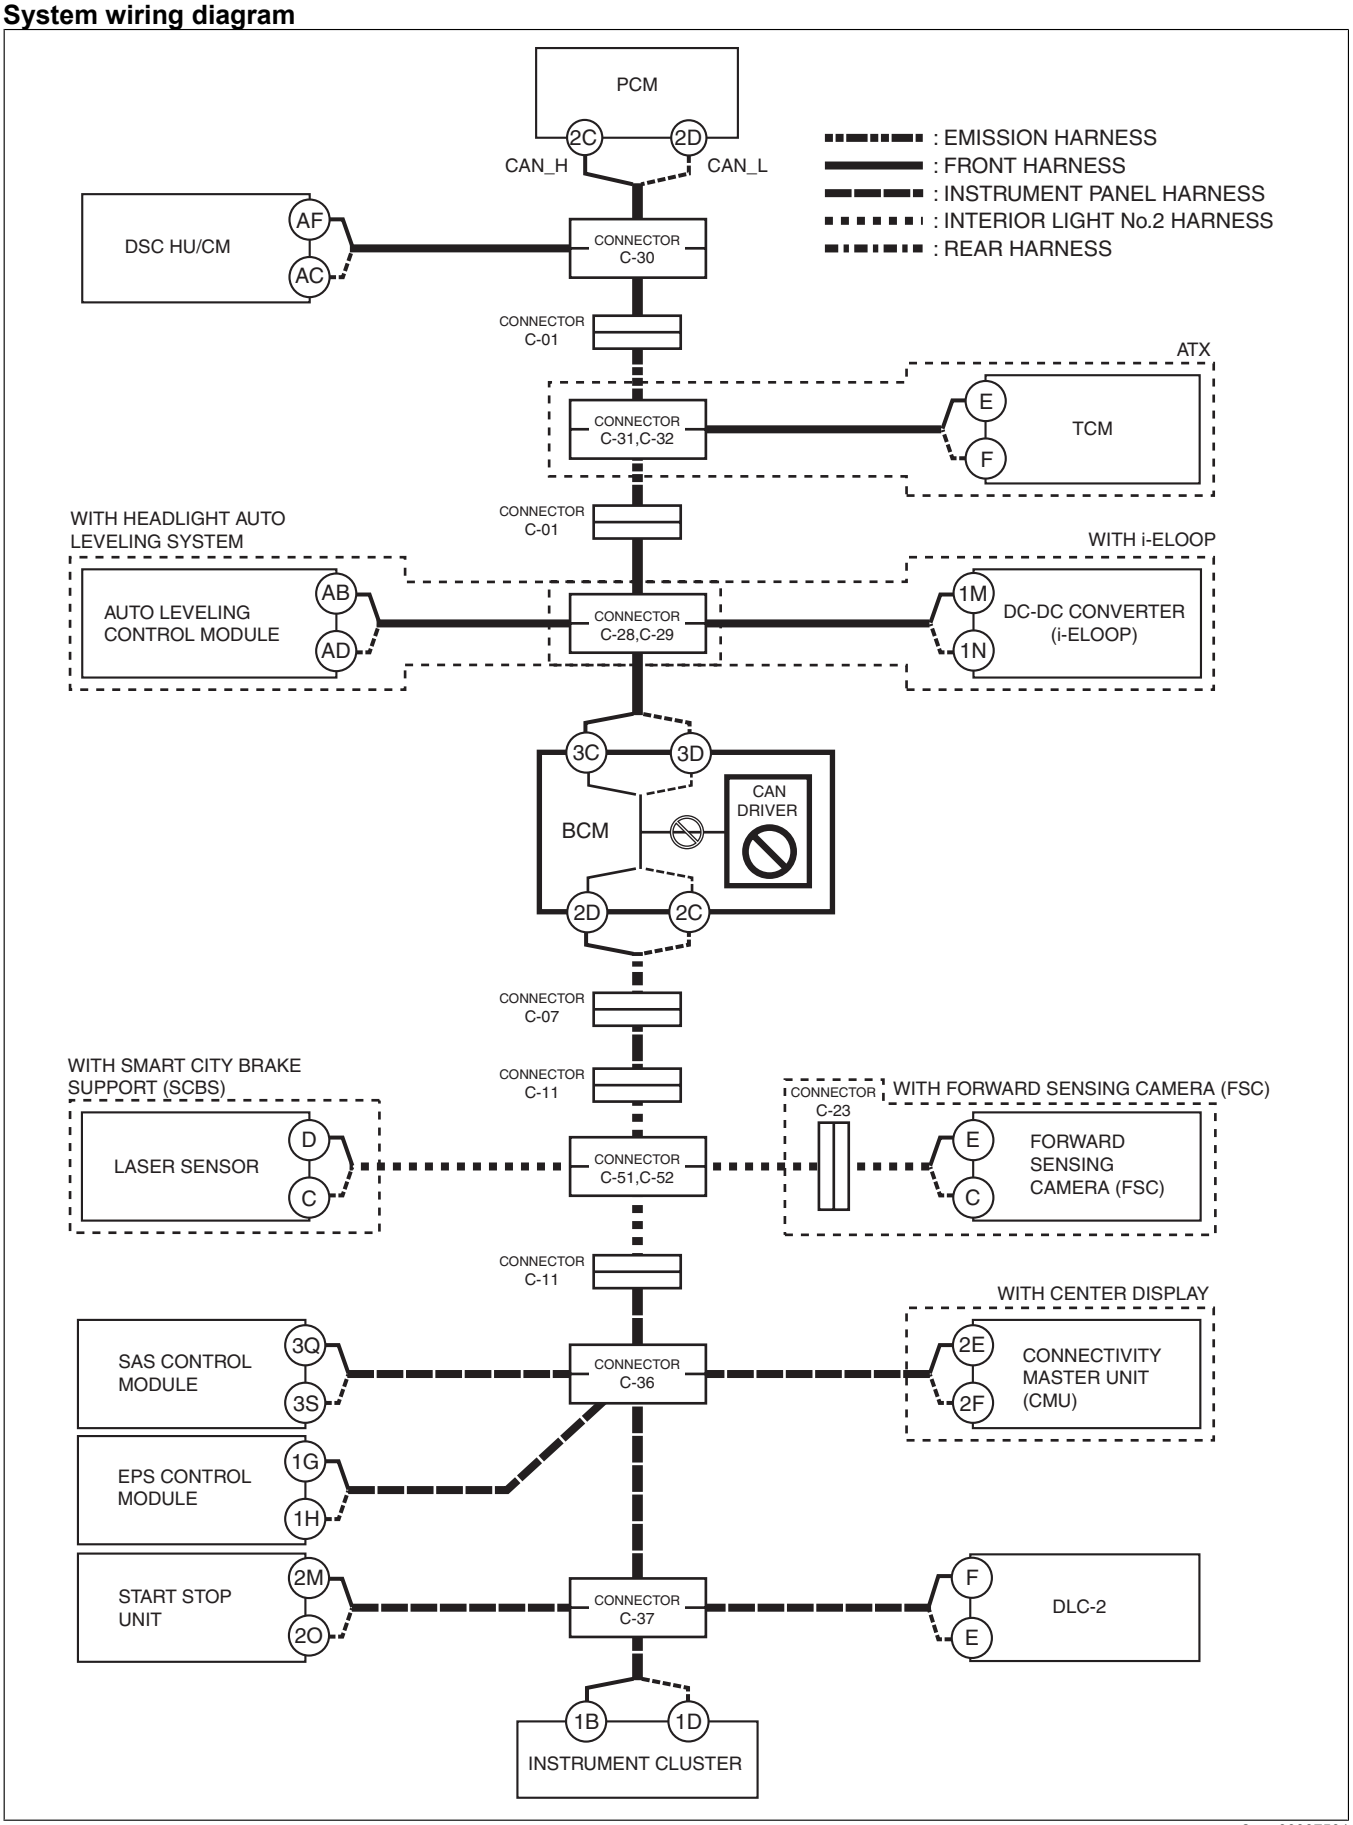



am2zzw00007501

**Inspection item**
- BCM power supply voltage or body ground malfunction
- BCM body ground related wiring harness
- BCM

**J**
**Possible cause**
- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Open circuit in wiring harness between BCM and connector C-07
- Open circuit in wiring harness between connector C-07 and connector C-11
- Open circuit in wiring harness between connector C-11 and connectors C-51,C-52
- Connector C-07 malfunction
- Connector C-11 malfunction
- Connectors C-51,C-52 malfunction
- CAN circuit in BCM malfunction

## System wiring diagram

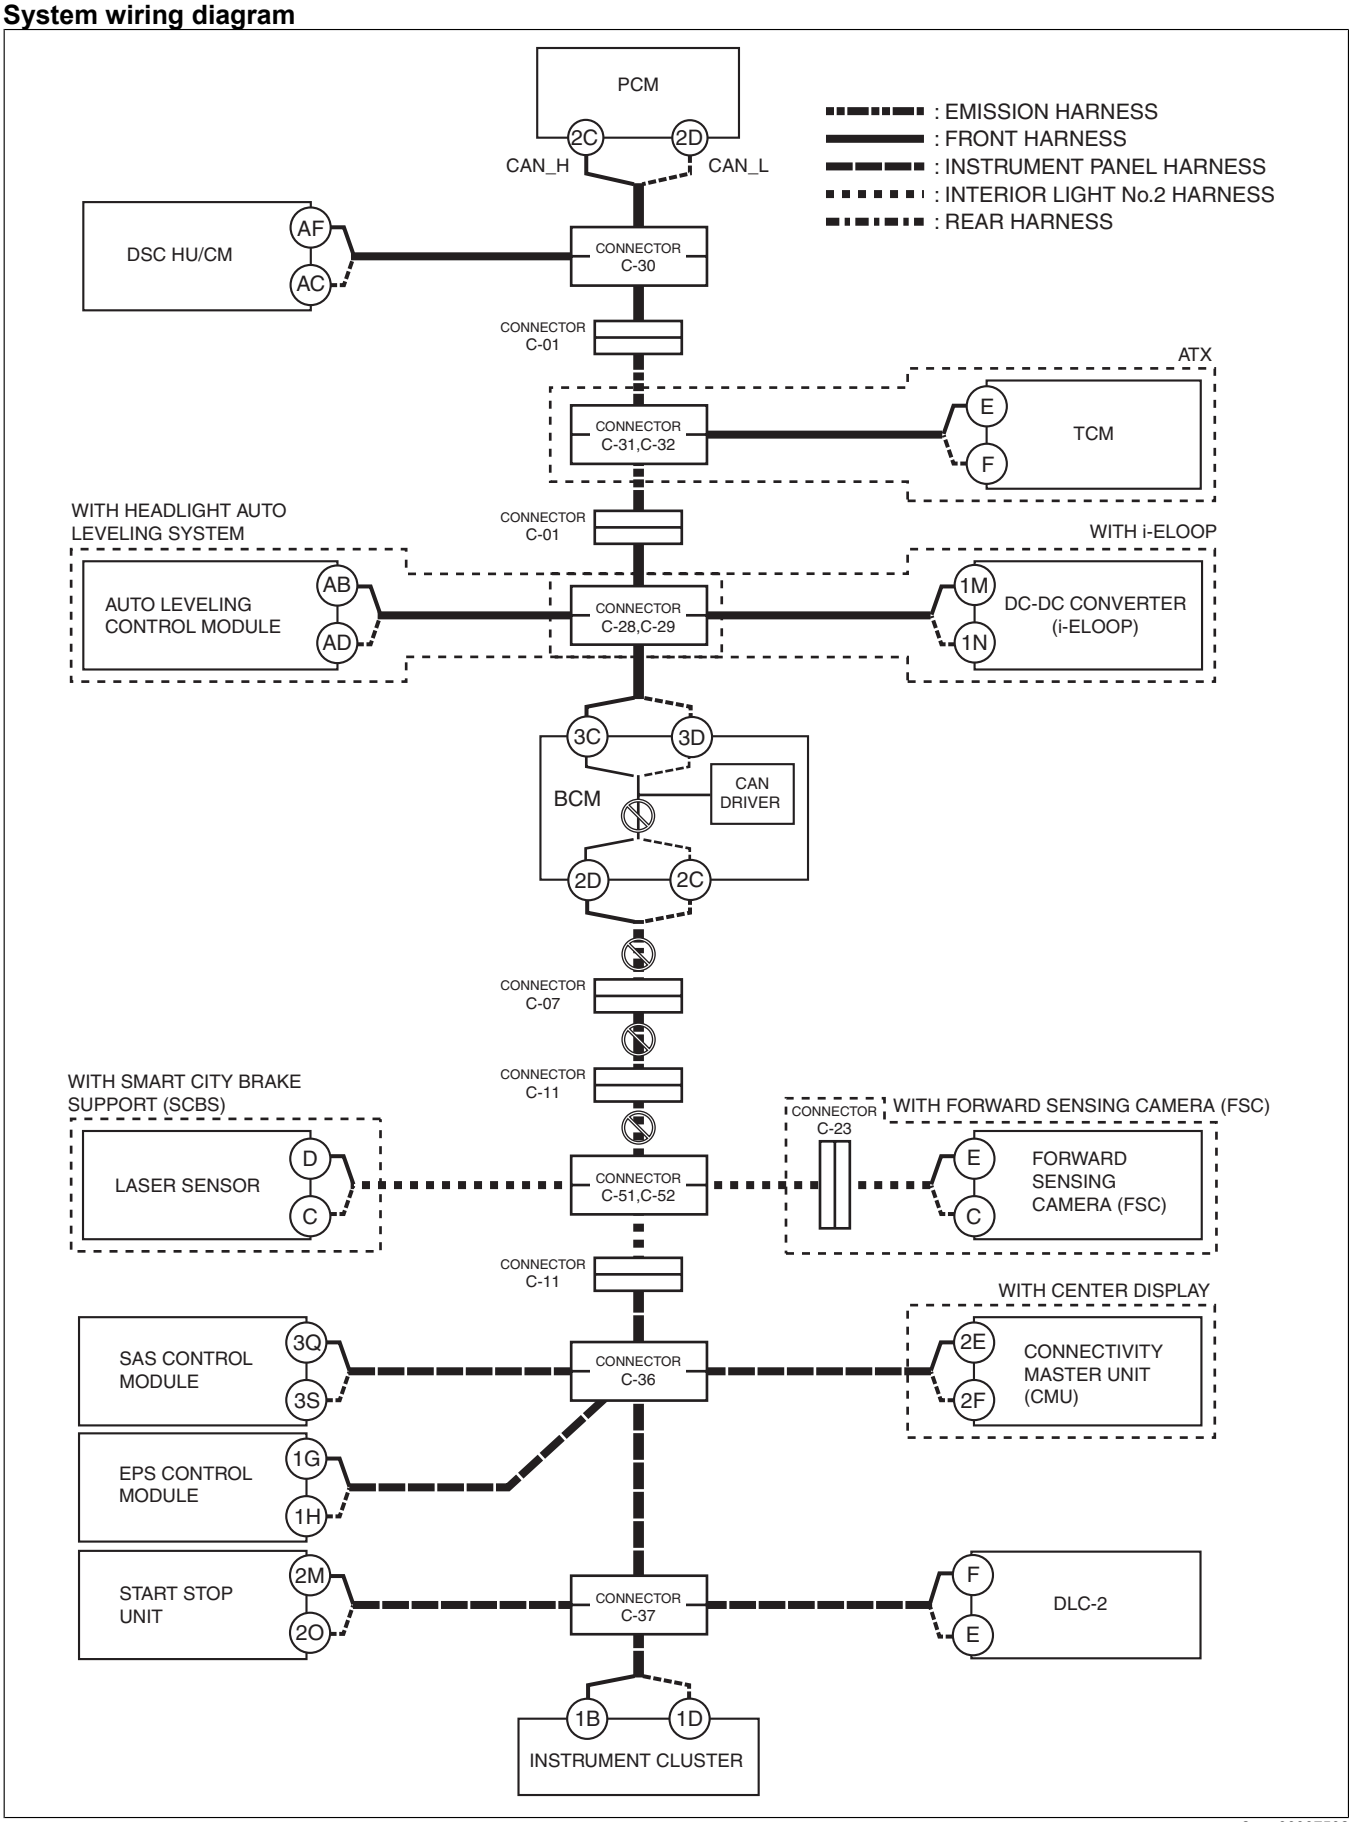


am2zzw00007502

**Inspection item**


- Connector C-07
- Connector C-11
- Connectors C-51,C-52
- BCM connector
- Wiring harness between BCM terminal 2D and connector C-07
- Wiring harness between BCM terminal 2C and connector C-07
- Wiring harness between connector C-07 and connector C-11
- Wiring harness between connector C-11 and connectors C-51,C-52
- BCM
  - Between BCM terminal 3C and BCM terminal 2D
  - Between BCM terminal 3D and BCM terminal 2C

**K**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Laser sensor power supply voltage or body ground malfunction
- Open circuit in wiring harness between laser sensor and connectors C-51,C-52
- Connectors C-51,C-52 malfunction
- Laser sensor malfunction

## System wiring diagram

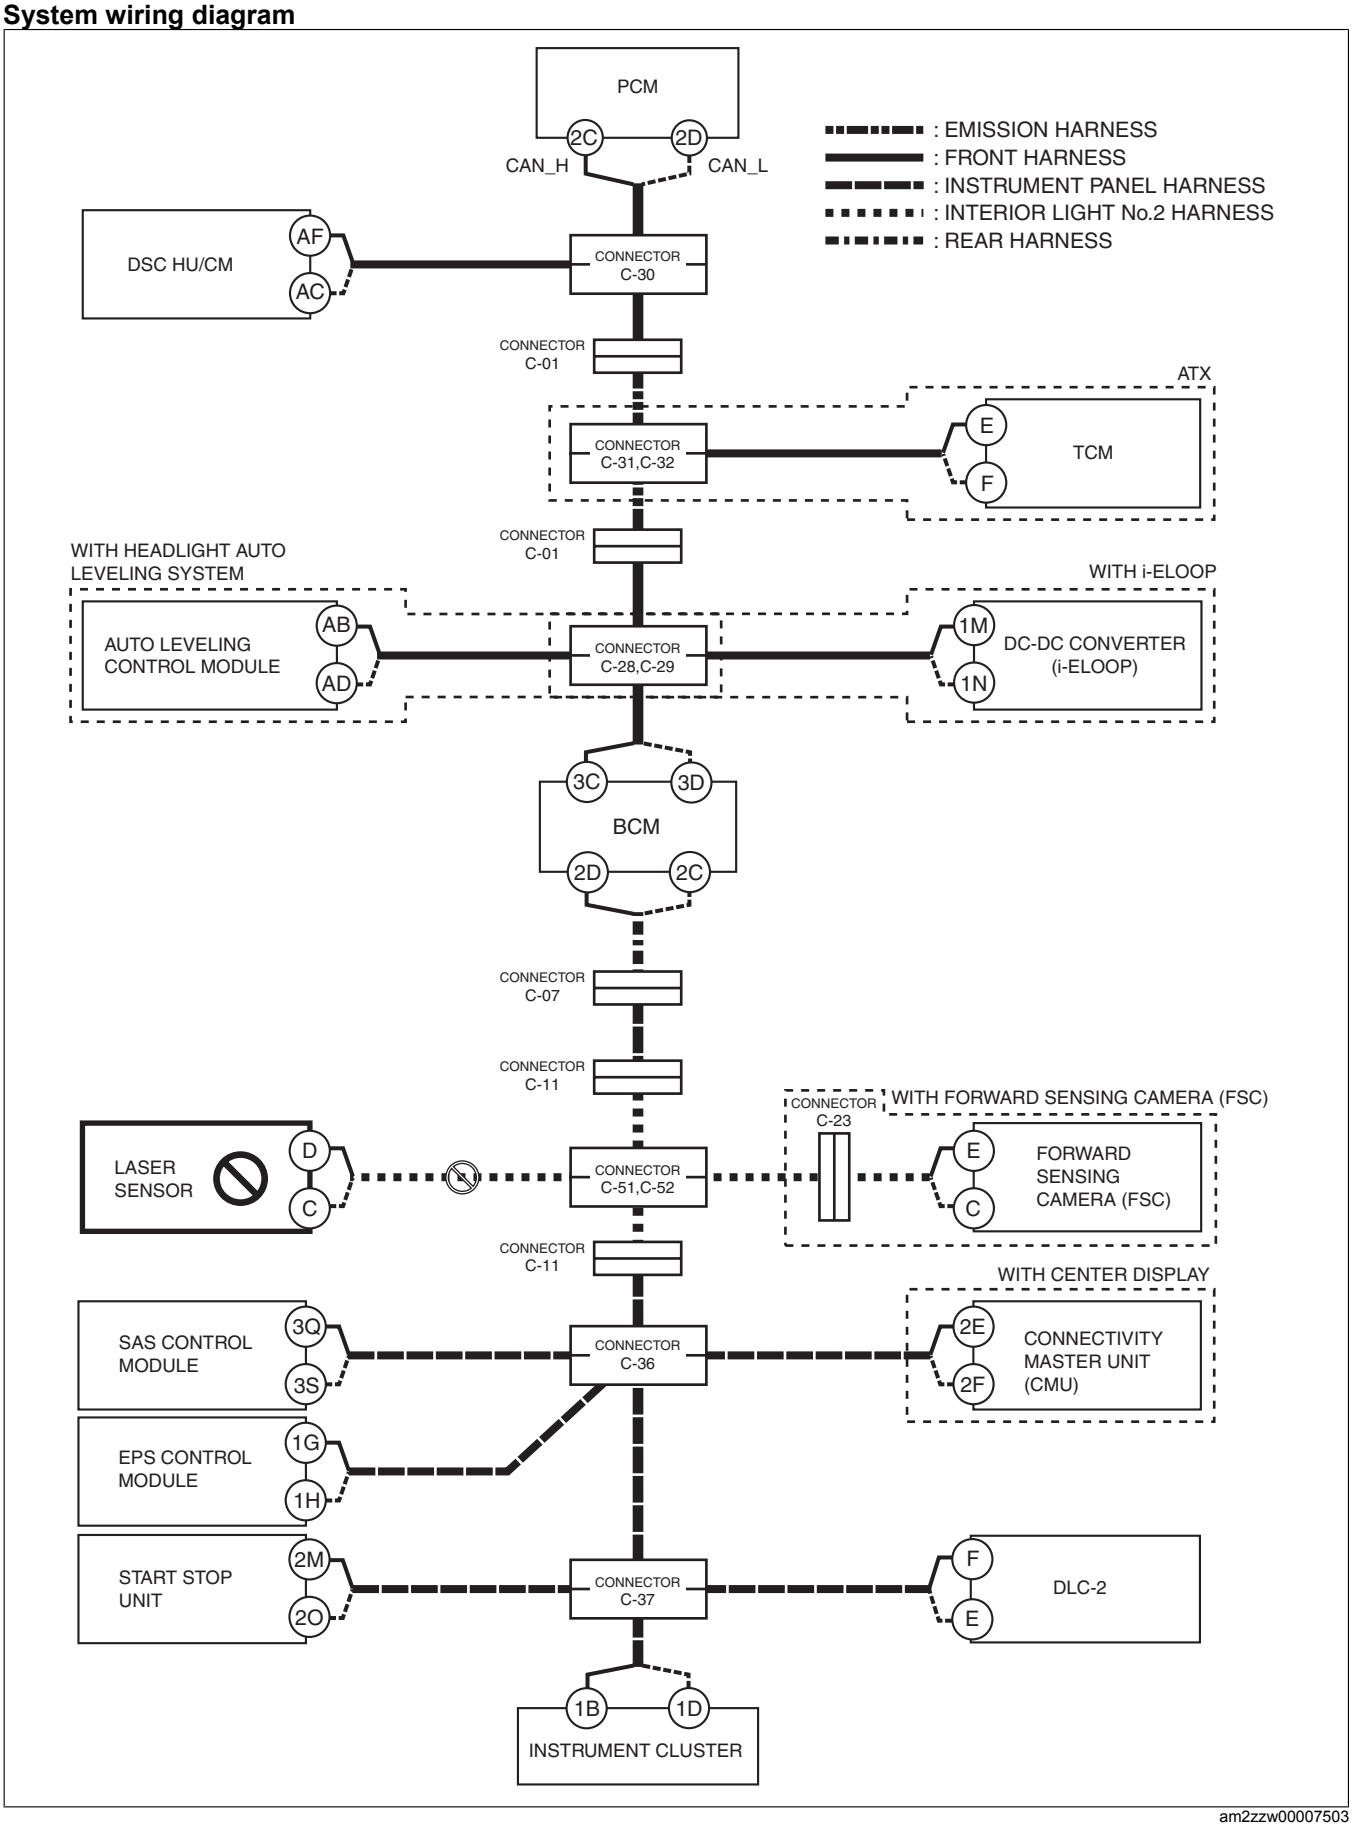


am2zzw00007503

**Inspection item**


- Laser sensor power supply voltage or body ground malfunction
- Laser sensor body ground related wiring harness
- Laser sensor connector
- Connectors C-51,C-52
- Wiring harness between laser sensor terminal D and connector C-51
- Wiring harness between laser sensor terminal C and connector C-52
- Laser sensor

**L**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Forward sensing camera (FSC) power supply voltage or body ground malfunction
- Open circuit in wiring harness between forward sensing camera (FSC) and connector C-23
- Open circuit in wiring harness between connector C-23 and connectors C-51,C-52
- Connector C-23 malfunction
- Connectors C-51,C-52 malfunction
- Forward sensing camera (FSC) malfunction

**System wiring diagram**

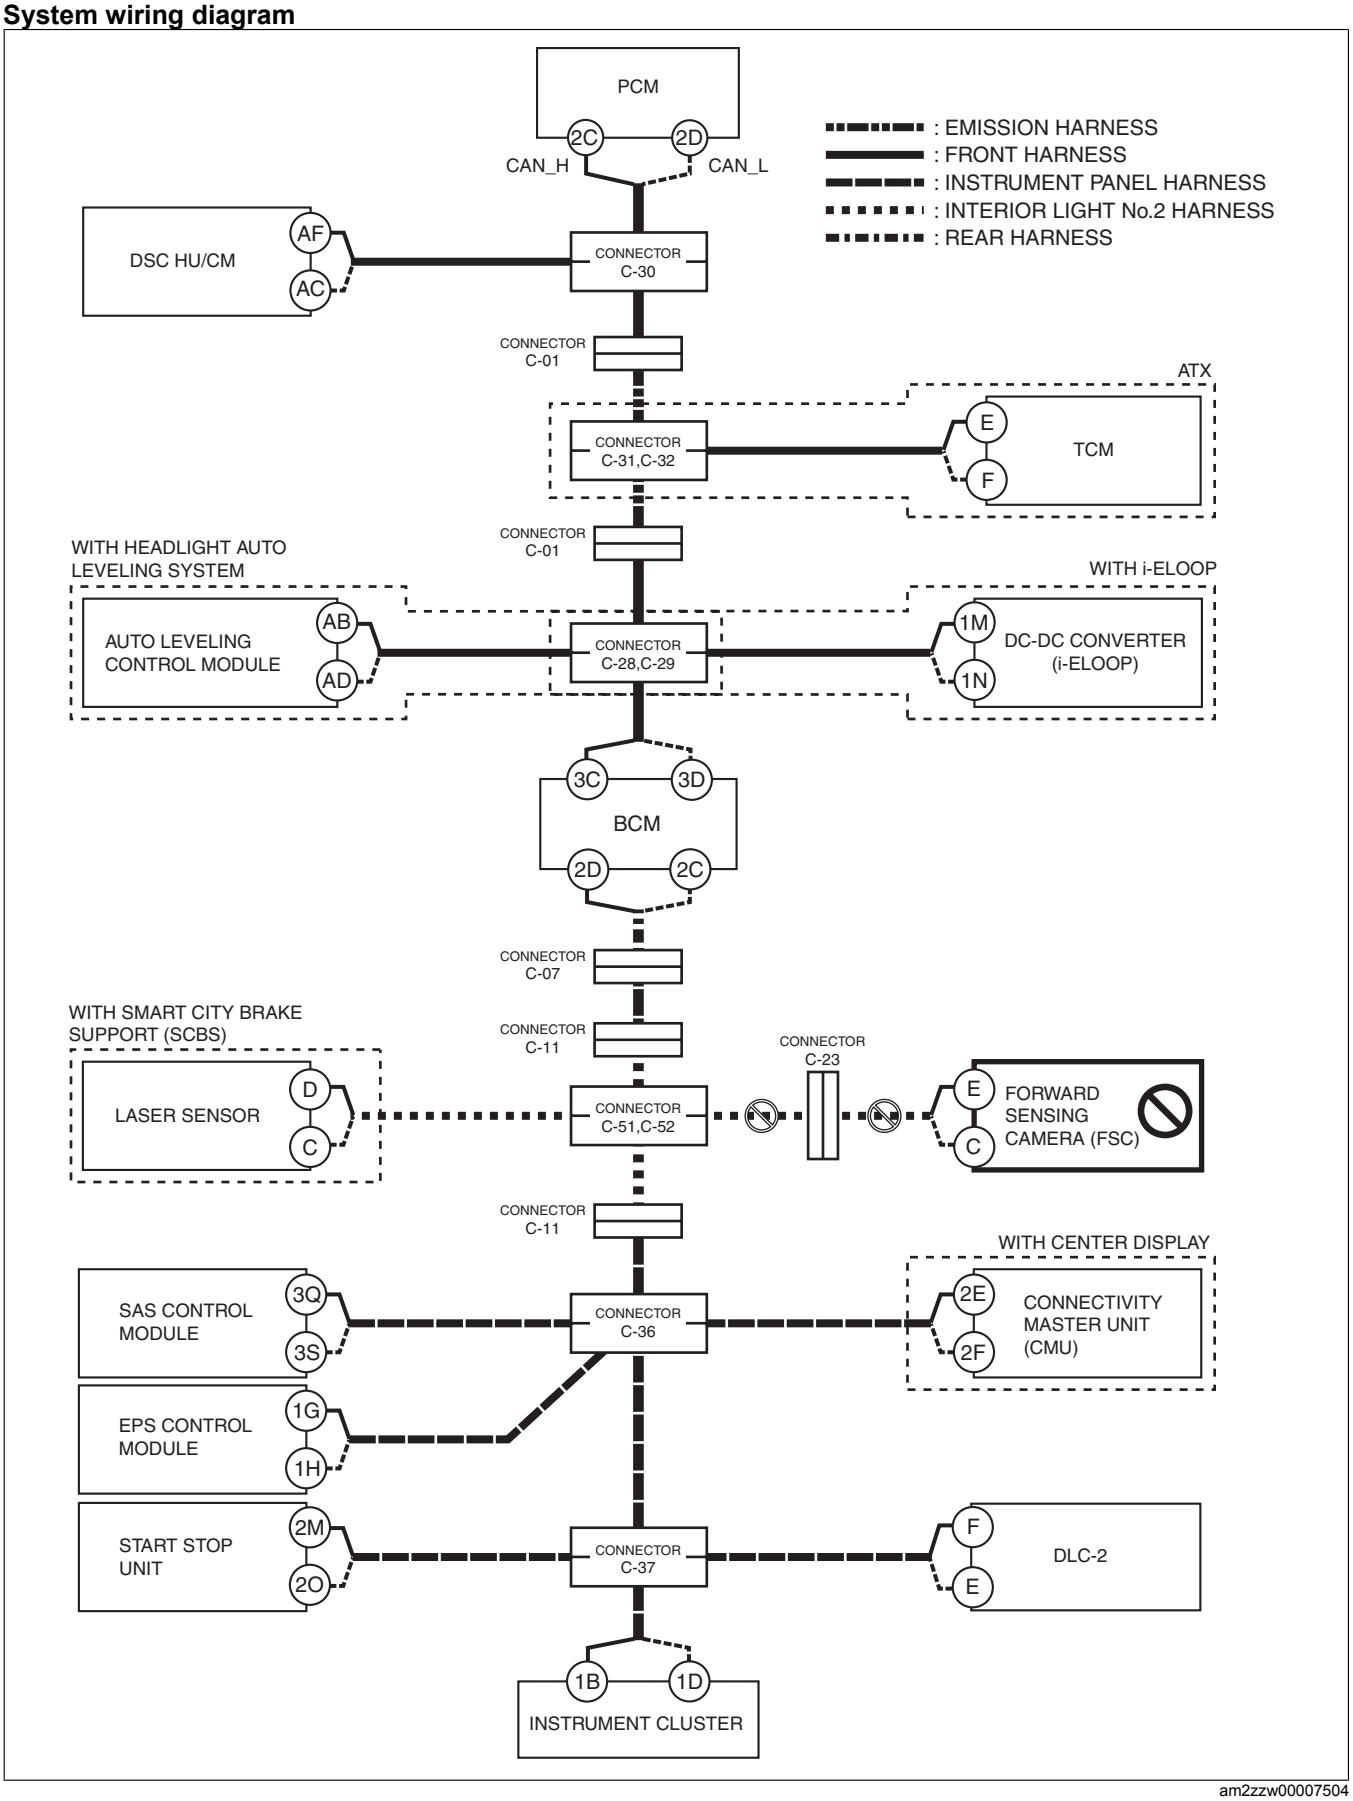


am2zzw00007504

**Inspection item**

- Forward sensing camera (FSC) power supply voltage or body ground malfunction


- Forward sensing camera (FSC) body ground related wiring harness
- Forward sensing camera (FSC) connector
- Connectors C-51,C-52
- Connector C-23
- Wiring harness between forward sensing camera (FSC) terminal E and connector C-23
- Wiring harness between forward sensing camera (FSC) terminal C and connector C-23
- Wiring harness between connector C-23 and connectors C-51,C-52
- Forward sensing camera (FSC)

**M**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Open circuit in wiring harness between connectors C-51,C-52 and connector C-11
- Open circuit in wiring harness between connector C-11 and connector C-36
- Connectors C-51,C-52 malfunction
- Connector C-11 malfunction
- Connector C-36 malfunction

## System wiring diagram

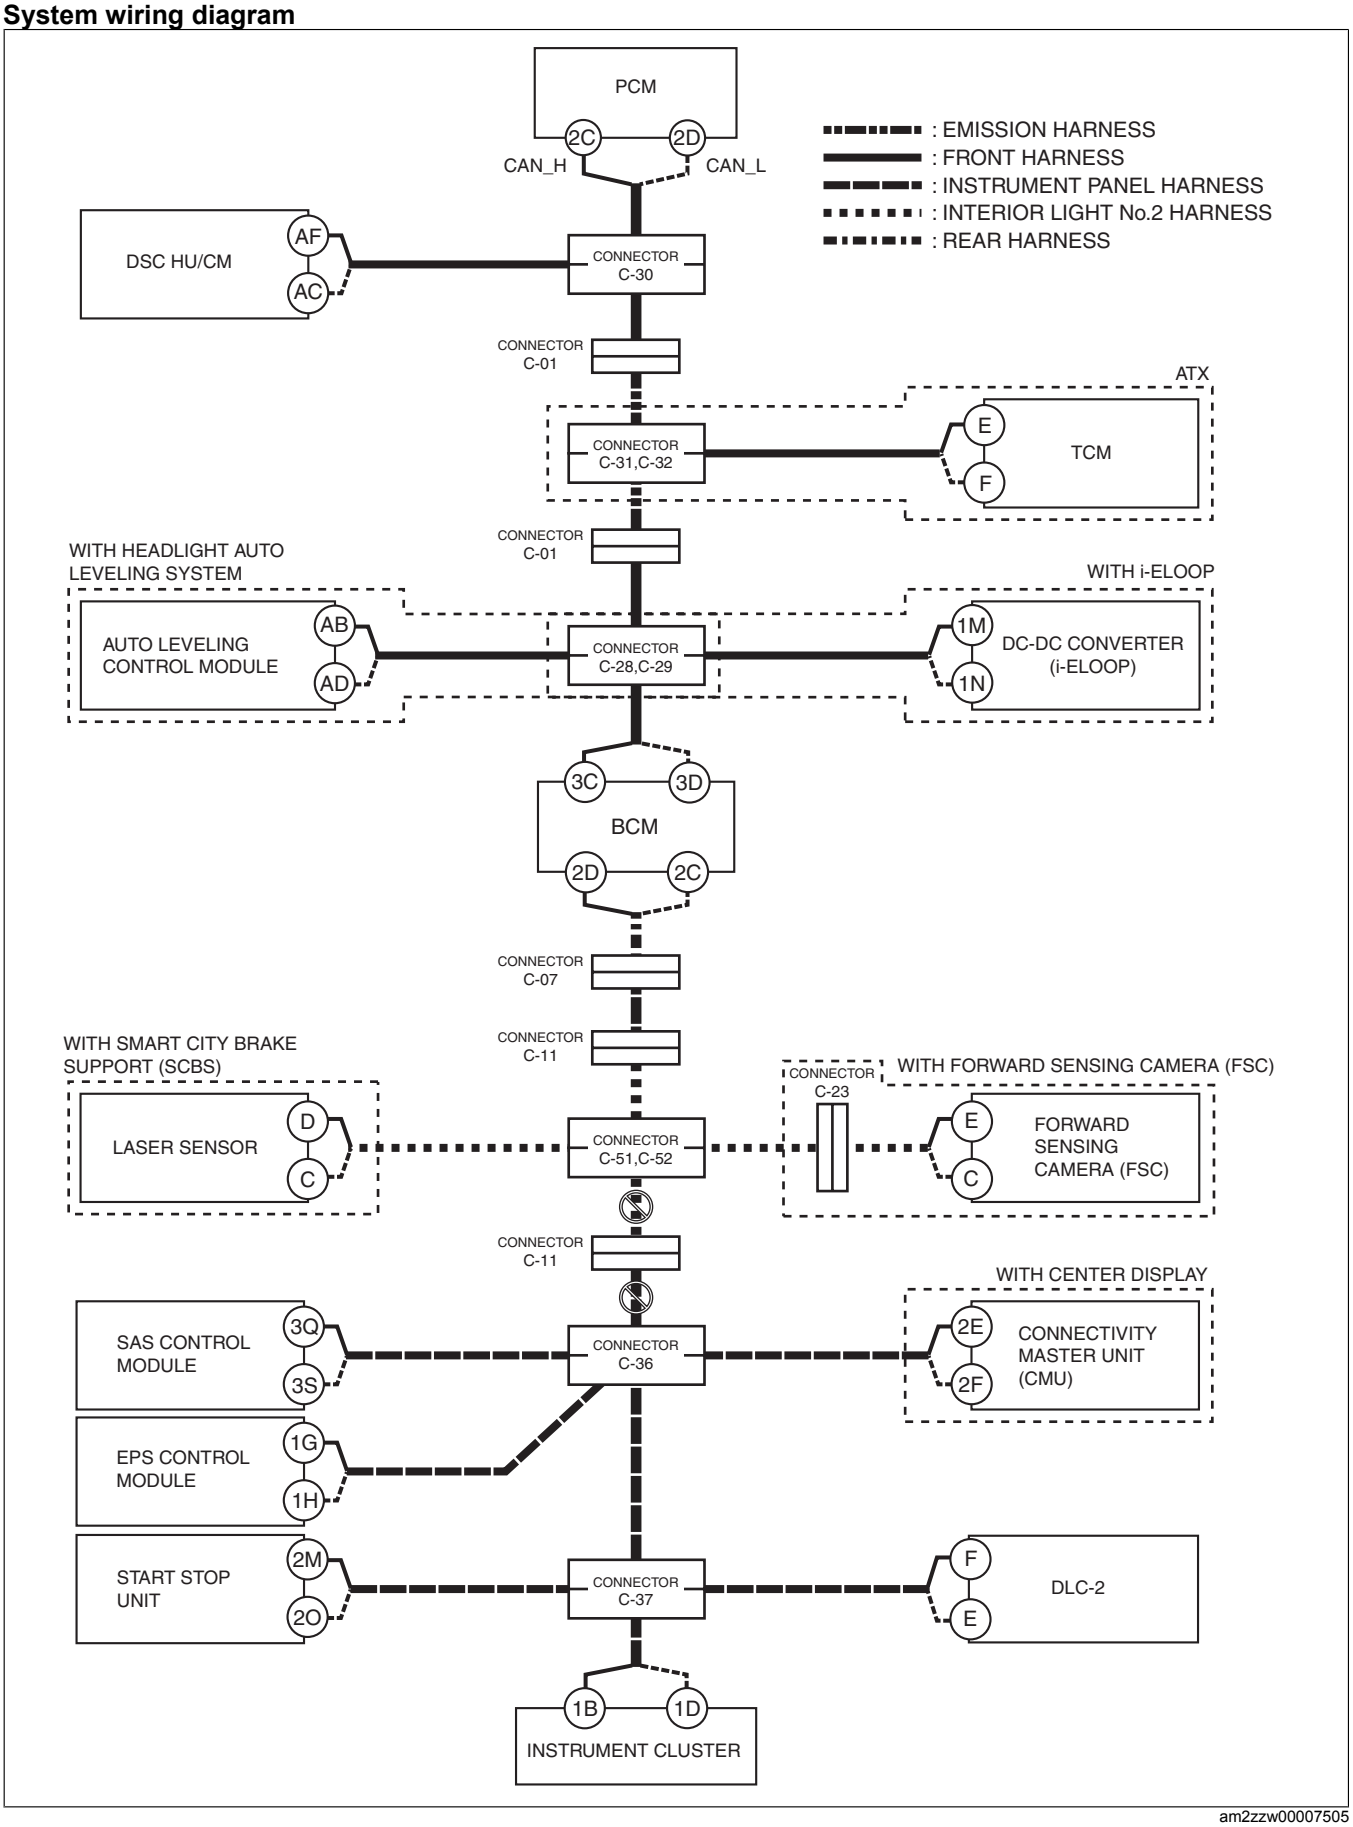



am2zzw00007505

**Inspection item**
- Connectors C-51,C-52
- Connector C-11
- Connector C-36
- Wiring harness between connectors C-51,C-52 and connector C-11
- Wiring harness between connector C-11 and connector C-36

**N**
**Possible cause**
- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- SAS control module power supply voltage or body ground malfunction
- Open circuit in wiring harness between SAS control module and connector C-36
- Connector C-36 malfunction
- SAS control module malfunction

## System wiring diagram

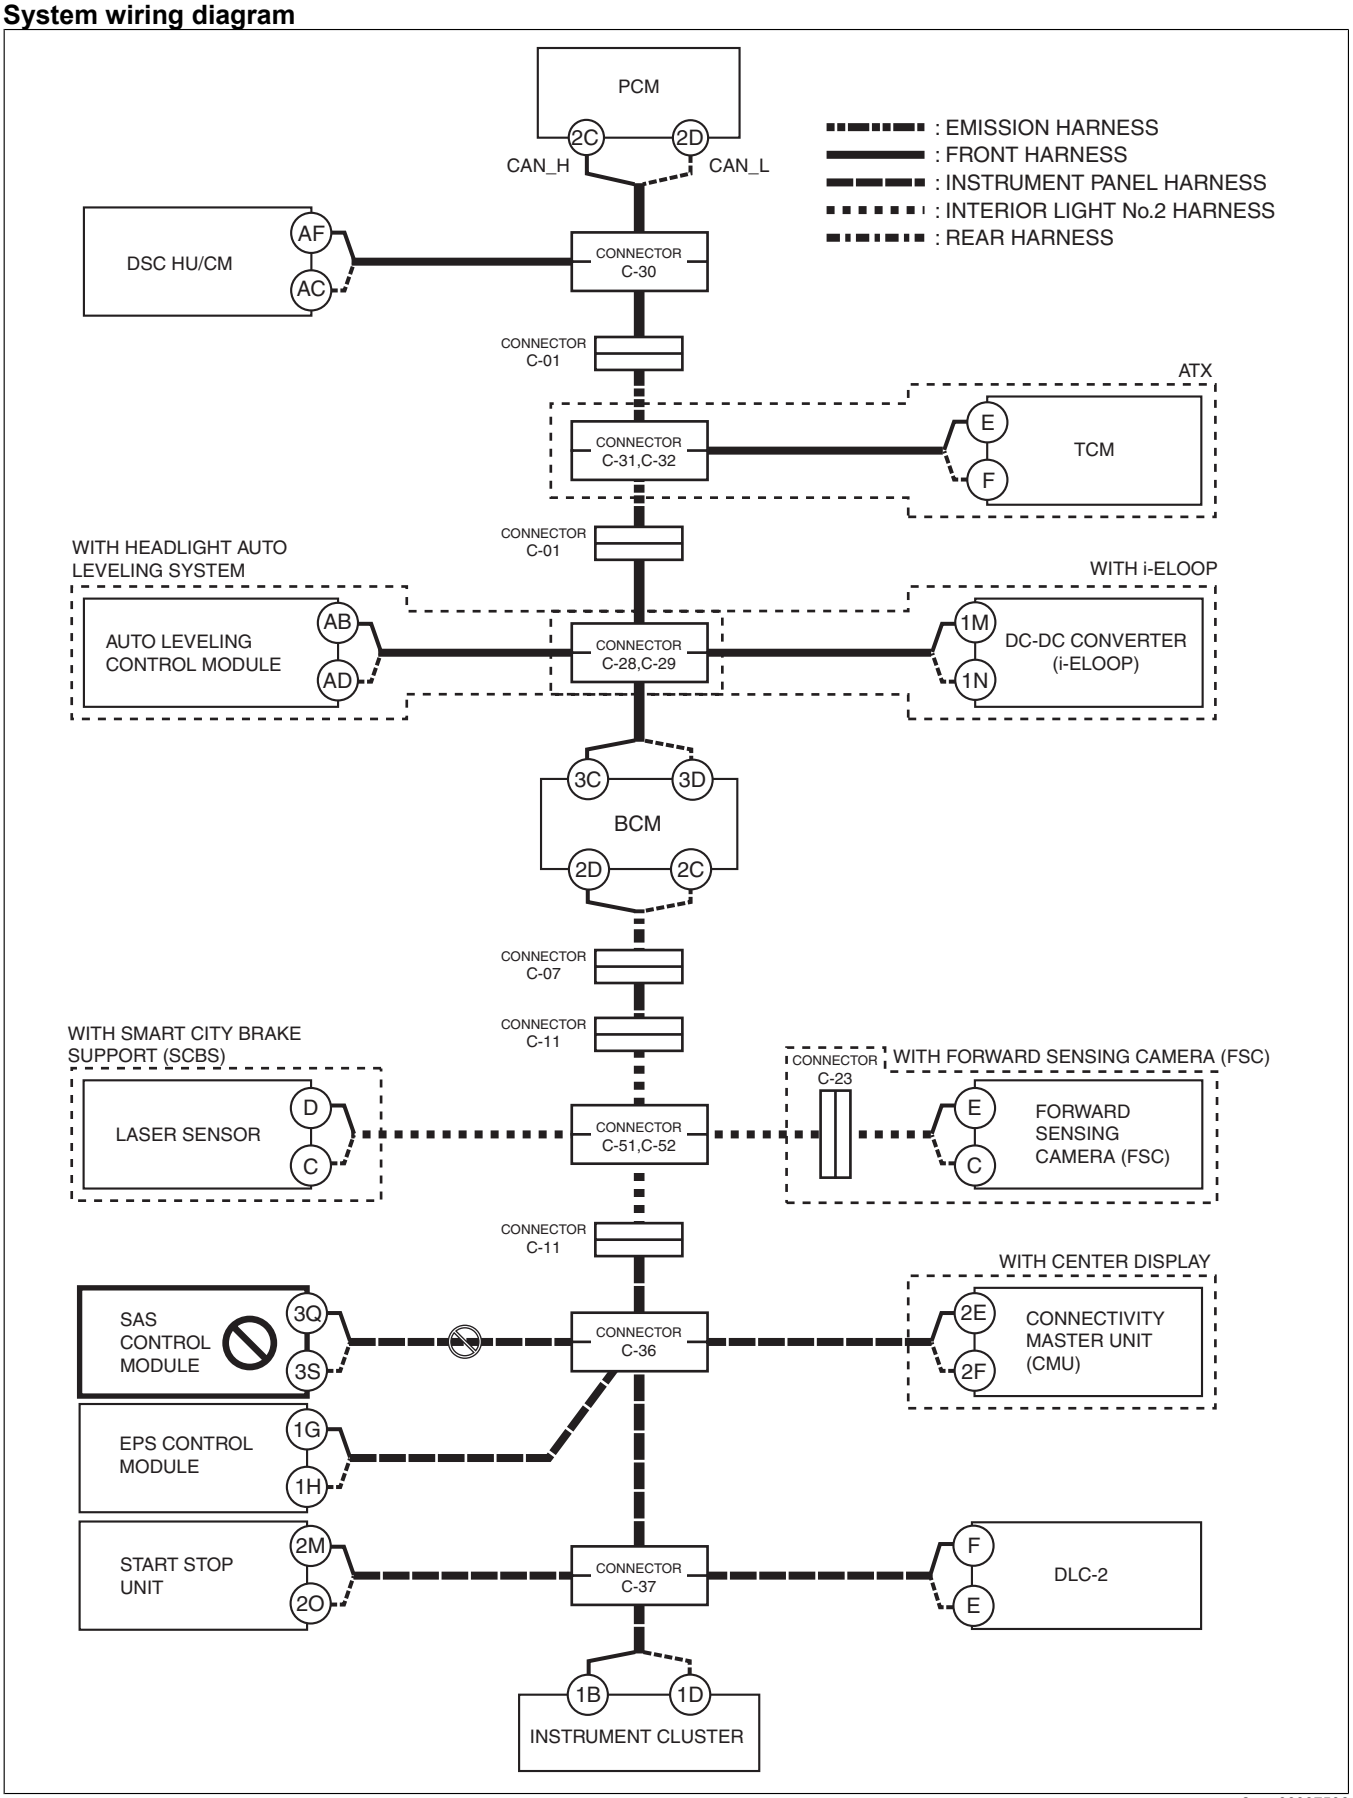


am2zzw00007506

**Inspection item**

**Warning**

- **Handling the component parts of the SRS air bag system improperly can accidentally operate (deploy) the air bag module, which may seriously injure you. To prevent this, always read the SRS air bag system service warnings and cautions before handling the SRS air bag system components. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**


- SAS control module power supply voltage or body ground malfunction
- SAS control module body ground related wiring harness
- SAS control module connector
- Connector C-36
- Wiring harness between SAS control module terminal 3Q and connector C-36
- Wiring harness between SAS control module terminal 3S and connector C-36
- SAS control module

**O**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Connectivity master unit (CMU) power supply voltage or body ground malfunction
- Wiring harness between connectivity master unit (CMU) and connector C-36
- Connector C-36 malfunction
- Connectivity master unit (CMU) malfunction

## System wiring diagram

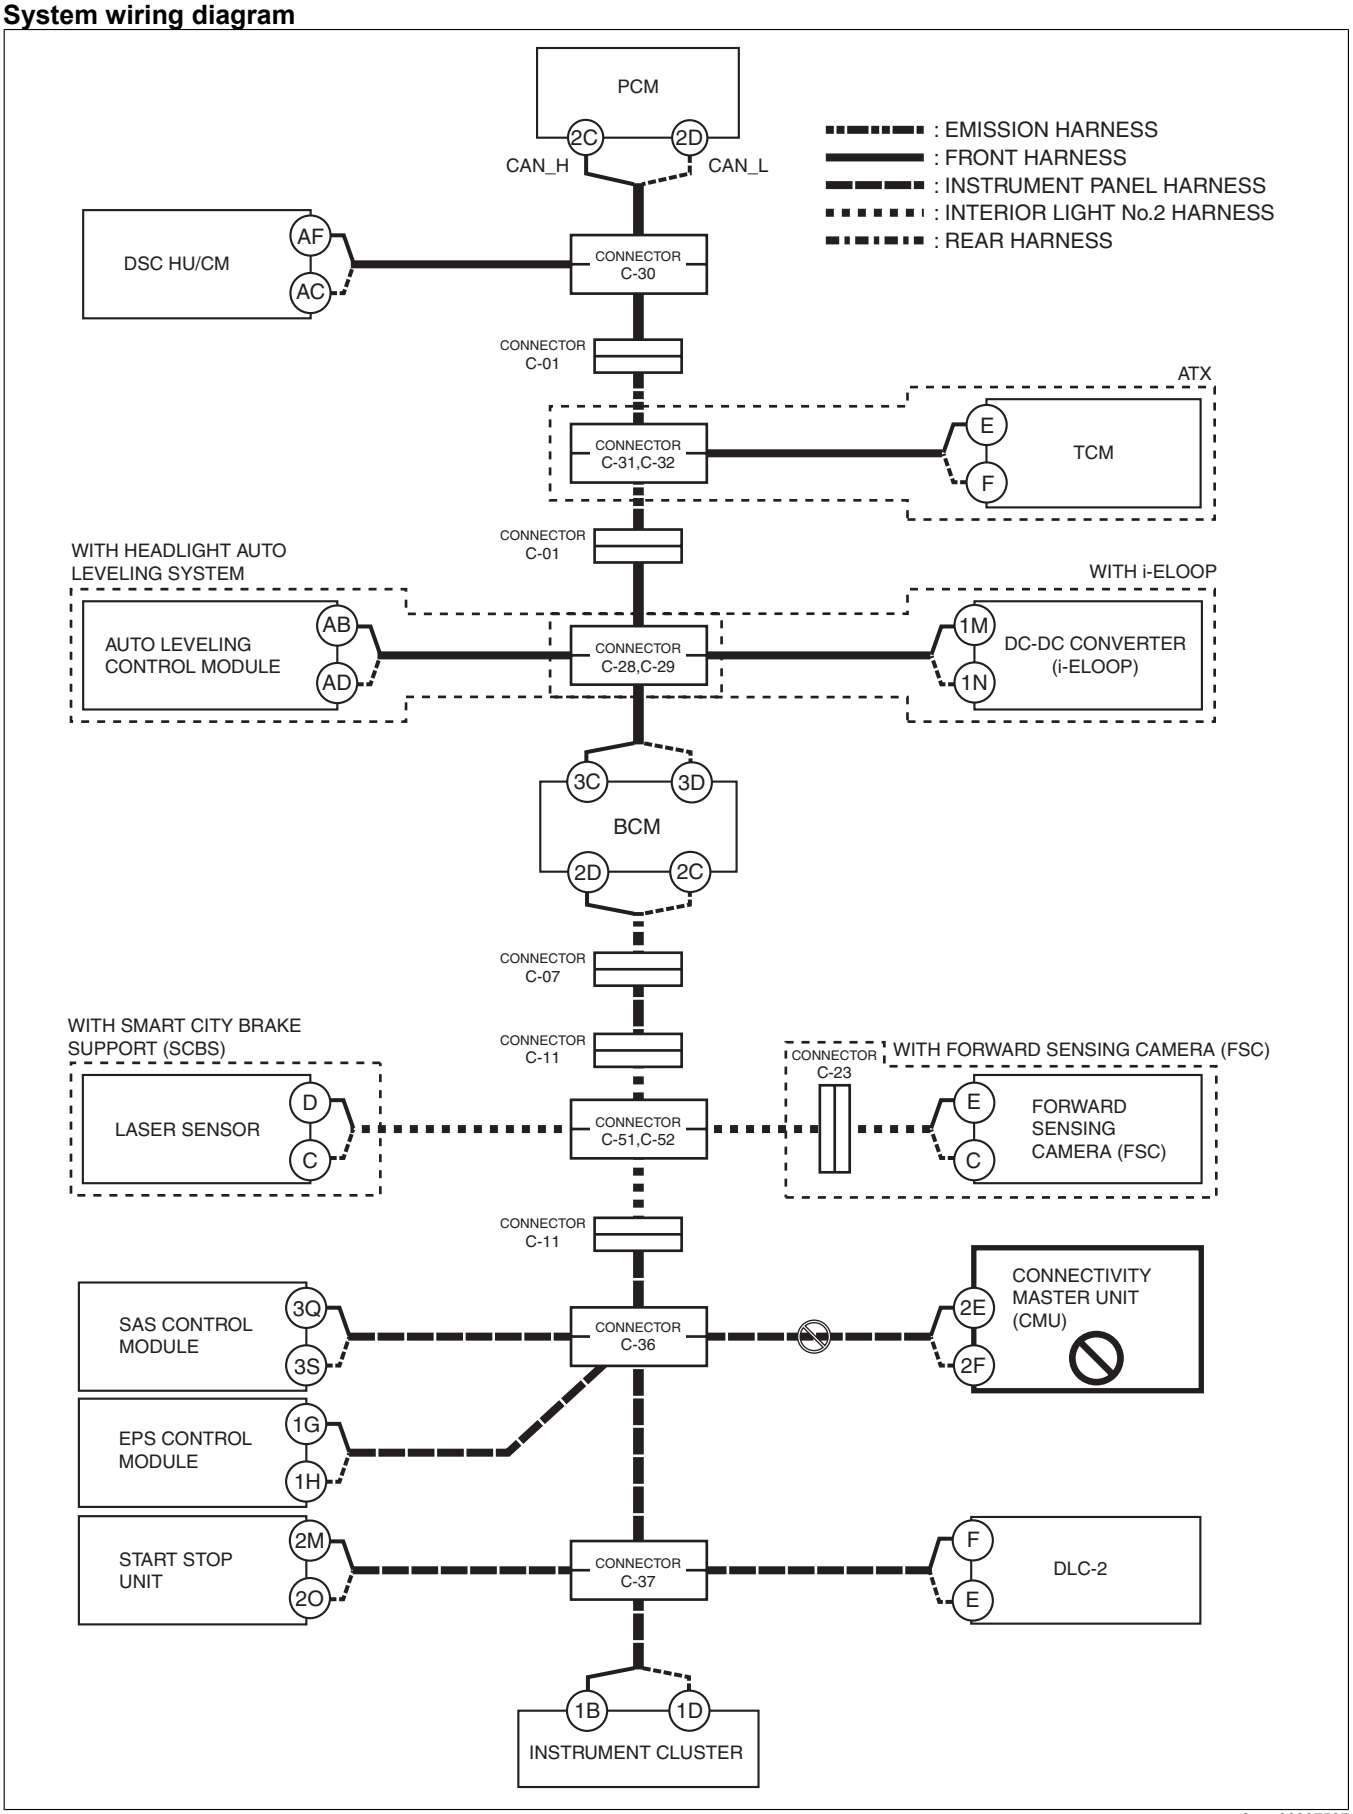


am2zzw00007507

**Inspection item**


- Connectivity master unit (CMU) power supply voltage or body ground malfunction
- Connectivity master unit (CMU) body ground related wiring harness
- Connectivity master unit (CMU) connector
- Connector C-36
- Wiring harness between connectivity master unit (CMU) terminal 2E and connector C-36
- Wiring harness between connectivity master unit (CMU) terminal 2F and connector C-36
- Connectivity master unit (CMU)

**P**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- EPS control module power supply voltage or body ground malfunction
- Open circuit in wiring harness between EPS control module and connector C-36
- Connector C-36 malfunction
- EPS control module malfunction

## System wiring diagram

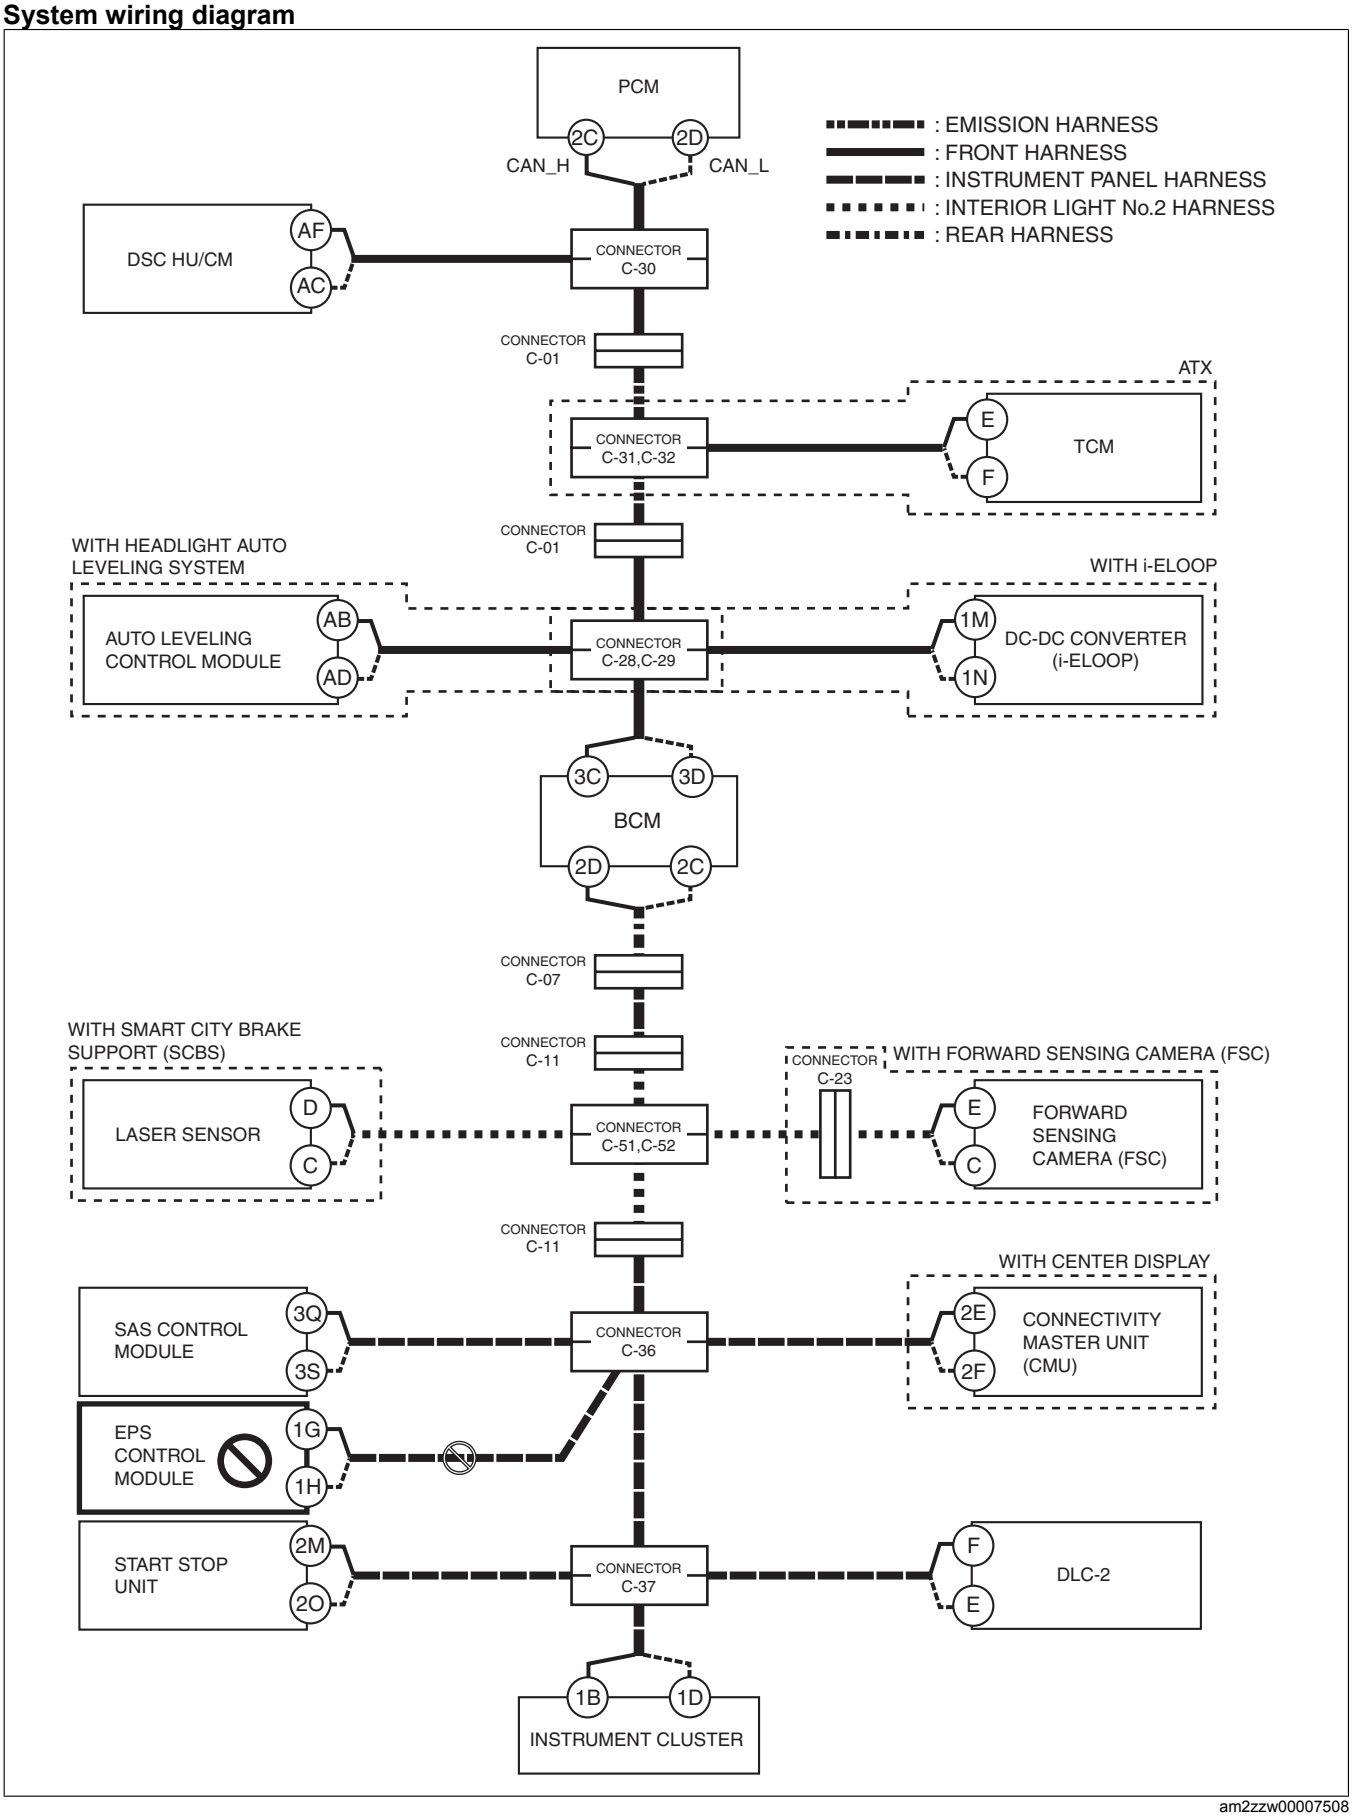



am2zzw00007508

**Inspection item**
- EPS control module power supply voltage or body ground malfunction
- EPS control module body ground related wiring harness
- EPS control module connector
- Connector C-36
- Wiring harness between EPS control module terminal 1G and connector C-36
- Wiring harness between EPS control module terminal 1H and connector C-36
- EPS control module

**Q**
**Possible cause**
- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Open circuit in wiring harness between connector C-36 and connector C-37
- Connector C-36 malfunction
- Connector C-37 malfunction

## System wiring diagram

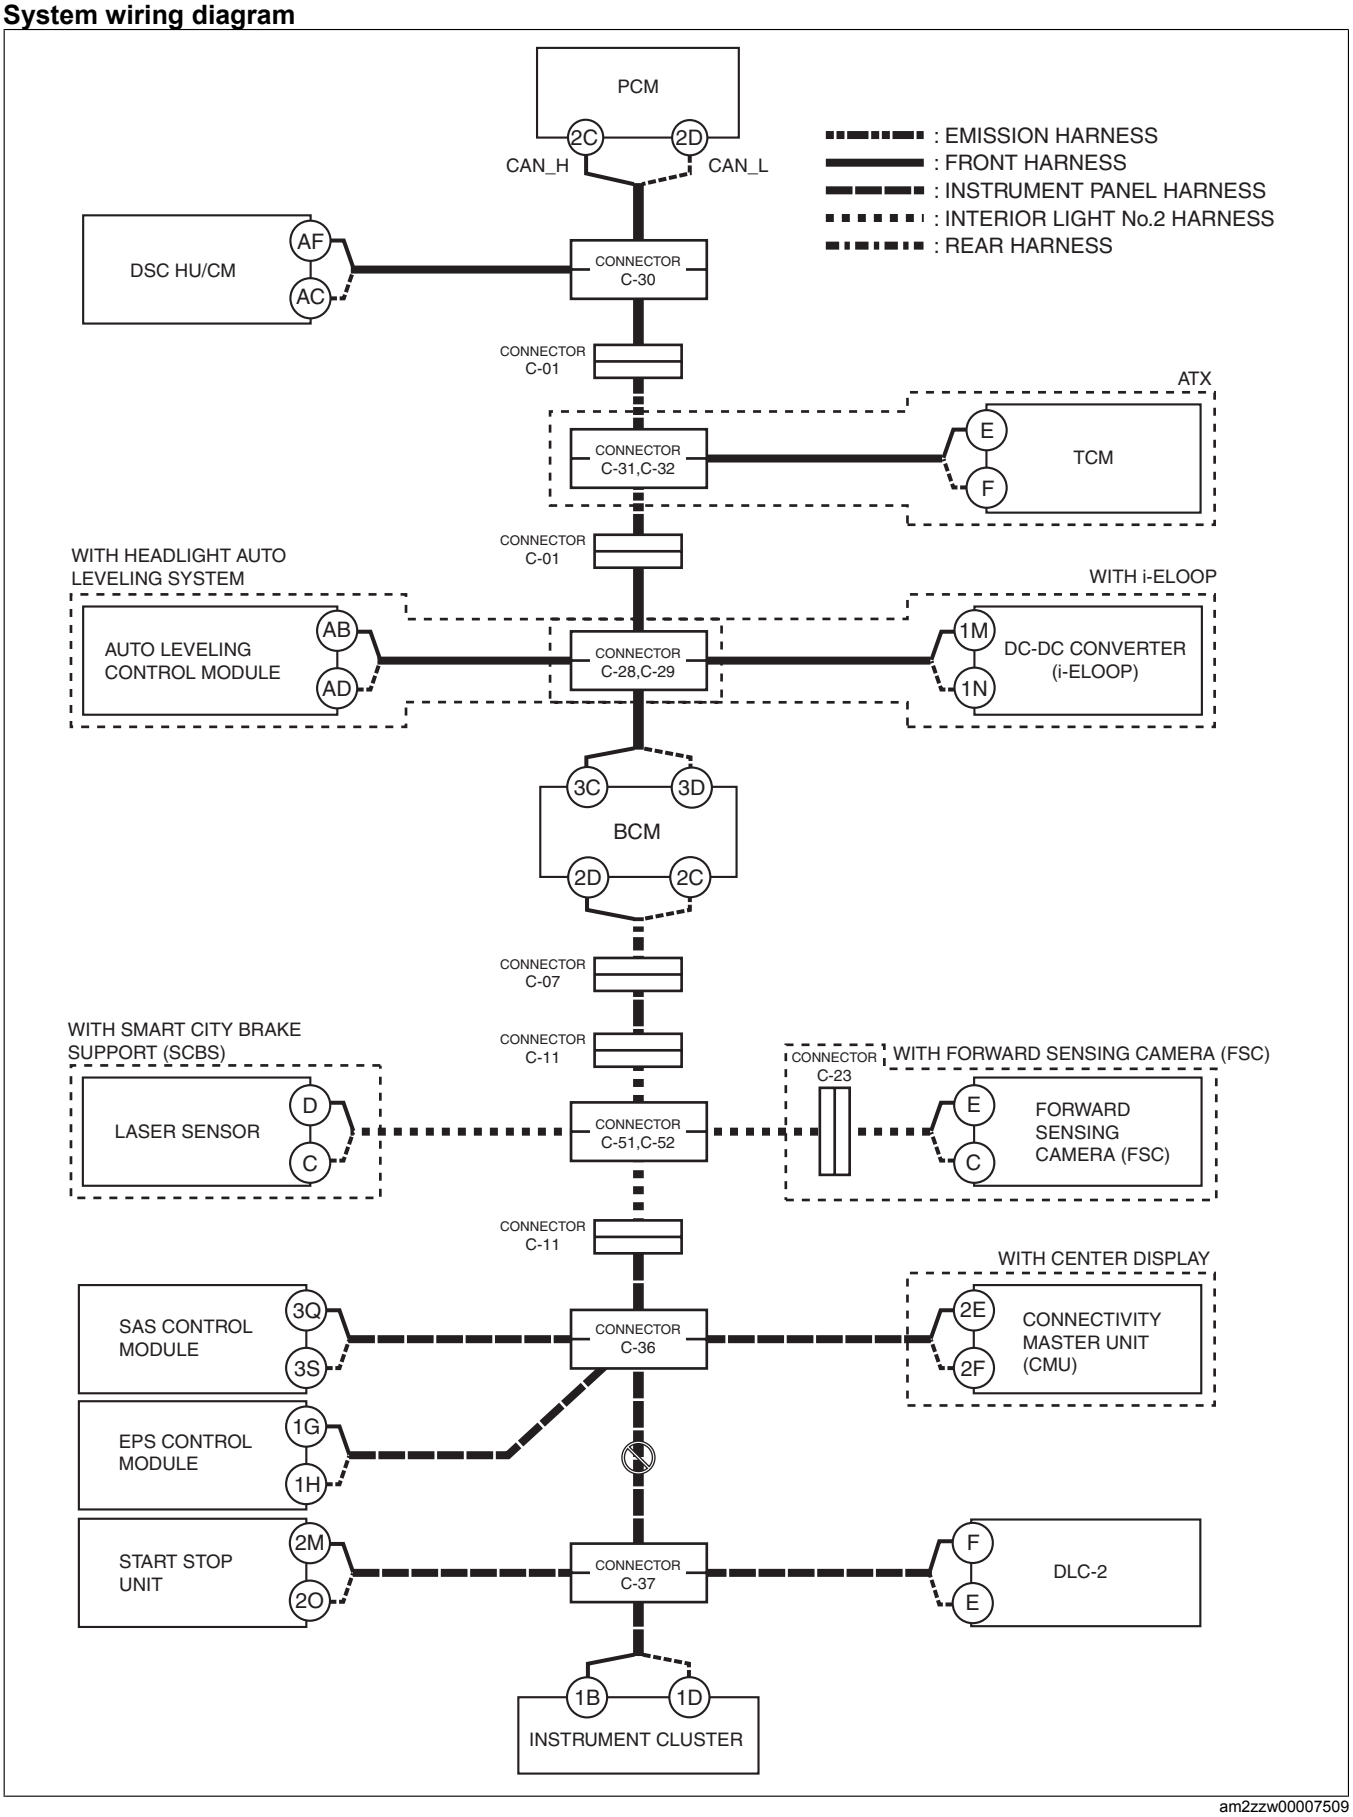



am2zzw00007509

**Inspection item**
- Connector C-36
- Connector C-37
- Wiring harness between connector C-36 and connector C-37

**R**
**Possible cause**
- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Start stop unit power supply voltage or body ground malfunction
- Open circuit in wiring harness between start stop unit and connector C-37
- Connector C-37 malfunction
- Start stop unit malfunction

## System wiring diagram

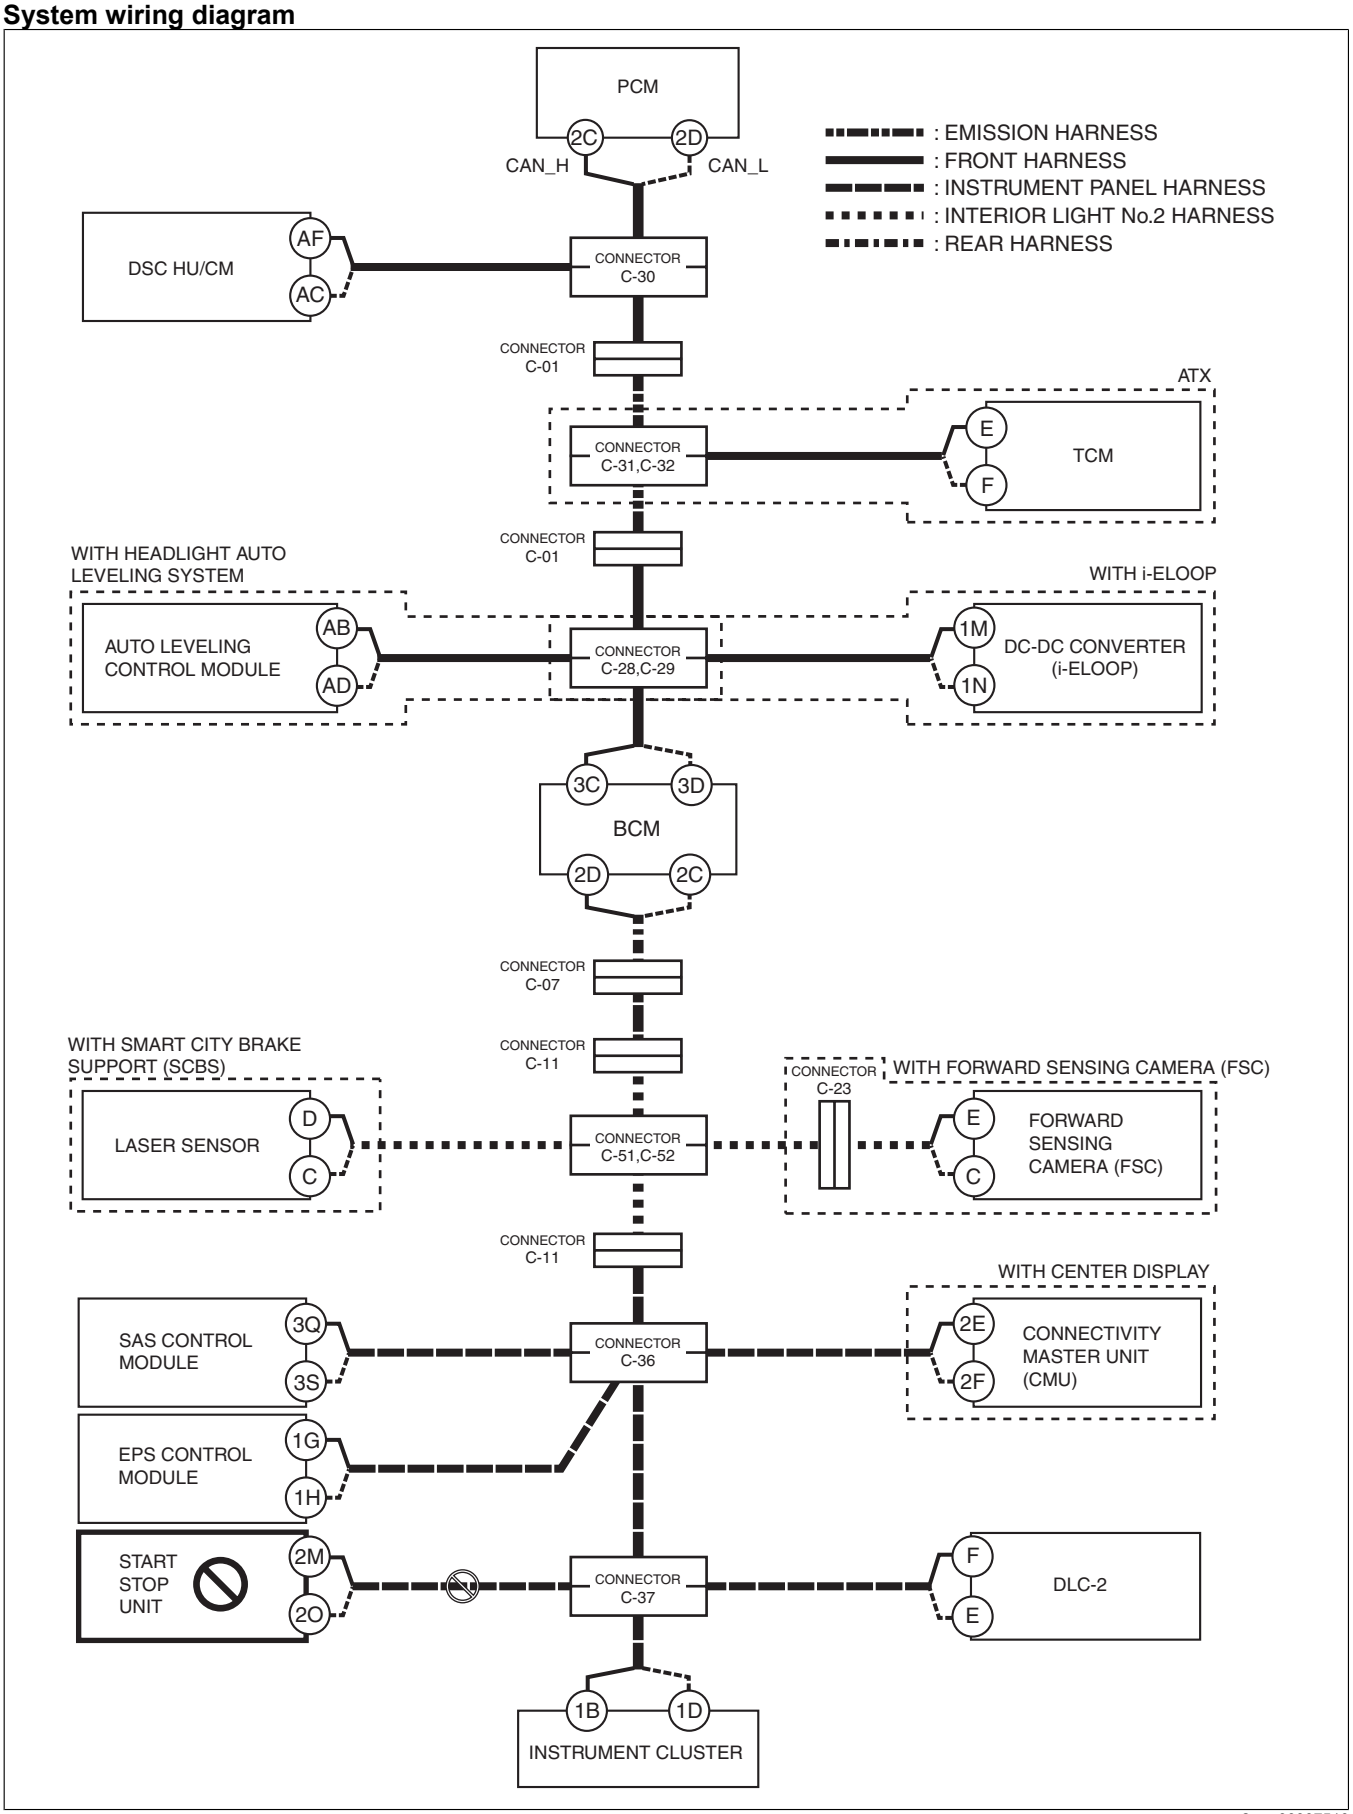


am2zzw00007510

**Inspection item**


- Start stop unit power supply voltage or body ground malfunction
- Start stop unit body ground related wiring harness
- Start stop unit connector
- Connector C-37
- Wiring harness between start stop unit terminal 2M and connector C-37
- Wiring harness between start stop unit terminal 2O and connector C-37
- Start stop unit

**S**

**Possible cause**

- Connector terminal disconnection, poor contact, damage, deformation, corrosion
- Instrument cluster power supply voltage or body ground malfunction
- Open circuit in wiring harness between instrument cluster and connector C-37
- Connector C-37 malfunction
- Instrument cluster malfunction

## System wiring diagram

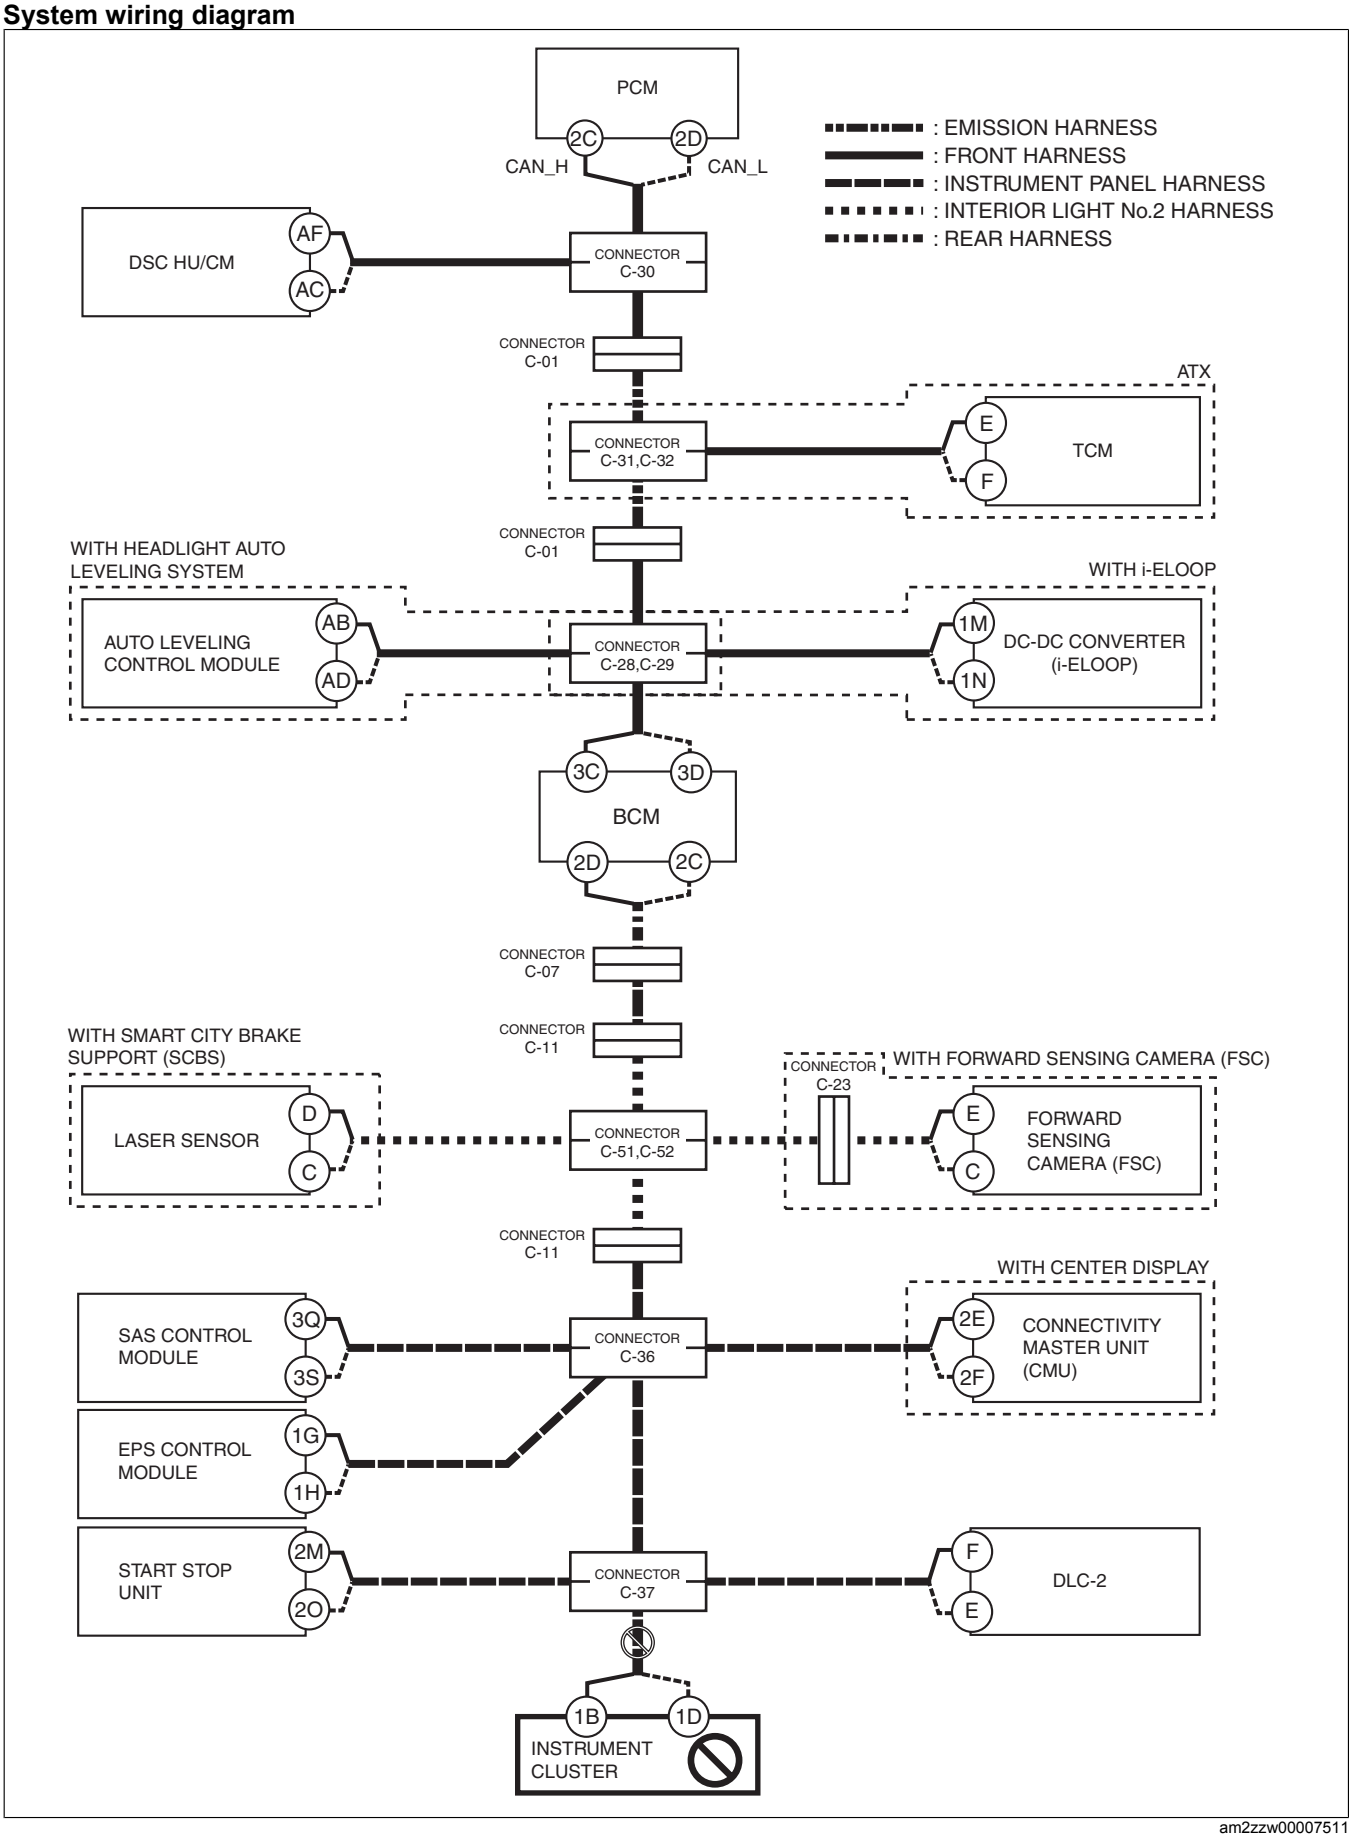


am2zzw00007511

**Inspection item**

- Instrument cluster power supply voltage or body ground malfunction
- Instrument cluster body ground related wiring harness
- Instrument cluster connector
- Connector C-37
- Wiring harness between instrument cluster terminal 1B and connector C-37
- Wiring harness between instrument cluster terminal 1D and connector C-37
- Instrument cluster