
DETERMINING SHORT TO POWER SUPPLY LOCATION (HS-CAN) [SKYACTIV-D 1.5]

id100218000700

Caution

- **Perform the following malfunction diagnosis only when it is diagnosed with a short to power supply by CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW. (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-D 1.5].)**

System Wiring Diagram

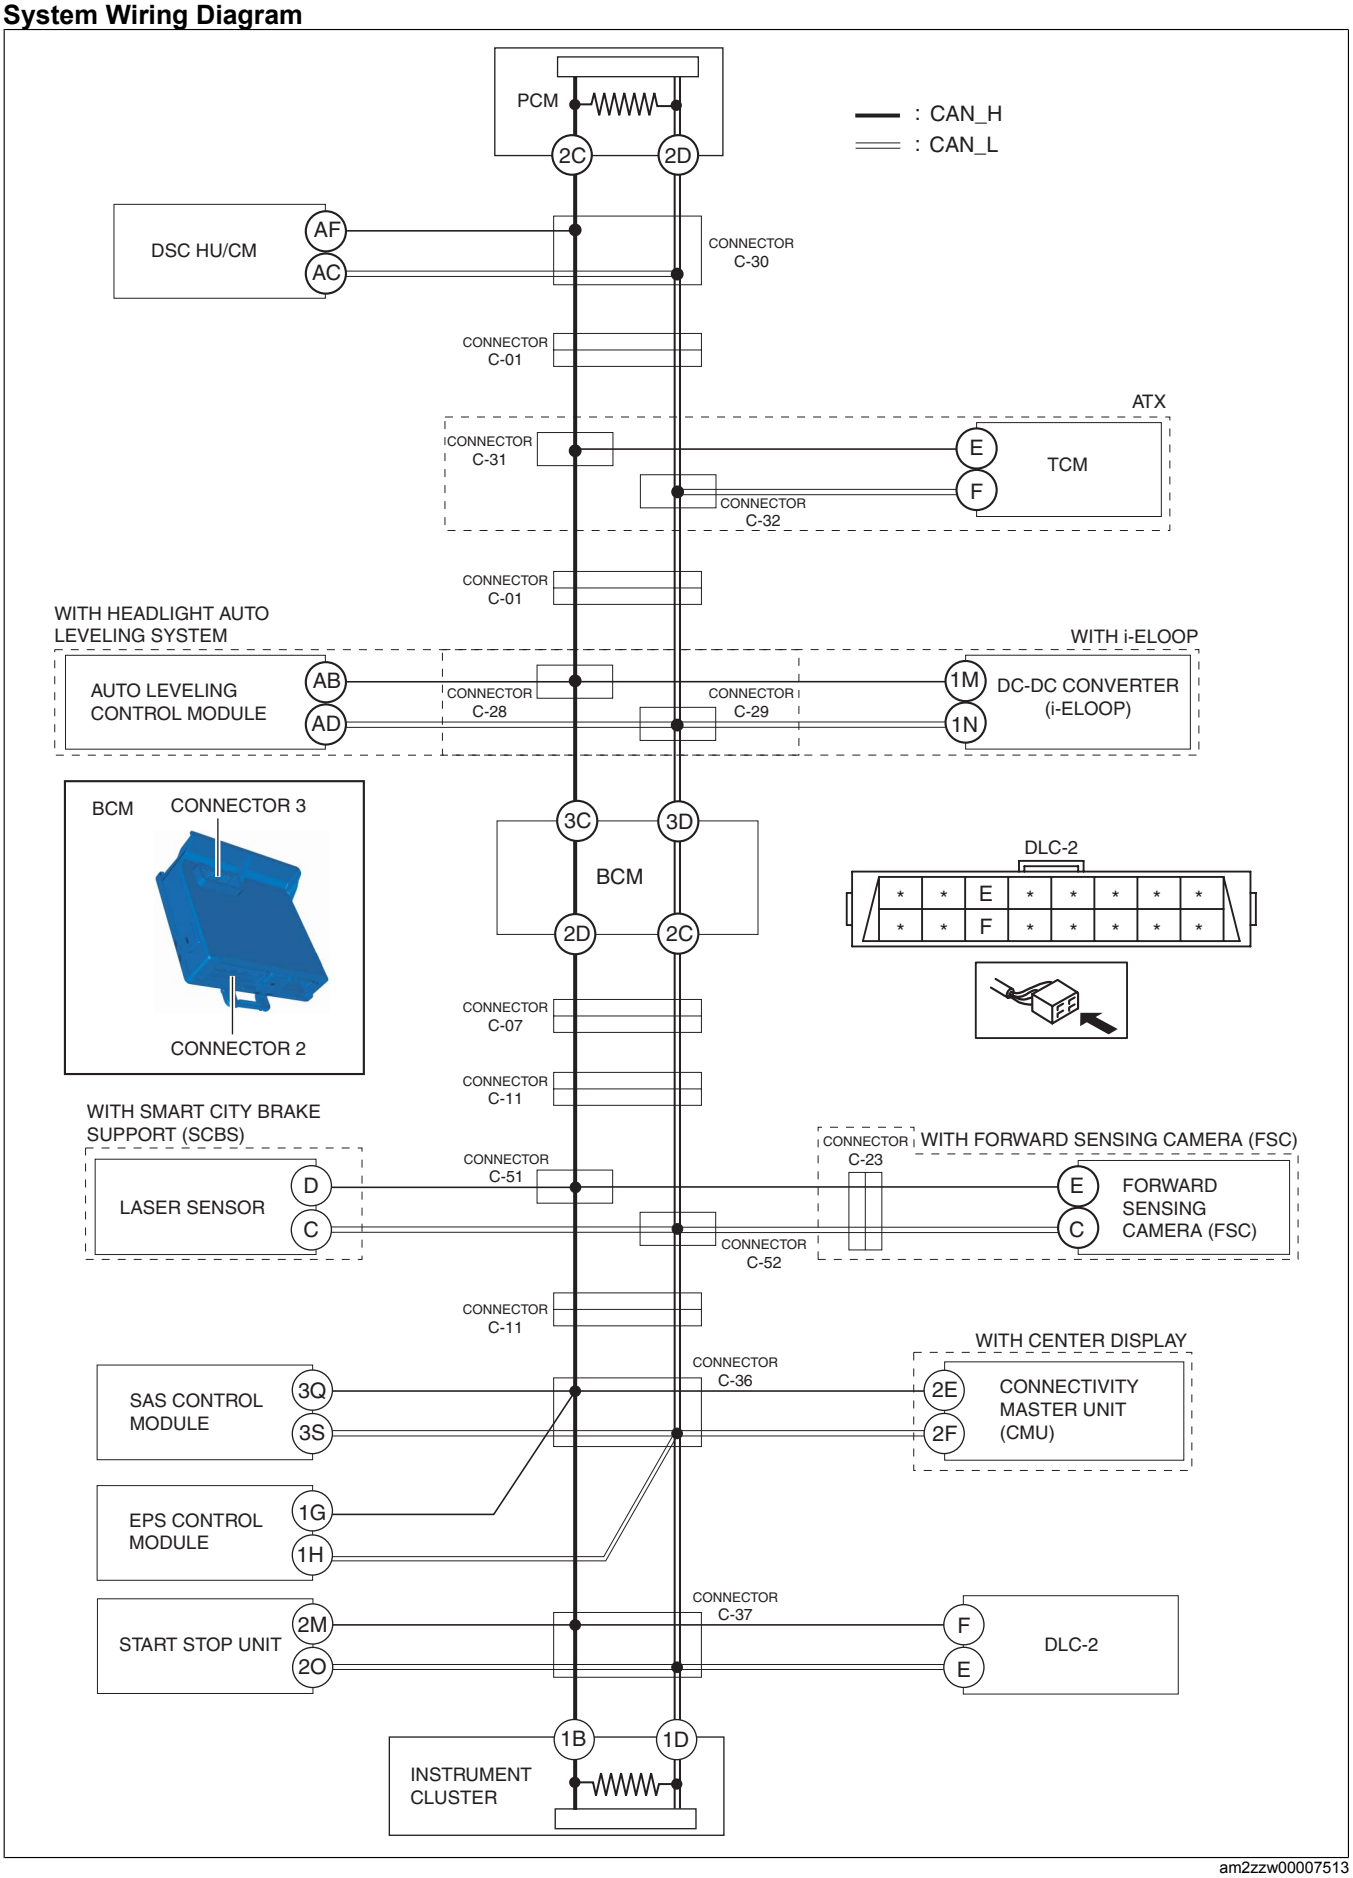

am2zzw00007513

Determination Procedure

Caution

- **When disconnecting the connector, verify that there is no looseness, damage, deformation, corrosion, or poor connection of the connector terminals.**
- **When inspecting the DLC-2, touch it with a paper clip or similar thin pin without directly inserting a tester into the terminals.**
- **Disconnect the negative battery cable before performing any work that requires handling of connectors.**

Note

- If the ignition does not turn on even if the ignition is switched ON, switch the ignition ON referring to the forced ignition ON procedure. (See FORCED IGNITION ON.)

Step	Inspection		Action
1	**INSPECT CAN LINE BETWEEN BCM AND INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the connector 2 and 3 which has BCM terminals 3C,3D and 2D,2C. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Go to the next step.
		No	Go to Step 17.
2	**INSPECT CAN LINE BETWEEN PCM AND BCM FOR SHORT TO POWER SUPPLY** • Measure the voltage at PCM terminals 2C and 2D. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the BCM because there is a short to the power supply in the BCM. (See BODY CONTROL MODULE (BCM) REMOVAL/ INSTALLATION.)
		No	Go to the next step.
3	**INSPECT CAN LINE BETWEEN CONNECTORS C-28 AND C-29 AND BCM FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Connect the connector 2 and 3 which has BCM terminals 3C,3D and 2D,2C. • Disconnect the connectors C-28 and C-29. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Go to the next step.
		No	Repair or replace the wiring harness between the BCM and connectors C-28 and C-29 because the wiring harness is shorted to the power supply.
4	**INSPECT CAN LINE BETWEEN AUTO LEVELING CONTROL MODULE AND CONNECTORS C-28 AND C-29 FOR SHORT TO POWER SUPPLY** • Measure the voltage at auto leveling control module terminals AB and AD. • Is the voltage between **1.5—3.5 V**?	Yes	Go to Step 6.
		No	Go to the next step.

Step	Inspection		Action
5	**INSPECT AUTO LEVELING CONTROL MODULE FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Connect the connectors C-28 and C-29. • Disconnect the auto leveling control module connector. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the auto leveling control module because there is a short to the power supply in the auto leveling control module. (See AUTO LEVELING CONTROL MODULE REMOVAL/ INSTALLATION.)
		No	Repair or replace the wiring harness between the auto leveling control module and connectors C-28 and C-29 because the wiring harness is shorted to the power supply.
6	**INSPECT CAN LINE BETWEEN DC-DC CONVERTER (i-ELOOP) AND CONNECTORS C-28 AND C-29 FOR SHORT TO POWER SUPPLY** • Measure the voltage at DC-DC converter (i-ELOOP) terminals 1M and 1N. • Is the voltage between **1.5—3.5 V**?	Yes	Go to Step 8.
		No	Go to the next step.
7	**INSPECT DC-DC CONVERTER (i-ELOOP) FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the DC-DC converter (i-ELOOP) connector. • Connect the connectors C-28 and C-29. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the DC-DC converter (i-ELOOP) because there is a short to the power supply in the DC-DC converter (i-ELOOP). (See DC-DC CONVERTER (i-ELOOP) REMOVAL/ INSTALLATION [WITH i-ELOOP (SKYACTIV-D 1.5)].)
		No	Repair or replace the wiring harness between the DC-DC converter (i-ELOOP) and connectors C-28 and C-29 because the wiring harness is shorted to the power supply.
8	**INSPECT CAN LINE BETWEEN CONNECTOR C-01 AND CONNECTORS C-28 AND C-29 FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the connector C-01. • Connect the connectors C-28 and C-29. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Go to the next step.
		No	Repair or replace the wiring harness between the connector C-01 and connectors C-28 and C-29 because the wiring harness is shorted to the power supply.
9	**INSPECT CAN LINE BETWEEN PCM AND CONNECTOR C-01 FOR SHORT TO POWER SUPPLY** • Measure the voltage at PCM terminals 2C and 2D. • Is the voltage between **1.5—3.5 V**?	Yes	Go to Step 13.
		No	Go to the next step.

Step	Inspection		Action
10	**INSPECT CAN LINE BETWEEN CONNECTOR C-01 AND CONNECTORS C-31 AND C-32 FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Connect the connector C-01. • Disconnect the connectors C-31 and C-32. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Go to the next step.
		No	Repair or replace the wiring harness between the connector C-01 and connectors C-31 and C-32 because the wiring harness is shorted to the power supply.
11	**INSPECT CAN LINE BETWEEN TCM AND CONNECTORS C-31 AND C-32 FOR SHORT TO POWER SUPPLY** • Measure the voltage at TCM terminals E and F. • Is the voltage between **1.5—3.5 V**?	Yes	Repair or replace the wiring harness between the connector C-01 and connectors C-31 and C-32 because the wiring harness is shorted to the power supply.
		No	Go to the next step.
12	**INSPECT TCM FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the TCM connector. • Connect the connectors C-31 and C-32. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the TCM because there is a short to the power supply in the TCM. (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [CW6A-EL].) (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [EW6A-EL].)
		No	Repair or replace the wiring harness between the TCM and connectors C-31 and C-32 because the wiring harness is shorted to the power supply.
13	**INSPECT CAN LINE BETWEEN CONNECTOR C-30 AND CONNECTOR C-01 FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the connector C-30. • Connect the connector C-01. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Go to the next step.
		No	Repair or replace the wiring harness between the connector C-30 and connector C-01 because the wiring harness is shorted to the power supply.
14	**INSPECT CAN LINE BETWEEN DSC HU/CM AND CONNECTOR C-30 FOR SHORT TO POWER SUPPLY** • Measure the voltage at DSC HU/CM terminals AF and AC. • Is the voltage between **1.5—3.5 V**?	Yes	Go to Step 16.
		No	Go to the next step.

Step	Inspection		Action
15	**INSPECT DSC HU/CM FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the DSC HU/CM connector. • Connect the connector C-30. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the DSC HU/CM because there is a short to the power supply in the DSC HU/CM. (See DSC HU/CM REMOVAL/INSTALLATION [R.H.D.].)
		No	Repair or replace the wiring harness between the DSC HU/CM and connector C-30 because the wiring harness is shorted to the power supply.
16	**INSPECT PCM FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the PCM connector. • Connect the connector C-30. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the PCM because there is a short to the power supply in the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Repair or replace the wiring harness between the PCM and connector C-30 because the wiring harness is shorted to the power supply.
17	**INSPECT CAN LINE BETWEEN CONNECTOR C-07 AND INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the connector C-07. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Repair or replace the wiring harness between the BCM and connector C-07 because the wiring harness is shorted to the power supply.
		No	Go to the next step.
18	**INSPECT CAN LINE BETWEEN CONNECTOR C-07 AND CONNECTOR C-11 FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the connector C-11. • Connect the connector C-07. • Connect the connector 2 and 3 which has BCM terminals 3C,3D and 2D,2C. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at BCM terminals 2D and 2C. • Is the voltage between **1.5—3.5 V**?	Yes	Go to the next step.
		No	Repair or replace the wiring harness between the connector C-07 and connector C-11 because the wiring harness is shorted to the power supply.

Step	Inspection		Action
19	**INSPECT CAN LINE BETWEEN CONNECTOR C-11 AND INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY** • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Go to the next step.
		No	Go to Step 26.
20	**INSPECT CAN LINE BETWEEN CONNECTORS C-51 AND C-52 AND CONNECTOR C-11 FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the connectors C-51 and C-52. • Connect the connector C-11. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Go to the next step.
		No	Repair or replace the wiring harness between the connectors C-51 and C-52 and connector C-11 because the wiring harness is shorted to the power supply.
21	**INSPECT CAN LINE BETWEEN LASER SENSOR AND CONNECTORS C-51 AND C-52 FOR SHORT TO POWER SUPPLY** • Measure the voltage at laser sensor terminals D and C. • Is the voltage between **1.5—3.5 V**?	Yes	Go to Step 23.
		No	Go to the next step.
22	**INSPECT LASER SENSOR FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the laser sensor connector. • Connect the connectors C-51 and C-52. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the laser sensor because there is a short to the power supply in the laser sensor. (See LASER SENSOR REMOVAL/INSTALLATION.)
		No	Repair or replace the wiring harness between the laser sensor and connectors C-51 and C-52 because the wiring harness is shorted to the power supply.
23	**INSPECT CAN LINE BETWEEN FORWARD SENSING CAMERA (FSC) AND CONNECTORS C-51 AND C-52 FOR SHORT TO POWER SUPPLY** • Measure the voltage at forward sensing camera (FSC) terminals E and C. • Is the voltage between **1.5—3.5 V**?	Yes	Repair or replace the wiring harness between the connector C-11 and connectors C-51 and C-52 because the wiring harness is shorted to the power supply.
		No	Go to the next step.

Step	Inspection		Action
24	**INSPECT CAN LINE BETWEEN CONNECTORS C-51 AND C-52 AND CONNECTOR C-23 FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the connector C-23. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at forward sensing camera (FSC) terminals E and C. • Is the voltage between **1.5—3.5 V**?	Yes	Repair or replace the wiring harness between the connectors C-51 and C-52 and connector C-23 because the wiring harness is shorted to the power supply.
		No	Go to the next step.
25	**INSPECT FORWARD SENSING CAMERA (FSC) FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the forward sensing camera (FSC) connector. • Connect the connector C-23. • Connect the connectors C-51 and C-52. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the forward sensing camera (FSC) because there is a short to the power supply in the forward sensing camera (FSC). (See FORWARD SENSING CAMERA (FSC) REMOVAL/INSTALLATION.)
		No	Repair or replace the wiring harness between the forward sensing camera (FSC) and connector C-23 because the wiring harness is shorted to the power supply.
26	**INSPECT CAN LINE BETWEEN CONNECTOR C-36 AND INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the connector C-36. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Go to the next step.
		No	Go to Step 33.
27	**INSPECT CAN LINE BETWEEN CONNECTIVITY MASTER UNIT (CMU) AND CONNECTOR C-36 FOR SHORT TO POWER SUPPLY** • Measure the voltage at connectivity master unit (CMU) terminals 2E and 2F. • Is the voltage between **1.5—3.5 V**?	Yes	Go to Step 29.
		No	Go to the next step.

Step	Inspection		Action
28	**INSPECT CONNECTIVITY MASTER UNIT (CMU) FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION/ .) • Disconnect the connectivity master unit (CMU) connector. • Connect the connector C-36. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the connectivity master unit (CMU) because there is a short to the power supply in the connectivity master unit (CMU). (See CONNECTIVITY MASTER UNIT (CMU) REMOVAL/ INSTALLATION.)
		No	Repair or replace the wiring harness between the connectivity master unit (CMU) and connector C-36 because the wiring harness is shorted to the power supply.
29	**INSPECT CAN LINE BETWEEN EPS CONTROL MODULE AND CONNECTOR C-36 FOR SHORT TO POWER SUPPLY** • Measure the voltage at EPS control module terminals 1G and 1H. • Is the voltage between **1.5—3.5 V**?	Yes	Go to Step 31.
		No	Go to the next step.
30	**INSPECT EPS CONTROL MODULE FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the EPS control module connector. • Connect the connector C-36. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the EPS control module because there is a short to the power supply in the EPS control module. (See STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION.)
		No	Repair or replace the wiring harness between the EPS control module and connector C-36 because the wiring harness is shorted to the power supply.
31	**INSPECT CAN LINE BETWEEN SAS CONTROL MODULE AND CONNECTOR C-36 FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the SAS control module connector. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at SAS control module terminals 3Q and 3S.(wiring harness side) • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Repair or replace the wiring harness between the SAS control module and connector C-36 because the wiring harness is shorted to the power supply.

Step	Inspection		Action
32	**INSPECT SAS CONTROL MODULE FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Connect the connector C-36. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the SAS control module connector because there is a short to the power supply in the SAS control module connector. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
		No	Repair or replace the wiring harness between the connector C-11 and connector C-36 because the wiring harness is shorted to the power supply.
33	**INSPECT CAN LINE BETWEEN CONNECTOR C-37 AND DLC-2 FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Connect the connector C-37. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Repair or replace the wiring harness between connector C-37 and DLC-2 because the wiring harness is shorted to the power supply.
34	**INSPECT CAN LINE BETWEEN START STOP UNIT AND CONNECTOR C-37 FOR SHORT TO POWER SUPPLY** • Measure the voltage at start stop unit terminals 2M and 2O. • Is the voltage between **1.5—3.5 V**?	Yes	Go to Step 36.
		No	Go to the next step.
35	**INSPECT START STOP UNIT FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the start stop unit connector. • Connect the connector C-37. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the start stop unit because there is a short to the power supply in the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.)
		No	Repair or replace the wiring harness between the start stop unit and connector C-37 because the wiring harness is shorted to the power supply.
36	**INSPECT CAN LINE BETWEEN INSTRUMENT CLUSTER AND CONNECTOR C-37 FOR SHORT TO POWER SUPPLY** • Measure the voltage at instrument cluster terminals 1B and 1D. • Is the voltage between **1.5—3.5 V**?	Yes	Repair or replace the wiring harness between the connector C-36 and connector C-37 because the wiring harness is shorted to the power supply.
		No	Go to the next step.

Step	Inspection		Action
37	**INSPECT INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the instrument cluster connector. • Connect the connector C-37. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off). • Measure the voltage at DLC-2 terminals F and E. • Is the voltage between **1.5—3.5 V**?	Yes	Replace the instrument cluster because there is a short to the power supply in the instrument cluster. (See INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.)
		No	Repair or replace the wiring harness between the instrument cluster and connector C-37 because the wiring harness is shorted to the power supply.