
## DETERMINING SHORT TO POWER SUPPLY LOCATION (HS-CAN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5 (R.H.D.)]

id100220000700

**Caution**

- **Perform the following malfunction diagnosis only when it is diagnosed with a short to ground by CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW. (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-G 1.3, SKYACTIV-G 1.5 (R.H.D.)].)**

## System Wiring Diagram

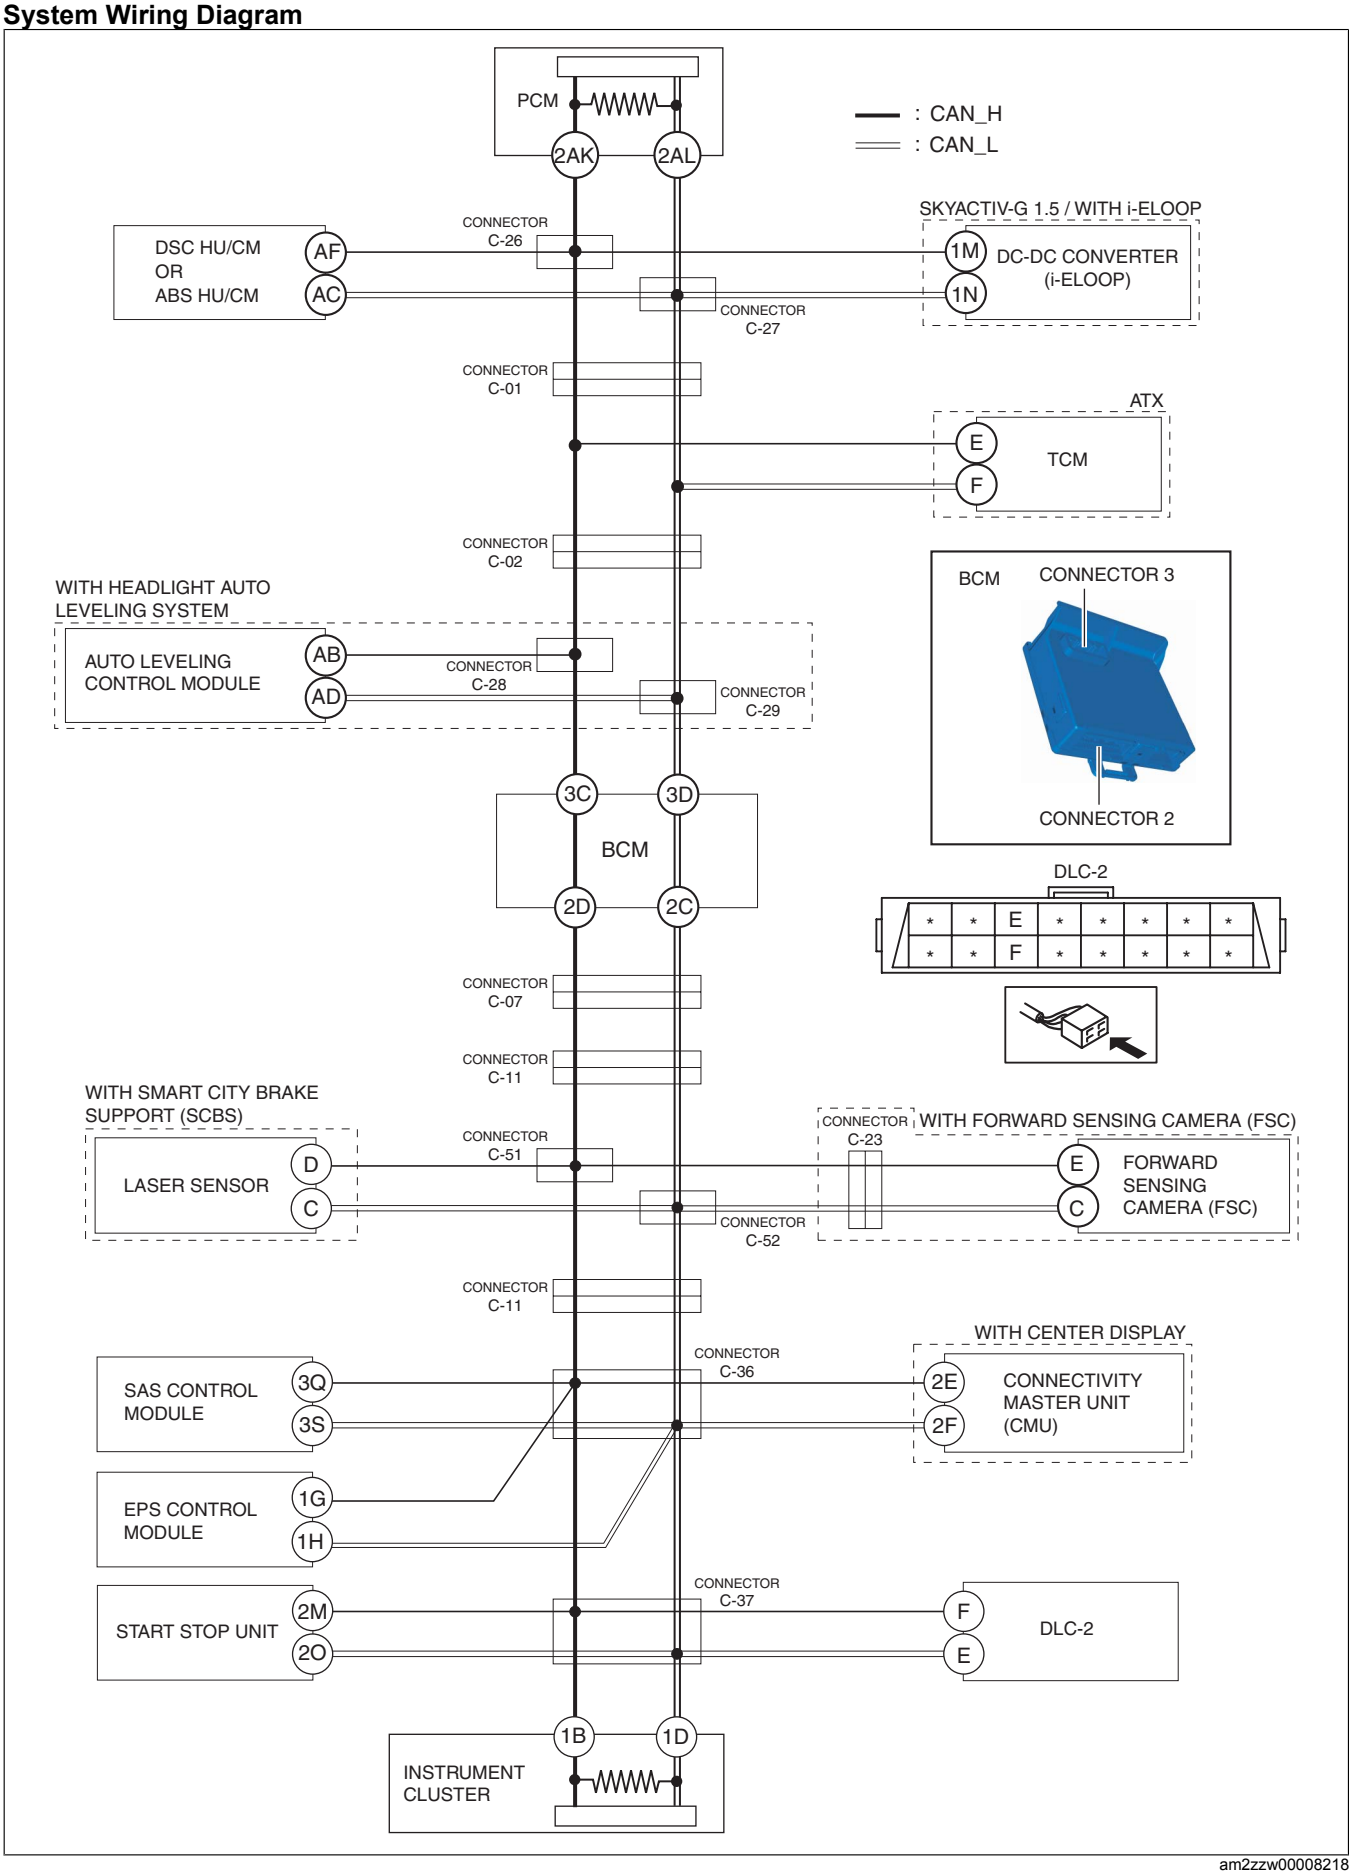


am2zzw00008218

**Determination Procedure**

**Caution**

- **When disconnecting the connector, verify that there is no looseness, damage, deformation, corrosion, or poor connection of the connector terminals.**
- **When inspecting the DLC-2, touch it with a paper clip or similar thin pin without directly inserting a tester into the terminals.**
- **Disconnect the negative battery cable before performing any work that requires handling of connectors.**

**Note**

- If the ignition does not turn on even if the ignition is switched ON, switch the ignition ON referring to the forced ignition ON procedure. (See FORCED IGNITION ON)

| Step | Inspection | | Action |
|---|---|---|---|
| 1 | **INSPECT CAN LINE BETWEEN BCM AND INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY**<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connector 2 and 3 which has BCM terminals 3C,3D and 2D,2C.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to the next step. |
| | | No | Go to Step 15. |
| 2 | **INSPECT CAN LINE BETWEEN PCM AND BCM FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at PCM terminals 2AK and 2AL.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the BCM because there is a short to the power supply in the BCM. (See BODY CONTROL MODULE (BCM) REMOVAL/ INSTALLATION.) |
| | | No | Go to the next step. |
| 3 | **INSPECT CAN LINE BETWEEN CONNECTORS C-28 AND C-29 AND BCM FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Connect the connector 2 and 3 which has BCM terminals 3C,3D and 2D,2C.<br>• Disconnect the connectors C-28 and C-29.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to the next step. |
| | | No | Repair or replace the wiring harness between the BCM and connectors C-28 and C-29 because the wiring harness is shorted to the power supply. |
| 4 | **INSPECT CAN LINE BETWEEN AUTO LEVELING CONTROL MODULE AND CONNECTORS C-28 AND C-29 FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at auto leveling control module terminals AB and AD.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to Step 6. |
| | | No | Go to the next step. |

| Step | Inspection | | Action |
|---|---|---|---|
| 5 | **INSPECT AUTO LEVELING CONTROL MODULE FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Connect the connectors C-28 and C-29.<br>• Disconnect the auto leveling control module connector.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the auto leveling control module because there is a short to the power supply in the auto leveling control module.<br>(See AUTO LEVELING CONTROL MODULE REMOVAL/ INSTALLATION.) |
| | | No | Repair or replace the wiring harness between the auto leveling control module and connectors C-28 and C-29 because the wiring harness is shorted to the power supply. |
| 6 | **INSPECT CAN LINE BETWEEN CONNECTOR C-02 AND CONNECTORS C-28 AND C-29 FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connector C-02.<br>• Connect the connectors C-28 and C-29.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to the next step. |
| | | No | Repair or replace the wiring harness between the connector C-02 and connectors C-28 and C-29 because the wiring harness is shorted to the power supply. |
| 7 | **INSPECT CAN LINE BETWEEN CONNECTOR C-01 AND CONNECTOR C-02 FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connector C-01.<br>• Connect the connector C-02.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to Step 9. |
| | | No | Go to the next step. |
| 8 | **INSPECT TCM FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the TCM connector.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the TCM because there is a short to the power supply in the TCM.<br>(See CONTROL VALVE BODY REMOVAL/ INSTALLATION [CW6A-EL].)<br>(See CONTROL VALVE BODY REMOVAL/ INSTALLATION [EW6A-EL].) |
| | | No | Repair or replace the wiring harness between the TCM and connector C-01,C-02 because the wiring harness is shorted to the power supply. |

| Step | Inspection | | Action |
|---|---|---|---|
| 9 | **INSPECT CAN LINE BETWEEN CONNECTORS C-26 AND C-27 AND CONNECTOR C-01 FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connectors C-26 and C-27.<br>• Connect the connector C-01.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to the next step. |
| | | No | Repair or replace the wiring harness between the connectors C-26 and C-27 and connector C-01 because the wiring harness is shorted to the power supply. |
| 10 | **INSPECT CAN LINE BETWEEN DSC HU/CM OR ABS HU/CM AND CONNECTORS C-26 AND C-27 FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at DSC HU/CM or ABS HU/CM terminals AF and AC.<br>• Is the voltage between **1.5—3.5 V**? | Yes | • Go to Step 12.(SKYACTIV-G 1.5)<br>• Go to Step 14.(SKYACTIV-G 1.3) |
| | | No | Go to the next step. |
| 11 | **INSPECT DSC HU/CM OR ABS HU/CM FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the DSC HU/CM or ABS HU/CM connector.<br>• Connect the connectors C-26 and C-27.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the DSC HU/CM or ABS HU/CM because there is a short to the power supply in the DSC HU/CM or ABS HU/CM.<br>(See DSC HU/CM REMOVAL/INSTALLATION [R.H.D.].)<br>(See ABS HU/CM REMOVAL/INSTALLATION [R.H.D.].) |
| | | No | Repair or replace the wiring harness between the DSC HU/CM or ABS HU/CM and connectors C-26 and C-27 because the wiring harness is shorted to the power supply. |
| 12 | **INSPECT CAN LINE BETWEEN DC-DC CONVERTER (i-ELOOP) AND CONNECTORS C-26 AND C-27 FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at DC-DC converter (i-ELOOP) terminals 1M and 1N.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to Step 14. |
| | | No | Go to the next step. |
| 13 | **INSPECT DC-DC CONVERTER (i-ELOOP) FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the DC-DC converter (i-ELOOP) connector.<br>• Connect the connectors C-26 and C-27.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the DC-DC converter (i-ELOOP) because there is a short to the power supply in the DC-DC converter (i-ELOOP).<br>(See DC-DC CONVERTER (i-ELOOP) REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) |
| | | No | Repair or replace the wiring harness between the DC-DC converter (i-ELOOP) and connectors C-26 and C-27 because the wiring harness is shorted to the power supply. |

| Step | Inspection | | Action |
|---|---|---|---|
| 14 | **INSPECT PCM FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the PCM connector.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the PCM because there is a short to the power supply in the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) |
| | | No | Repair or replace the wiring harness between the PCM and connectors C-26 and C-27 because the wiring harness is shorted to the power supply. |
| 15 | **INSPECT CAN LINE BETWEEN CONNECTOR C-07 AND INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connector C-07.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Repair or replace the wiring harness between the BCM and connector C-07 because the wiring harness is shorted to the power supply. |
| | | No | Go to the next step. |
| 16 | **INSPECT CAN LINE BETWEEN CONNECTOR C-07 AND CONNECTOR C-11 FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connector C-11.<br>• Connect the connector C-07.<br>• Connect the connector 2 and 3 which has BCM terminals 3C,3D and 2D,2C.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at BCM terminals 2D and 2C.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to the next step. |
| | | No | Repair or replace the wiring harness between the connector C-07 and connector C-11 because the wiring harness is shorted to the power supply. |
| 17 | **INSPECT CAN LINE BETWEEN CONNECTOR C-11 AND INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to the next step. |
| | | No | Go to Step 24. |

| Step | Inspection | | Action |
|---|---|---|---|
| 18 | **INSPECT CAN LINE BETWEEN CONNECTORS C-51 AND C-52 AND CONNECTOR C-11 FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connectors C-51 and C-52.<br>• Connect the connector C-11.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to the next step. |
| | | No | Repair or replace the wiring harness between the connectors C-51 and C-52 and connector C-11 because the wiring harness is shorted to the power supply. |
| 19 | **INSPECT CAN LINE BETWEEN LASER SENSOR AND CONNECTORS C-51 AND C-52 FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at laser sensor terminals D and C.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to Step 21. |
| | | No | Go to the next step. |
| 20 | **INSPECT LASER SENSOR FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the laser sensor connector.<br>• Connect the connectors C-51 and C-52.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the laser sensor because there is a short to the power supply in the laser sensor. (See LASER SENSOR REMOVAL/INSTALLATION.) |
| | | No | Repair or replace the wiring harness between the laser sensor and connectors C-51 and C-52 because the wiring harness is shorted to the power supply. |
| 21 | **INSPECT CAN LINE BETWEEN FORWARD SENSING CAMERA (FSC) AND CONNECTORS C-51 AND C-52 FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at forward sensing camera (FSC) terminals E and C.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Repair or replace the wiring harness between the connector C-11 and connectors C-51 and C-52 because the wiring harness is shorted to the power supply. |
| | | No | Go to the next step. |
| 22 | **INSPECT CAN LINE BETWEEN CONNECTORS C-51 AND C-52 AND CONNECTOR C-23 FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connector C-23.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at forward sensing camera (FSC) terminals E and C.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Repair or replace the wiring harness between the connectors C-51 and C-52 and connector C-23 because the wiring harness is shorted to the power supply. |
| | | No | Go to the next step. |

| Step | Inspection | | Action |
|---|---|---|---|
| 23 | **INSPECT FORWARD SENSING CAMERA (FSC) FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the forward sensing camera (FSC) connector.<br>• Connect the connector C-23.<br>• Connect the connectors C-51 and C-52.<br>• Connect the connector C-11.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the forward sensing camera (FSC) because there is a short to the power supply in the forward sensing camera (FSC).<br>(See FORWARD SENSING CAMERA (FSC) REMOVAL/ INSTALLATION.) |
| | | No | Repair or replace the wiring harness between the forward sensing camera (FSC) and connector C-23 because the wiring harness is shorted to the power supply. |
| 24 | **INSPECT CAN LINE BETWEEN CONNECTOR C-36 AND INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Connect the connector C-36.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to the next step. |
| | | No | Go to Step 31. |
| 25 | **INSPECT CAN LINE BETWEEN CONNECTIVITY MASTER UNIT (CMU) AND CONNECTOR C-36 FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at connectivity master unit (CMU) terminals 2E and 2F.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to Step 27. |
| | | No | Go to the next step. |
| 26 | **INSPECT CONNECTIVITY MASTER UNIT (CMU) FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connectivity master unit (CMU) connector.<br>• Connect the connector C-36.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the connectivity master unit (CMU) because there is a short to the power supply in the connectivity master unit (CMU).<br>(See CONNECTIVITY MASTER UNIT (CMU) REMOVAL/ INSTALLATION.) |
| | | No | Repair or replace the wiring harness between the connectivity master unit (CMU) and connector C-36 because the wiring harness is shorted to the power supply. |
| 27 | **INSPECT CAN LINE BETWEEN EPS CONTROL MODULE AND CONNECTOR C-36 FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at EPS control module terminals 1G and 1H.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to Step 29. |
| | | No | Go to the next step. |

| Step | Inspection | | Action |
|---|---|---|---|
| 28 | **INSPECT EPS CONTROL MODULE FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the EPS control module connector.<br>• Connect the connector C-36.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the EPS control module because there is a short to the power supply in the EPS control module. (See STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION.) |
| | | No | Repair or replace the wiring harness between the EPS control module and connector C-36 because the wiring harness is shorted to the power supply. |
| 29 | **INSPECT CAN LINE BETWEEN SAS CONTROL MODULE AND CONNECTOR C-36 FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the SAS control module connector.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Inspect for continuity between SAS control module terminals 3Q and 3S (wiring harness side).<br>• Is the voltage **0 V**? | Yes | Go to the next step. |
| | | No | Repair or replace the wiring harness between the SAS control module and connector C-36 because the wiring harness is shorted to the power supply. |
| 30 | **INSPECT SAS CONTROL MODULE FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Connect the connector C-36.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the SAS control module connector because there is a short to the power supply in the SAS control module connector. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) |
| | | No | Repair or replace the wiring harness between connector C-11 and connector C-36 because the wiring harness is shorted to the power supply. |
| 31 | **INSPECT CAN LINE BETWEEN CONNECTOR C-37 AND DLC-2 FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the connector C-37.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage **0 V**? | Yes | Go to the next step. |
| | | No | Repair or replace the wiring harness between connector C-37 and DLC-2 because the wiring harness is shorted to the power supply. |

| Step | Inspection | | Action |
|---|---|---|---|
| 32 | **INSPECT CAN LINE BETWEEN START STOP UNIT AND CONNECTOR C-37 FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at start stop unit terminals 2M and 2O.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Go to Step 34. |
| | | No | Go to the next step. |
| 33 | **INSPECT START STOP UNIT FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the start stop unit connector.<br>• Connect the connector C-37.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the start stop unit because there is a short to the power supply in the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) |
| | | No | Repair or replace the wiring harness between the start stop unit and connector C-37 because the wiring harness is shorted to the power supply. |
| 34 | **INSPECT CAN LINE BETWEEN INSTRUMENT CLUSTER AND CONNECTOR C-37 FOR SHORT TO POWER SUPPLY**<br>• Measure the voltage at instrument cluster terminals 1B and 1D.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Repair or replace the wiring harness between the connector C-36 and connector C-37 because the wiring harness is shorted to the power supply. |
| | | No | Go to the next step. |
| 35 | **INSPECT INSTRUMENT CLUSTER FOR SHORT TO POWER SUPPLY**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Disconnect the instrument cluster connector.<br>• Connect the connector C-37.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION)<br>• Switch the ignition ON (engine off).<br>• Measure the voltage at DLC-2 terminals F and E.<br>• Is the voltage between **1.5—3.5 V**? | Yes | Replace the instrument cluster because there is a short to the power supply in the instrument cluster. (See INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.) |
| | | No | Repair or replace the wiring harness between the instrument cluster and connector C-37 because the wiring harness is shorted to the power supply. |