
i-stop CONTROL

id111100000100


Outline
SKYACTIV-G 1.3, SKYACTIV-G 1.5

cardiagn.com

Without i-ELOOP (ATX)

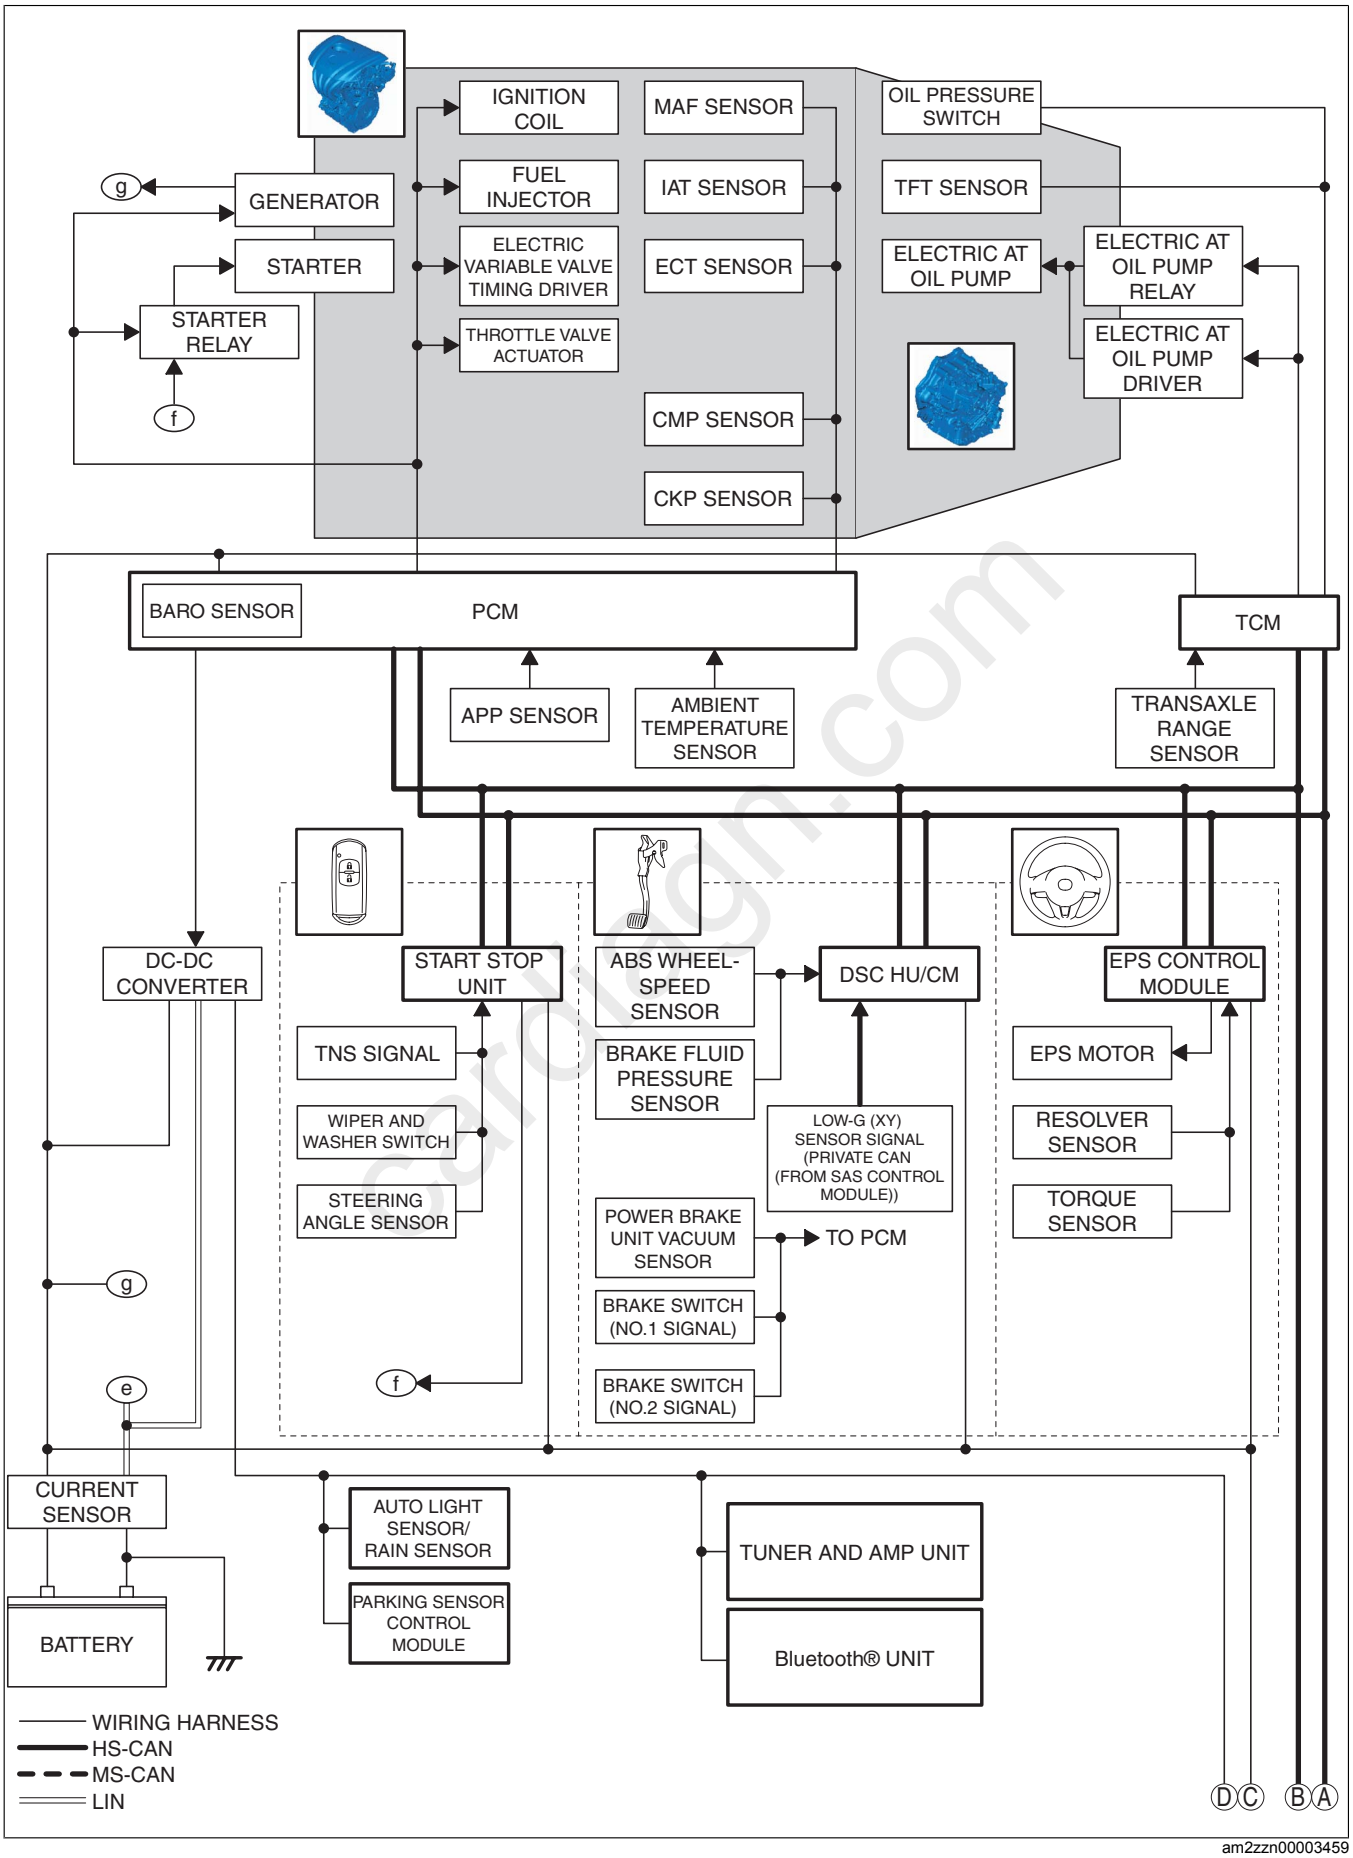


am2zzn00003459

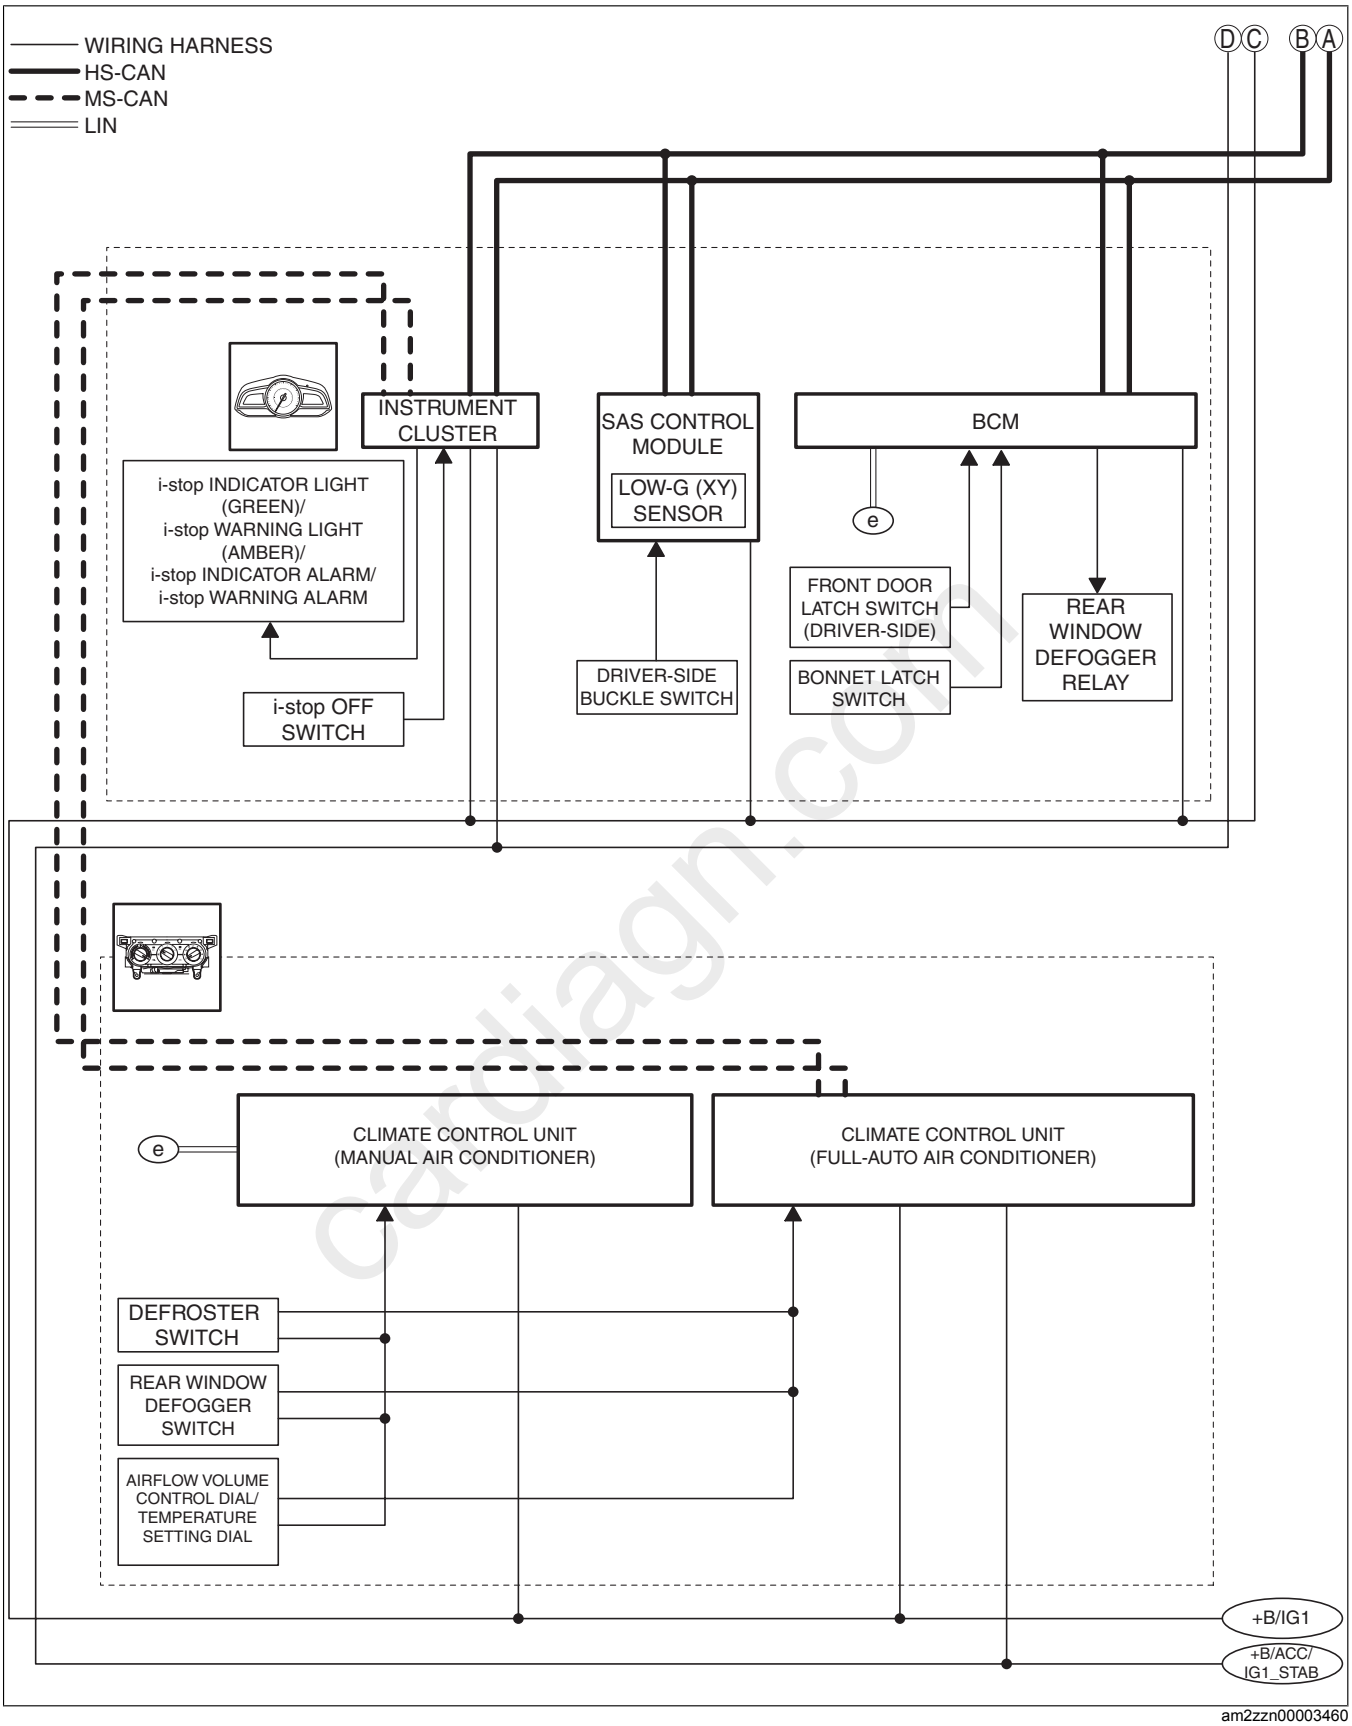


cardiagn.com

am2zzn00003460

Without i-ELOOP (MTX)

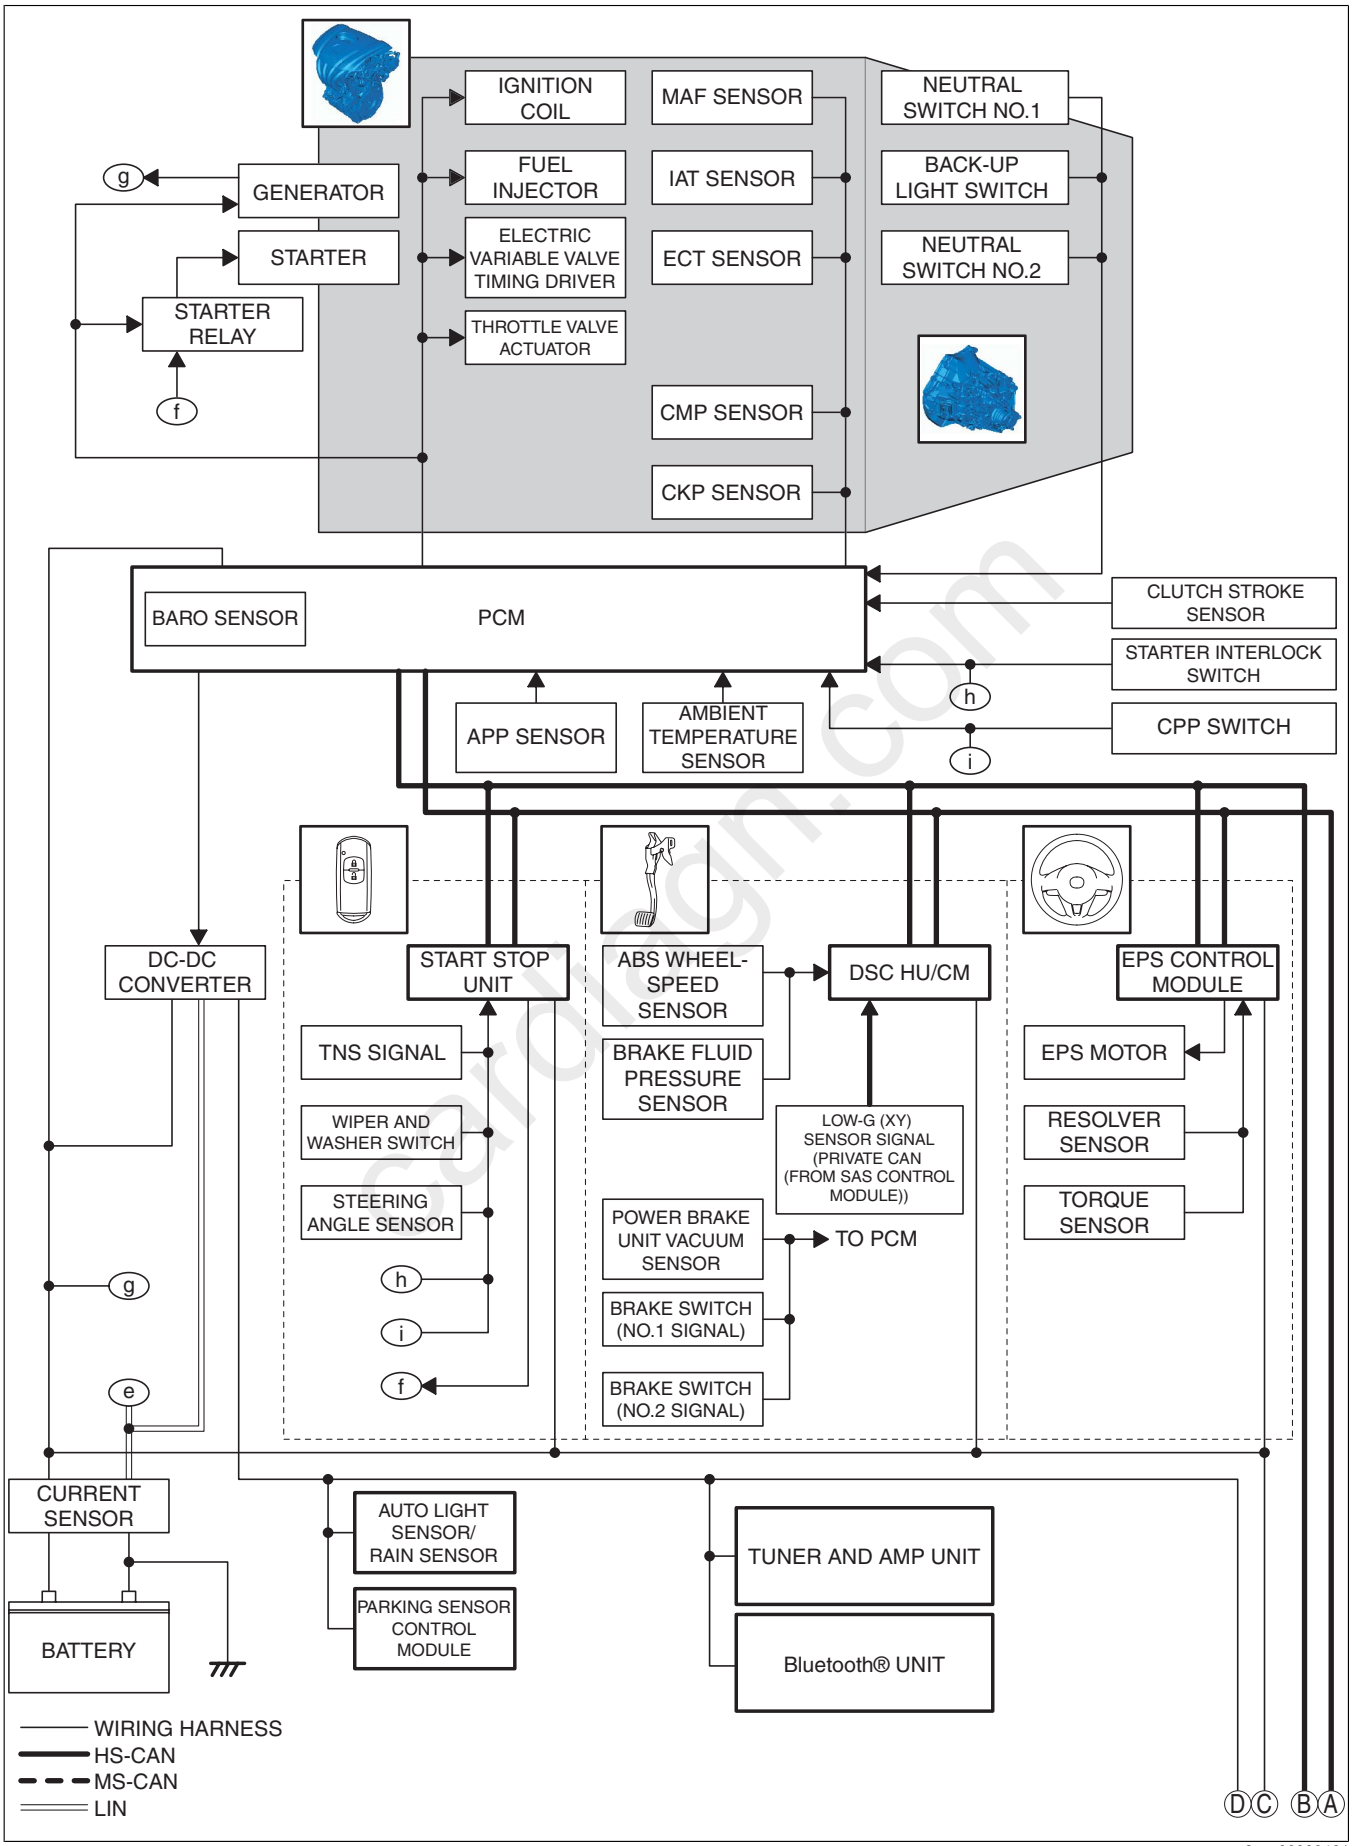


am2zzn00003461

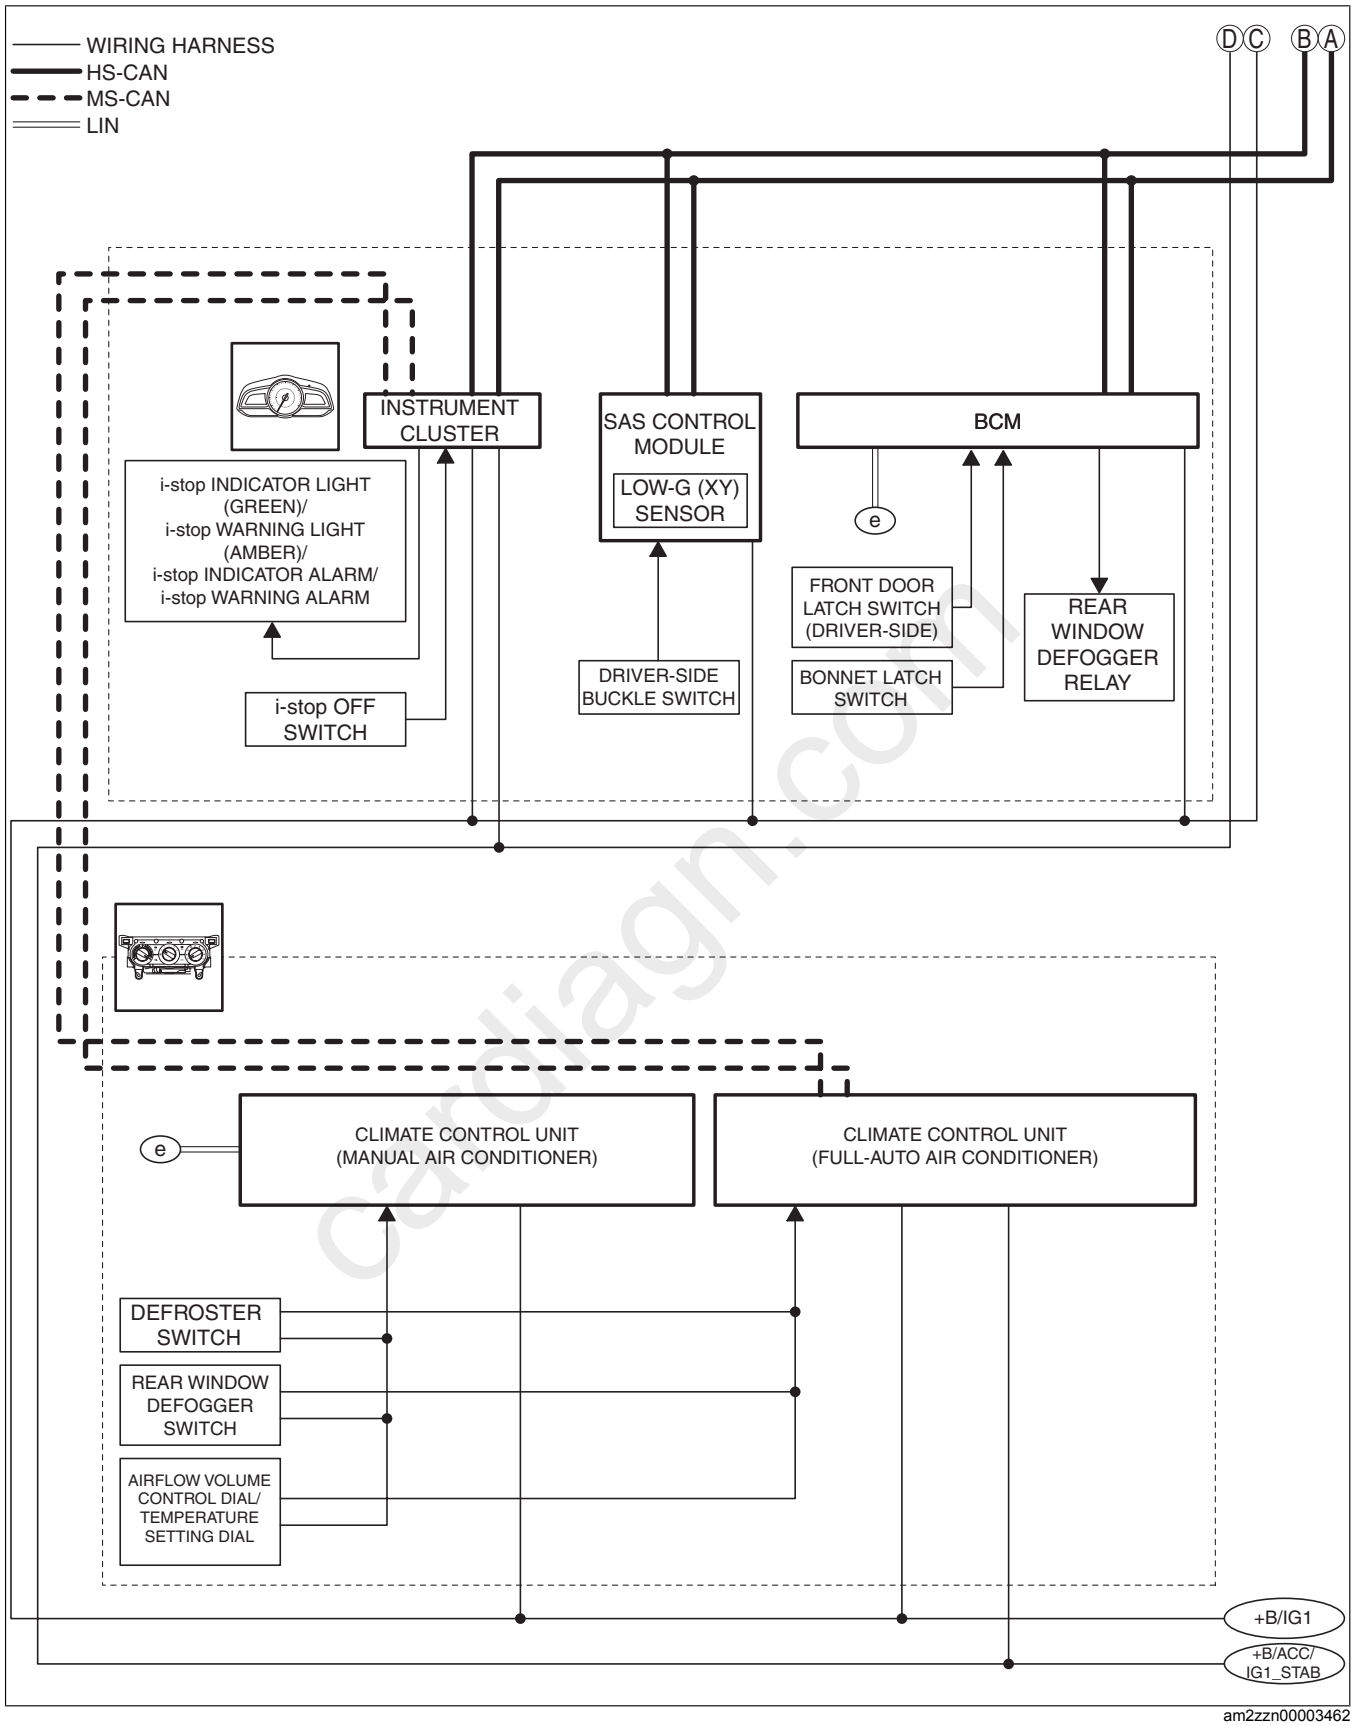


cardiagn.com

am2zzn00003462

With i-ELOOP (ATX)

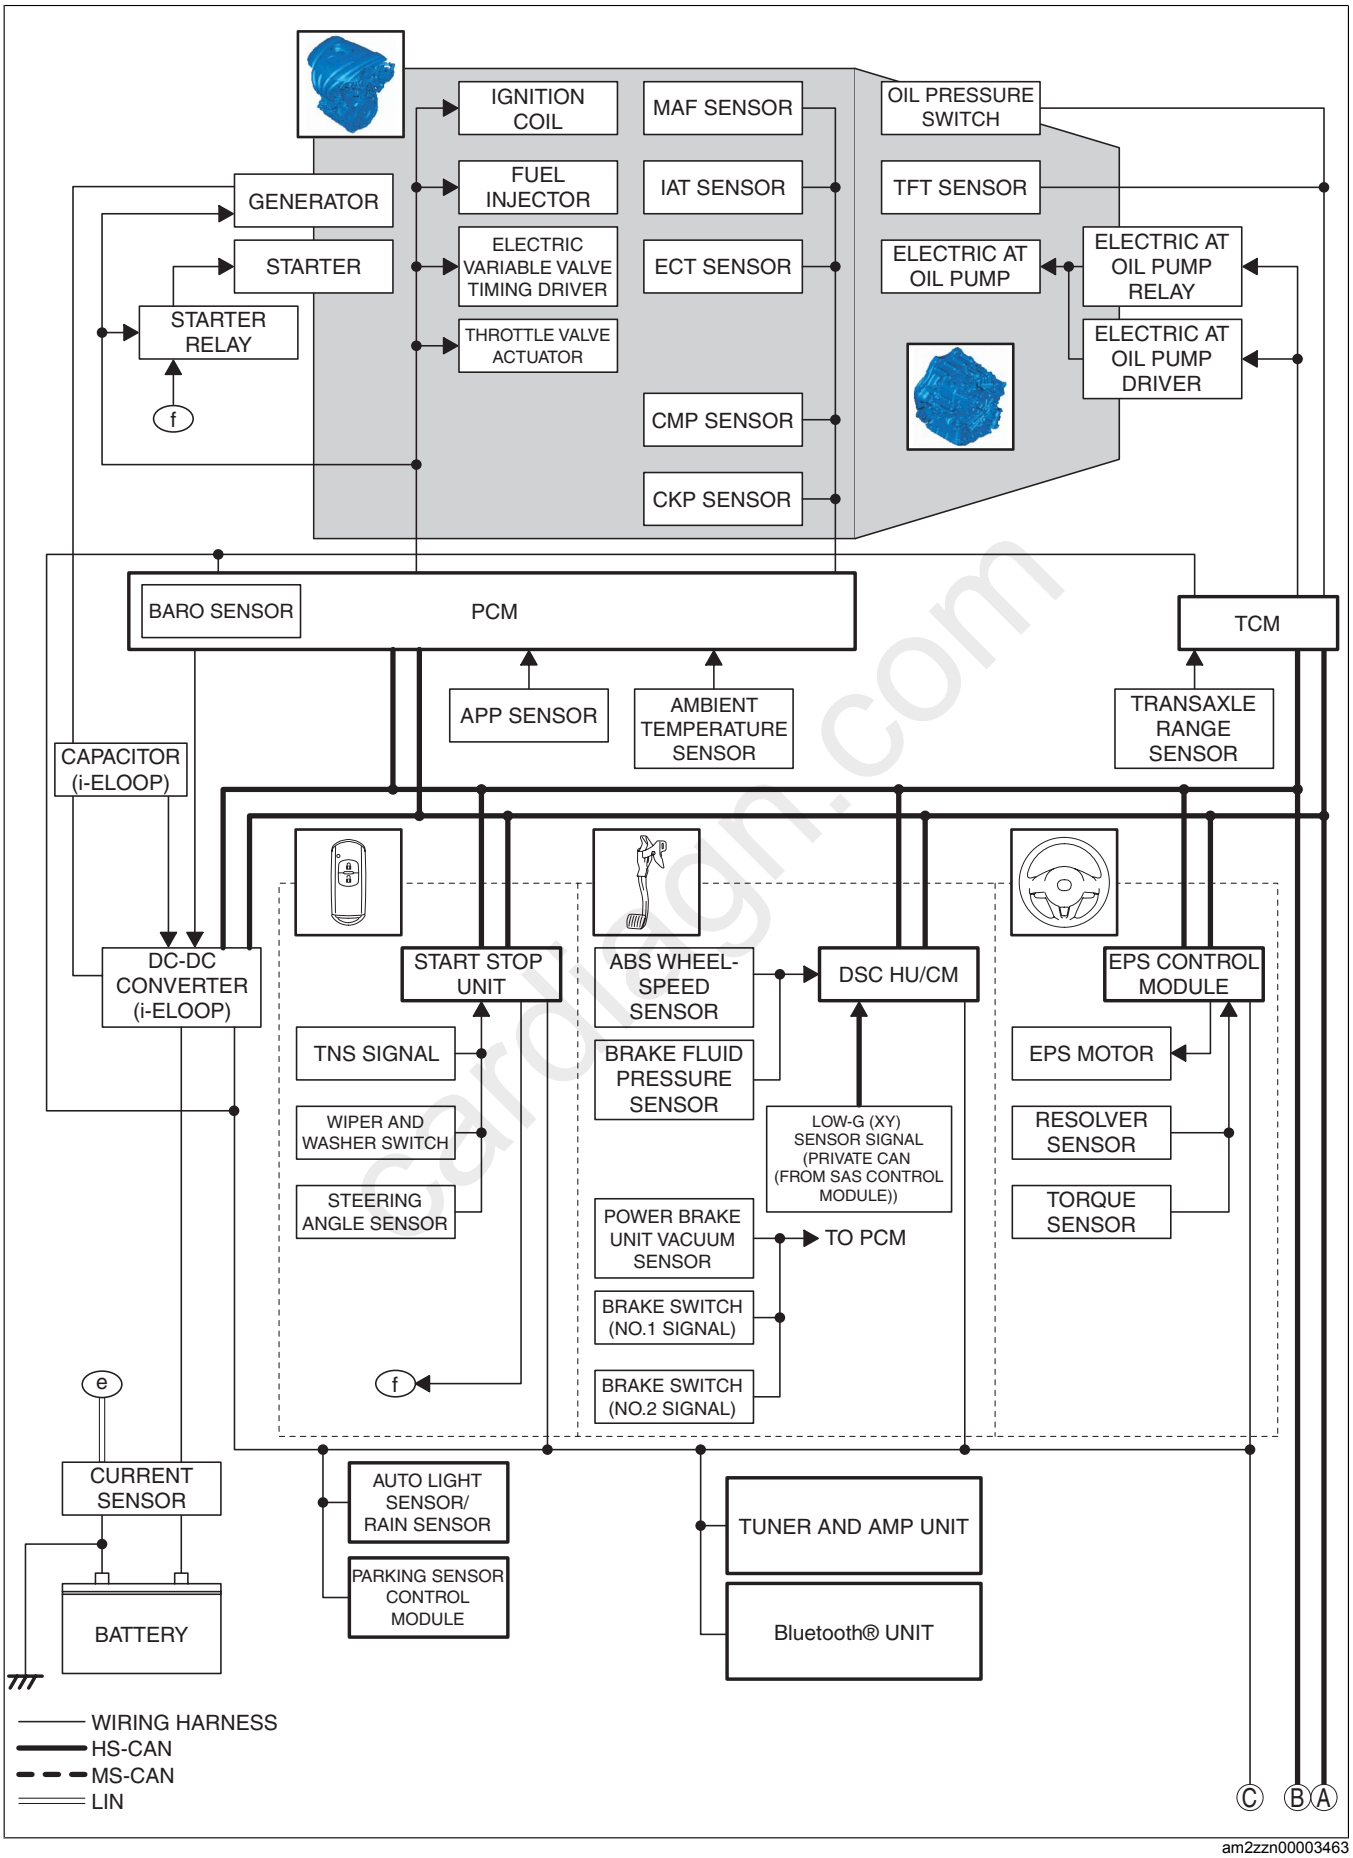


am2zzn00003463

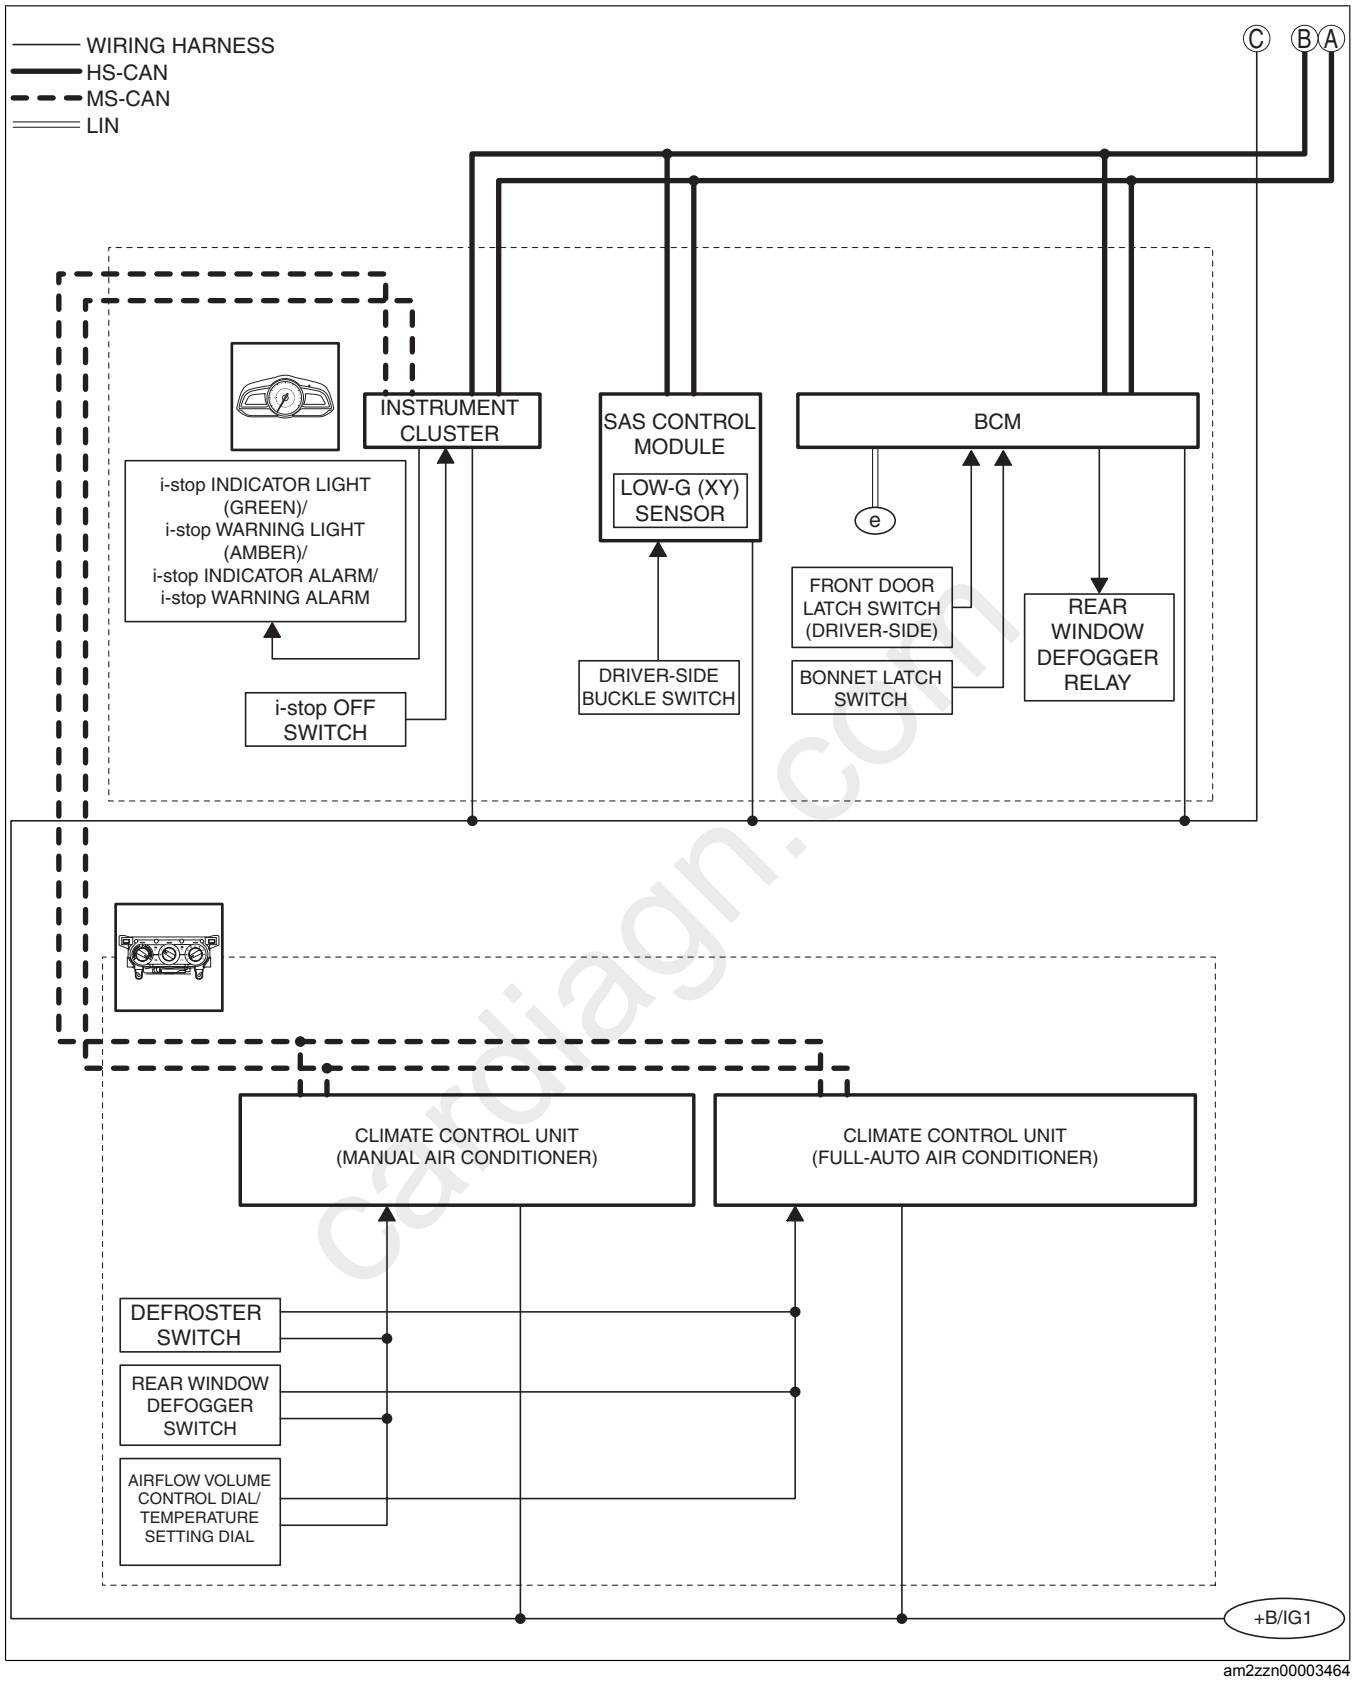


cardiagn.com

am2zzn00003464

With i-ELOOP (MTX)

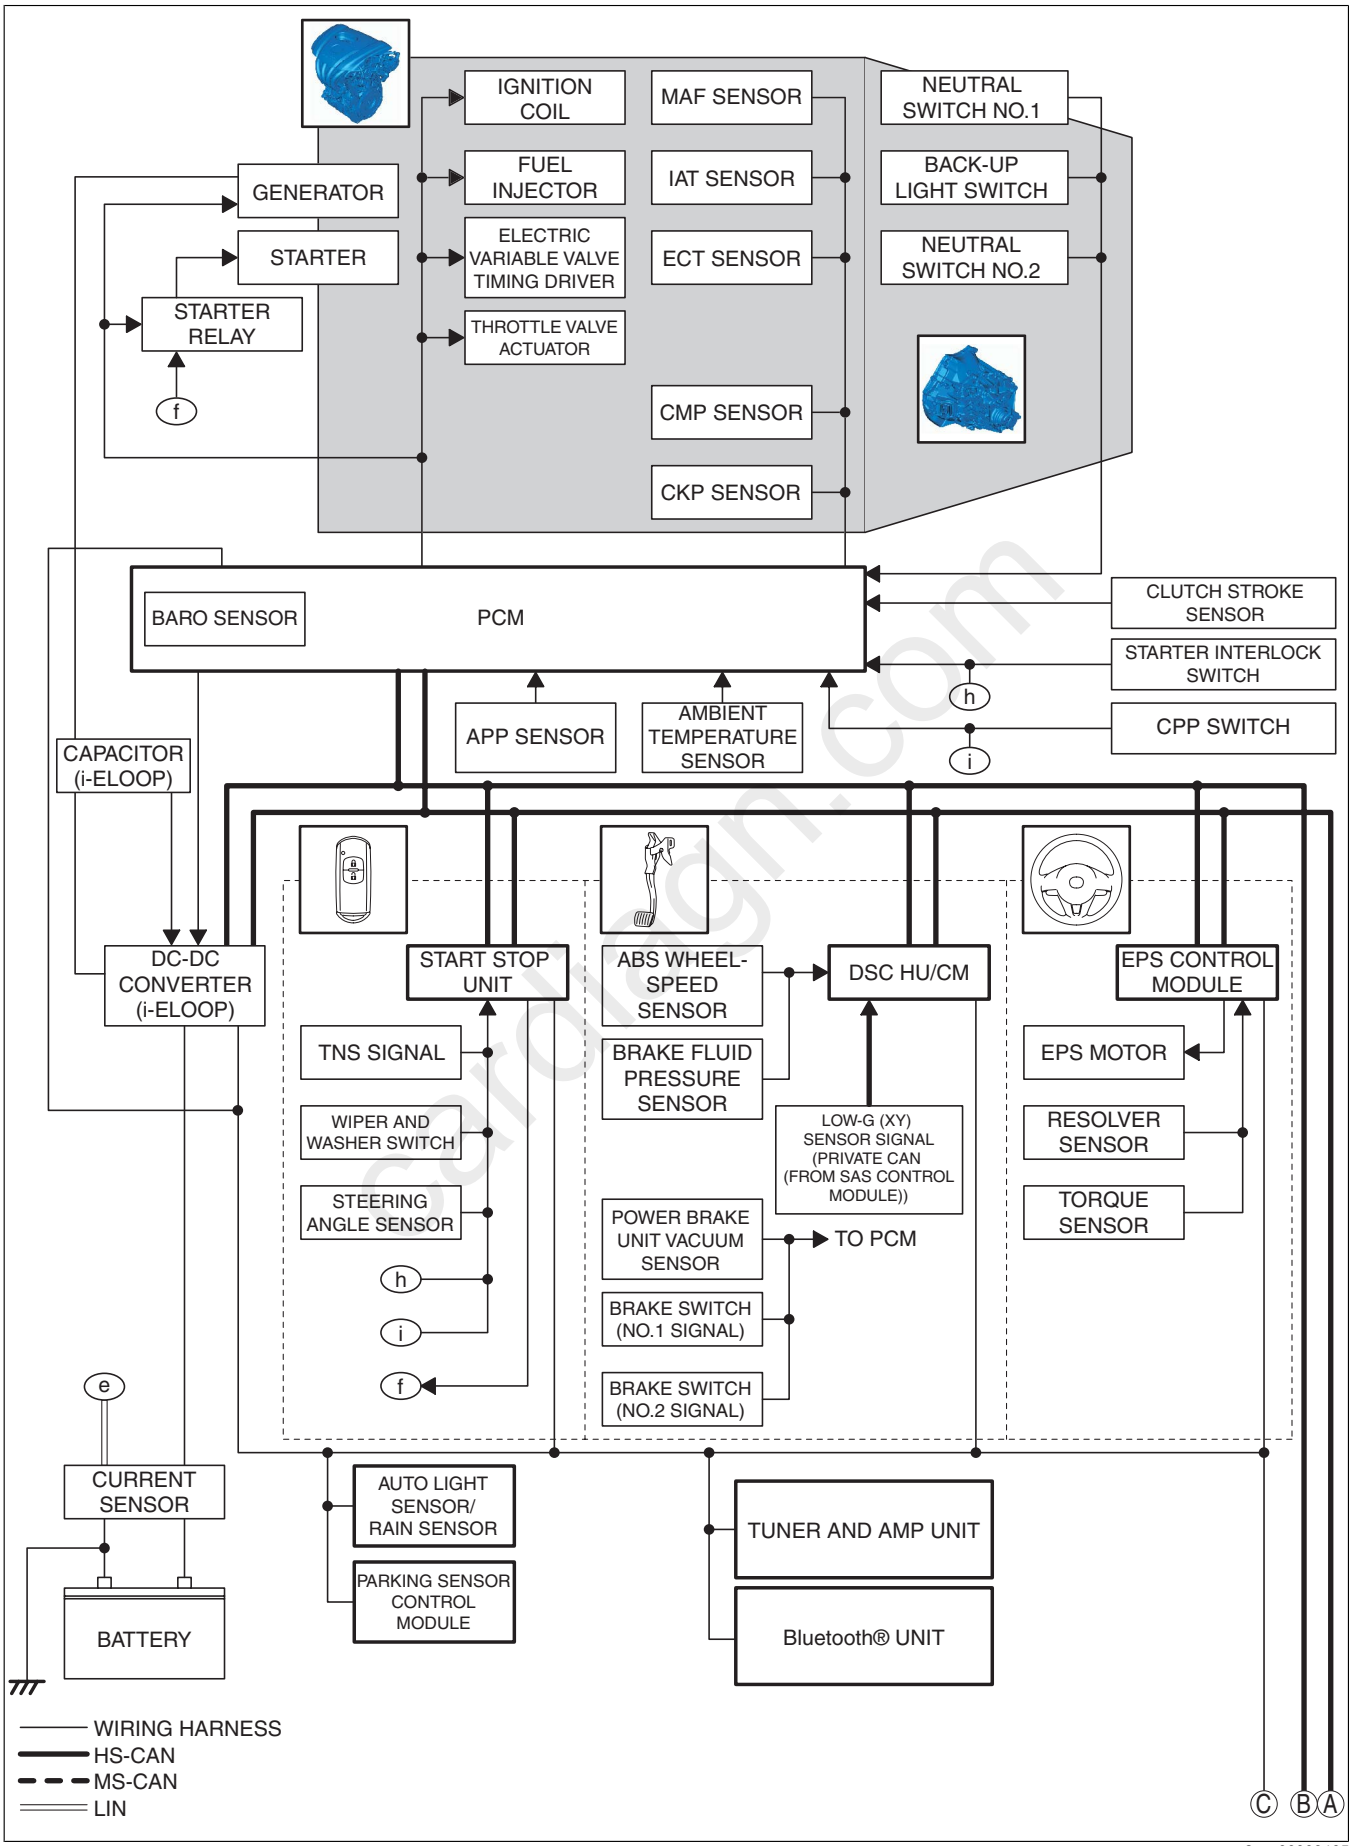


am2zzn00003465

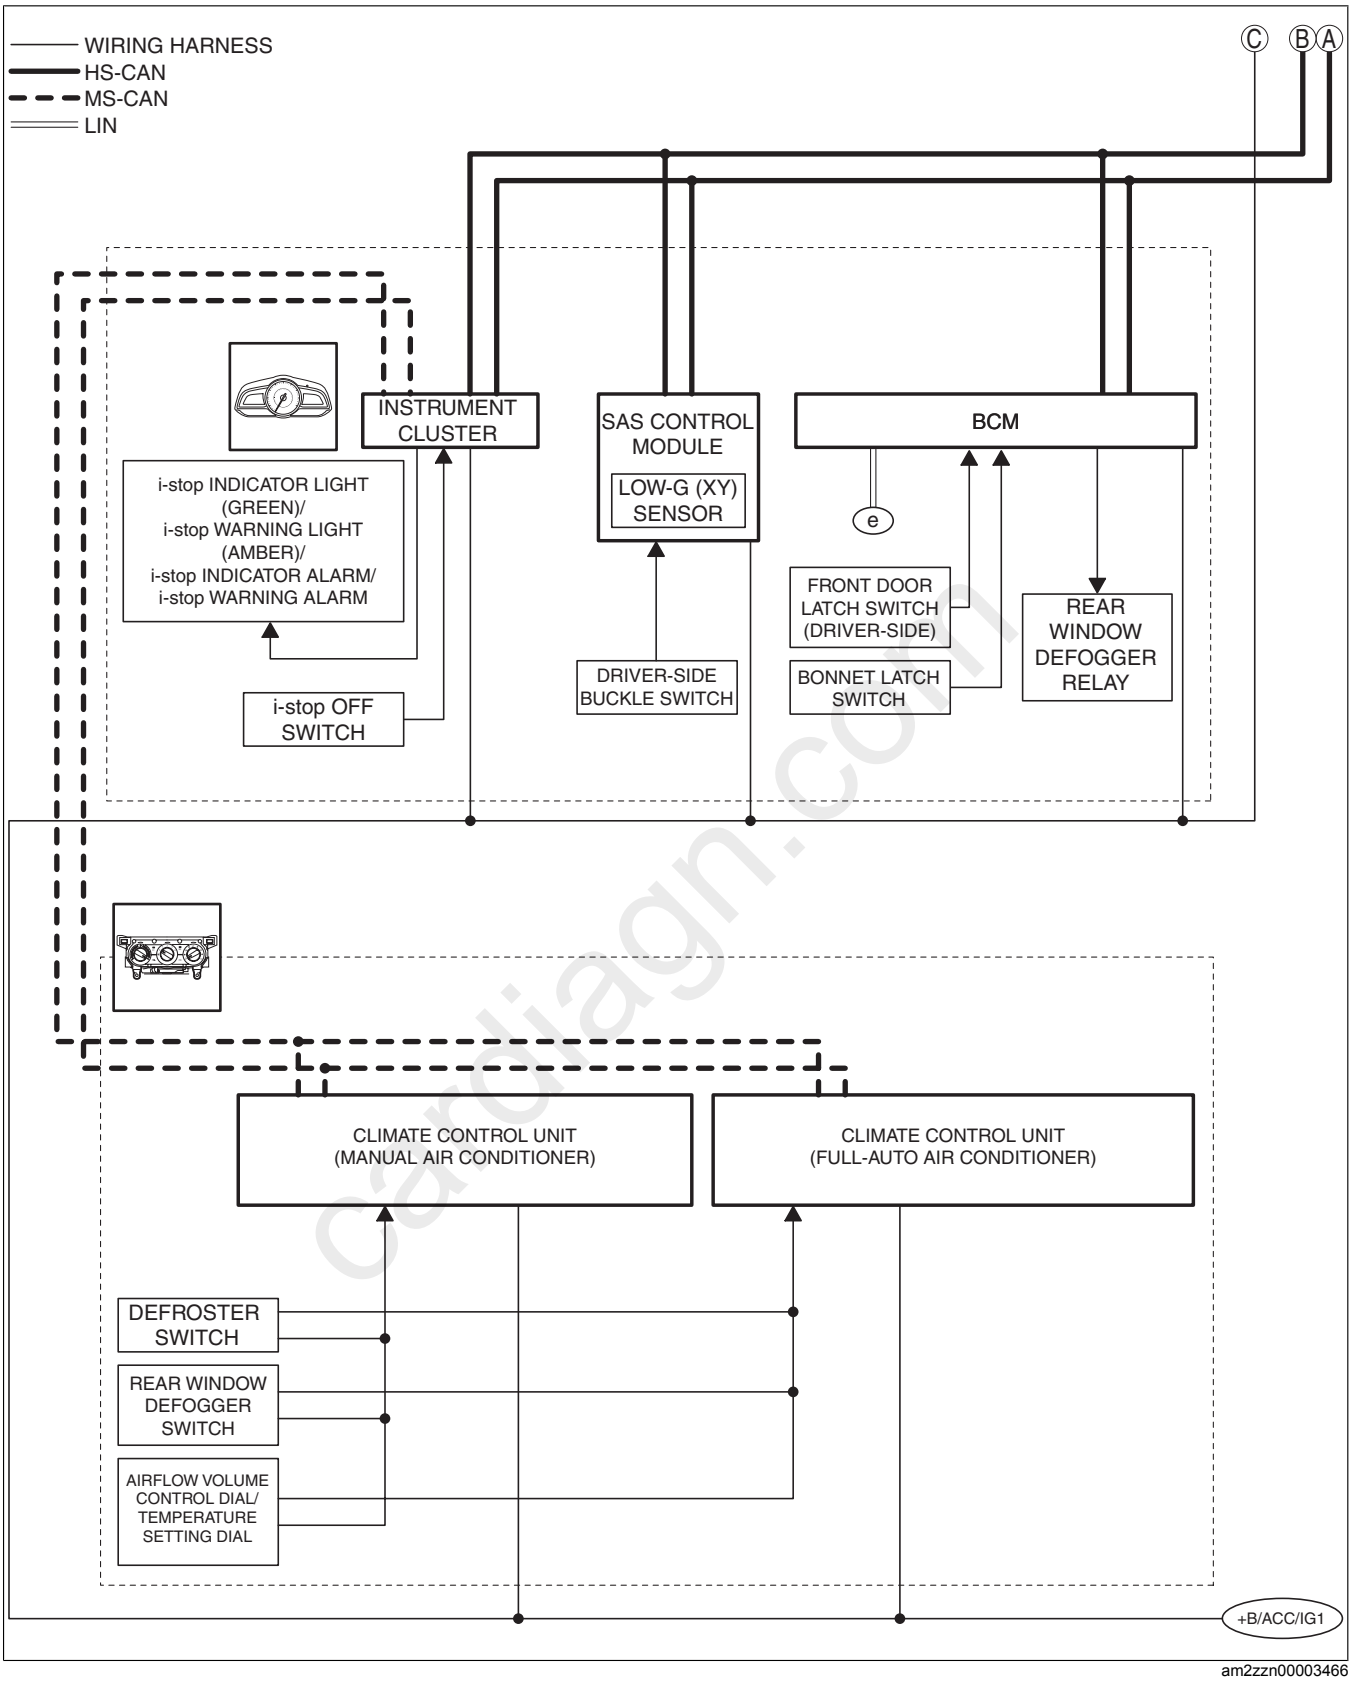


am2zzn00003466

SKYACTIV-D 1.5

Without i-ELOOP (ATX)

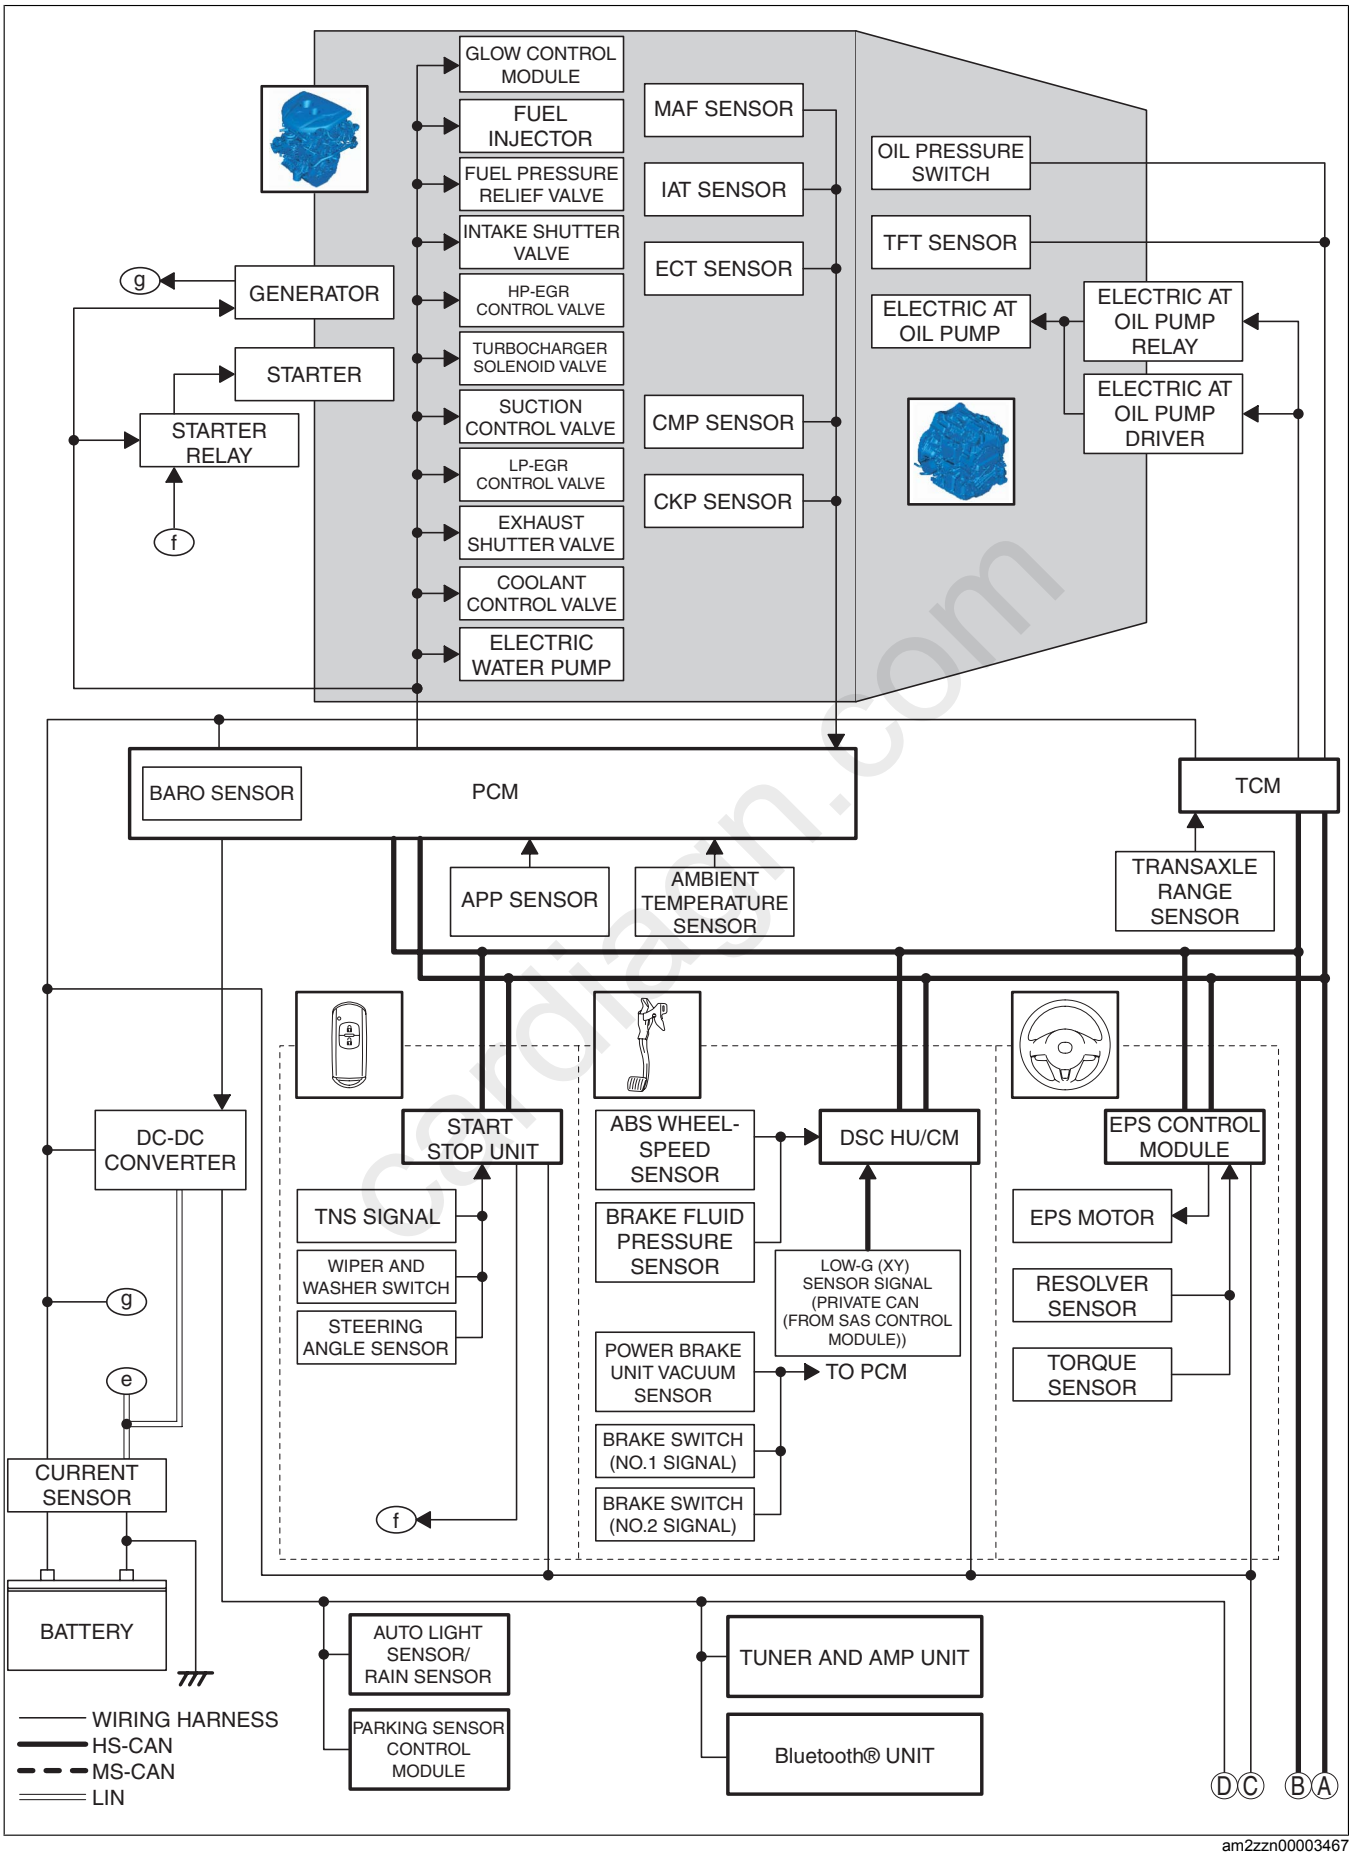


am2zzn00003467

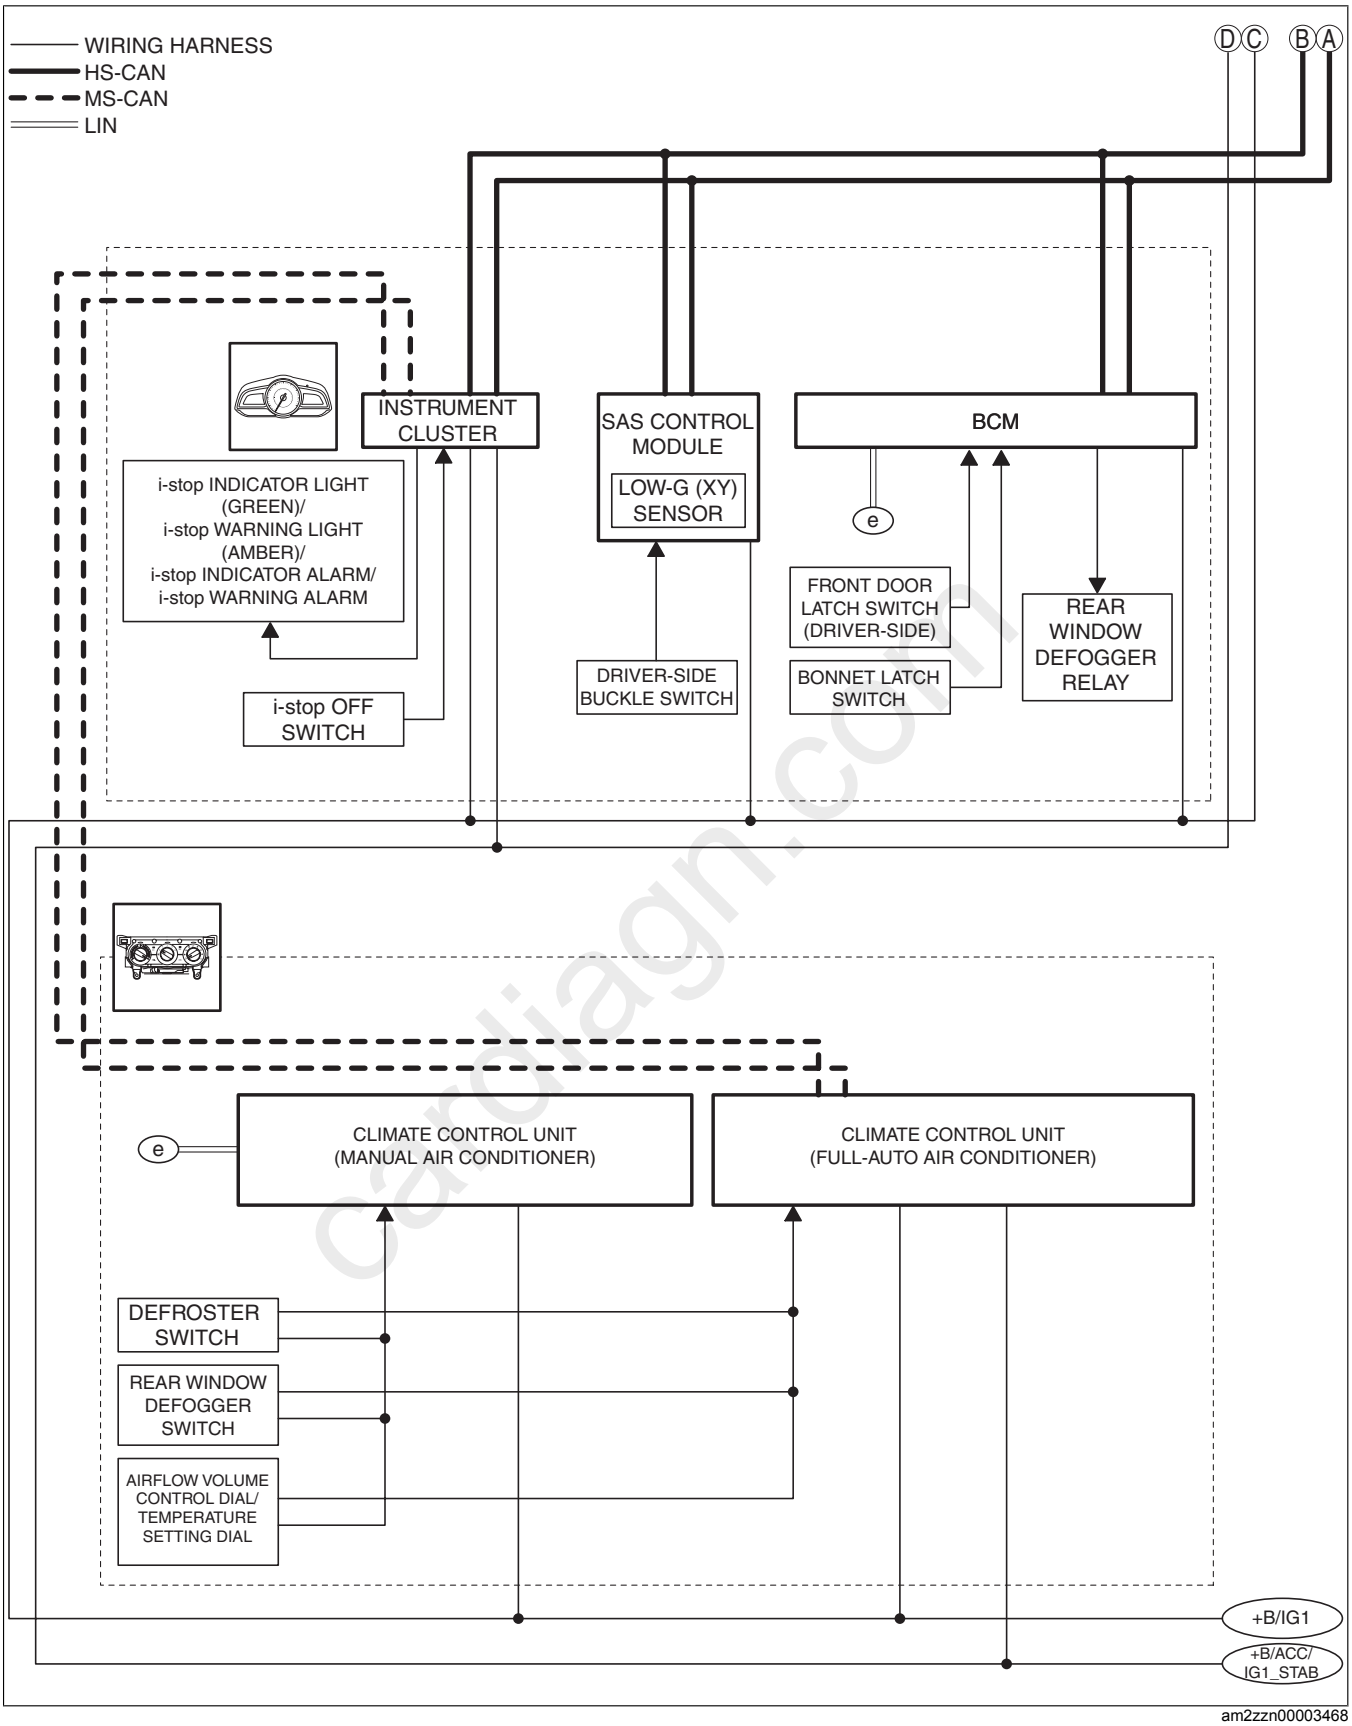


cardiagn.com

am2zzn00003468

Without i-ELOOP (MTX)

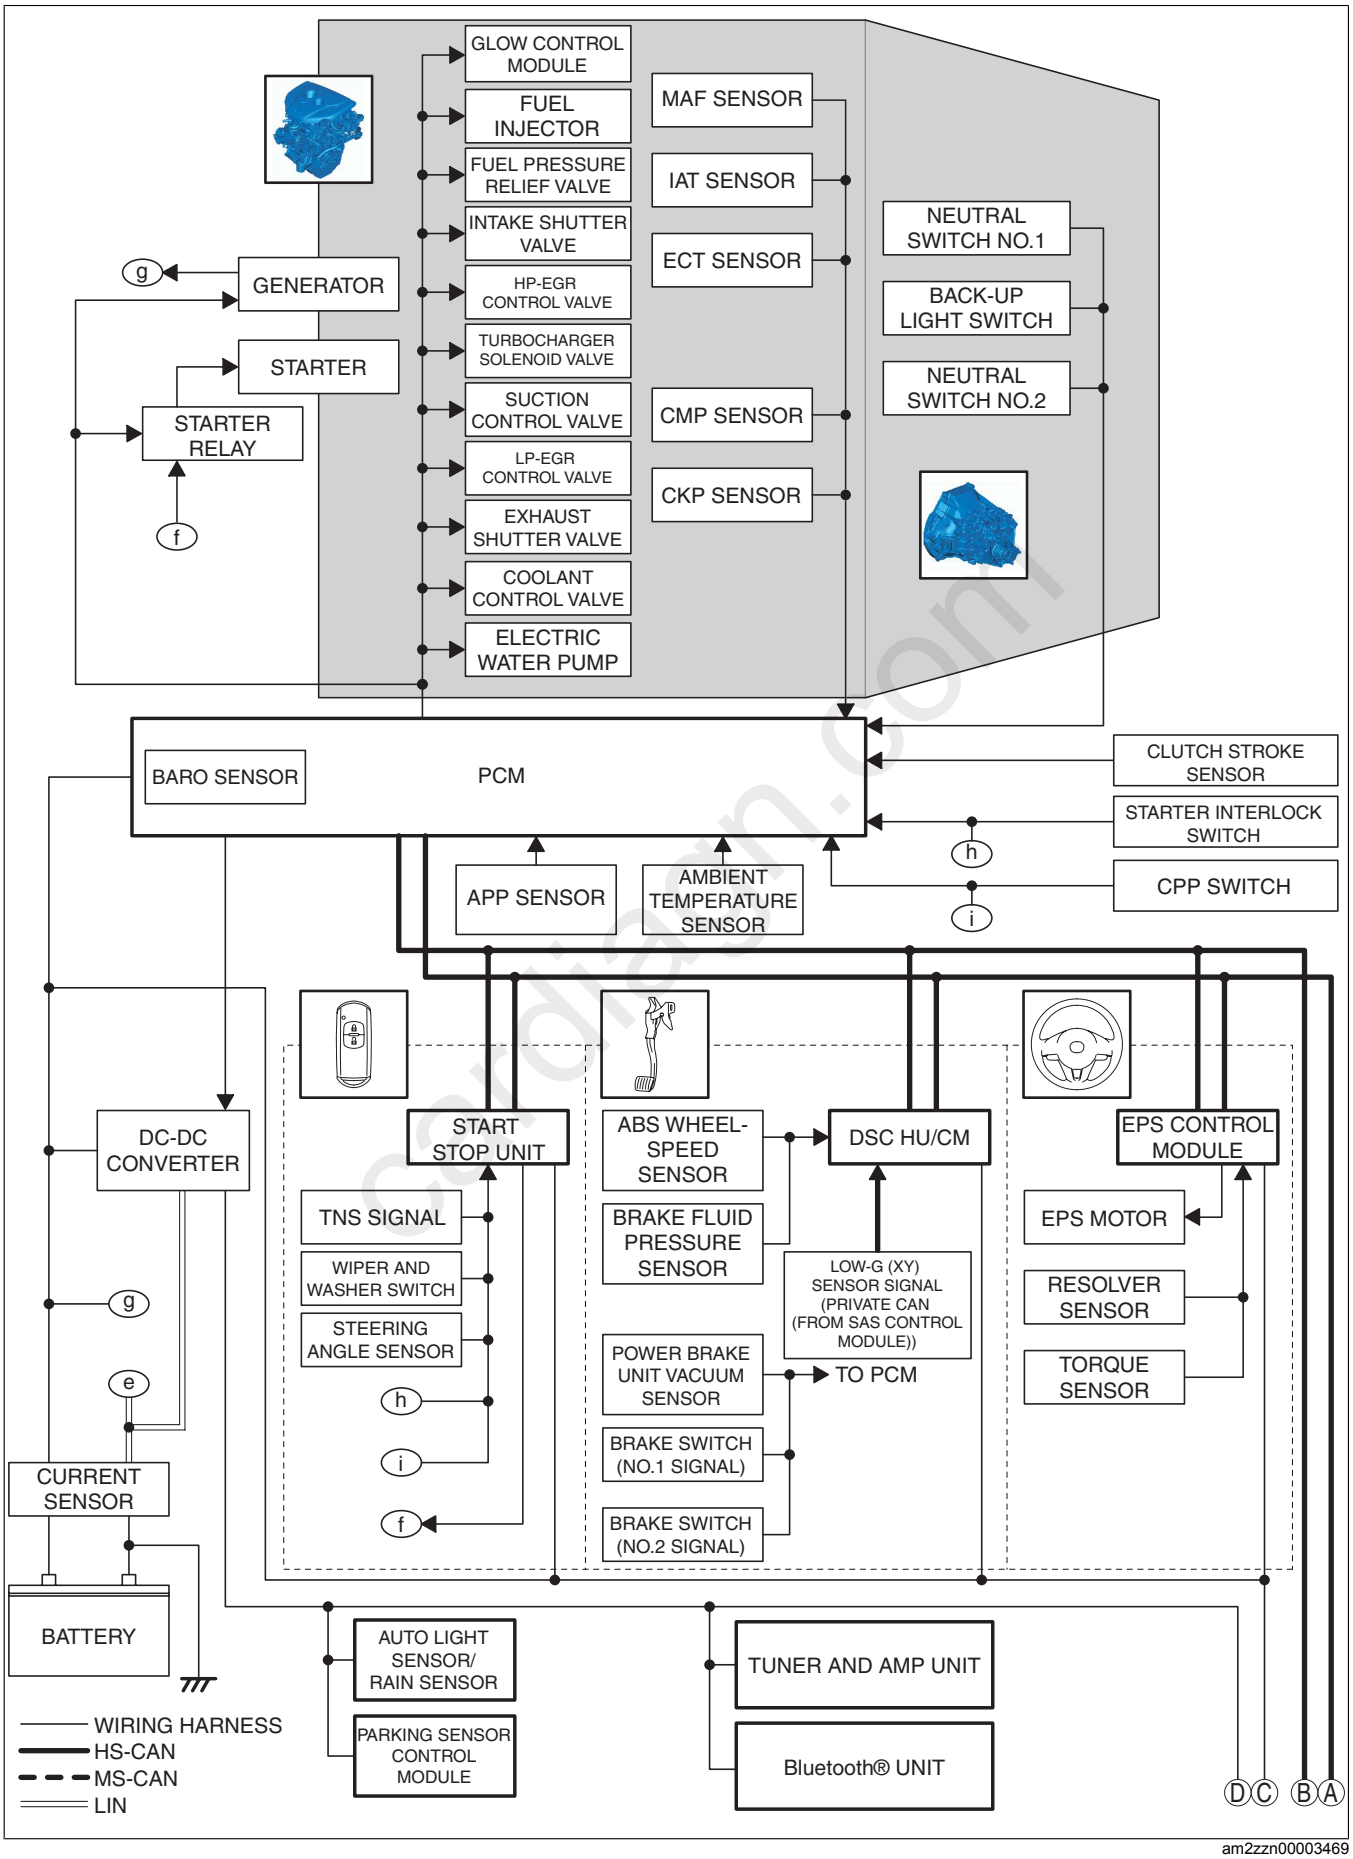


am2zzn00003469

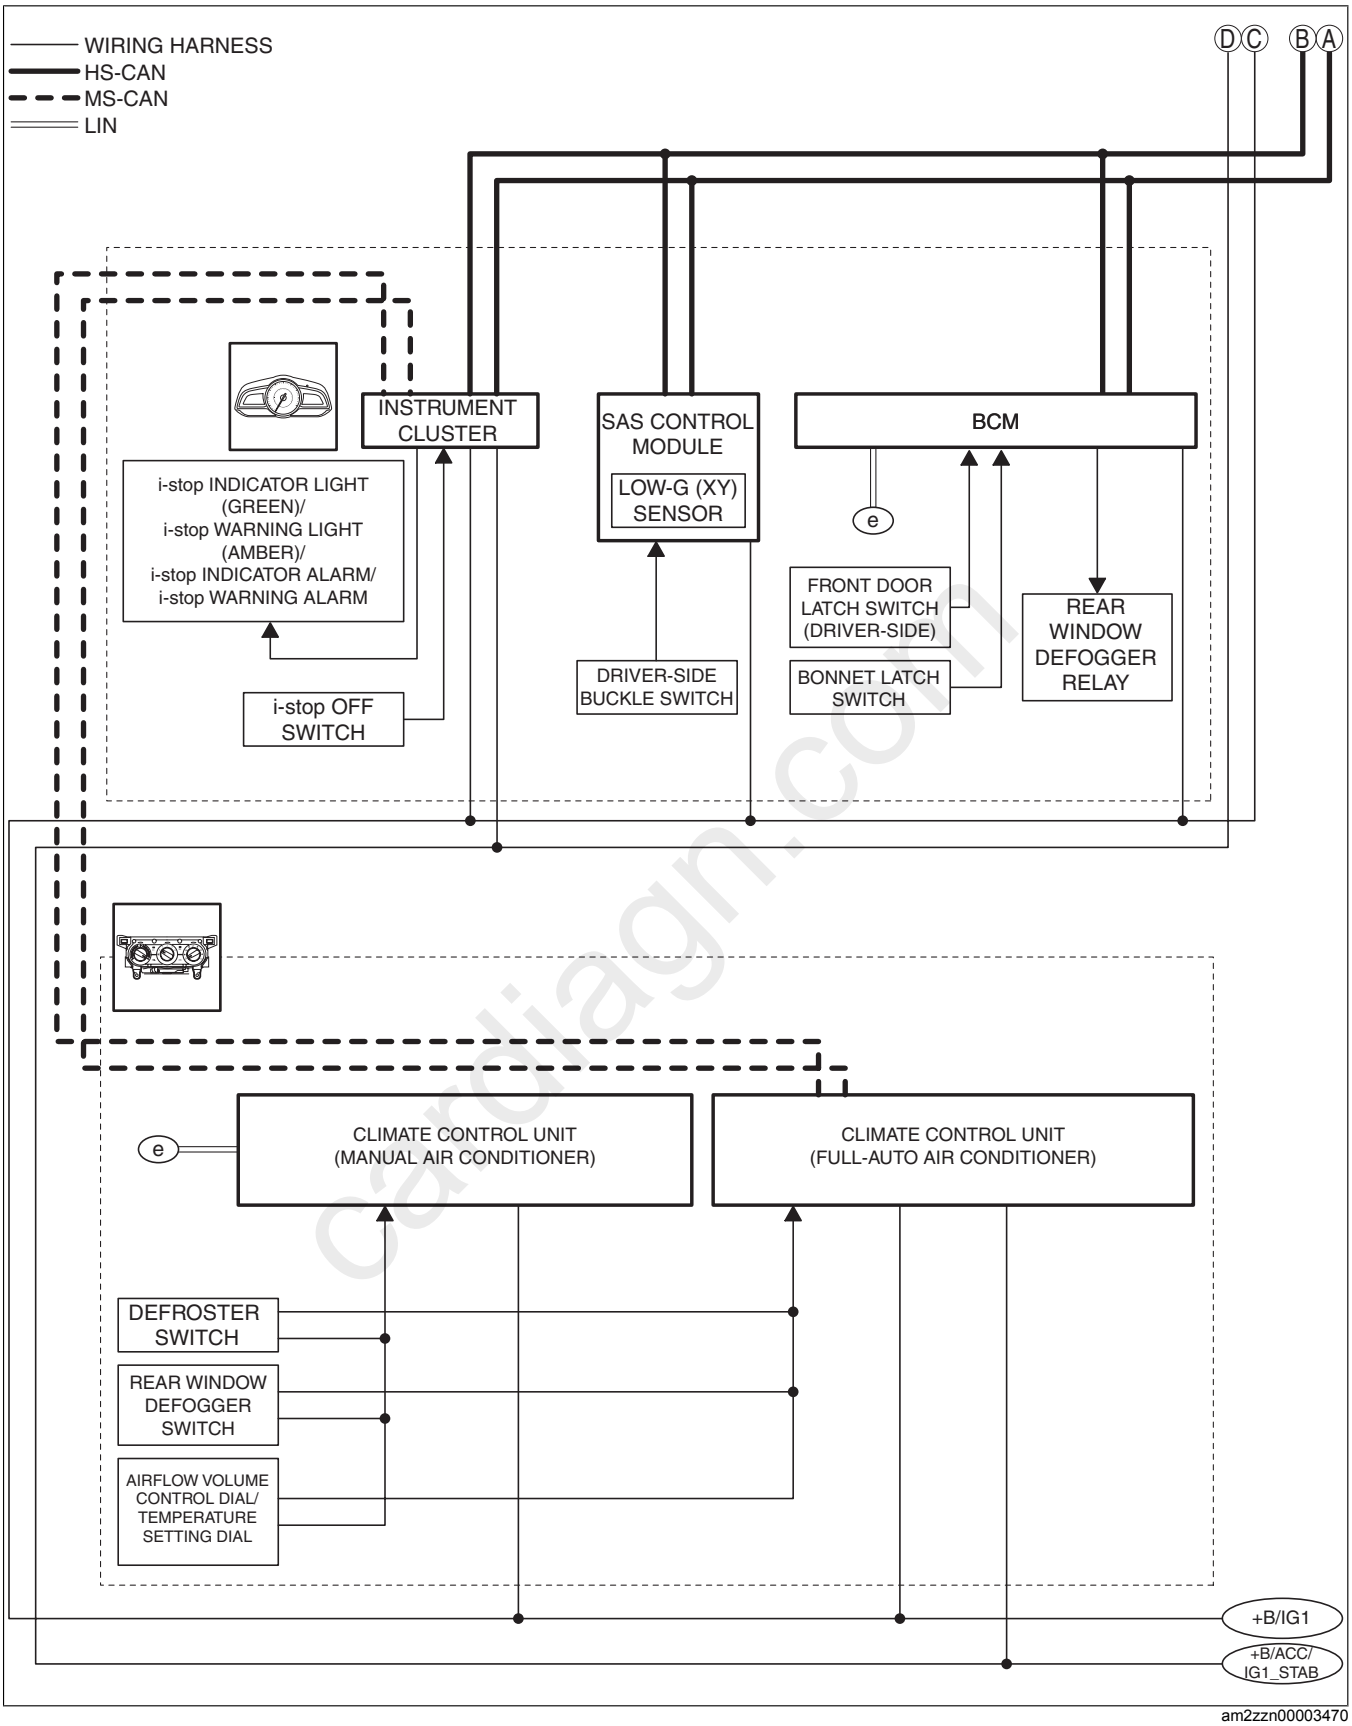


cardiagn.com

am2zzn00003470

With i-ELOOP (ATX)

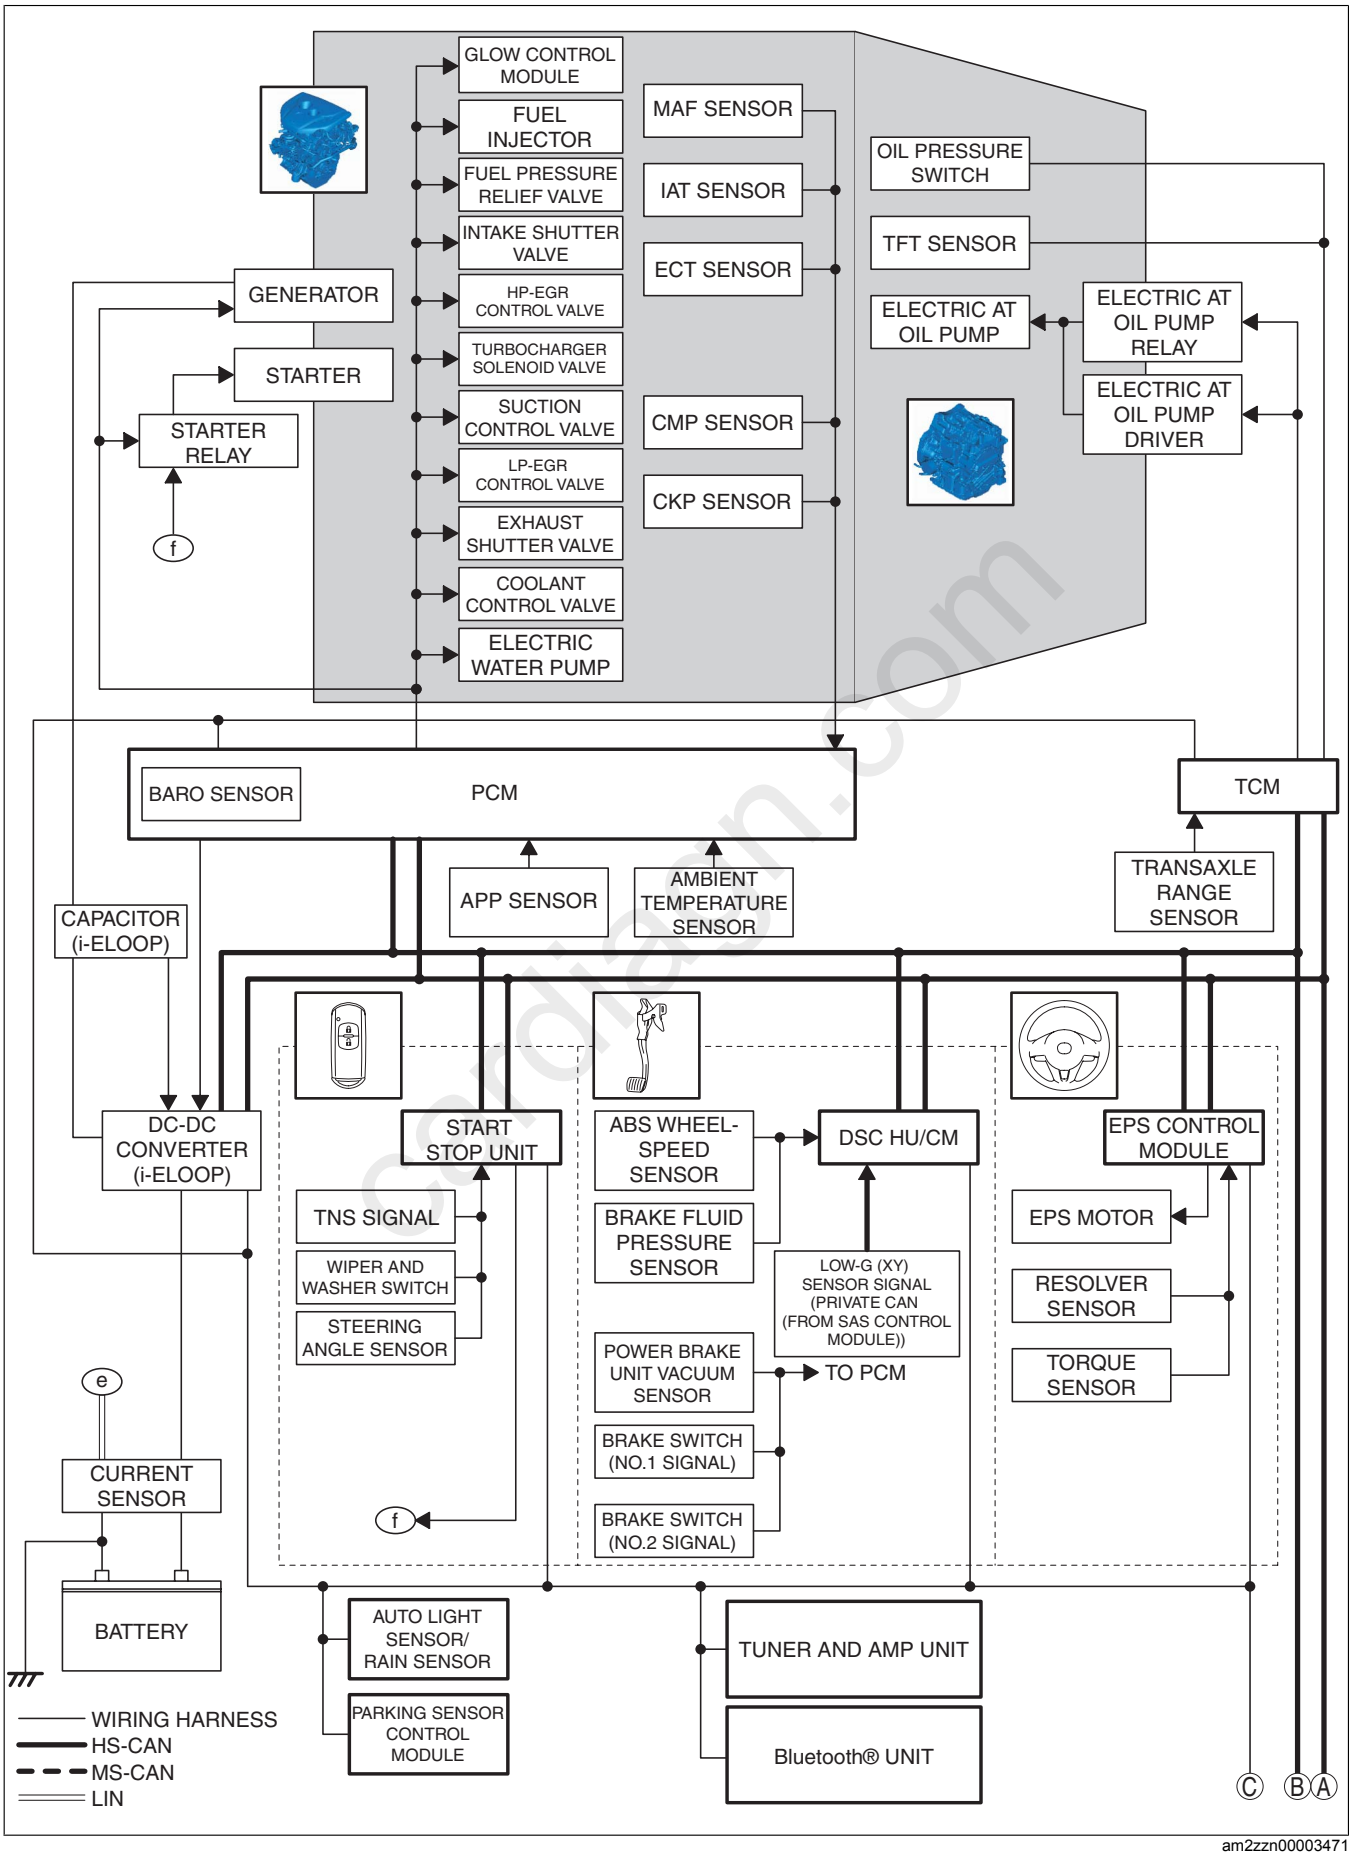


am2zzn00003471

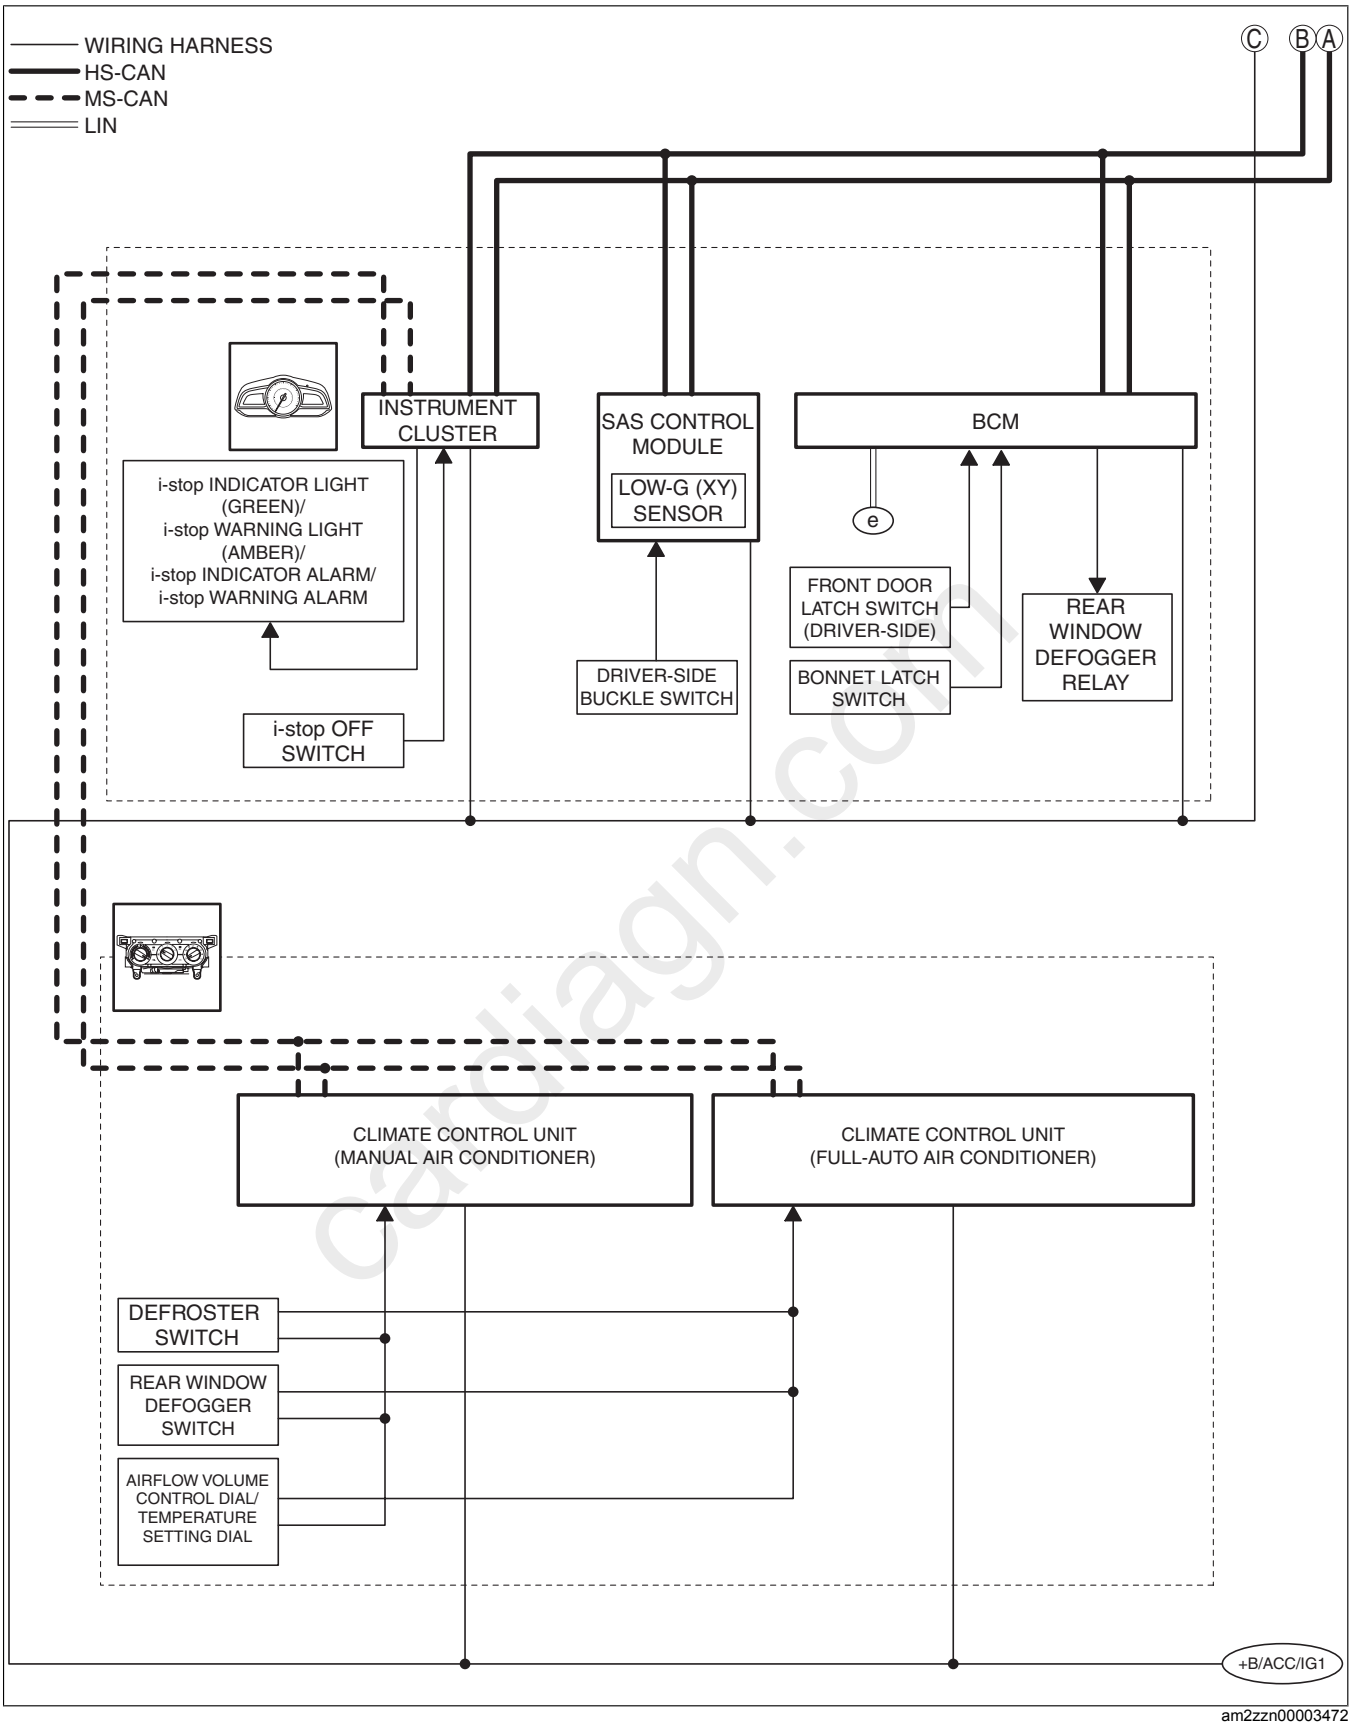


cardiagn.com

am2zzn00003472

With i-ELOOP (MTX)

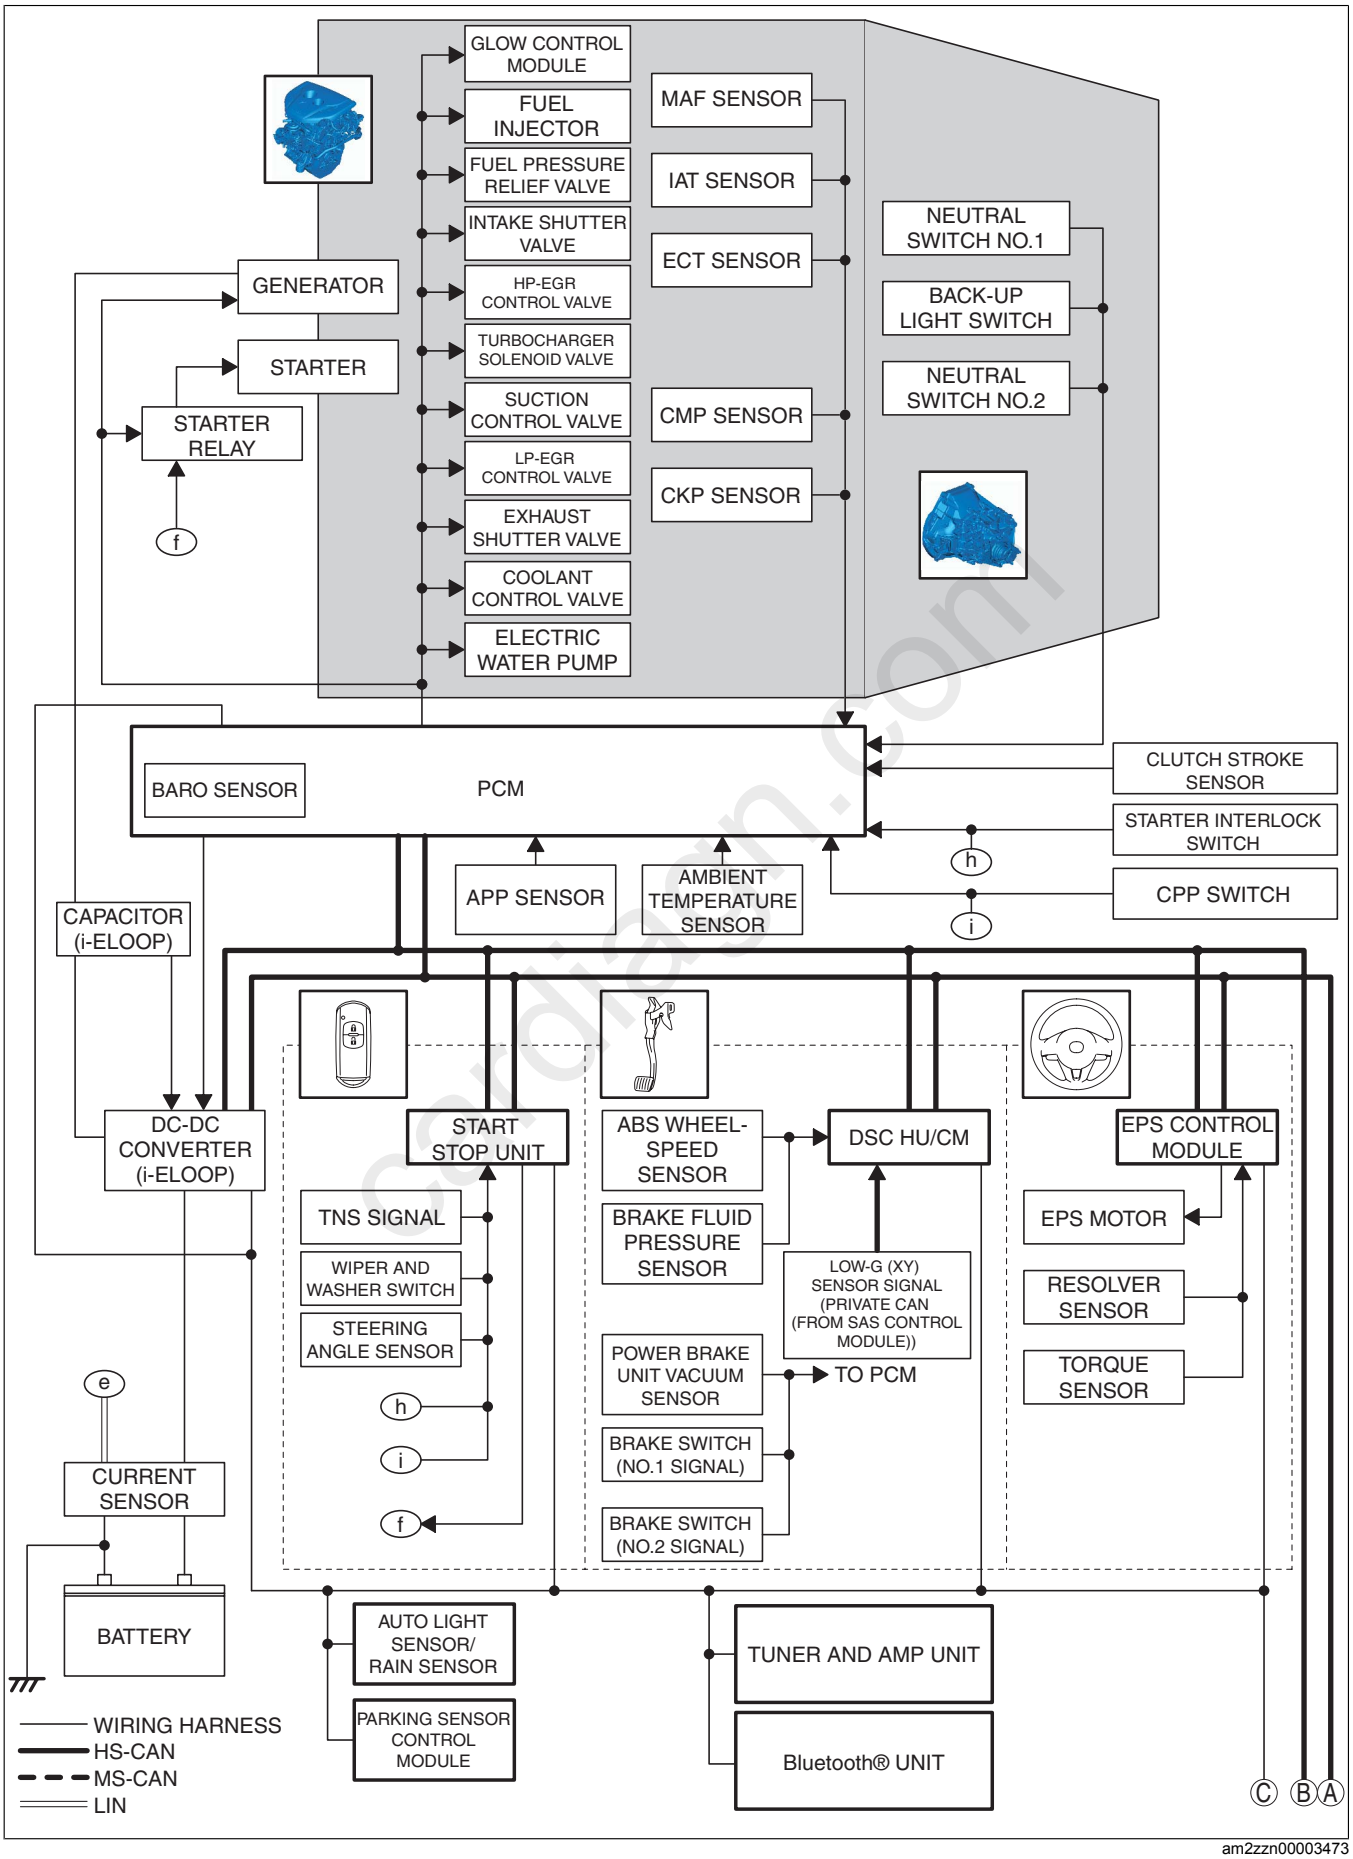

am2zzn00003473

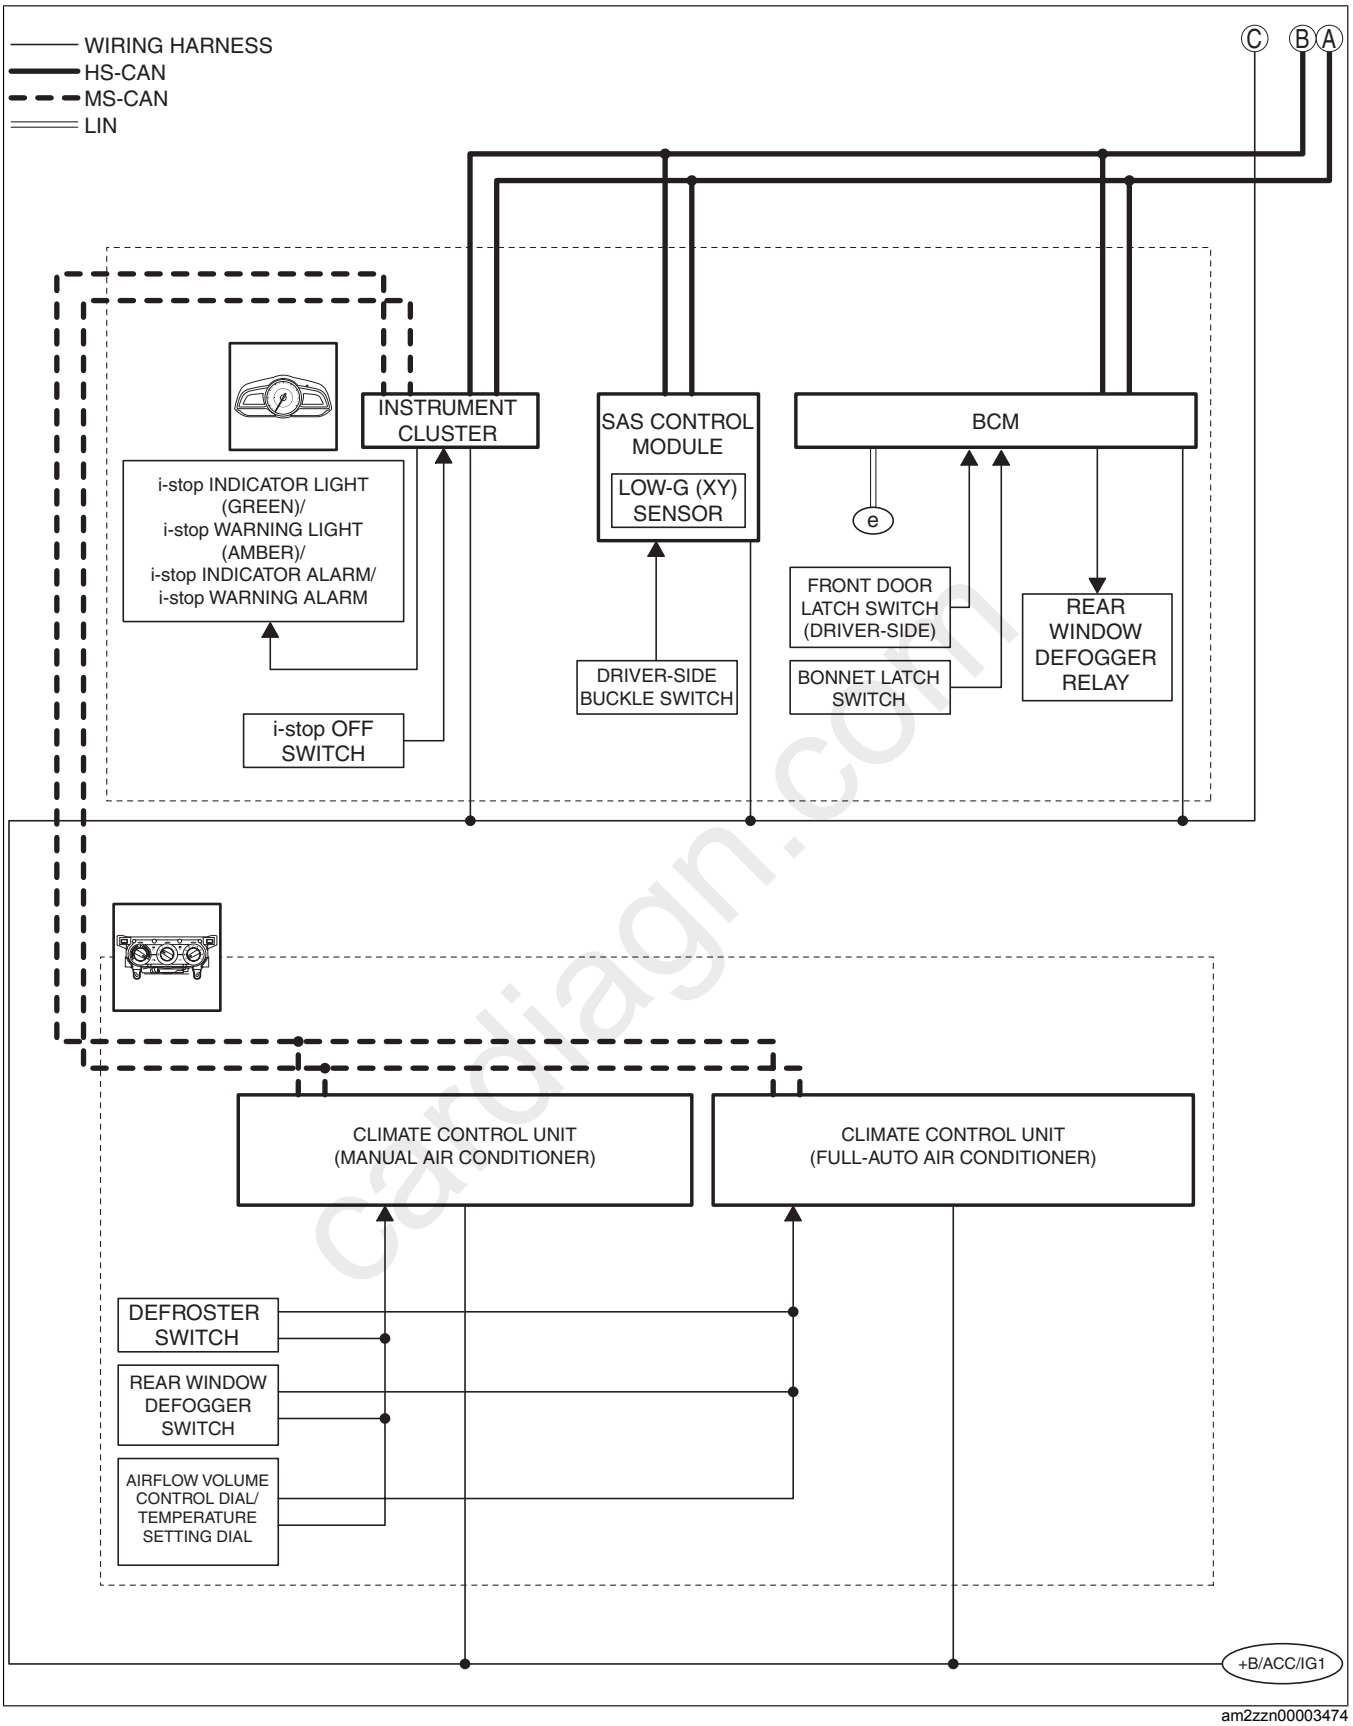

cardiagn.com

am2zzn00003474

Control modules

Module name	Reference
PCM	**SKYACTIV-G 1.3, SKYACTIV-G 1.5** (See i-stop CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop INDICATOR ALARM [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop WARNING ALARM [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
	SKYACTIV-D 1.5 (See i-stop CONTROL [SKYACTIV-D 1.5].) (See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-D 1.5].) (See i-stop INDICATOR ALARM [SKYACTIV-D 1.5].) (See i-stop WARNING ALARM [SKYACTIV-D 1.5].)
DC-DC CONVERTER (i-ELOOP) (With i-ELOOP)	(See i-ELOOP [i-ELOOP].)
DC-DC CONVERTER (Without i-ELOOP)	(See DC-DC CONVERTER CONTROL [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
DSC HU/CM	(See HILL LAUNCH ASSIST (HLA).)
TCM (ATX)	(See ELECTRIC AT OIL PUMP [CW6A-EL].) (See ELECTRIC AT OIL PUMP [EW6A-EL].)
EPS CONTROL MODULE	(See ELECTRIC POWER STEERING (EPS) CONTROL MODULE.)
CLIMATE CONTROL UNIT	(See MANUAL AIR CONDITIONER SYSTEM [MANUAL AIR CONDITIONER].) (See FULL-AUTO AIR CONDITIONER SYSTEM [FULL-AUTO AIR CONDITIONER].)
SAS CONTROL MODULE	(See SAS CONTROL MODULE [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See SAS CONTROL MODULE [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
INSTRUMENT CLUSTER	(See INSTRUMENT CLUSTER.)
START STOP UNIT	(See START STOP UNIT.)
BCM	(See BODY CONTROL MODULE (BCM).)

carmanual.com