
CHARGING SYSTEM LOCATION INDEX [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)]

id1317040000q9

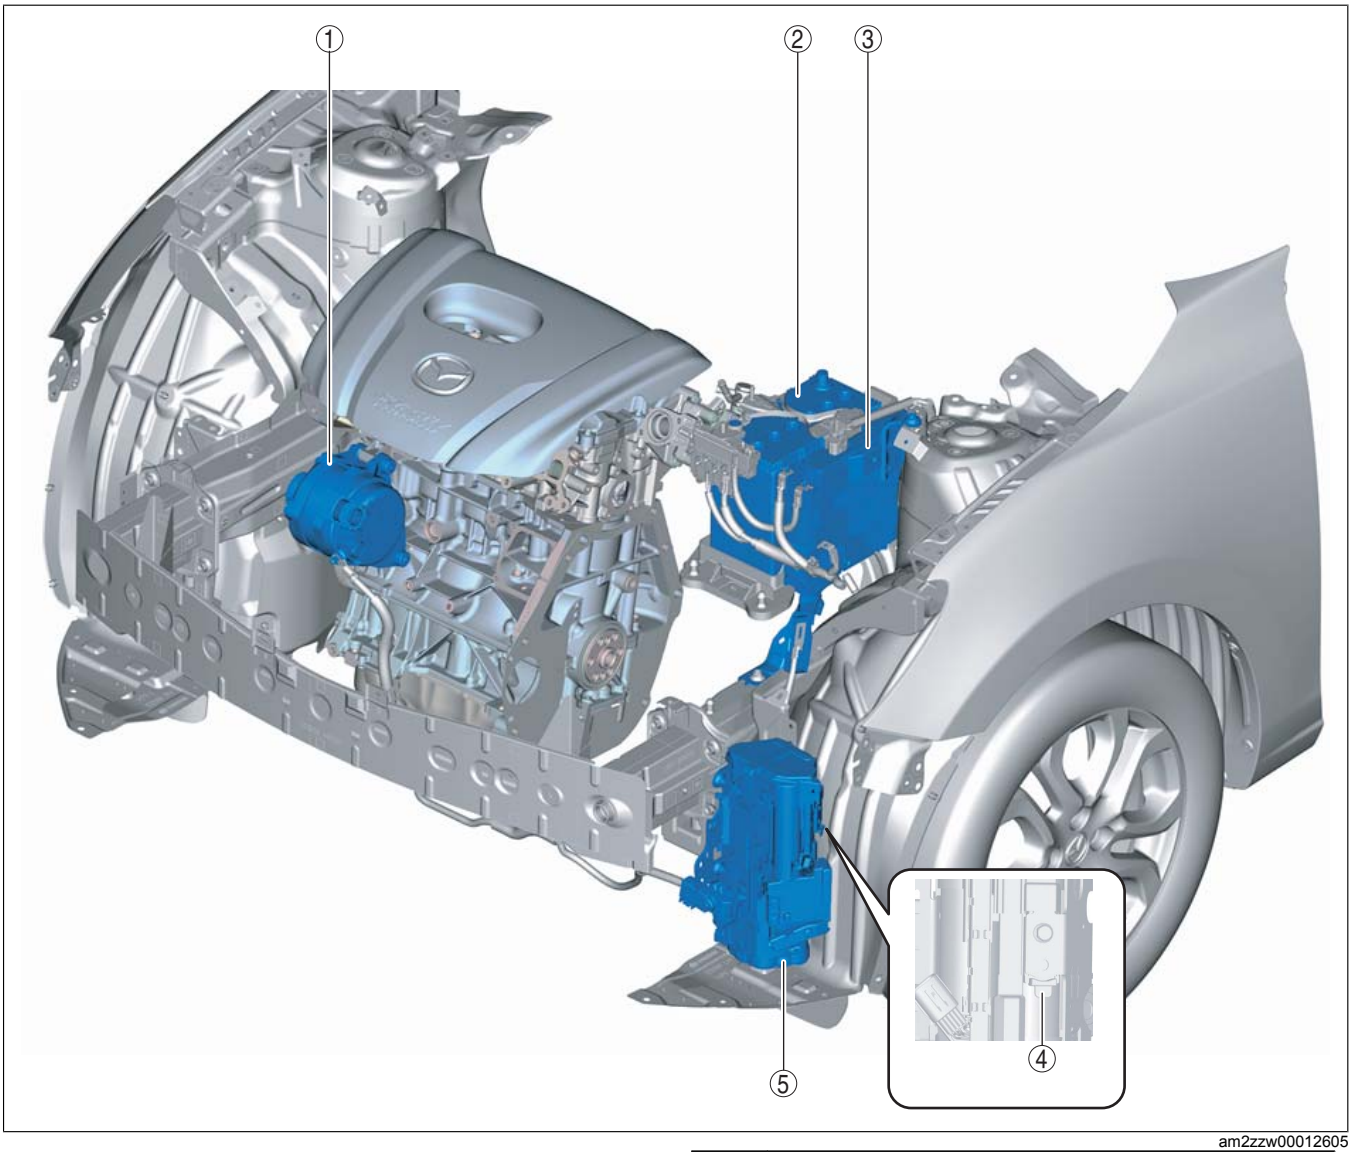

am2zzw00012605

1	Generator (See GENERATOR REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See GENERATOR INSPECTION [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See GENERATOR DISASSEMBLY/ASSEMBLY [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].)
2	Battery (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See BATTERY INSPECTION.) (See BATTERY RECHARGING.) (See BATTERY CONDITION INITIALIZATION SETTING (i-stop SETTING).)

3	DC-DC converter (i-ELOOP) (See DC-DC CONVERTER (i-ELOOP) REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)].) (See DC-DC CONVERTER (i-ELOOP) INSPECTION [i-ELOOP].)
4	Service plug (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].)
5	Capacitor (i-ELOOP) (See CAPACITOR (i-ELOOP) REMOVAL/INSTALLATION [i-ELOOP].) (See CAPACITOR (i-ELOOP) INSPECTION [i-ELOOP].) (See CAPACITOR (i-ELOOP) COMPULSORY DISCHARGE [i-ELOOP].)