PROCEDURE BEFORE i-ELOOP-RELATED PART SERVICING [i-ELOOP]


id131704001000

Procedure Before i-ELOOP-Related Part Servicing

Warning


- **If the terminal of one of the i-ELOOP-related parts contacts the vehicle body with the service plug of the capacitor connected, it could cause a fire and damage to electrical parts. In addition, if the terminal contacts your body, it could cause electrocution. Disconnect the service plug of the capacitor before disconnecting the i-ELOOP-related part terminal. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].)**
  - **— Battery cable terminal of capacitor (i-ELOOP)**
  - **— Engine wiring harness terminal of capacitor (i-ELOOP)**
  - **— Battery cable terminal of DC-DC converter (i-ELOOP)**
  - **— Generator terminal B cable**
  - **— Battery cable terminal of terminal block (SKYACTIV-D 1.5)**
  - **— Front wiring harness terminal of capacitor (i-ELOOP) (SKYACTIV-D 1.5)**
  - **— PTC heater connector (1-pin connector) (SKYACTIV-D 1.5)**

SKYACTIV-G 1.3, SKYACTIV-G 1.5

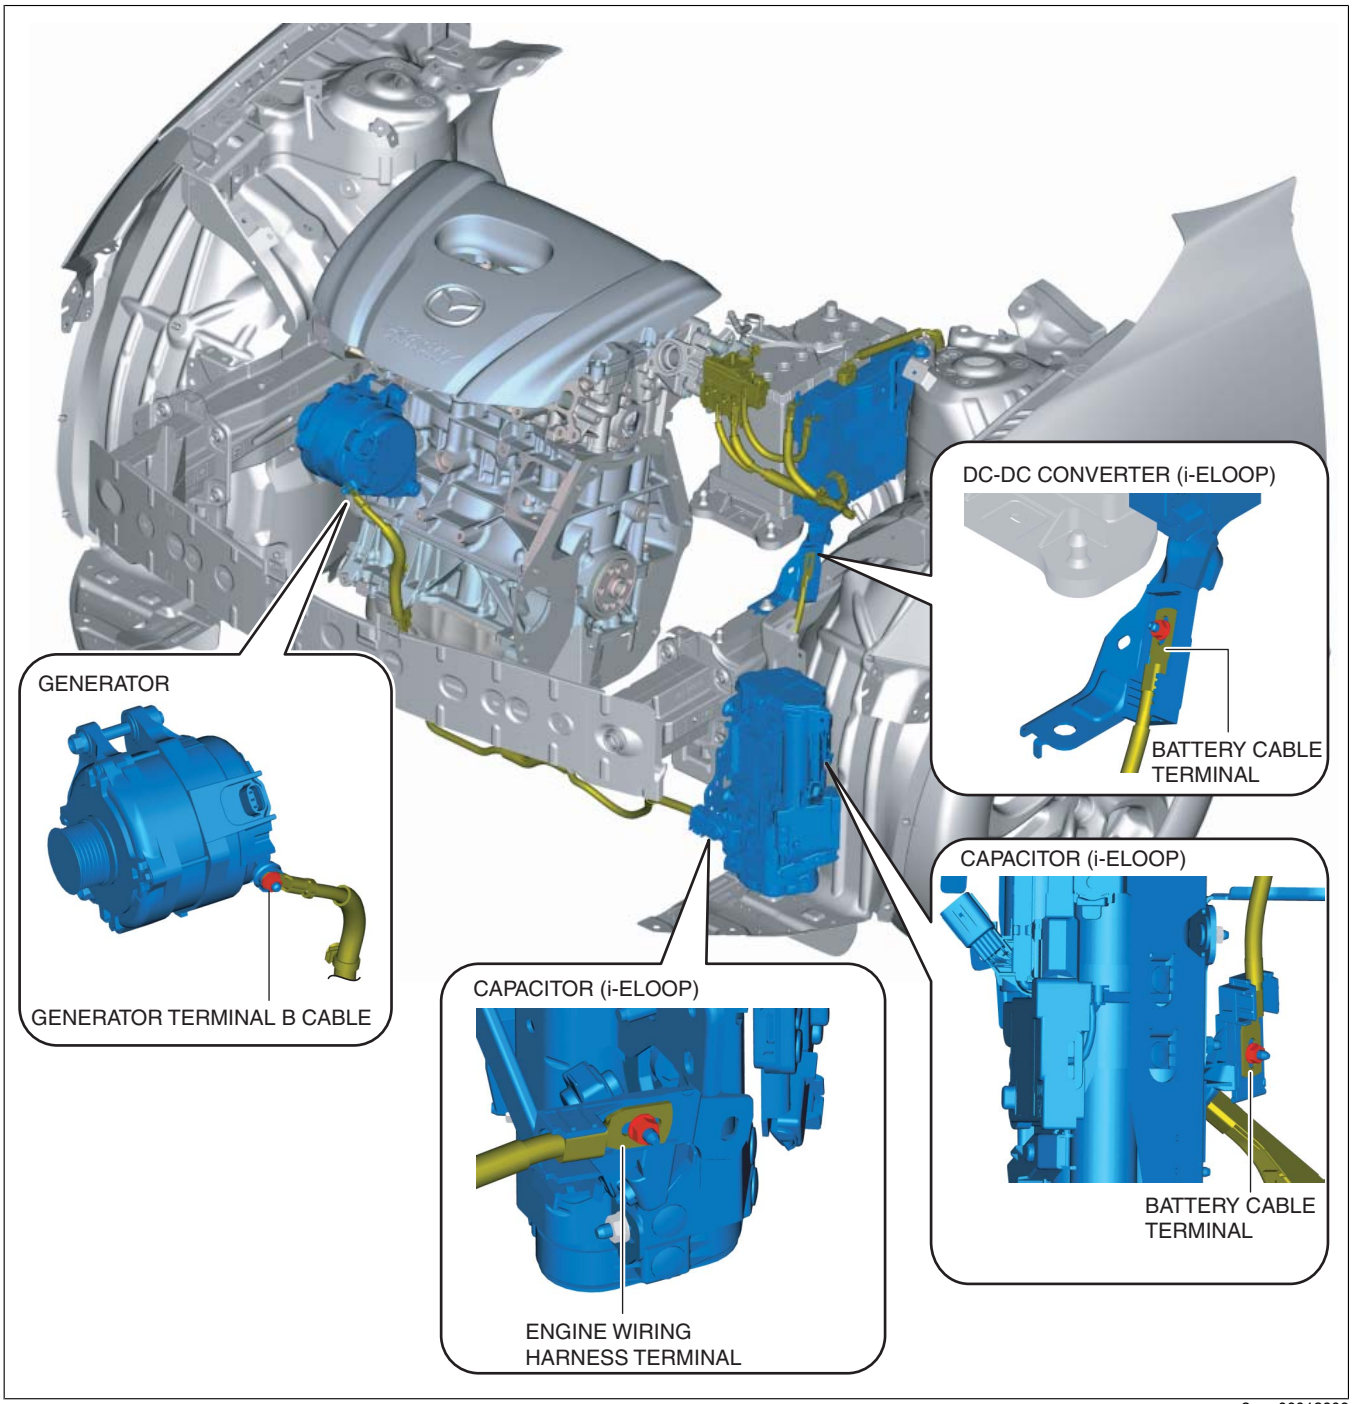

am2zzw00012603

SKYACTIV-D 1.5

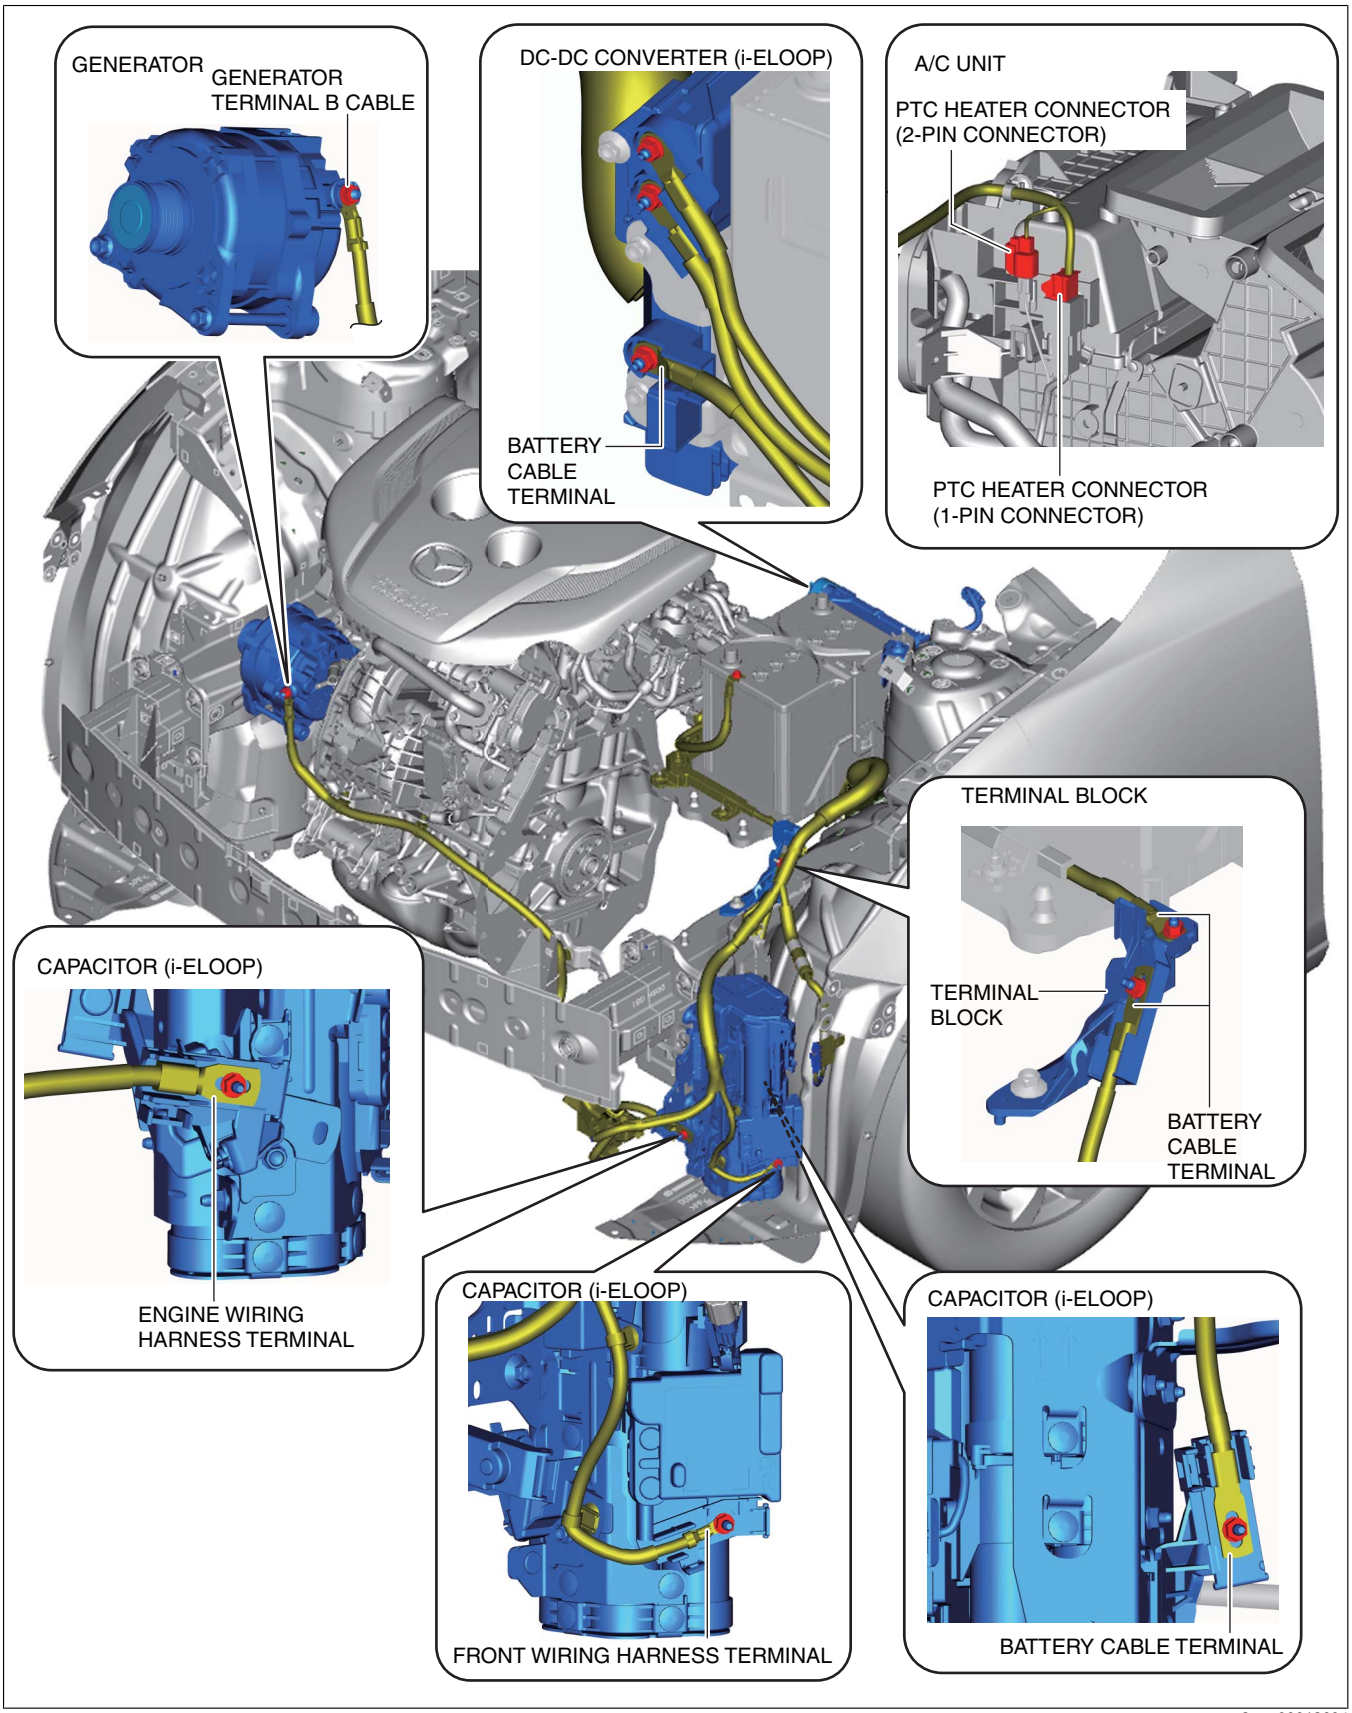

am2zzw00012604