GENERATOR REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-D 1.5)]

id1317040030q8

Warning

- **Remove and install all parts when the engine is cold, otherwise they can cause severe burns or serious injury.**


Procedure Before i-ELOOP-Related Part Servicing

Warning

- **If the terminal of one of the i-ELOOP-related parts contacts the vehicle body with the service plug of the capacitor connected, it could cause a fire and damage to electrical parts. In addition, if the terminal contacts your body, it could cause electrocution. Disconnect the service plug of the capacitor before disconnecting the i-ELOOP-related part terminal. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].)**
  - **— For the i-ELOOP-related part terminals, refer to the "PROCEDURE BEFORE i-ELOOP-RELATED PART SERVICING". (See PROCEDURE BEFORE i-ELOOP-RELATED PART SERVICING [i-ELOOP].)**

Generator Removal/Installation

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the front splash shield (RH). (See SPLASH SHIELD REMOVAL/INSTALLATION.)
4. Disconnect the service plug. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].)
5. Remove the drive belt. (See DRIVE BELT REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
7. Remove in the order indicated in the table.
8. Install in the reverse order of removal.

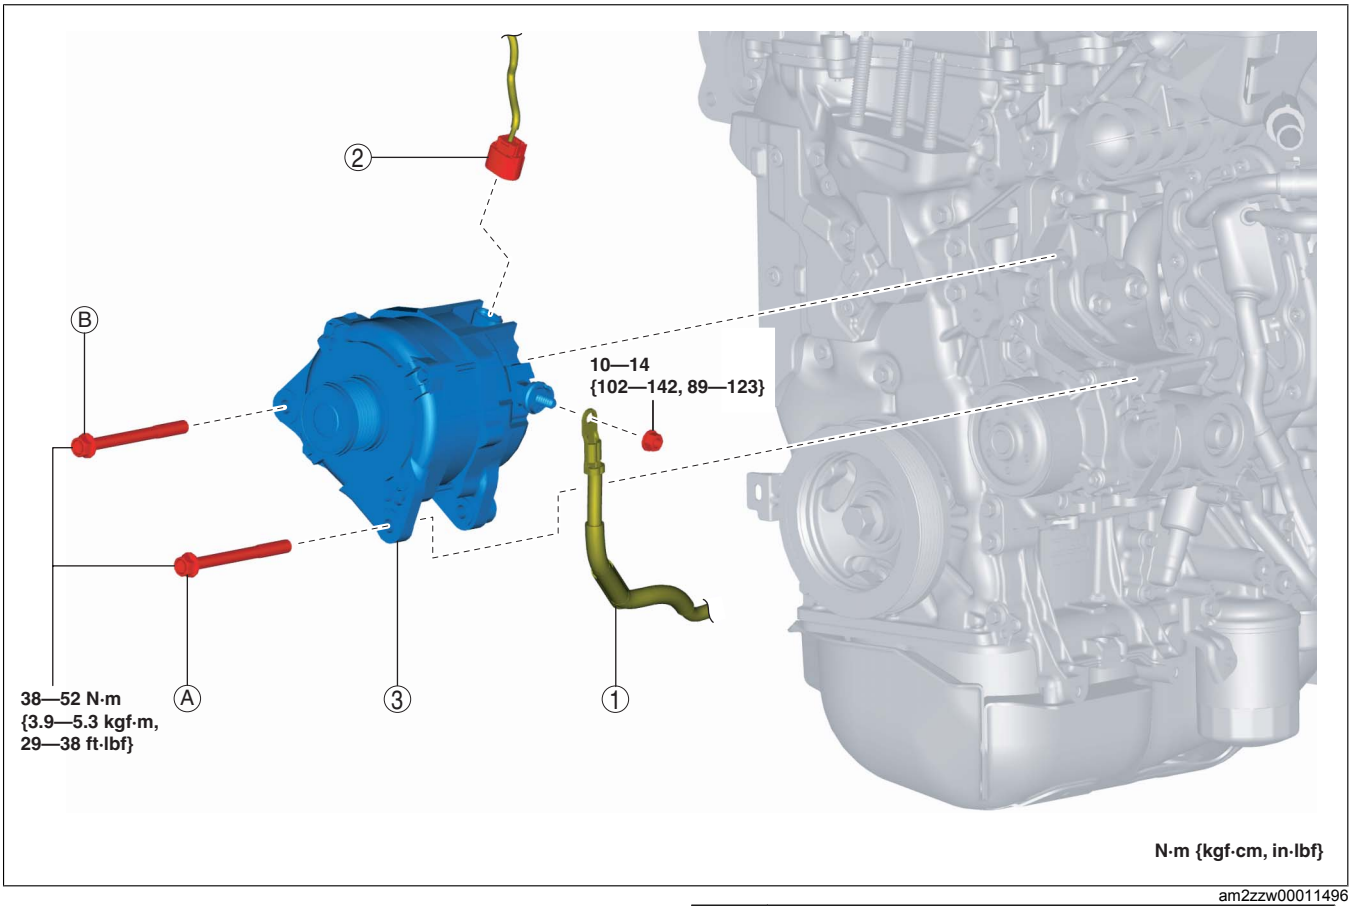

am2zzw00011496

1	Terminal B cable
2	Generator connector


3	Generator (See Generator removal note.) (See Generator installation note.)

Generator removal note

1. Remove the bolts shown in the figure and set the wiring harness aside.
2. Fully loosen the generator lower bolt and pull it outward until it contacts the body frame.

   Note
   - The generator can be removed without fully removing the lower bolt from the engine.


3. Remove the generator upper bolt.
4. Remove the generator together with the lower bolt from the engine.
5. Remove the generator from above the engine compartment.

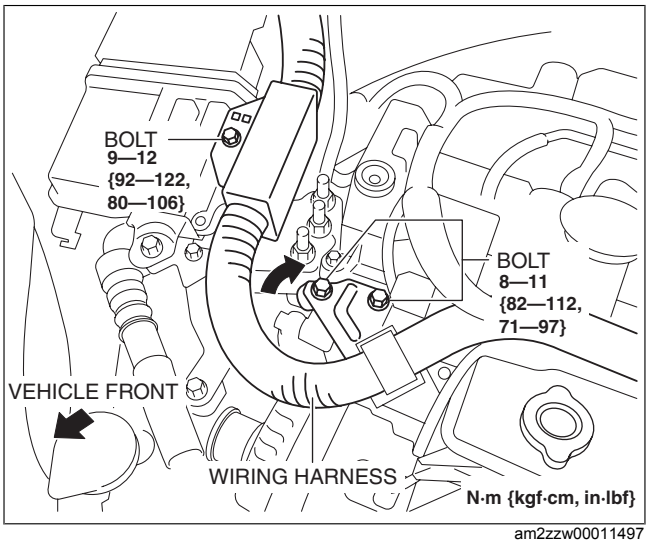

am2zzw00011497


Generator installation note

1. To facilitate the installation of the generator to the engine, grasp the spacer in the bolt installation hole using pliers and push it down to the nut side.

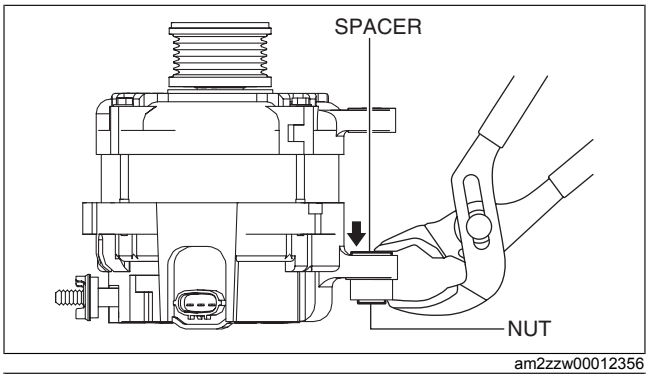

am2zzw00012356

2. Temporarily install the generator to the engine with the bolt A
3. Align the generator bolt installation holes on the engine and generator sides and temporarily tighten generator installation bolts A and B.
4. Securely tighten the generator installation bolts in the order of A, B.

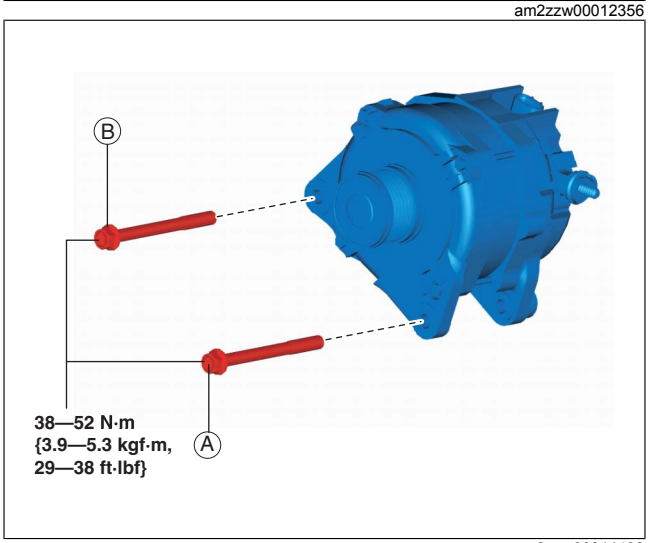

am2zzw00011498