## DC-DC CONVERTER (i-ELOOP) REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-D 1.5)]

id1317040090q8

### Procedure Before i-ELOOP-Related Part Servicing


**Warning**

- **If the terminal of one of the i-ELOOP-related parts contacts the vehicle body with the service plug of the capacitor connected, it could cause a fire and damage to electrical parts. In addition, if the terminal contacts your body, it could cause electrocution. Disconnect the service plug of the capacitor before disconnecting the i-ELOOP-related part terminal. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].)**
  - **— For the i-ELOOP-related part terminals, refer to the "PROCEDURE BEFORE i-ELOOP-RELATED PART SERVICING". (See PROCEDURE BEFORE i-ELOOP-RELATED PART SERVICING [i-ELOOP].)**

### DC-DC Converter (i-ELOOP) Removal/Installation

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the service plug. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].)
3. Remove the air cleaner, air hose, and the fresh air duct component. (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
4. Remove the battery and battery tray. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
5. Remove in the order indicated in the table.
6. Install in the reverse order of removal.
7. If the DC-DC converter (i-ELOOP) is replaced with a new one, verify if the capacitor voltage (PID: CAP_V) is more than the minimum value using the M-MDS data monitor function.
   - If the capacitor voltage is less than the minimum value, charge the capacitor. (See CAPACITOR (i-ELOOP) RECHARGING [i-ELOOP].)

**Capacitor voltage minimum value**
**9.5 V**

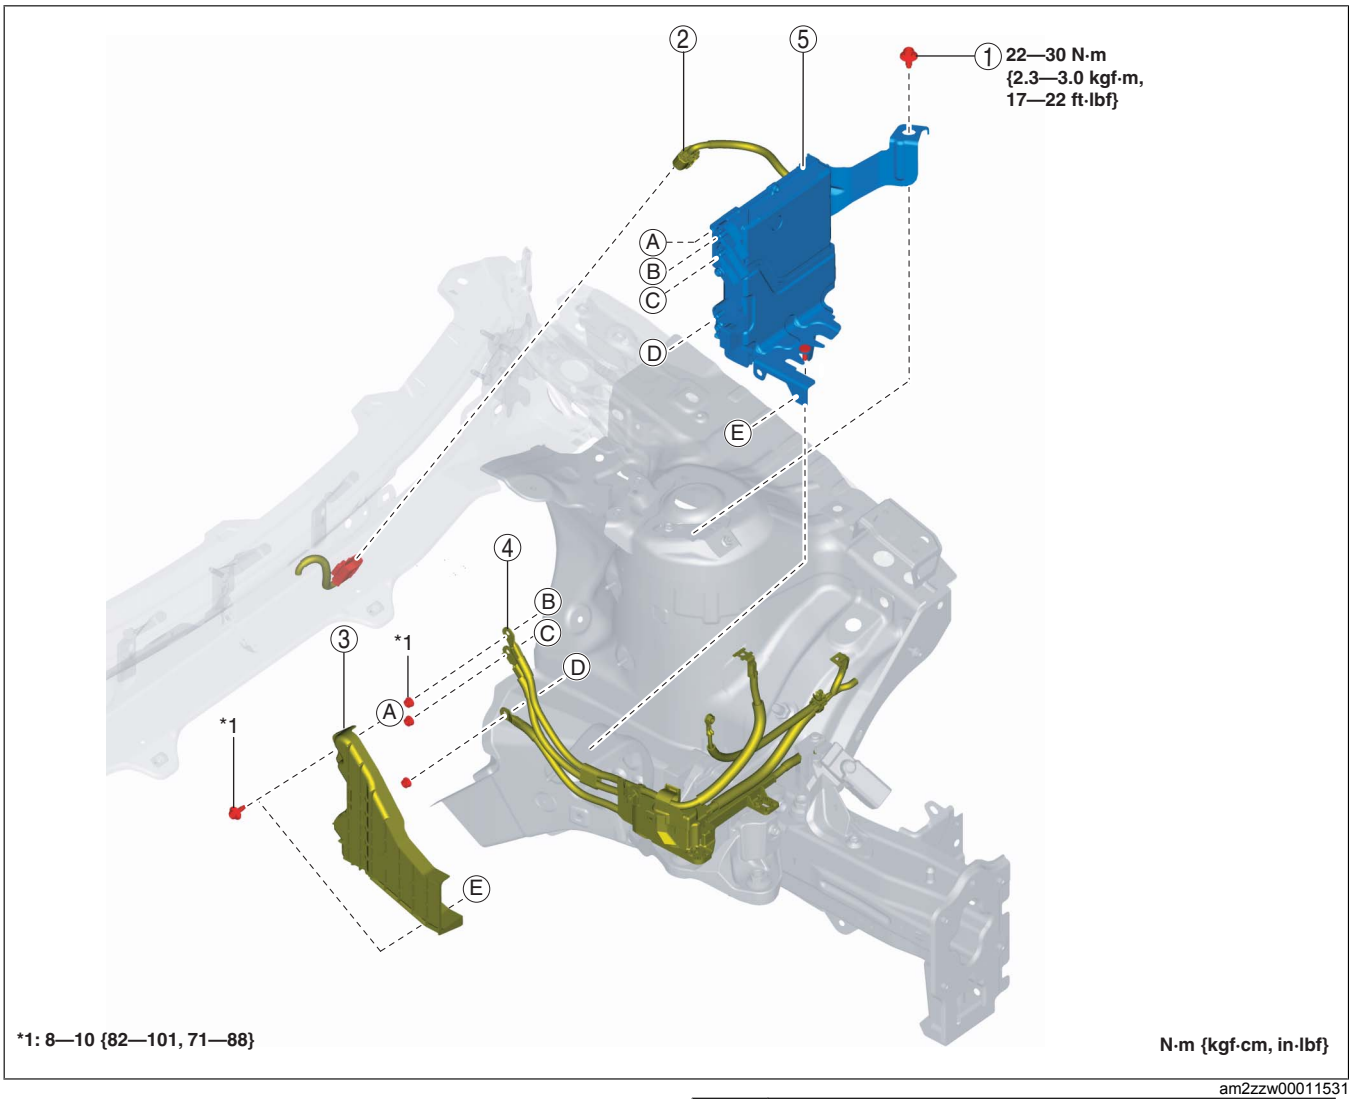



am2zzw00011531

| | |
|---|---|
| 1 | Bolt |
| 2 | DC-DC converter connector<br>(See DC-DC converter connector removal note.) |
| 3 | Cover<br>(See Cover removal note.) |
| 4 | Cable |
| 5 | DC-DC converter (i-ELOOP)<br>(See DC-DC converter (i-ELOOP) removal note.) |

**DC-DC converter connector removal note**


1. Disconnect the connector with the DC-DC converter moved as shown in the figure.

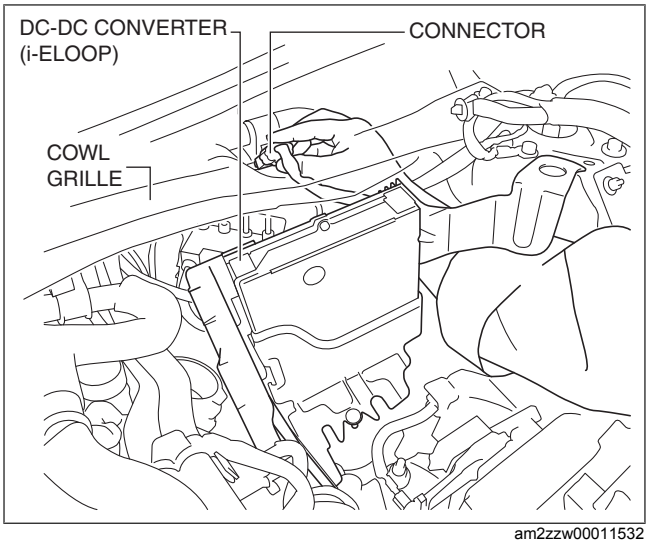


am2zzw00011532

**Cover removal note**


1. Remove the cover with the DC-DC converter moved as shown in the figure.

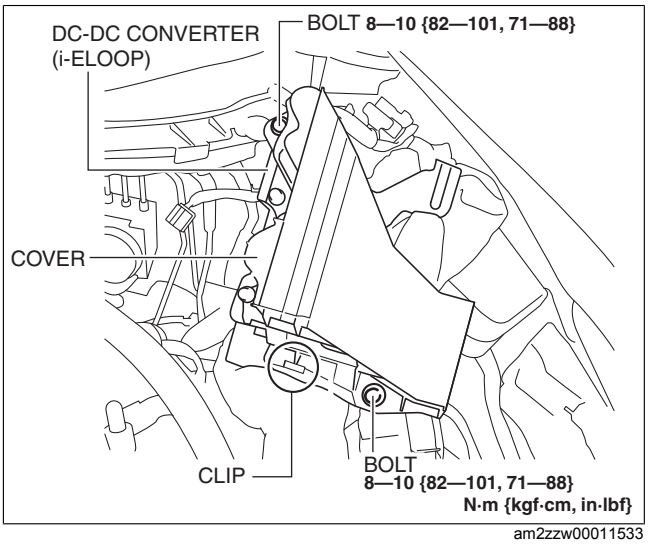


am2zzw00011533

**DC-DC converter (i-ELOOP) removal note**

1. When replacing the DC-DC converter with a new one, remove the following parts.
   (1) Bracket
   (2) Bracket
   (3) Short-wire

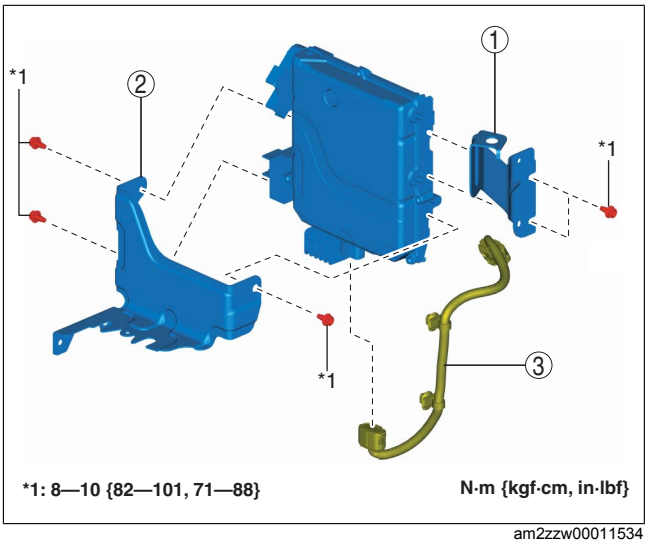


am2zzw00011534