DC-DC CONVERTER (i-ELOOP) REMOVAL/INSTALLATION [WITH i-ELOOP (SKYACTIV-G 1.3, SKYACTIV-G 1.5)]

id1317040090q9

Procedure Before i-ELOOP-Related Part Servicing


Warning

- **If the terminal of one of the i-ELOOP-related parts contacts the vehicle body with the service plug of the capacitor connected, it could cause a fire and damage to electrical parts. In addition, if the terminal contacts your body, it could cause electrocution. Disconnect the service plug of the capacitor before disconnecting the i-ELOOP-related part terminal. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].)**
  - **— For the i-ELOOP-related part terminals, refer to the "PROCEDURE BEFORE i-ELOOP-RELATED PART SERVICING". (See PROCEDURE BEFORE i-ELOOP-RELATED PART SERVICING [i-ELOOP].)**

DC-DC Converter (i-ELOOP) Removal/Installation

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Disconnect the service plug. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].)
3. Remove the air cleaner, air hose, and the fresh air duct component. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.
6. If the DC-DC converter (i-ELOOP) is replaced with a new one, verify if the capacitor voltage (PID: CAP_V) is more than the minimum value using the M-MDS data monitor function.
   - If the capacitor voltage is less than the minimum value, charge the capacitor. (See CAPACITOR (i-ELOOP) RECHARGING [i-ELOOP].)

Capacitor voltage minimum value
9.5 V

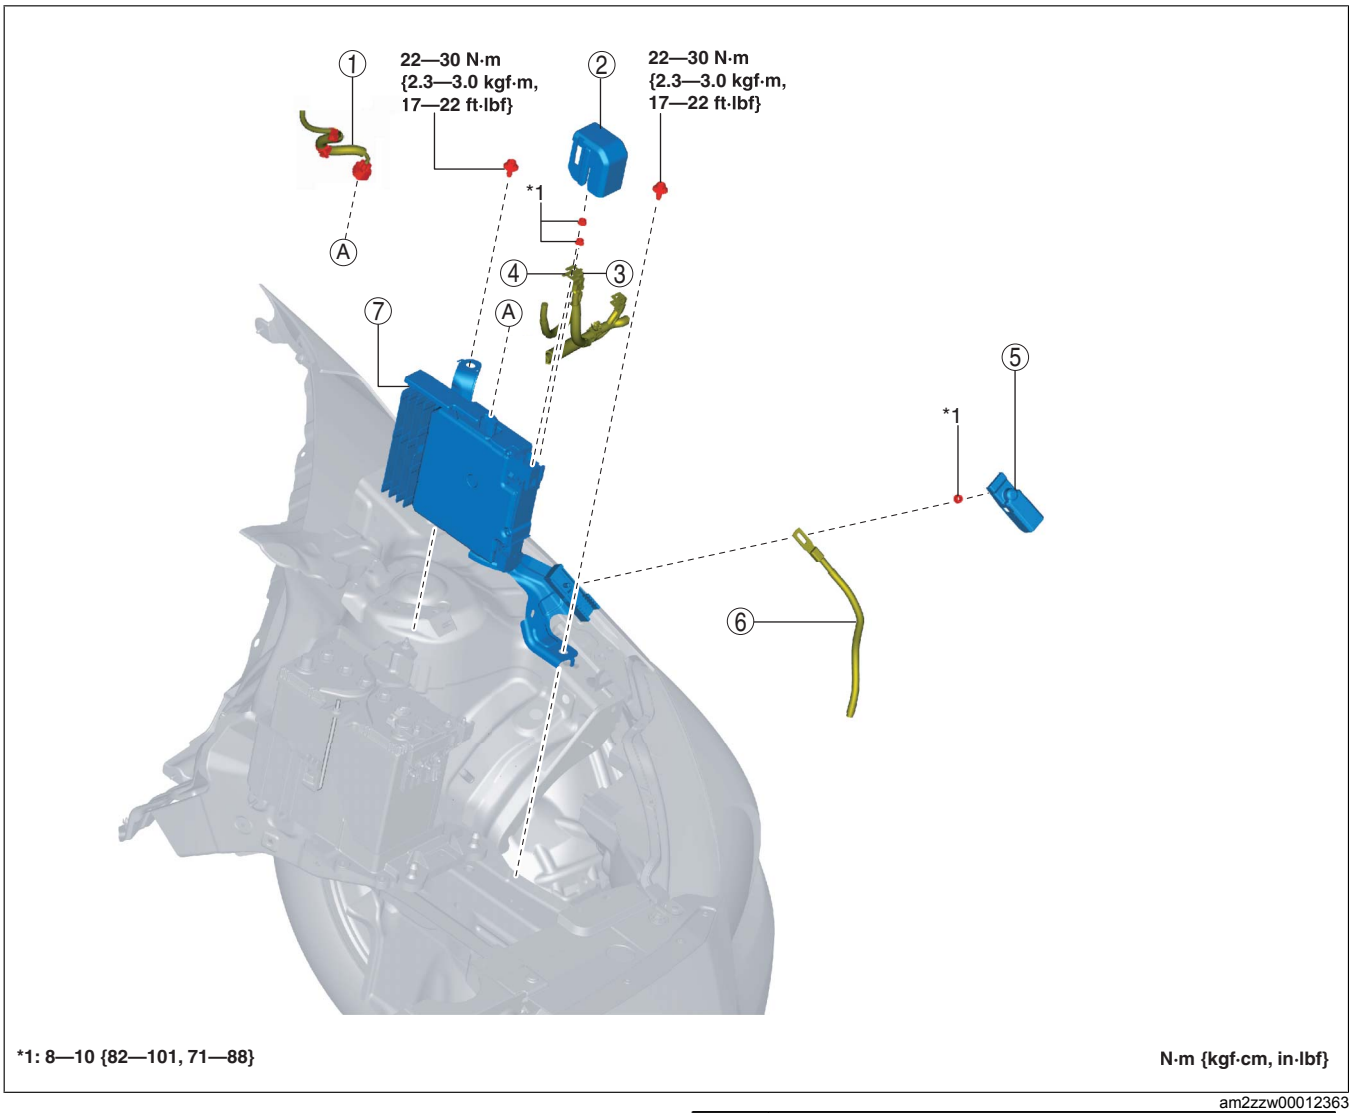


am2zzw00012363

1	DC-DC converter connector
2	Cover
3	Battery short cable
4	Relay box short cable
5	Cover

6	Battery cable
7	DC-DC converter (i-ELOOP) (See DC-DC converter (i-ELOOP) removal note.)


DC-DC converter (i-ELOOP) removal note

1. To secure a removal space for the DC-DC converter (i-ELOOP), detach the connectors and wiring harness clips shown in the figure and set them aside.

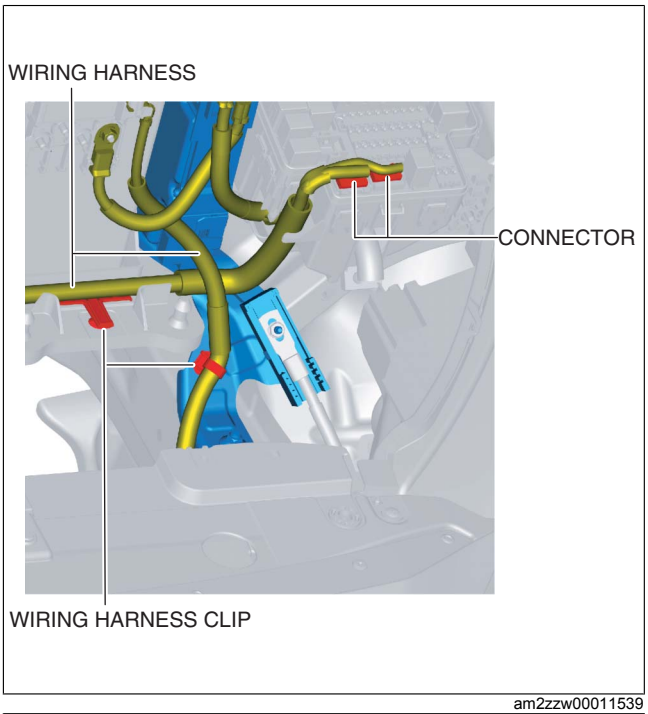


am2zzw00011539

2. To secure a gap between the DC-DC converter (i-ELOOP) and battery tray, loosen the battery clamp nut shown in the figure.
3. Remove the DC-DC converter (i-ELOOP).

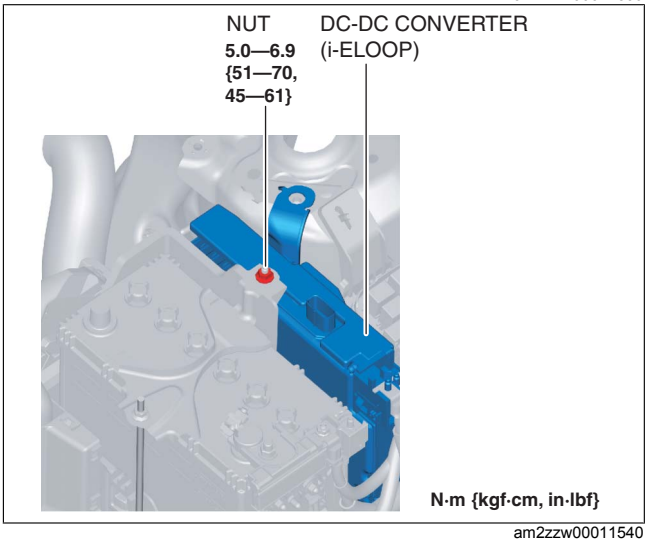

am2zzw00011540

4. When replacing the DC-DC converter with a new one, remove the following parts.
   (1) Bracket
   (2) Cover
   (3) Bus bar
   (4) Bracket

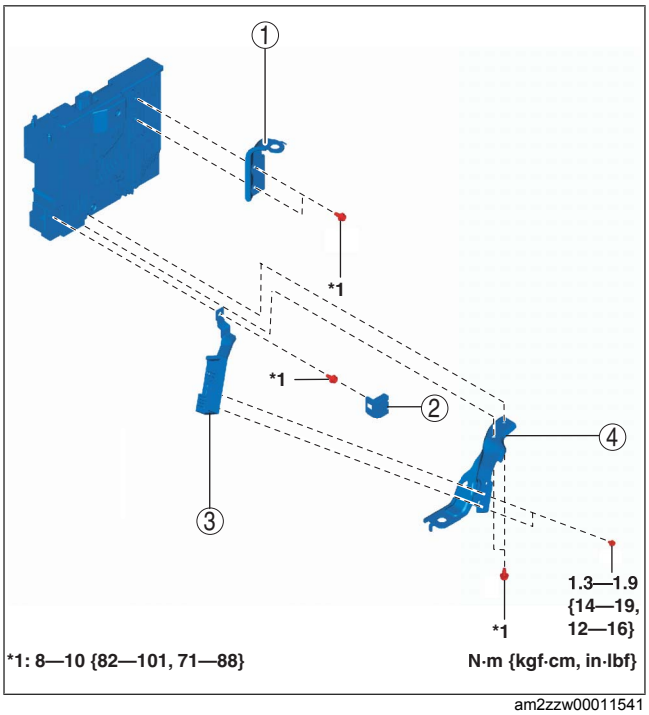

am2zzw00011541