i-ELOOP WARNING LIGHT (AMBER) [i-ELOOP]


id131704500400

Purpose, Function

- The i-ELOOP warning light (amber) notifies the user that an i-ELOOP-related part is malfunctioning.

Construction

- The i-ELOOP warning light (amber) is built into the instrument cluster.

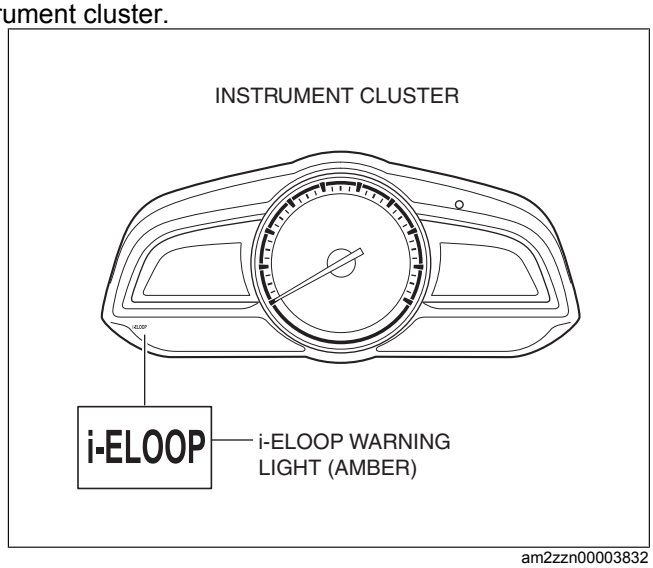

am2zzn00003832

Operation

- When any one of the following conditions is met, the i-ELOOP warning light (amber) turns on.
  - PCM detects DC-DC converter (i-ELOOP) malfunction
  - DC-DC converter (i-ELOOP) detects malfunction in capacitor (i-ELOOP), DC-DC converter (i-ELOOP), or wiring harness
  - DC-DC converter (i-ELOOP) detects any one of the following CAN communication errors
    - Unit communication error (HS-CAN)
    - Communication error with PCM
    - Communication error with RCM
    - Communication error with BCM
- The DC-DC converter (i-ELOOP) sends an i-ELOOP warning light (amber) on request to the instrument cluster via CAN communication.
- For vehicles with the center display, a warning message in the center display is displayed when the i-ELOOP warning light (amber) is turned on. For the message content and verification method, refer to the [CENTER DISPLAY]. (See CENTER DISPLAY [WITH CENTER DISPLAY].)