
Service Manual

PARTYBOX 1000

SKU: JBLPARTYBOX1000AS;JBLPARTYBOX1000BR;JBLPARTYBOX1000CN;JBLPARTYBOX1000EU;
JBLPARTYBOX1000IN;JBLPARTYBOX1000RU;JBLPARTYBOX1000AM

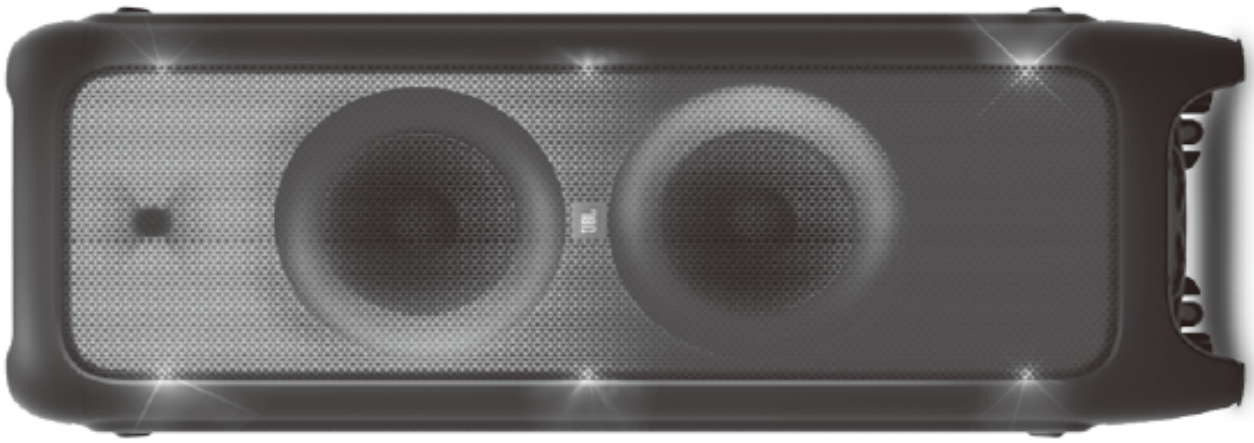

CONTENTS

Technical Specifications	2
Safety Instruction, Warning & Notes	3
Software Upgrade Procedure	6
Trouble shooting	7
Dismantling Instruction	11
Set Block Diagram	19
Wiring Diagram	21
Schematic & Layout Diagrams	22
Set Mechanical Exploded View	69
Packaging Exploded View	70
Spare Parts List	71
Service Info.	73
Revision List	74

Released by Global Quality

8500 Balboa Blvd.
harman/kardon, Inc.
Northridge, CA 91329

Ver.1.2 Dec. 2021

TECHNICAL SPECIFICATIONS

- AC power input: 100-240V ~ 50/60Hz
- DC power input: none
- Built-in battery: none
- Power consumption: 150W
- Standby power consumption: <2W with BT connecting; <0.5W without BT connecting
- USB output: 5V 2.1A
- Speaker drivers: 1 woofer + 1 tweeter+ 2 midrange
- Speaker impedance: 4 ohm for midrange/tweeter, 3 ohm for woofer
- Total output power: 1100W
- Frequency response: 40 Hz - 18 KHz (-6dB)
- Signal-to-noise (S/N) ratio: 80 dBA
- Input sensitivity:

  RCA in: 500mV rms (RCA connector)

  AUX in: 250mV rms (3.5mm connector)
- Digital input:

  Bluetooth/USB: -12dBFS
- Bluetooth version: 4.2
- Bluetooth profile: A2DP, AVRCP
- Bluetooth transmitter frequency range: 2402-2480MHz
- Bluetooth maximum transmitter power: 9dBm (EIRP)
- Bluetooth transmitter modulation: GFSK, π/4 DQPSK, 8DPSK
- Bluetooth range: Approx. 10 m (33 feet)
- USB file system: FAT16, FAT32
- USB file format: .mp3, .wma, .wav
- Dimensions ： (W × H × D): 397 × 1050 × 390 mm /15.6 × 41.3 × 15.4 in
- Net weight: 34.7 kg (76.5 lbs);

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings.Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
15. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. The mains plug of the power supply cord shall remain readily operable.
18. Do not expose batteries to excessive heat such as sunshine, fire or the like.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.



THE LIGHTNING FLASH WITH AN ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUCT.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

For Products That Transmit and Receive RF Energy:

FCC Regulations (USA Only)

FCC Information For Users

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and Television Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by Harman could void the user's authority to operate the equipment.

IC Statement and Warning (Canada Only)

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For Canadian Model

This Class B digital apparatus complies with Canadian ICES-003.

Modèle pour les Canadien

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For Products with Radio Receivers That Can Use an External Antenna:

CATV or Antenna Grounding

If an outside antenna or cable system is connected to this product, be certain that it is grounded so as to provide some protection against voltage surges and static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements of the grounding electrode.

Note to CATV System Installer:

This reminder is provided to call the CATV (cable TV) system installer's attention to article 820-40 of the NEC, which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.

For CD/DVD/Blu-ray Disc™ Players:

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
CLASSE 1 PRODUIT LASER

Caution:

This product uses a laser system. To prevent direct exposure to the laser beam, do not open the cabinet enclosure or defeat any of the safety mechanisms provided for your protection. DO NOT STARE INTO THE LASER BEAM. To ensure proper use of this product, please read the owner's manual carefully and retain it for future use. Should the unit require maintenance or repair, please contact your local Harman Kardon service center. Refer servicing to qualified personnel only.

For Products That Include Batteries:



Instructions for Users on Removal and Disposal of Used Batteries.

CAUTION

Risk of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Alkaline batteries are considered nonhazardous. Rechargeable batteries (i.e., nickel cadmium, nickel metal-hydride, lithium and lithium-ion) are considered hazardous household materials and may pose an unnecessary health and safety risk.

In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

To remove the batteries from your equipment or remote control, reverse the procedure described for inserting batteries in the owner's manual.

For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers.

ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge build-up or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical change sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material.)
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

   CAUTION : Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together or your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES devices.

PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing.


Components identified with the IEC symbol ⚠ in the parts list are special significance to safety. When replacing a component identified with ⚠, use only the replacement parts designated, or parts with the same ratings or resistance, wattage, or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before retuming the product to the customer.

SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed o.5mA.

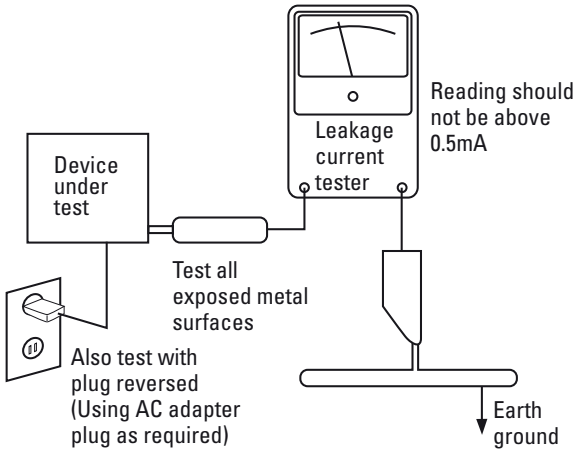

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

Software Upgrade Procedure

1. Put the "PB1000_FW_Vxx.bin" (Vxx: means software version number eg:V35) to the root directory of U disk, and plug the U disk into USB port of machine.

2. Turn on the machine, make sure it is working.

3. Press and hold the "BT" key and "Vol+" key for 10s until the LED show white.

4. It is updating when the machine front LED show white. If it failed to upgrade, the front LED will show red. You need to restart from the step 1.

5. The machine front LED will show green after upgrade successfully and restart automatically.


6. Please press and hold the "BASS BOOST" key and "Vol-" key for 5s,to check the version number.

ELECTRICAL TROUBLESHOOTING GUIDE


Oscilloscope Setting Values	Check DC voltage	Check I^2C& I^2S signal	check PWM signal	Check L+,L- signal
Voltage/DIV	Depend voltage	1V/div	10V/div	10V/div
TIME/DIV	500ms/div	20us/div	1us/div	500us/div

1. If you are sure that the power cord connected well and turn on the power, However, the BOX does not work and Power unit on main board is not detected ,Please check the power flow as blow:


   1) if the STB_3.3V works well?

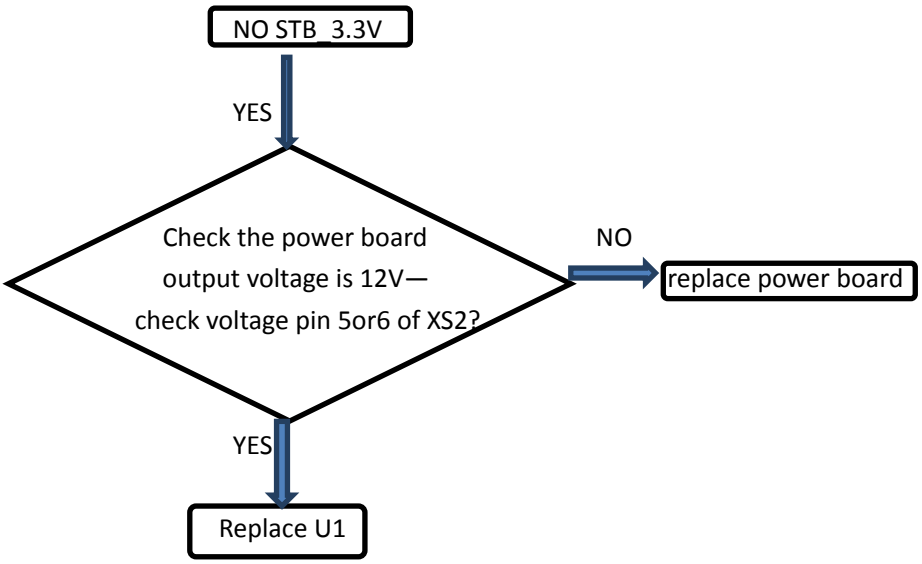

2) if the STB_1.2V works well?

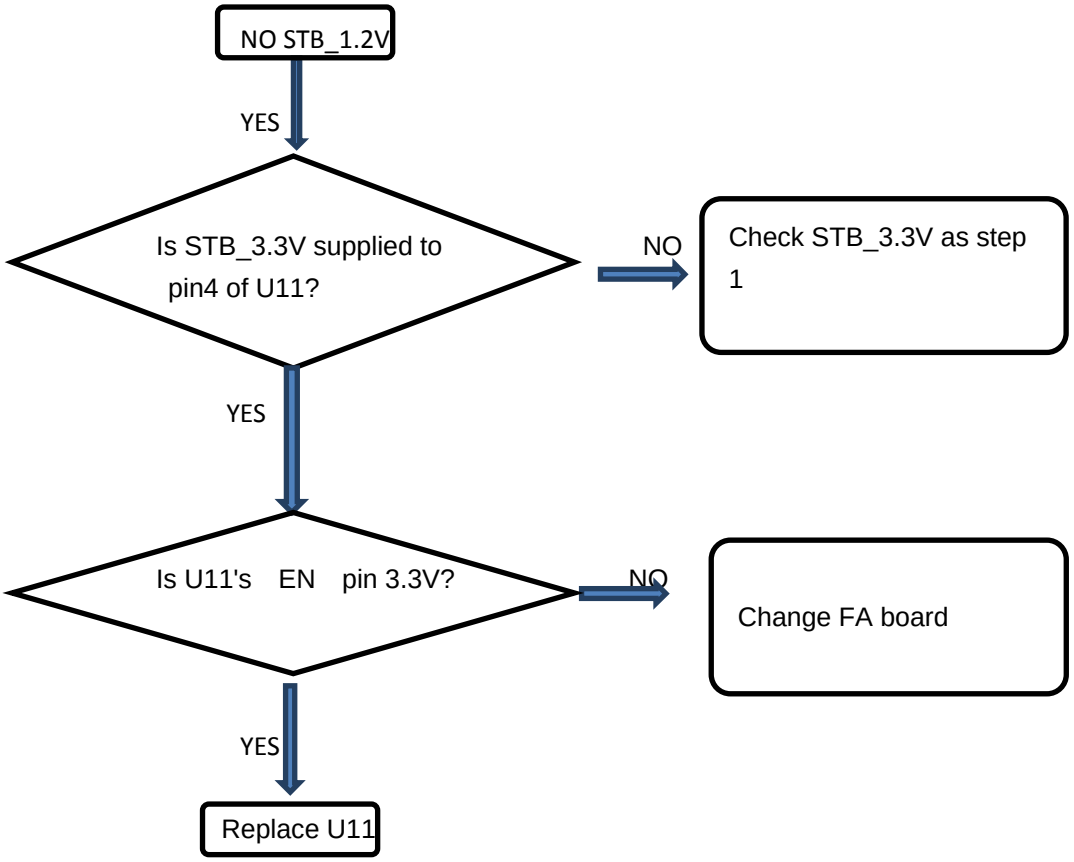


2 .No audio output

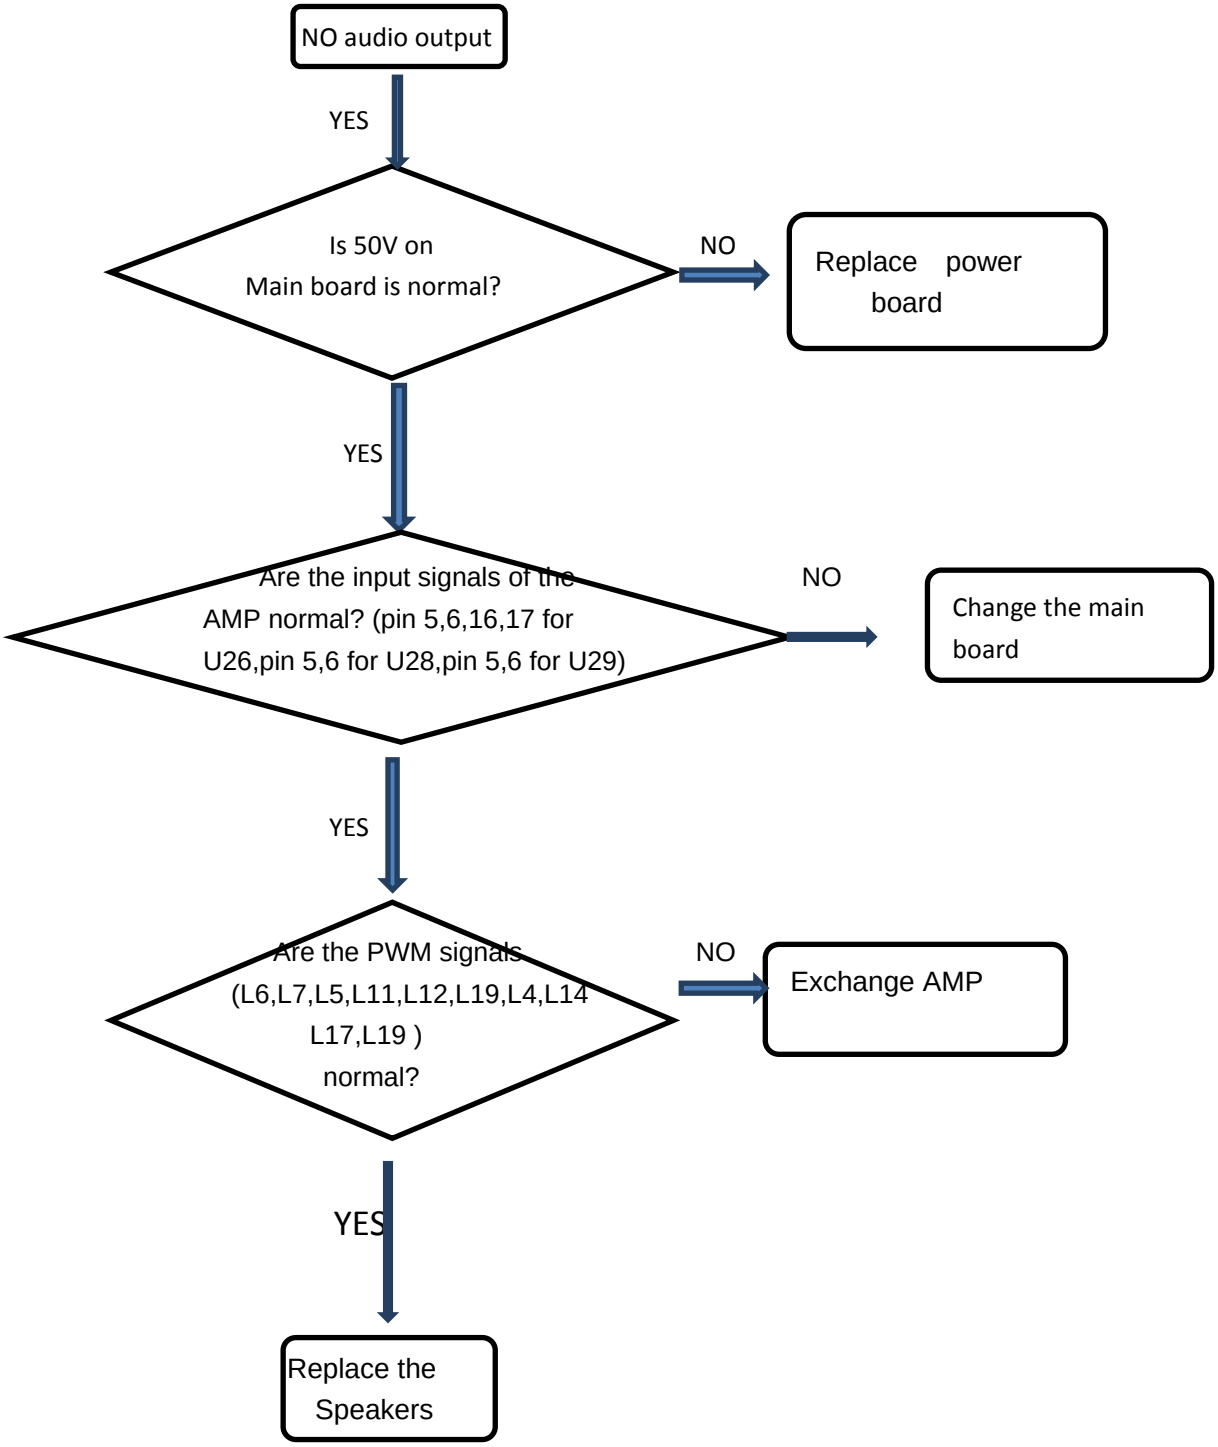

TROUBLE SHOOTING

3 .panel RGB can not light

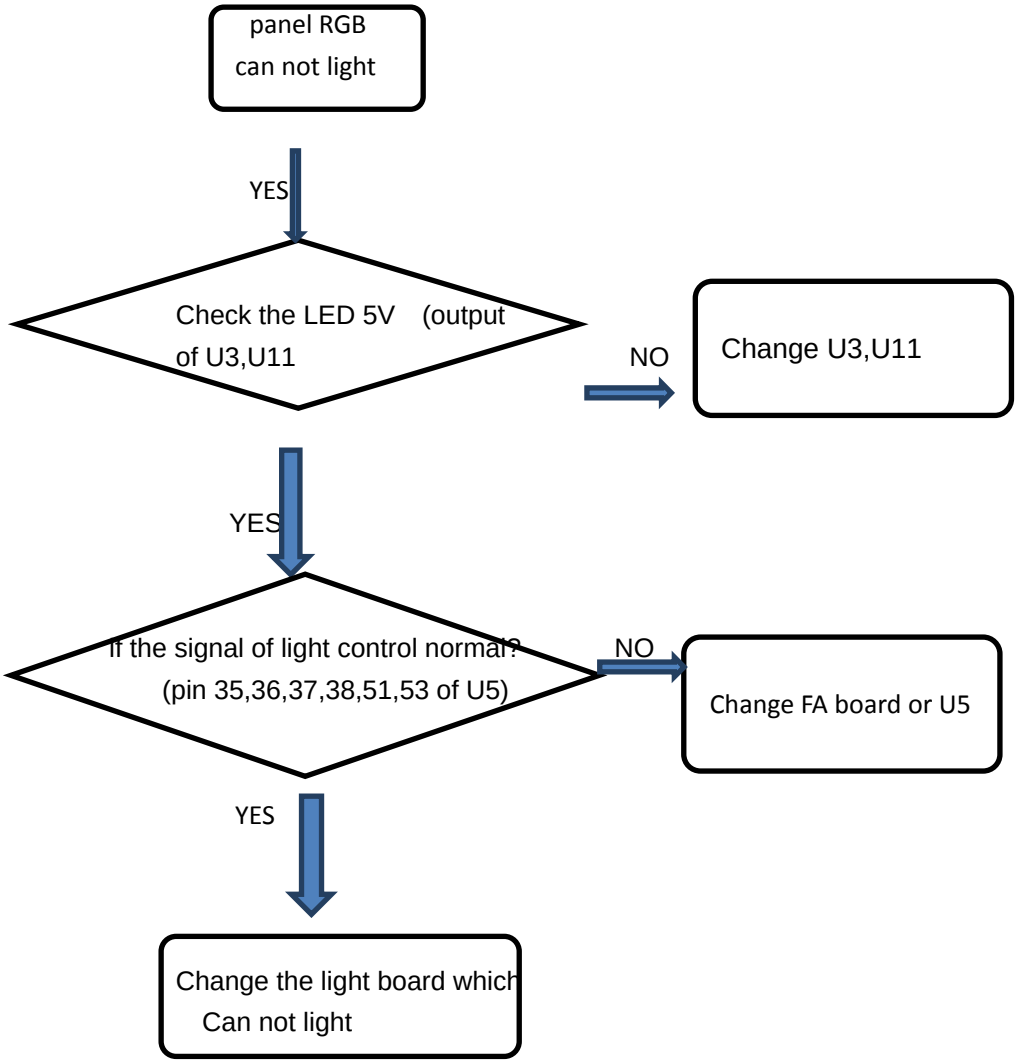

Tool list

Item	Description	Remark
1	Screw driver	
2	Screw driver	
3	Knife	“-”type knife(wrapped by tape)
4	Elcetrical screw driver	
5	Needle	











DISMANTLING INSTRUCTION

1. Dismantling top cover assy: remove the screw cover sheet 7pcs/silicone seal 1pcs/top side foot pad 4pcs by a needle. Dismantle the screw accordingly. Pull the KEY/ECHO knob from the top.







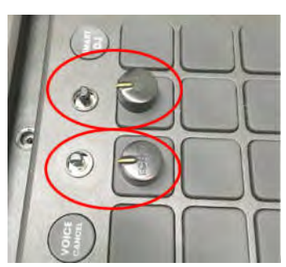


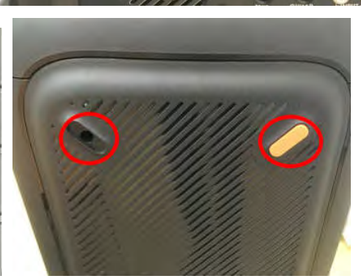



Pull out the top cover and unplug the connecting cable of the board.



2. Dismantling top cover assy: Dismantle 11pcs screw of the key board, and take out the key board assy. Dismantle the 8 screws from the board assy, and unplug the connecting cable. Separate the two boards.

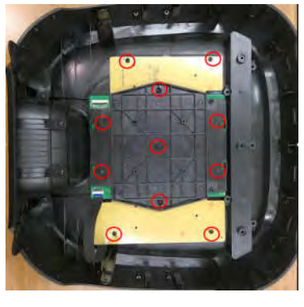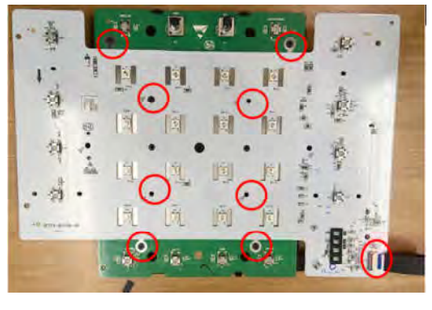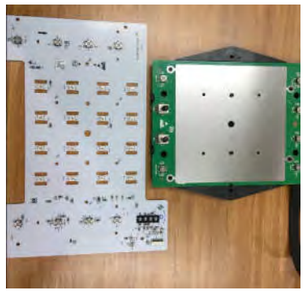
Take out the board carefully by slightly pull the two hooks

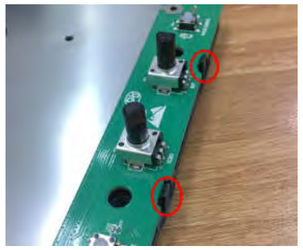

3.Dismantling metal cover assy: unplug the 3 cables from the connection board, and dismantle the 2 screws. Dismantle the 4 screws on the metal cover,






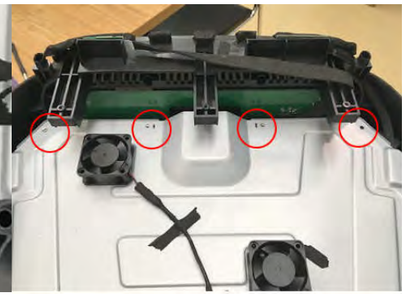

Dismantle the 8 screws of the 2 fans, take off the 2 fans.




4.Dismantling ADC terminal board assy: Unplug the 3 cables, dismantle the 2 screws on the board, dismantle 2 screws on the back, and pull the 2 knobs on the back. Take off the ADC terminal board assy.


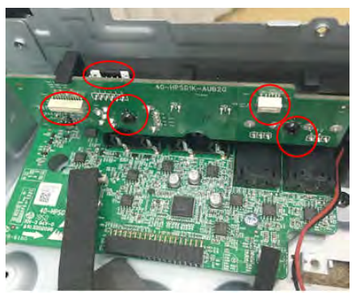





Take out the board carefully by slightly pull the hook

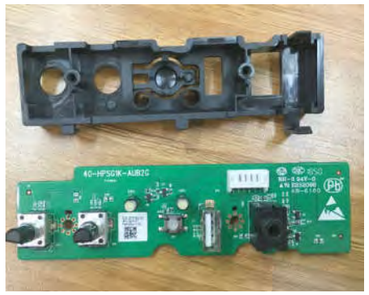



5. Dismantling main board/power board/terminal board: Dismantle the 13screws of the boards, unplug the 11 cables, and unplug the buckle of the RF antenna。

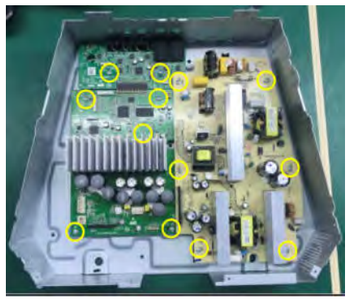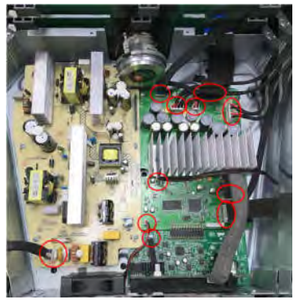


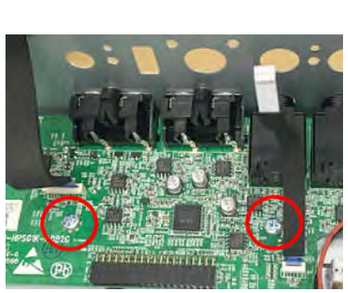

Dismantle the 2 screws of the audio terminal board. Take out the boards.

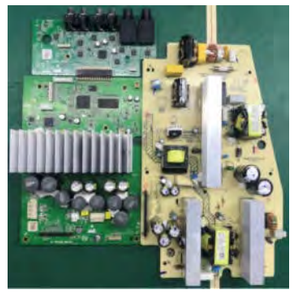

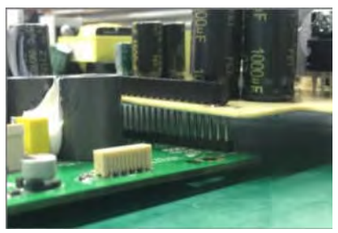



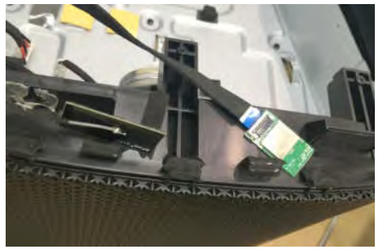
Pull the power board off the main board from the dupont needles. Pull the main board off the audio terminal board from the dupont needles.






6. Dismantling RF board/ WiFi board: Pull the RF board / WiFi board from the unit by hand.

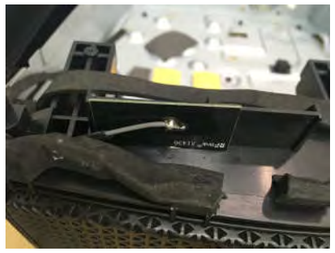





7. Dismantling tweeter speaker/ rear palate: Rotate tweeter speaker to take it off, if the tweeter is hard to rotate, use a screw driver to press against the gap of the speaker and hit the back of the screw driver to rotate the tweeter. Dismantle the 9 screws of the rear palate and take it off.

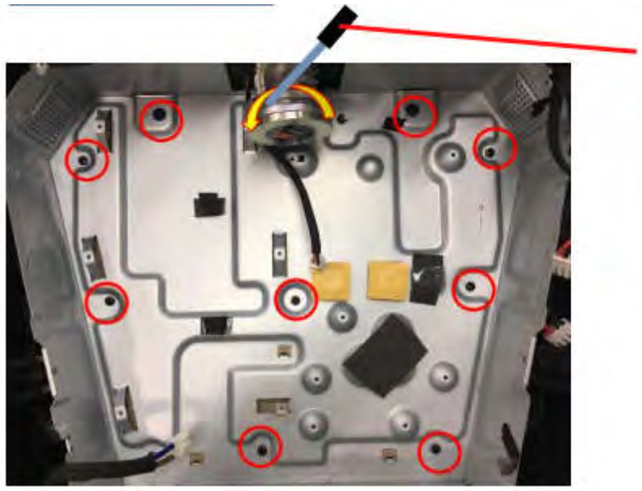



8. Dismantling left side cover assy: remove the screw cover sheet/foot pad on the screws, dismantle the screws accordingly.

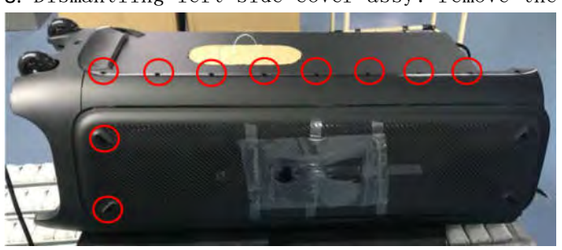




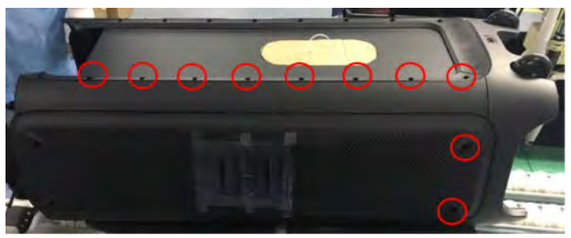


9. Dismantling bottom cover assy: Remove the 4 screw covers/4 foot pads, dismantle the screw accordingly,

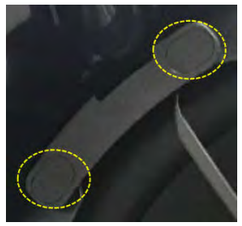



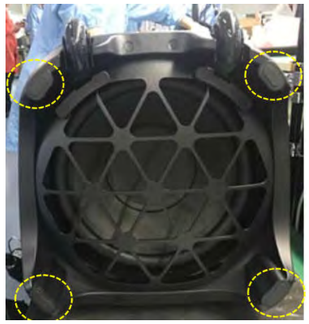

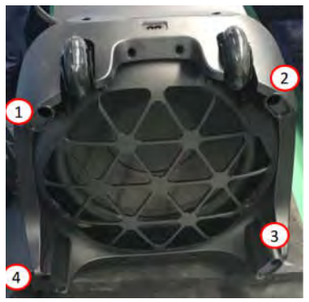

Remove the screw cover as the picture and dismantle the screws accordingly.




10. Dismantling front panel assy: Dismantle 8pcs screw on front panel assy, use a straight screwdriver to separate front panel and wooden box carefully. It's better to wrap screwdriver with fabric to avoid damage in separating process.








11. Dismantling castor assy: Dismantle the 5 screws on the side, dismantle the 6 screws on the bottom, and take off the castor assy.

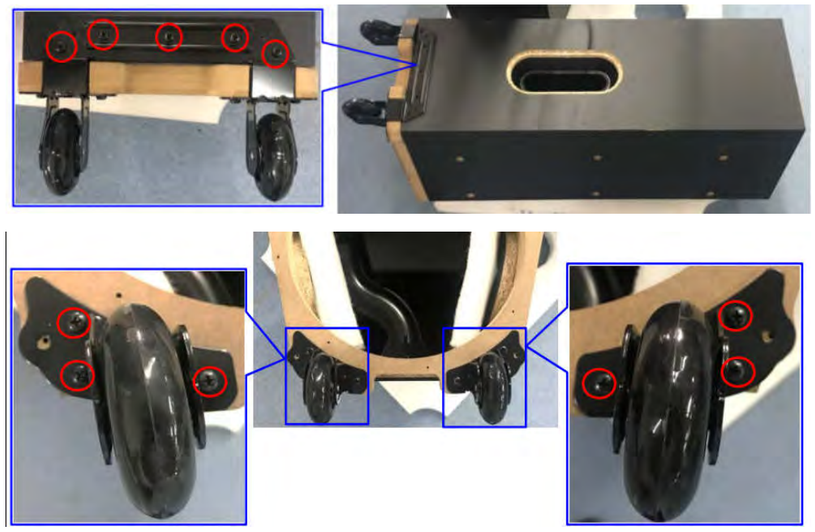


12. Dismantling bass speaker: Dismantle the 8 screws of the bass speaker, take off the speaker, and unplug the cable of the speaker.




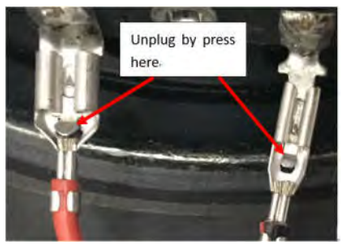

13. Dismantling 2 mid speakers: Dismantle the 12 screws of the mid speakers, take off the speakers, and unplug the cables of the speaker.

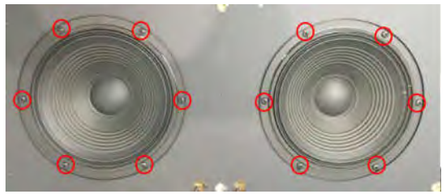



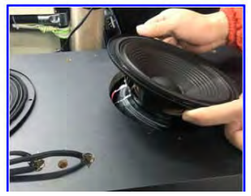




14. Dismantling LED boards: dismantle the screws as below,




Take off the metal sheets from the boards, take off the boards and separate them one by one from the dupon needles.




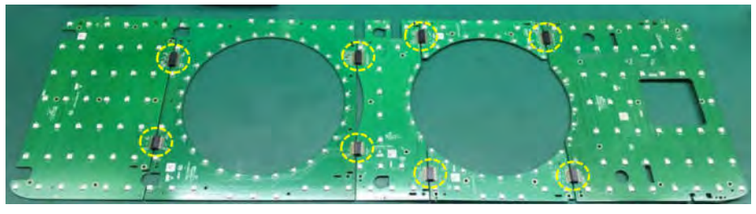


SET BLOCK DIAGRAM

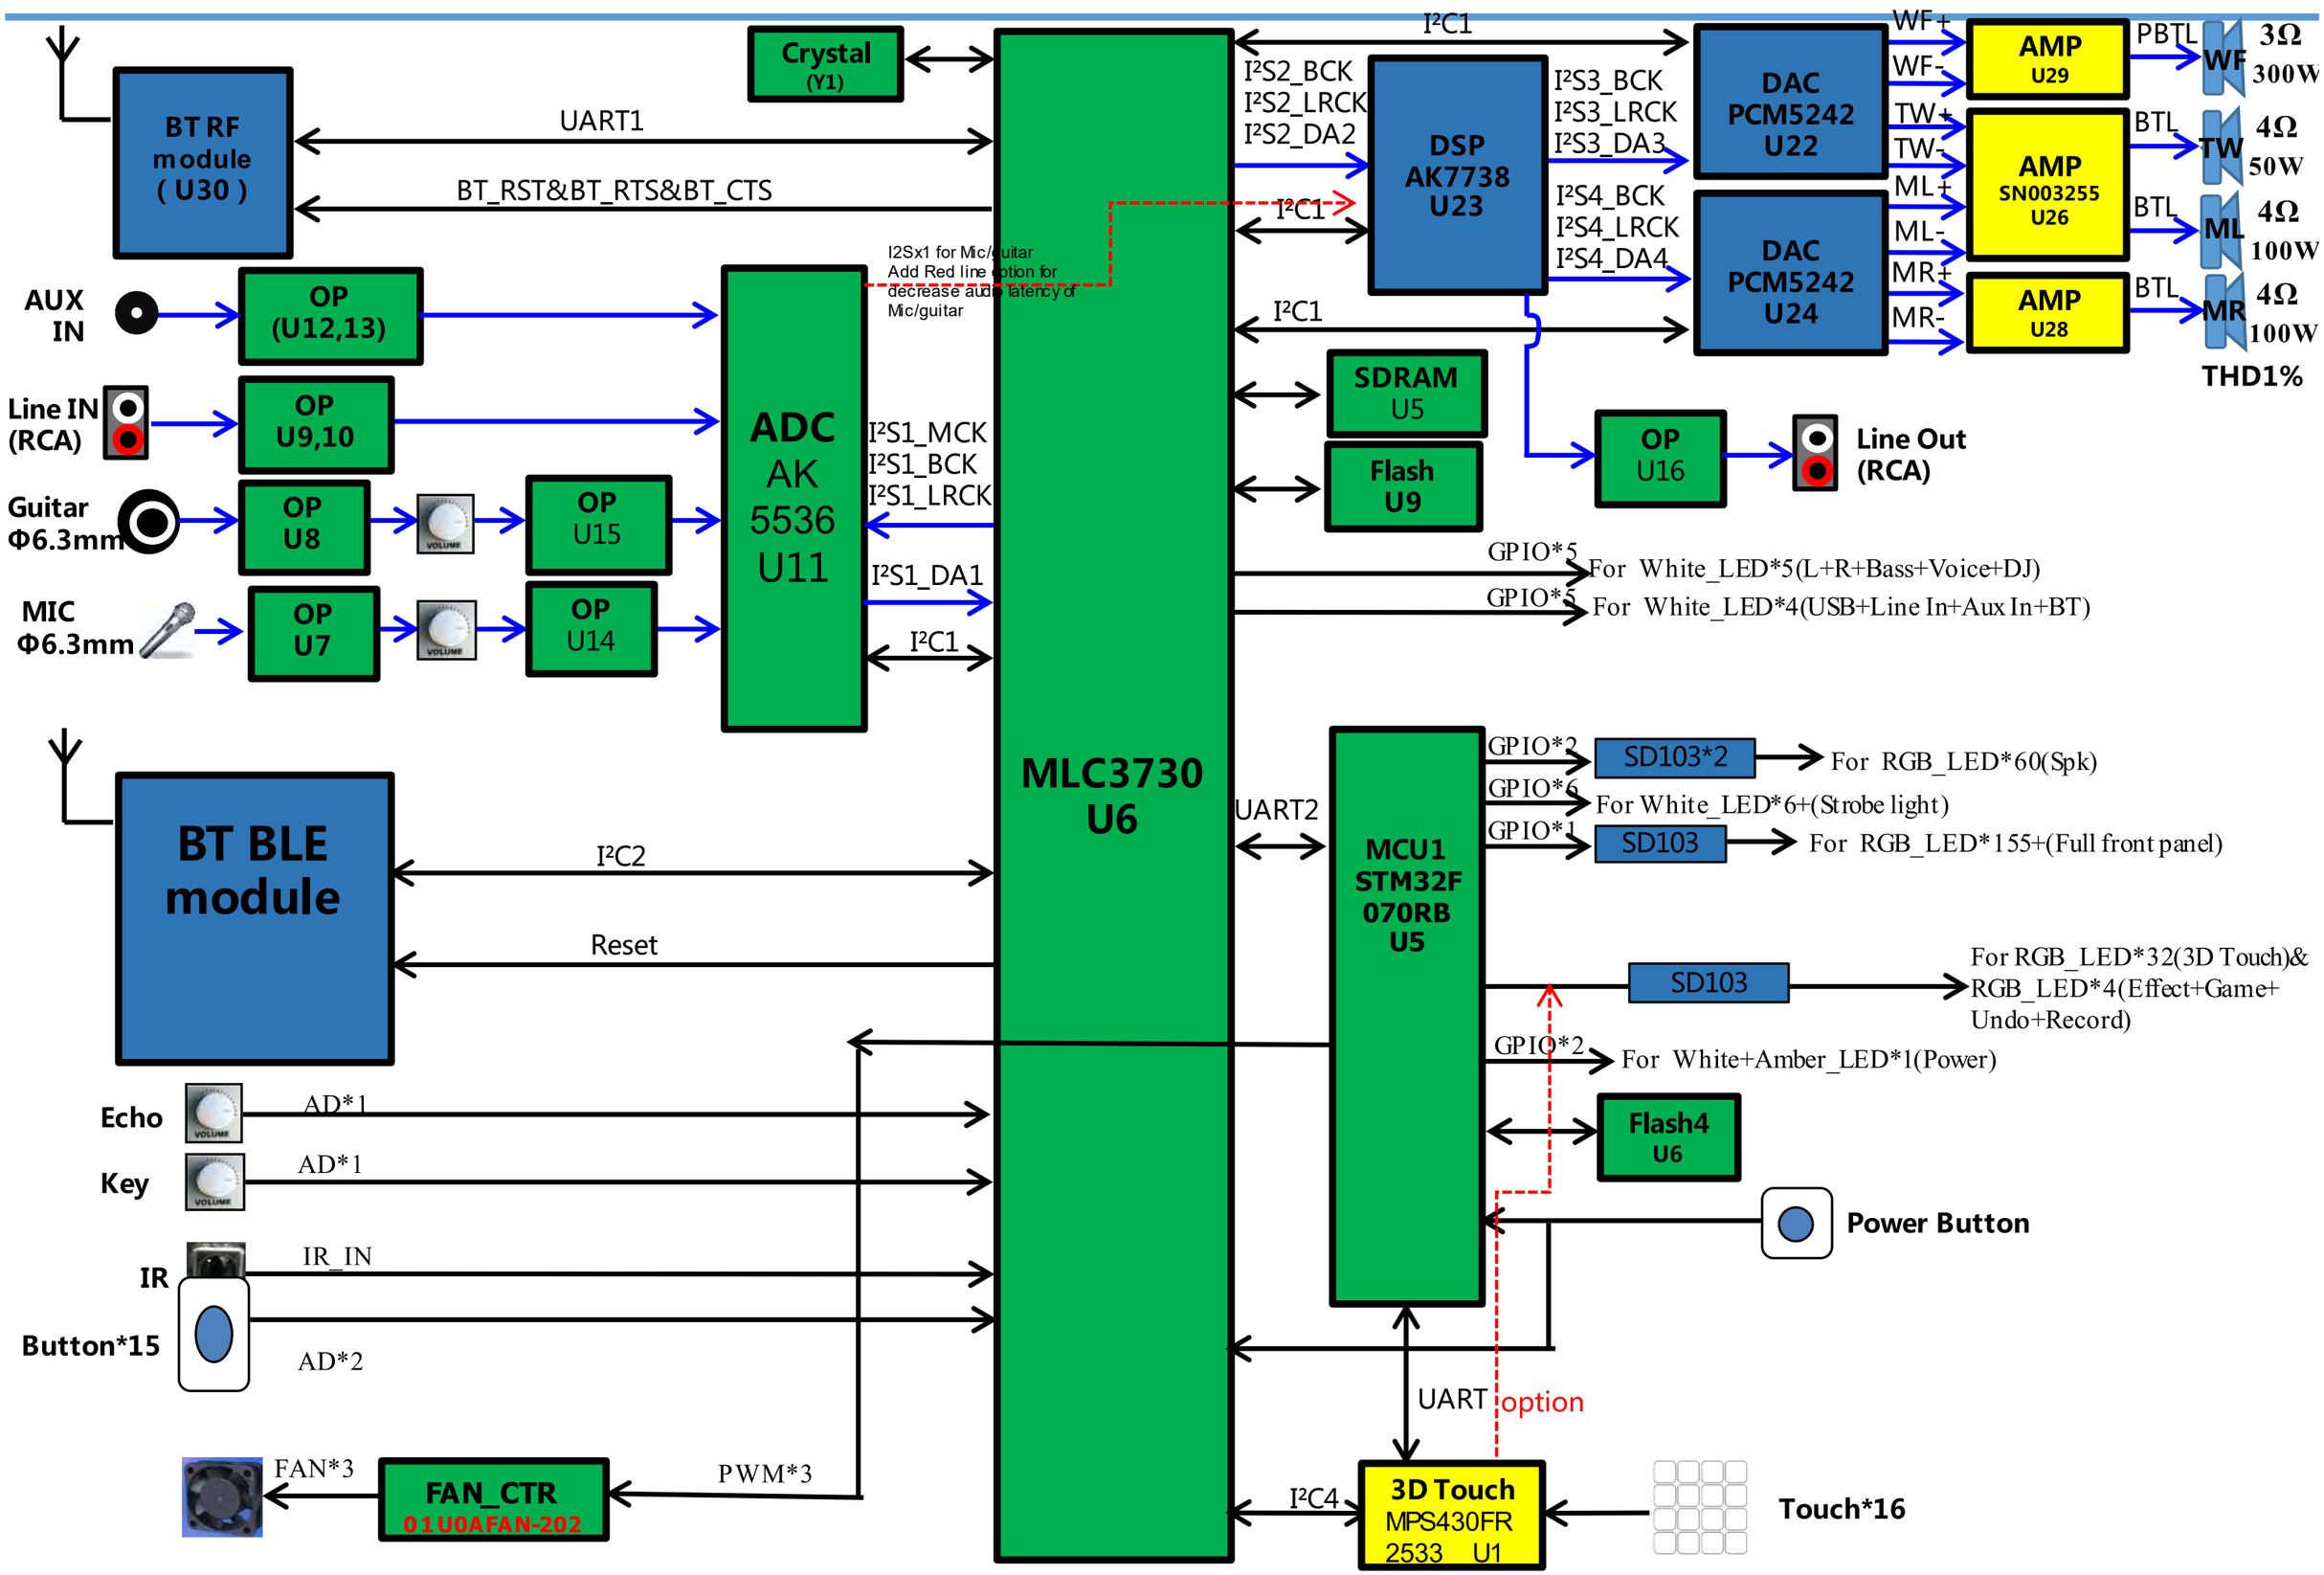


SET BLOCK DIAGRAM **System Power**

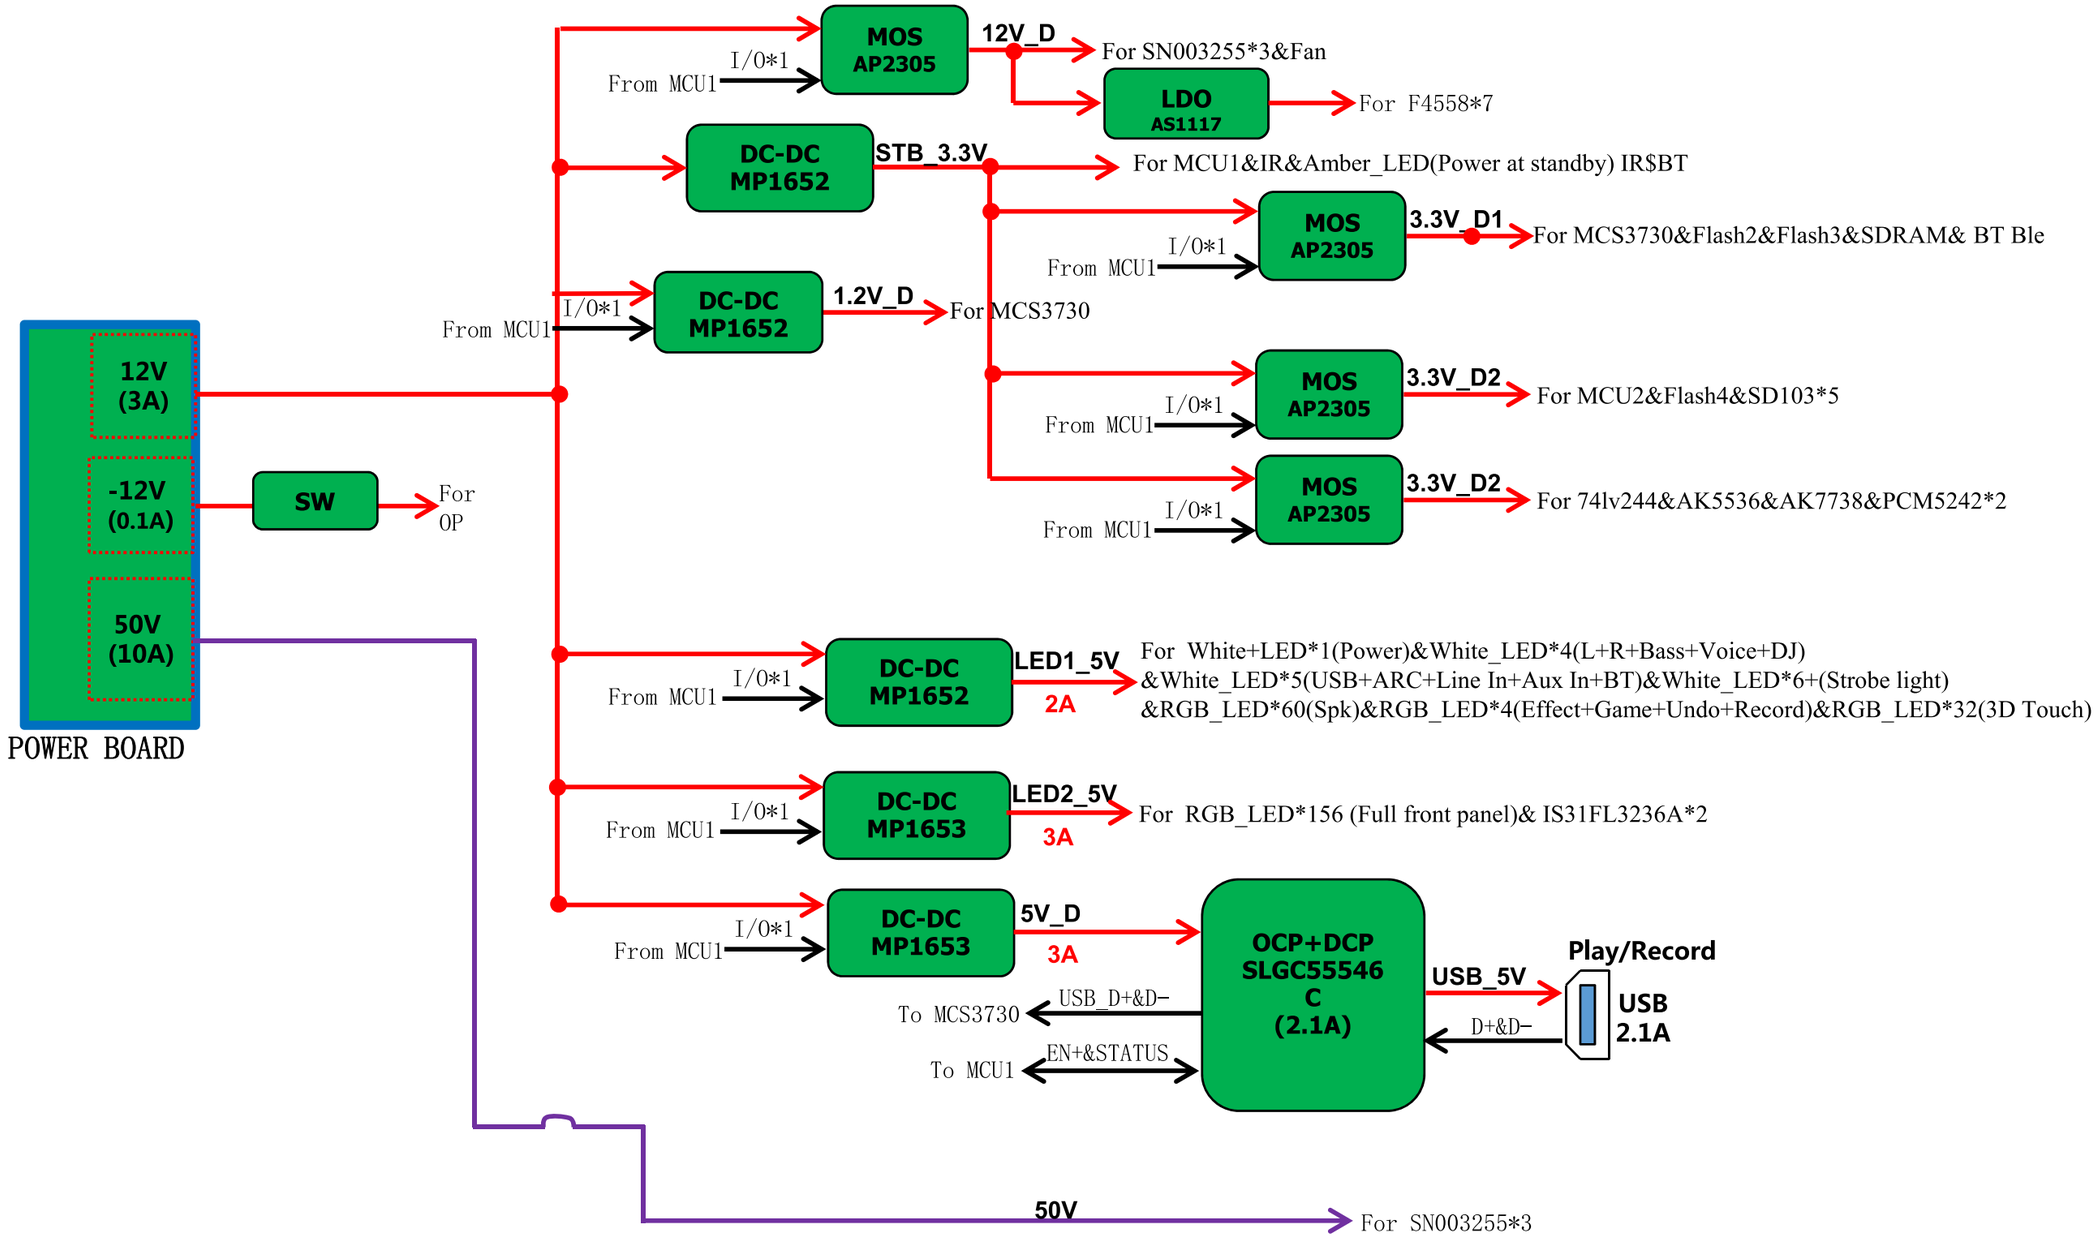



Wiring Diagram

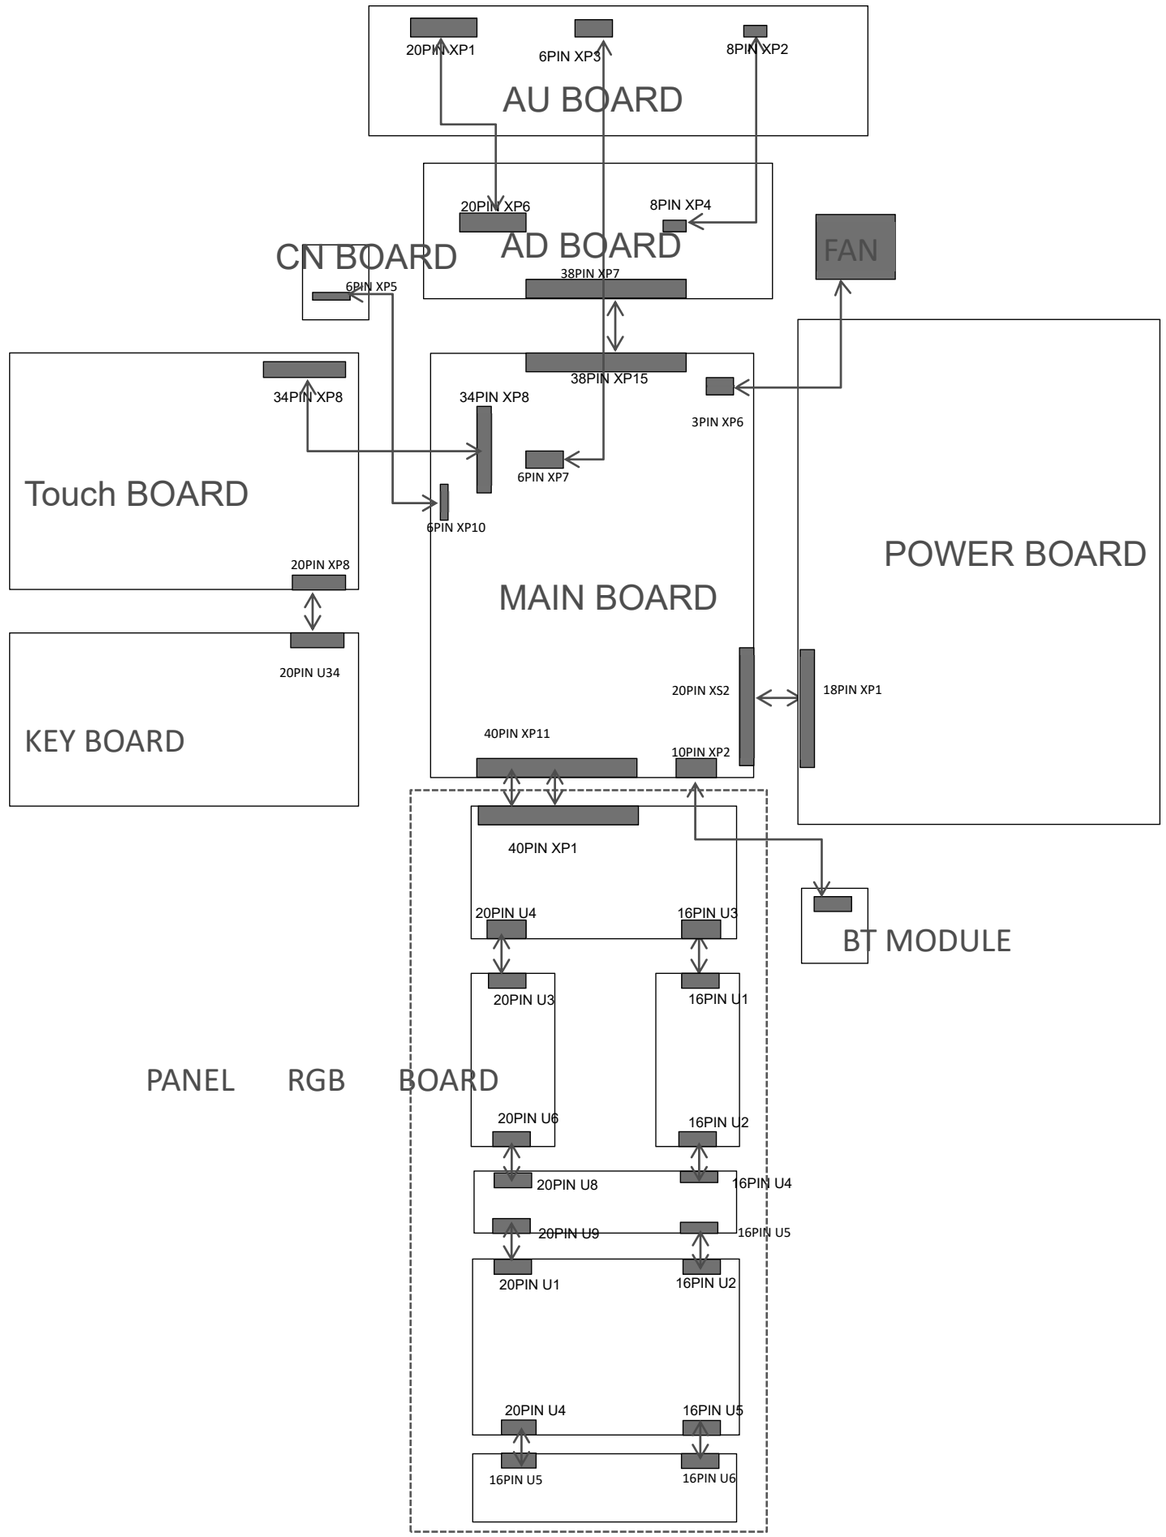



CIRCUIT DIAGRAM-MAIN BOARD

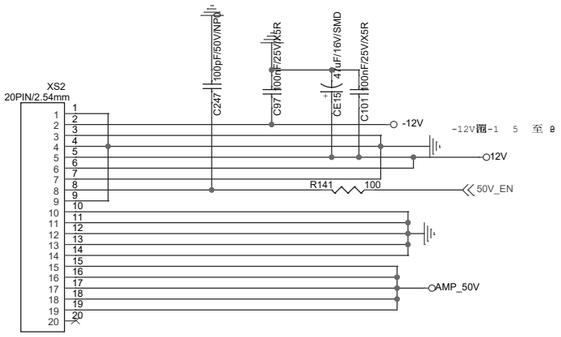


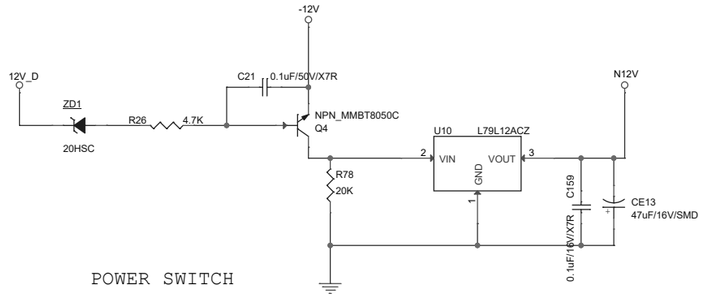


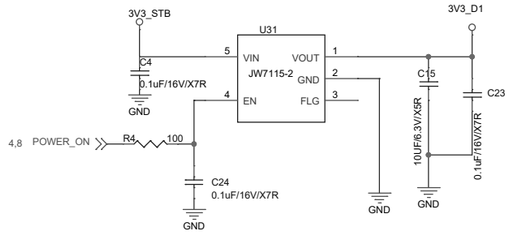


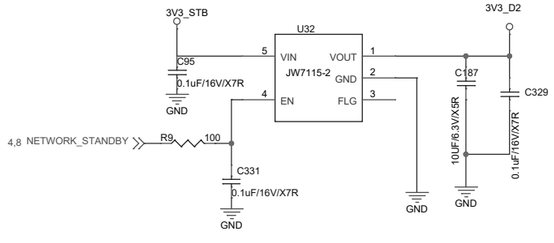


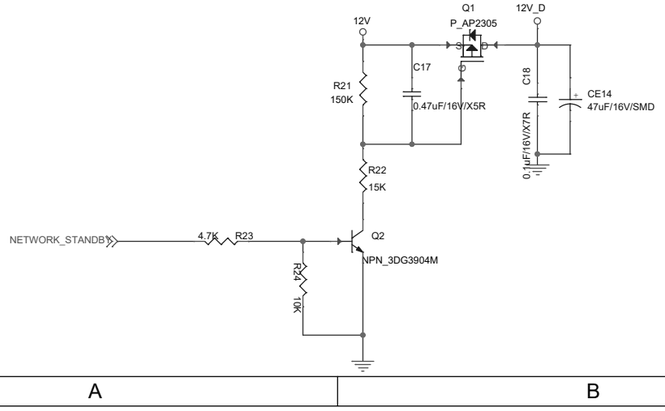

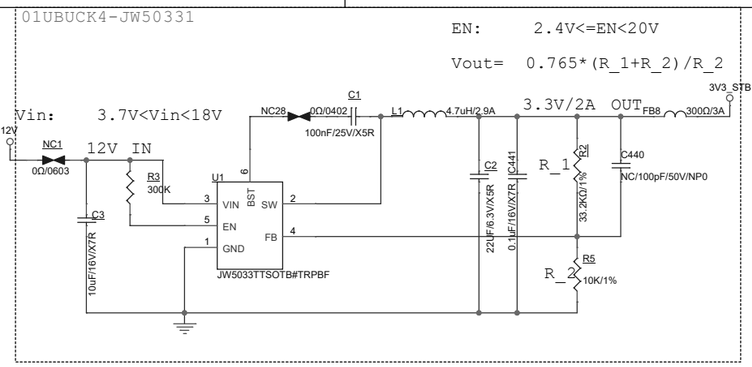

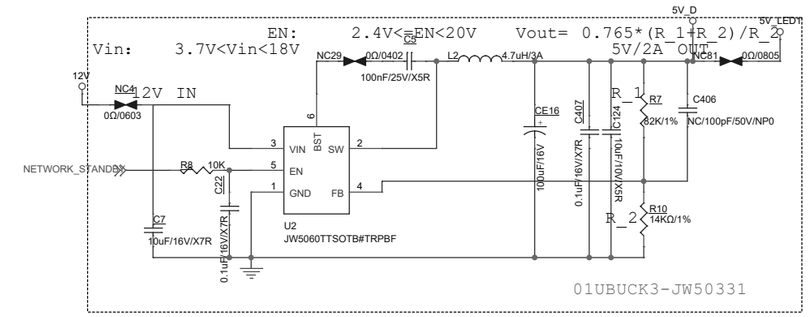

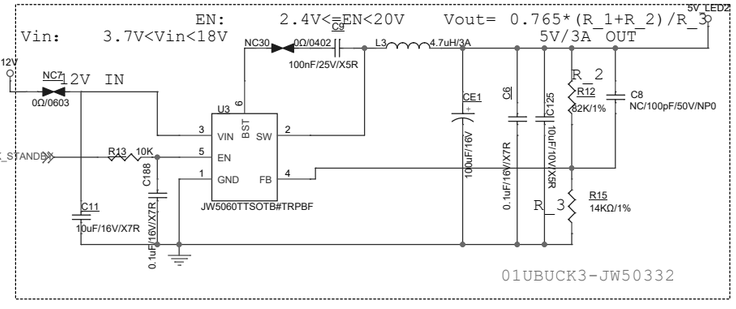

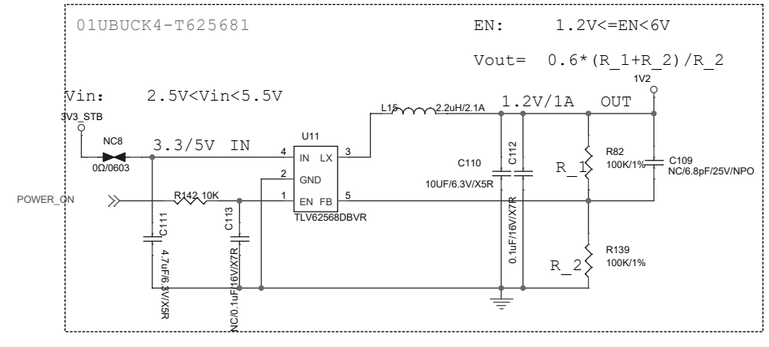

CIRCUIT DIAGRAM-MAIN BOARD

MLC3730
BGA 176


SDRAM_256Mb_M12L64164A-75TG2Y


USB 1.0 2.0


256M FLASH


CIRCUIT DIAGRAM-MAIN BOARD


5V CHARGE OUT

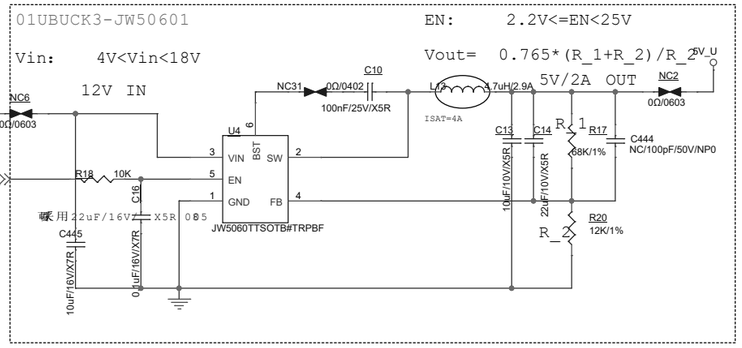


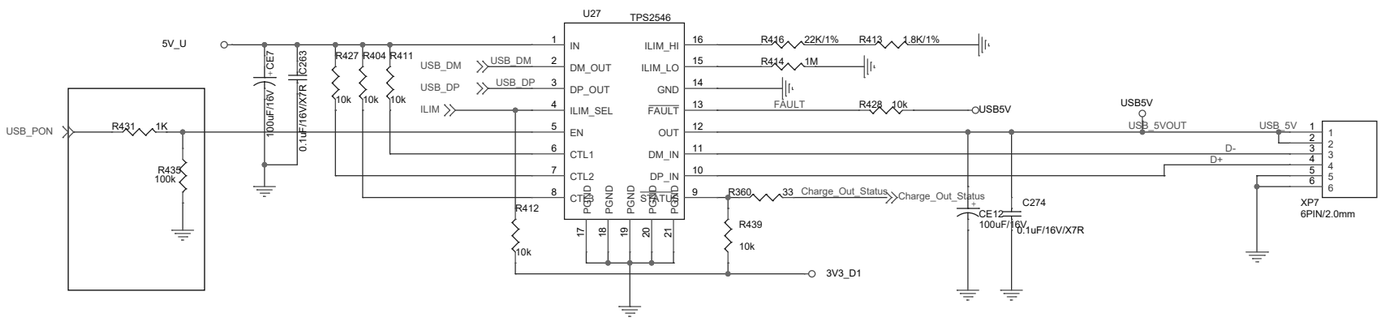




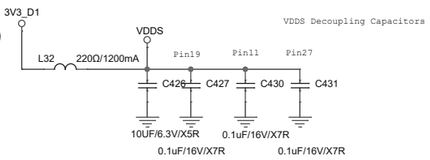


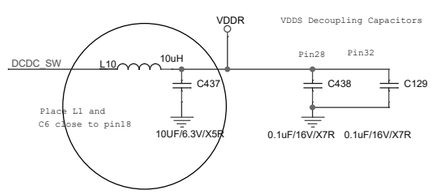


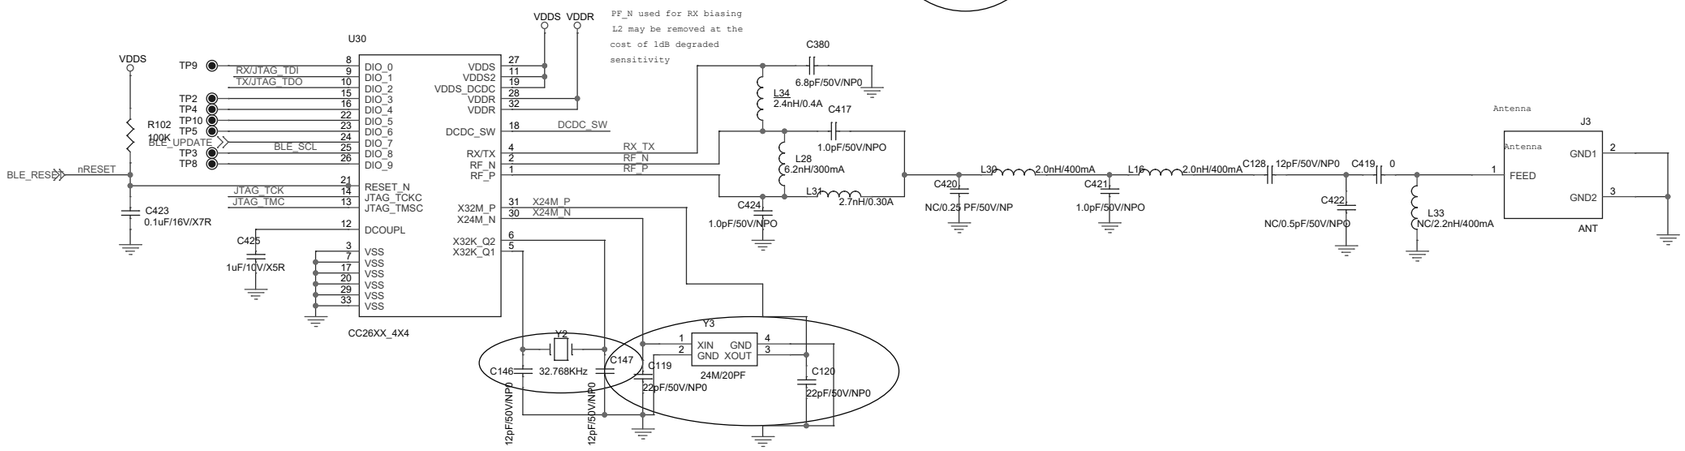


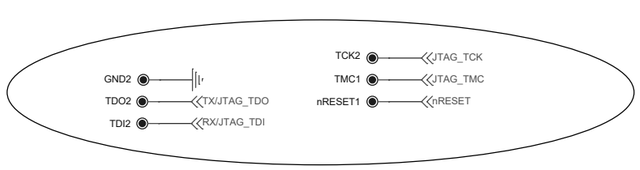


CIRCUIT DIAGRAM-MAIN BOARD




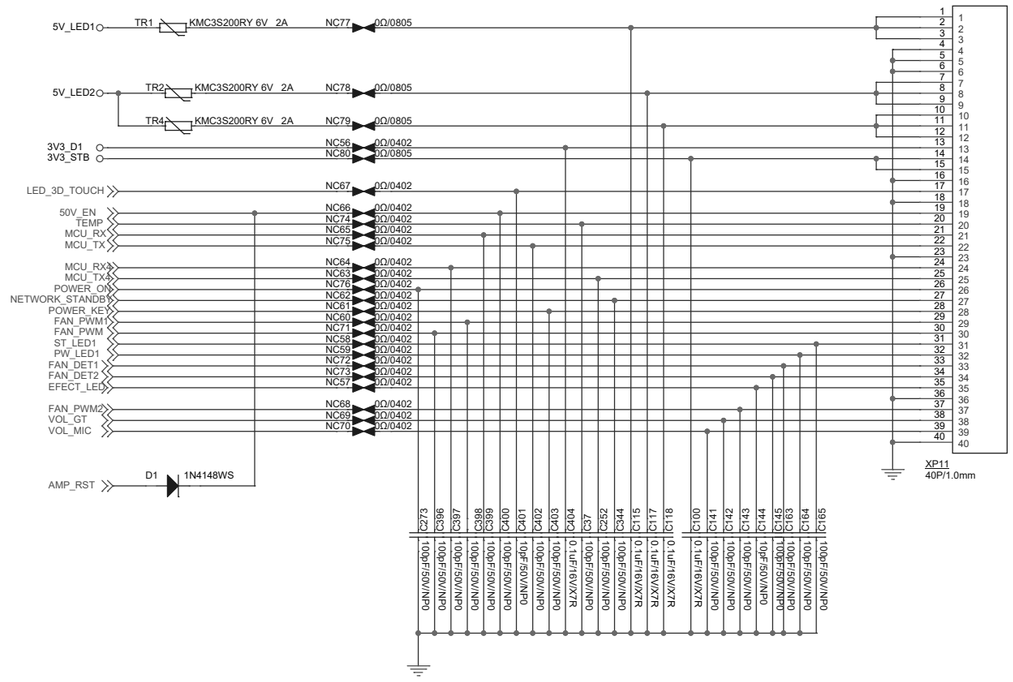


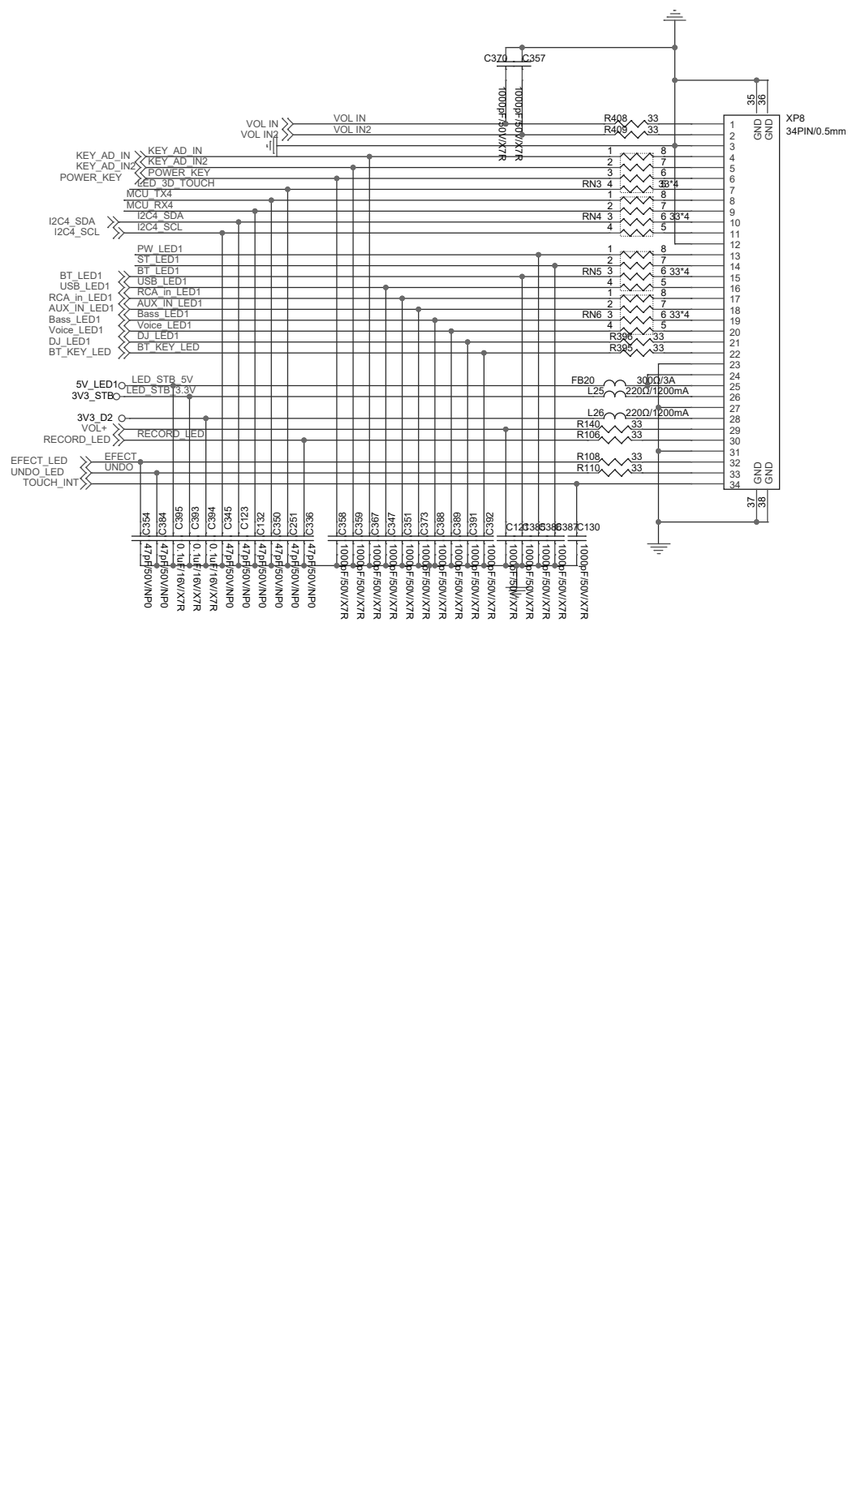


CIRCUIT DIAGRAM-MAIN BOARD

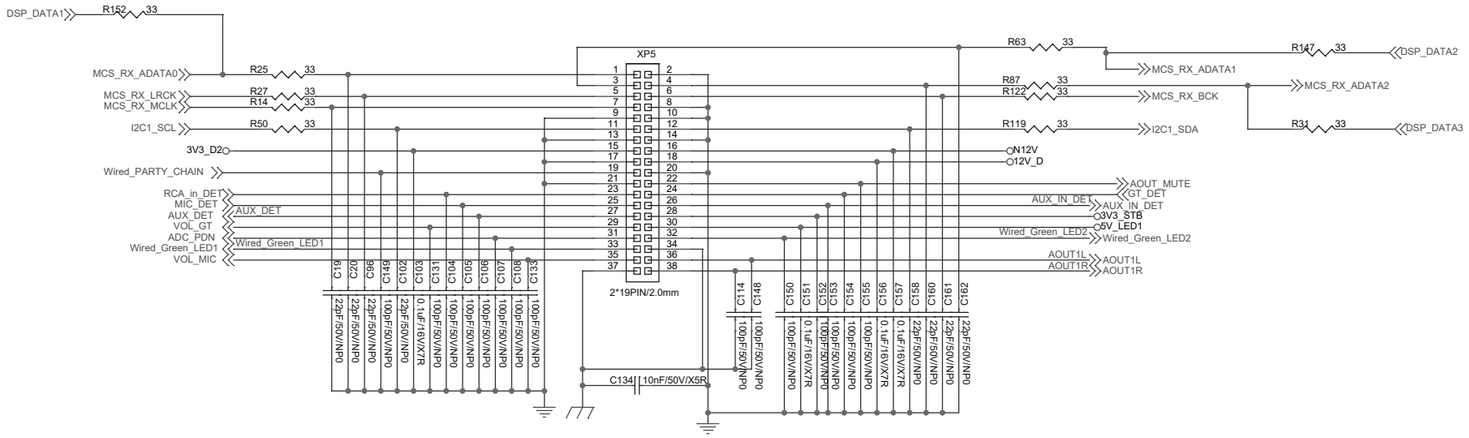


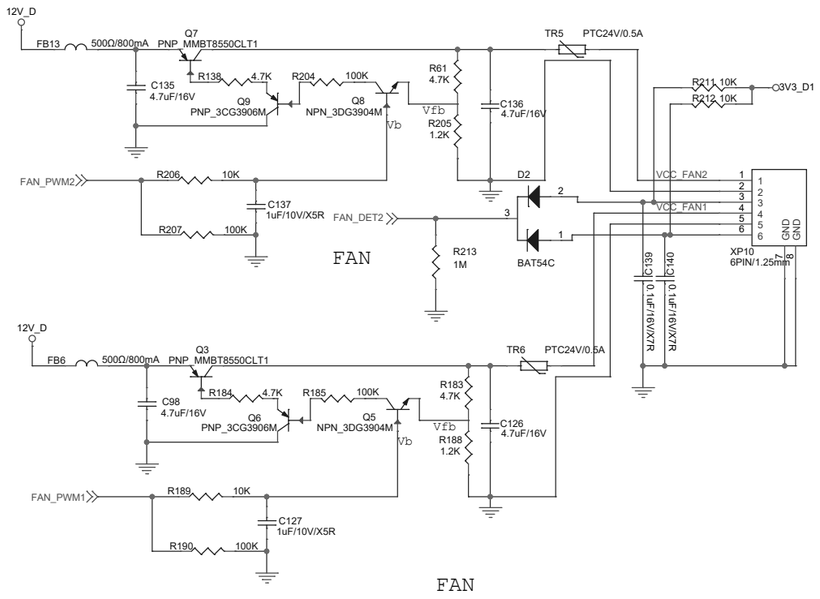


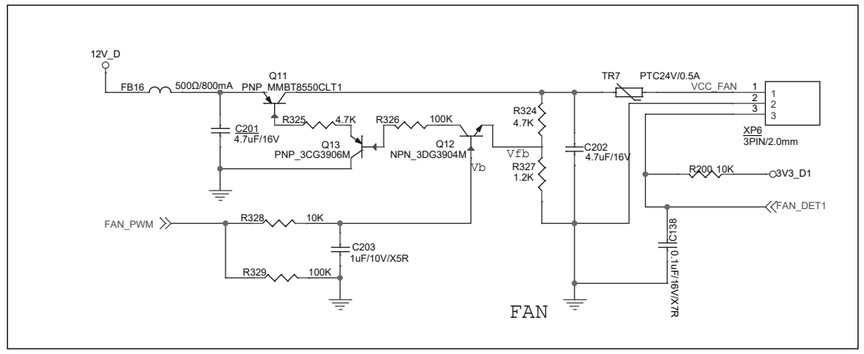



CIRCUIT DIAGRAM-MAIN BOARD

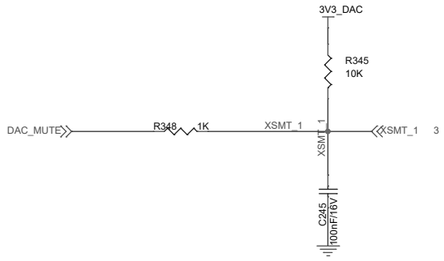


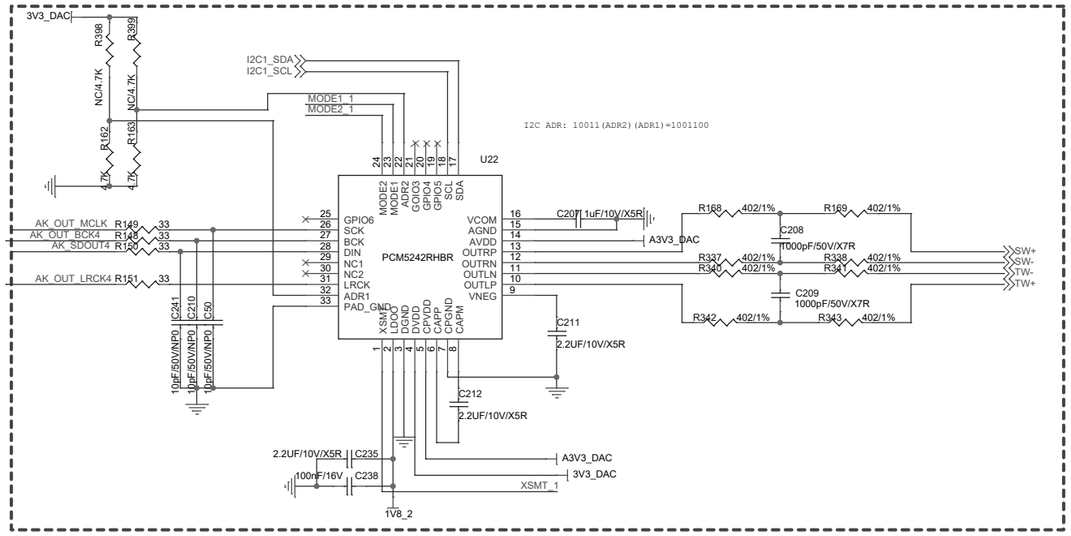


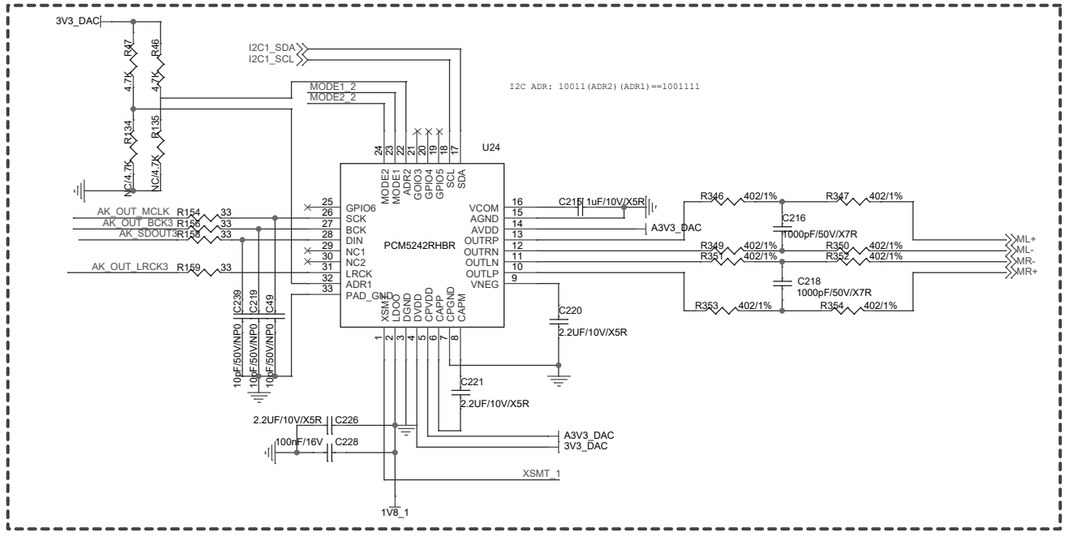


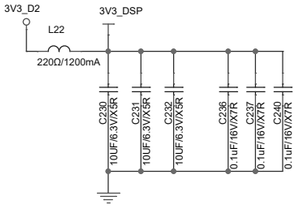


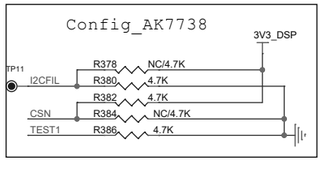

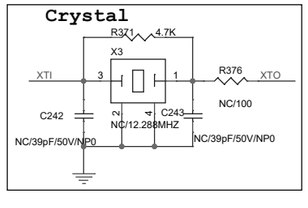


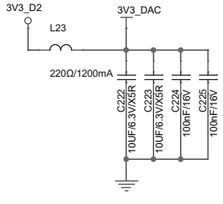

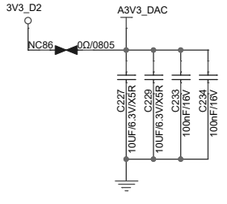


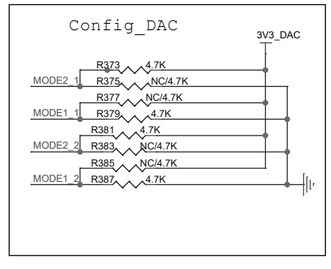



CIRCUIT DIAGRAM-MAIN BOARD

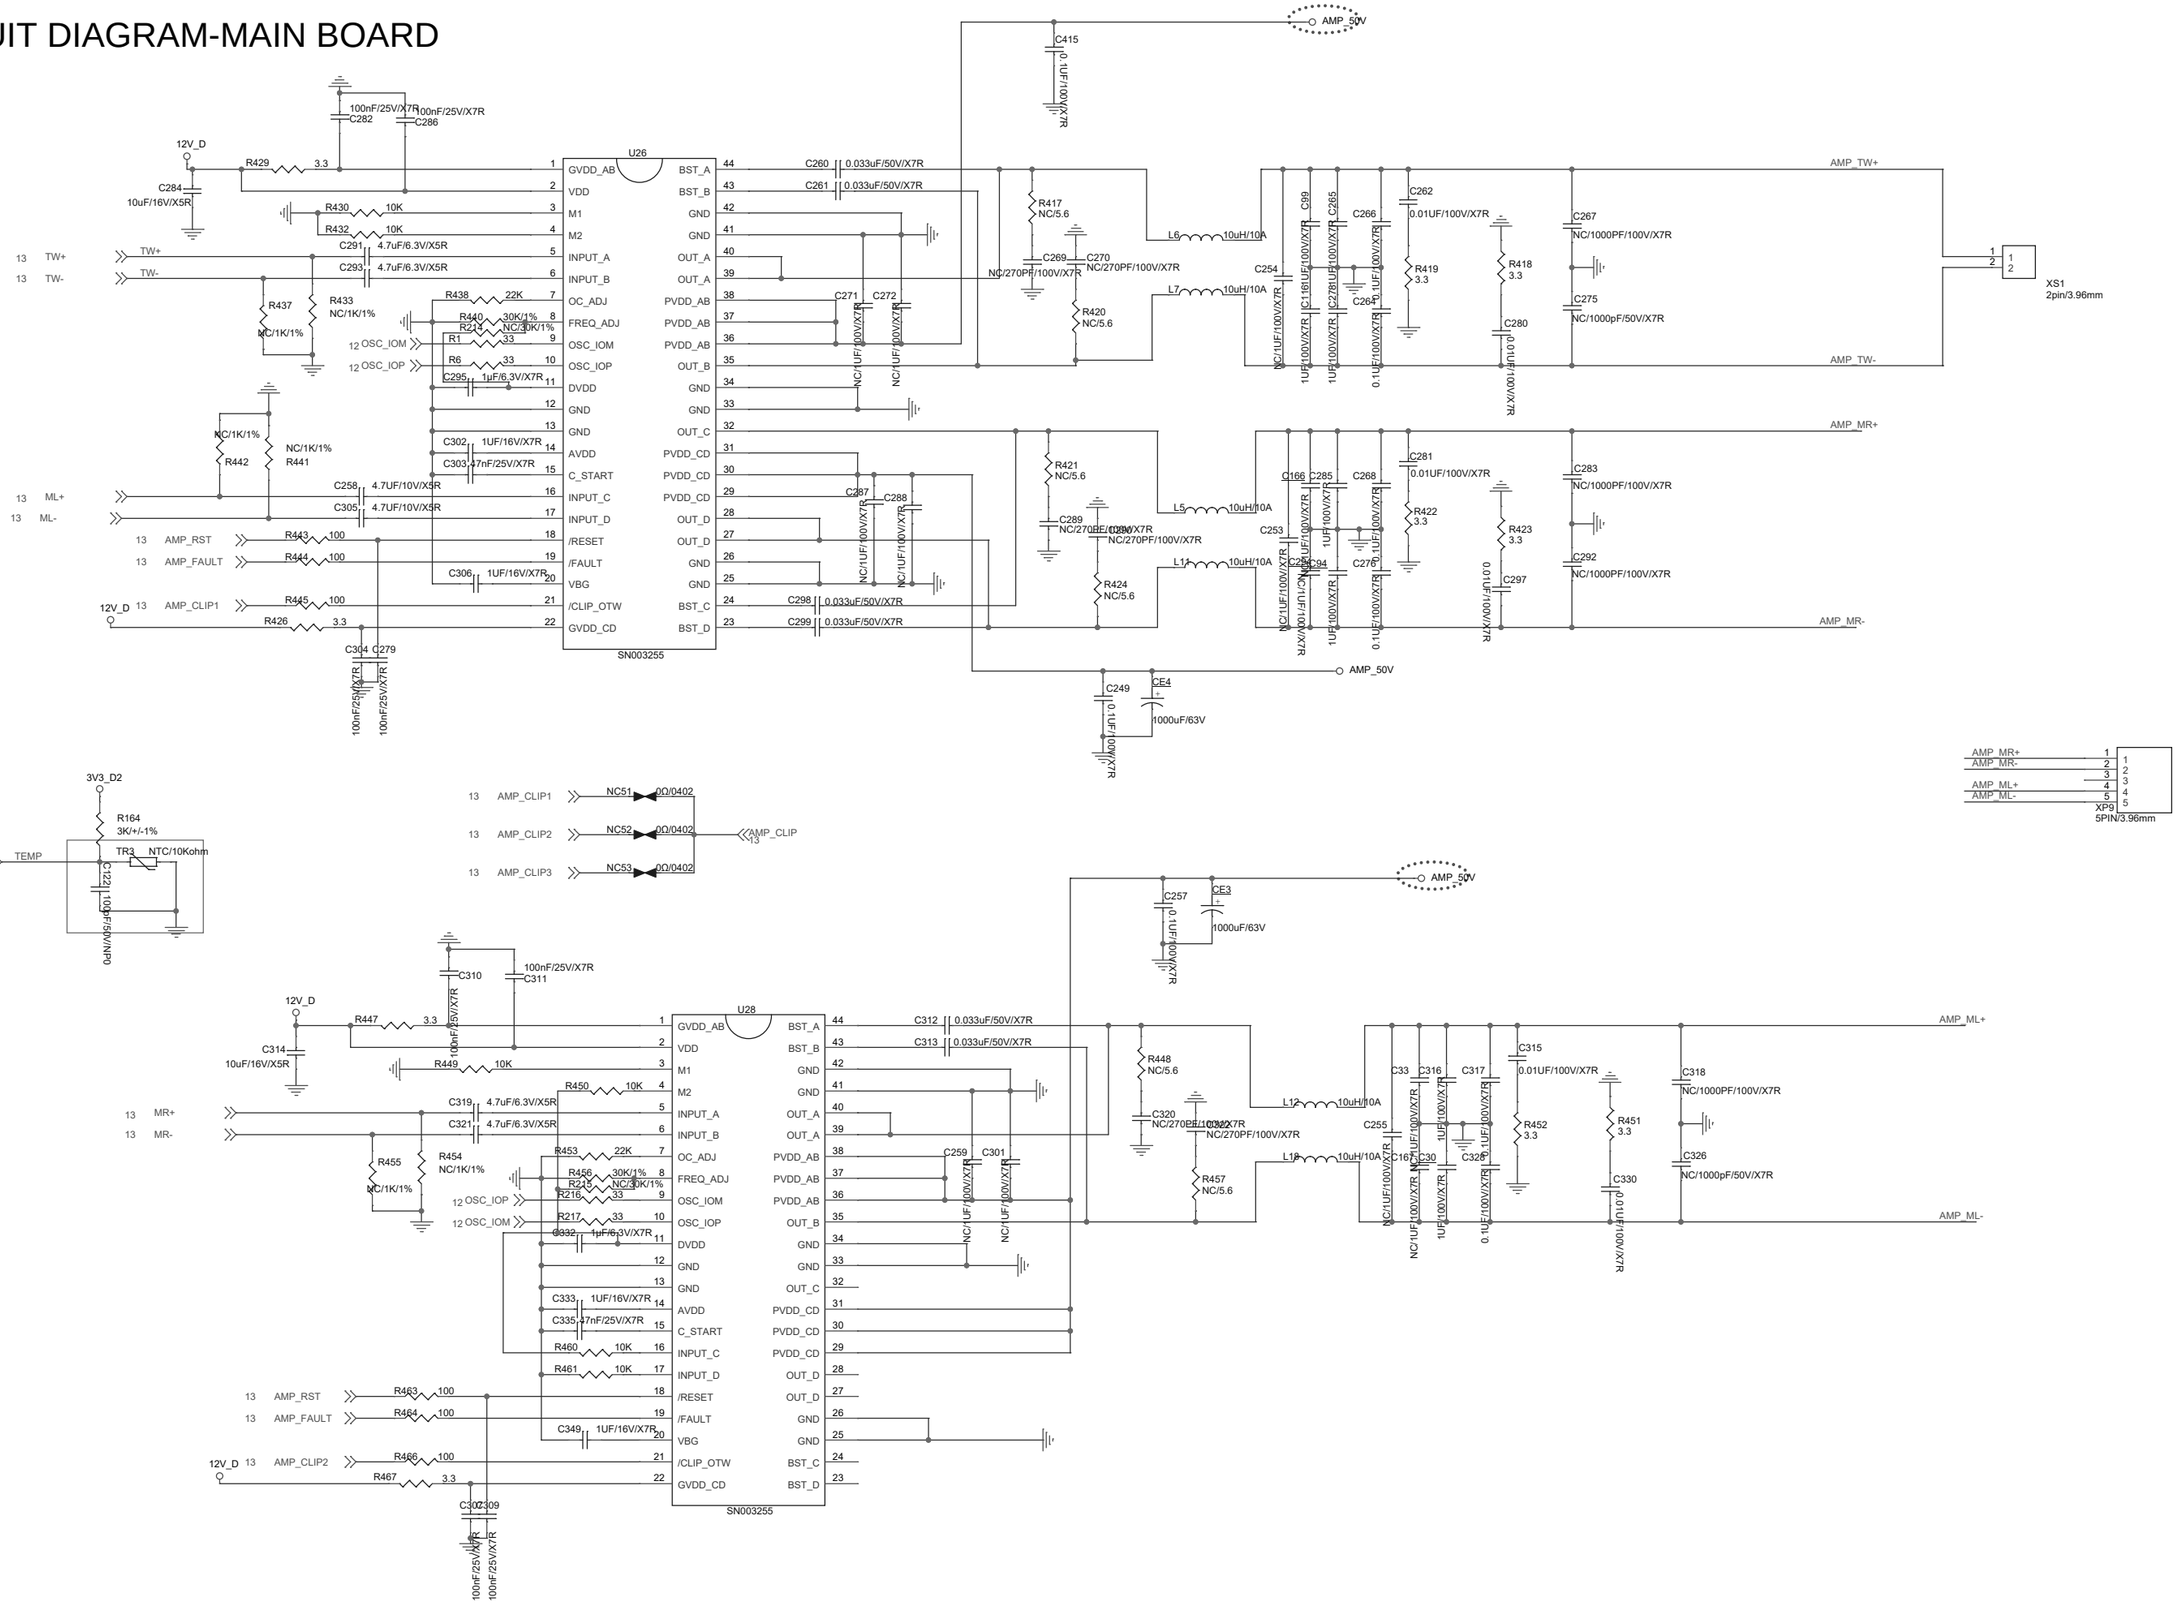


CIRCUIT DIAGRAM-MAIN BOARD

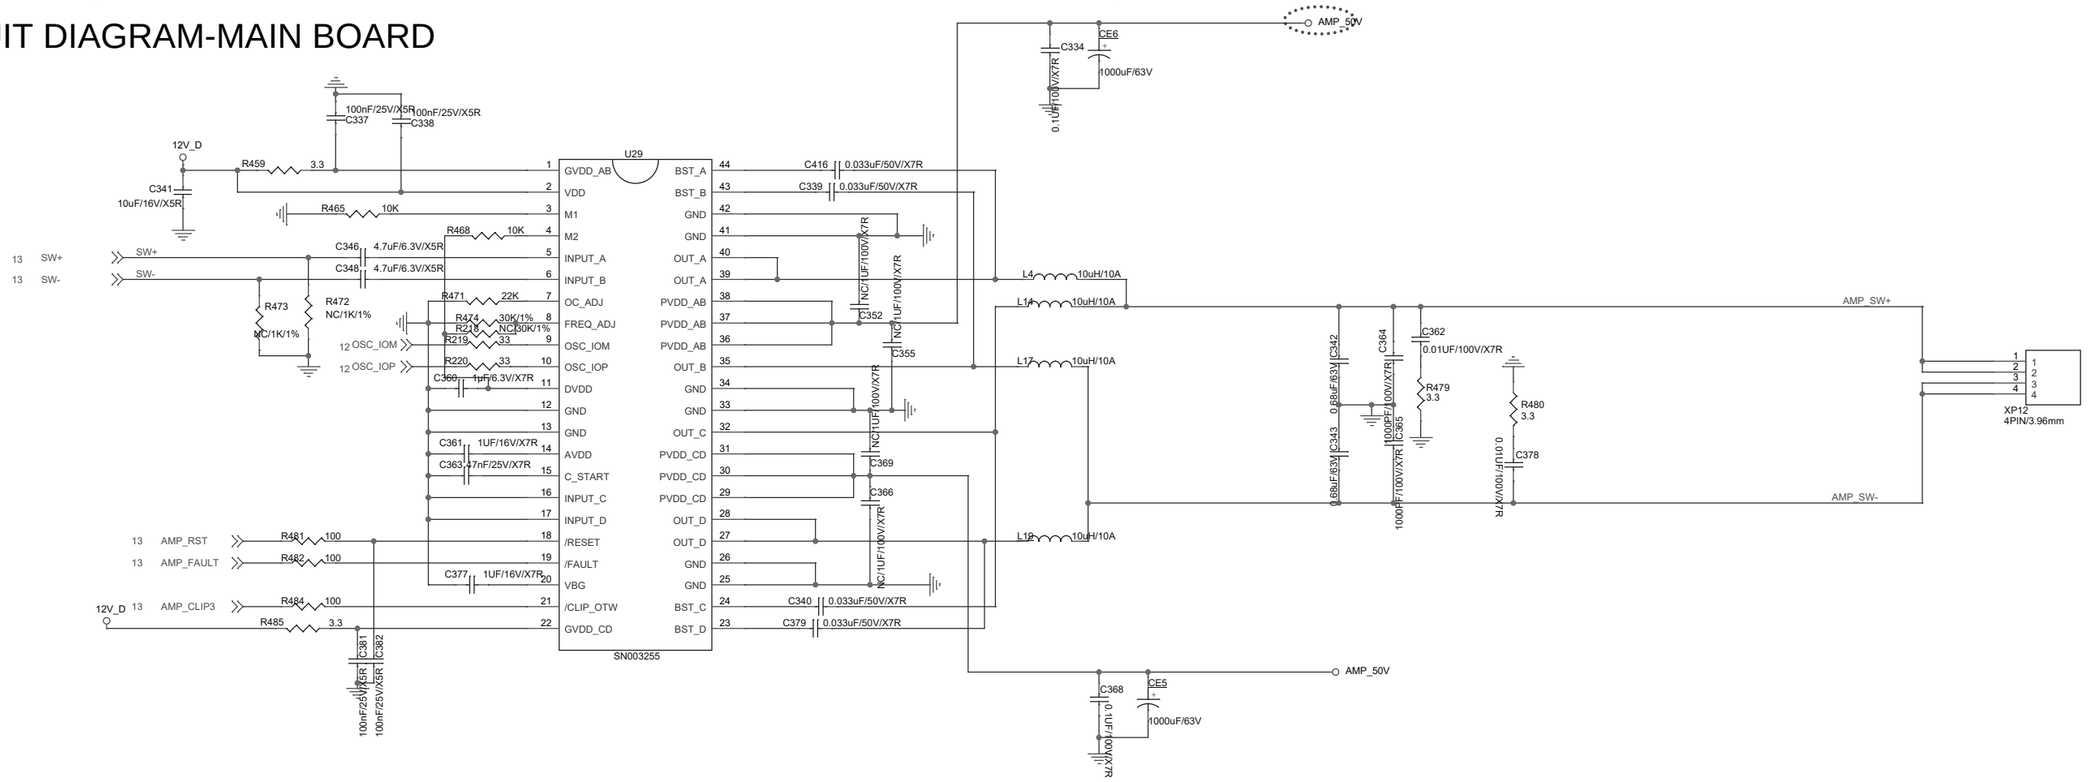


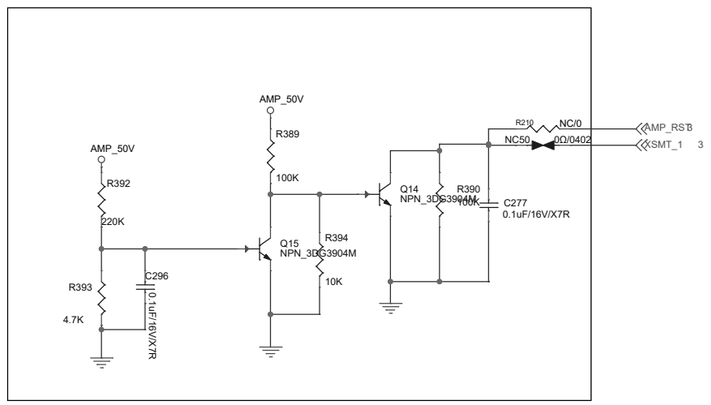


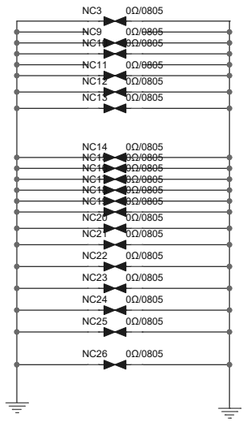



CIRCUIT DIAGRAM-TOUCH BOARD

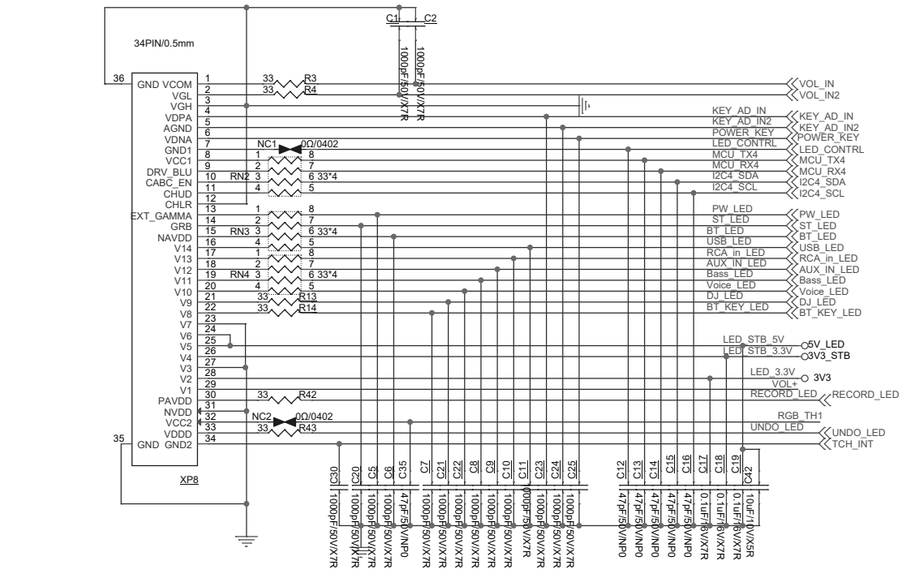


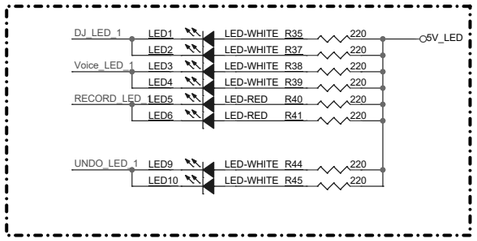


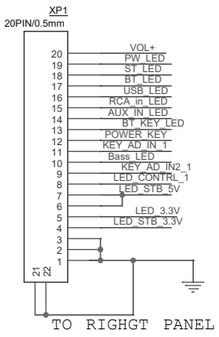


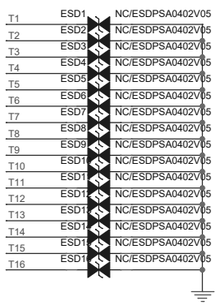


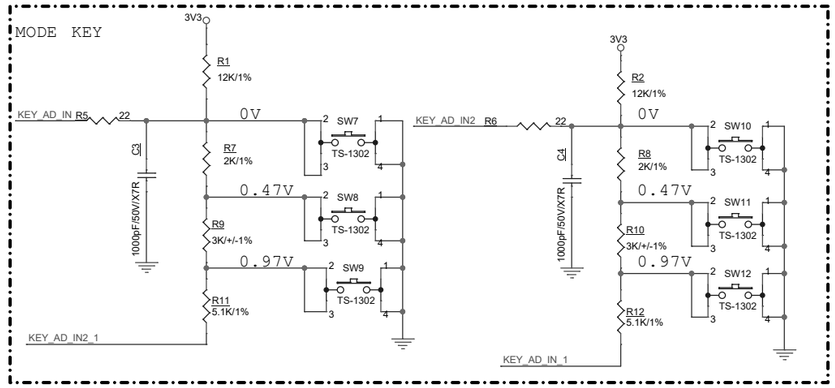


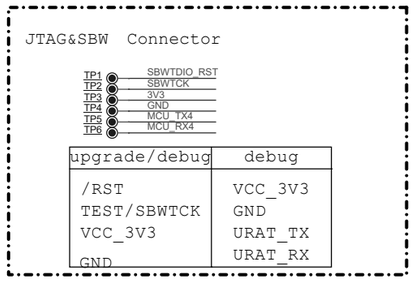


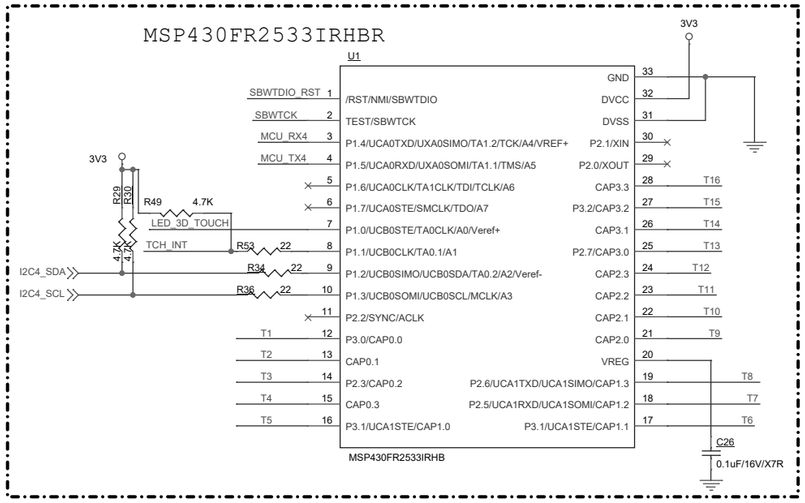


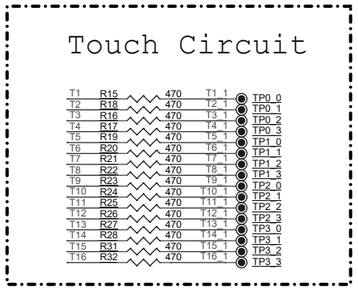


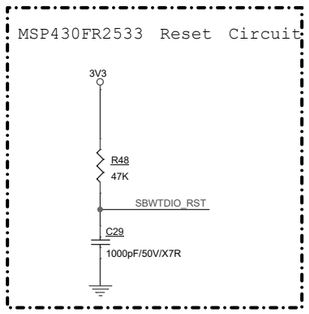


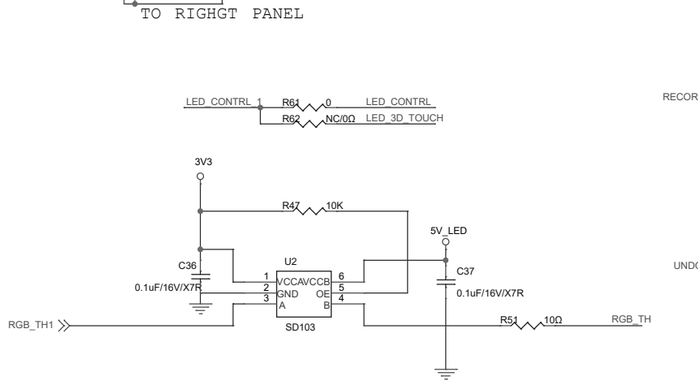


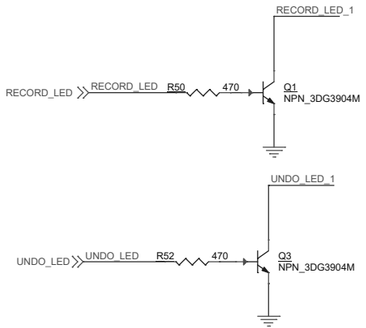

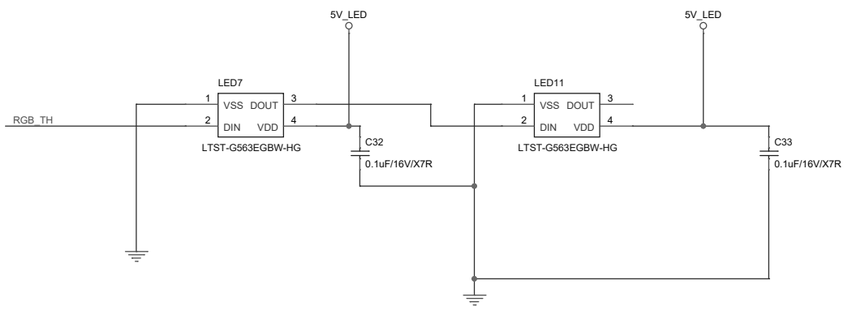


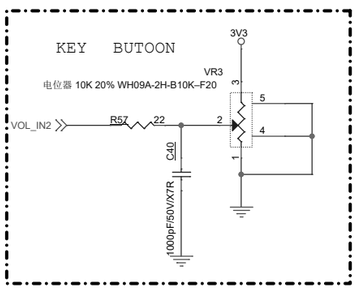

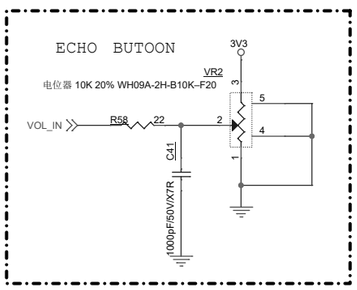


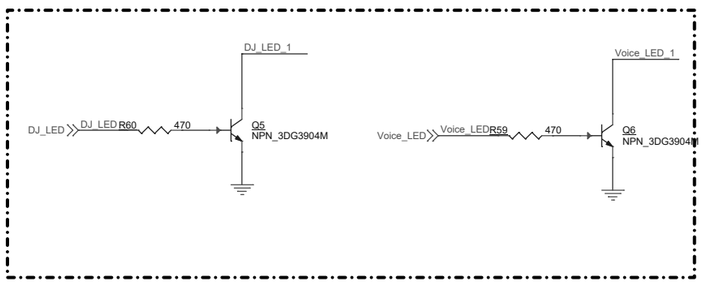


CIRCUIT DIAGRAM-FE LAMP BOARD

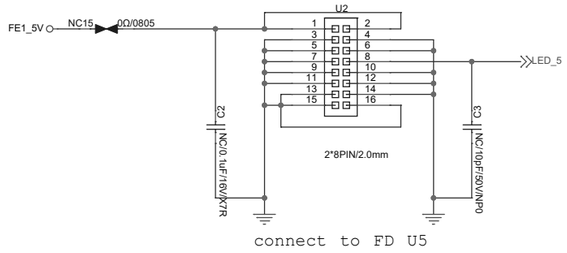


connect to FD U5

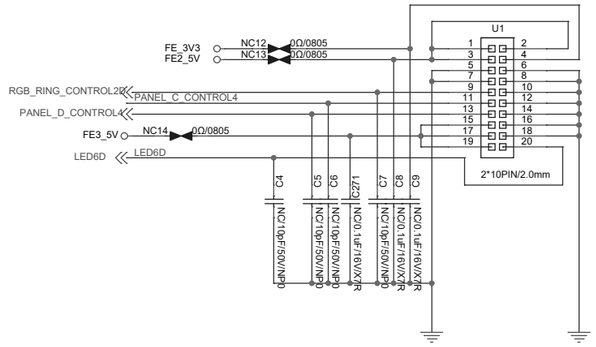


connect to FD U9

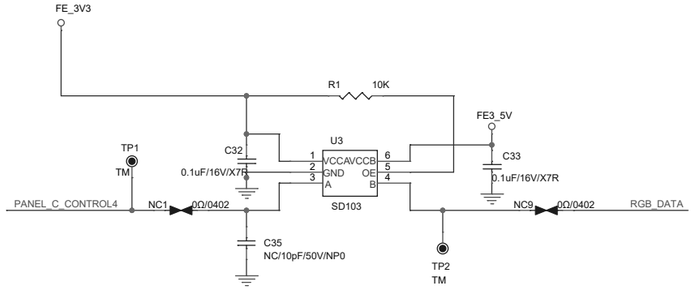


CIRCUIT DIAGRAM-FE LAMP BOARD

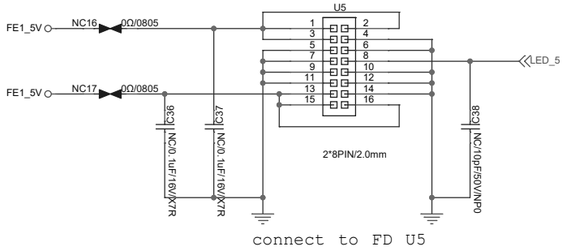


connect to FD U5

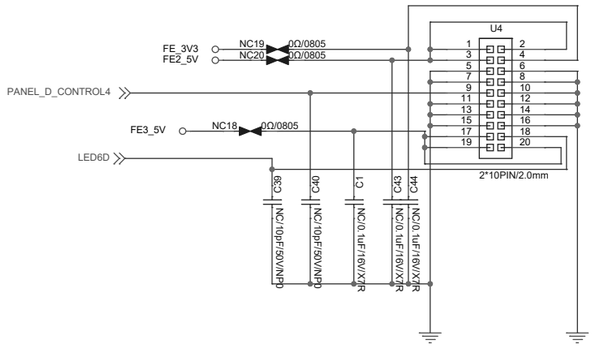



connect to FD U9

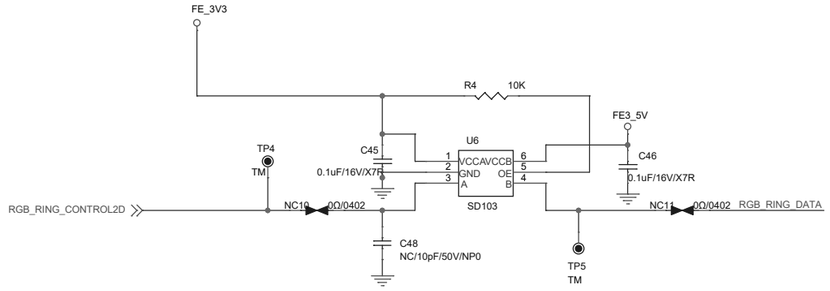


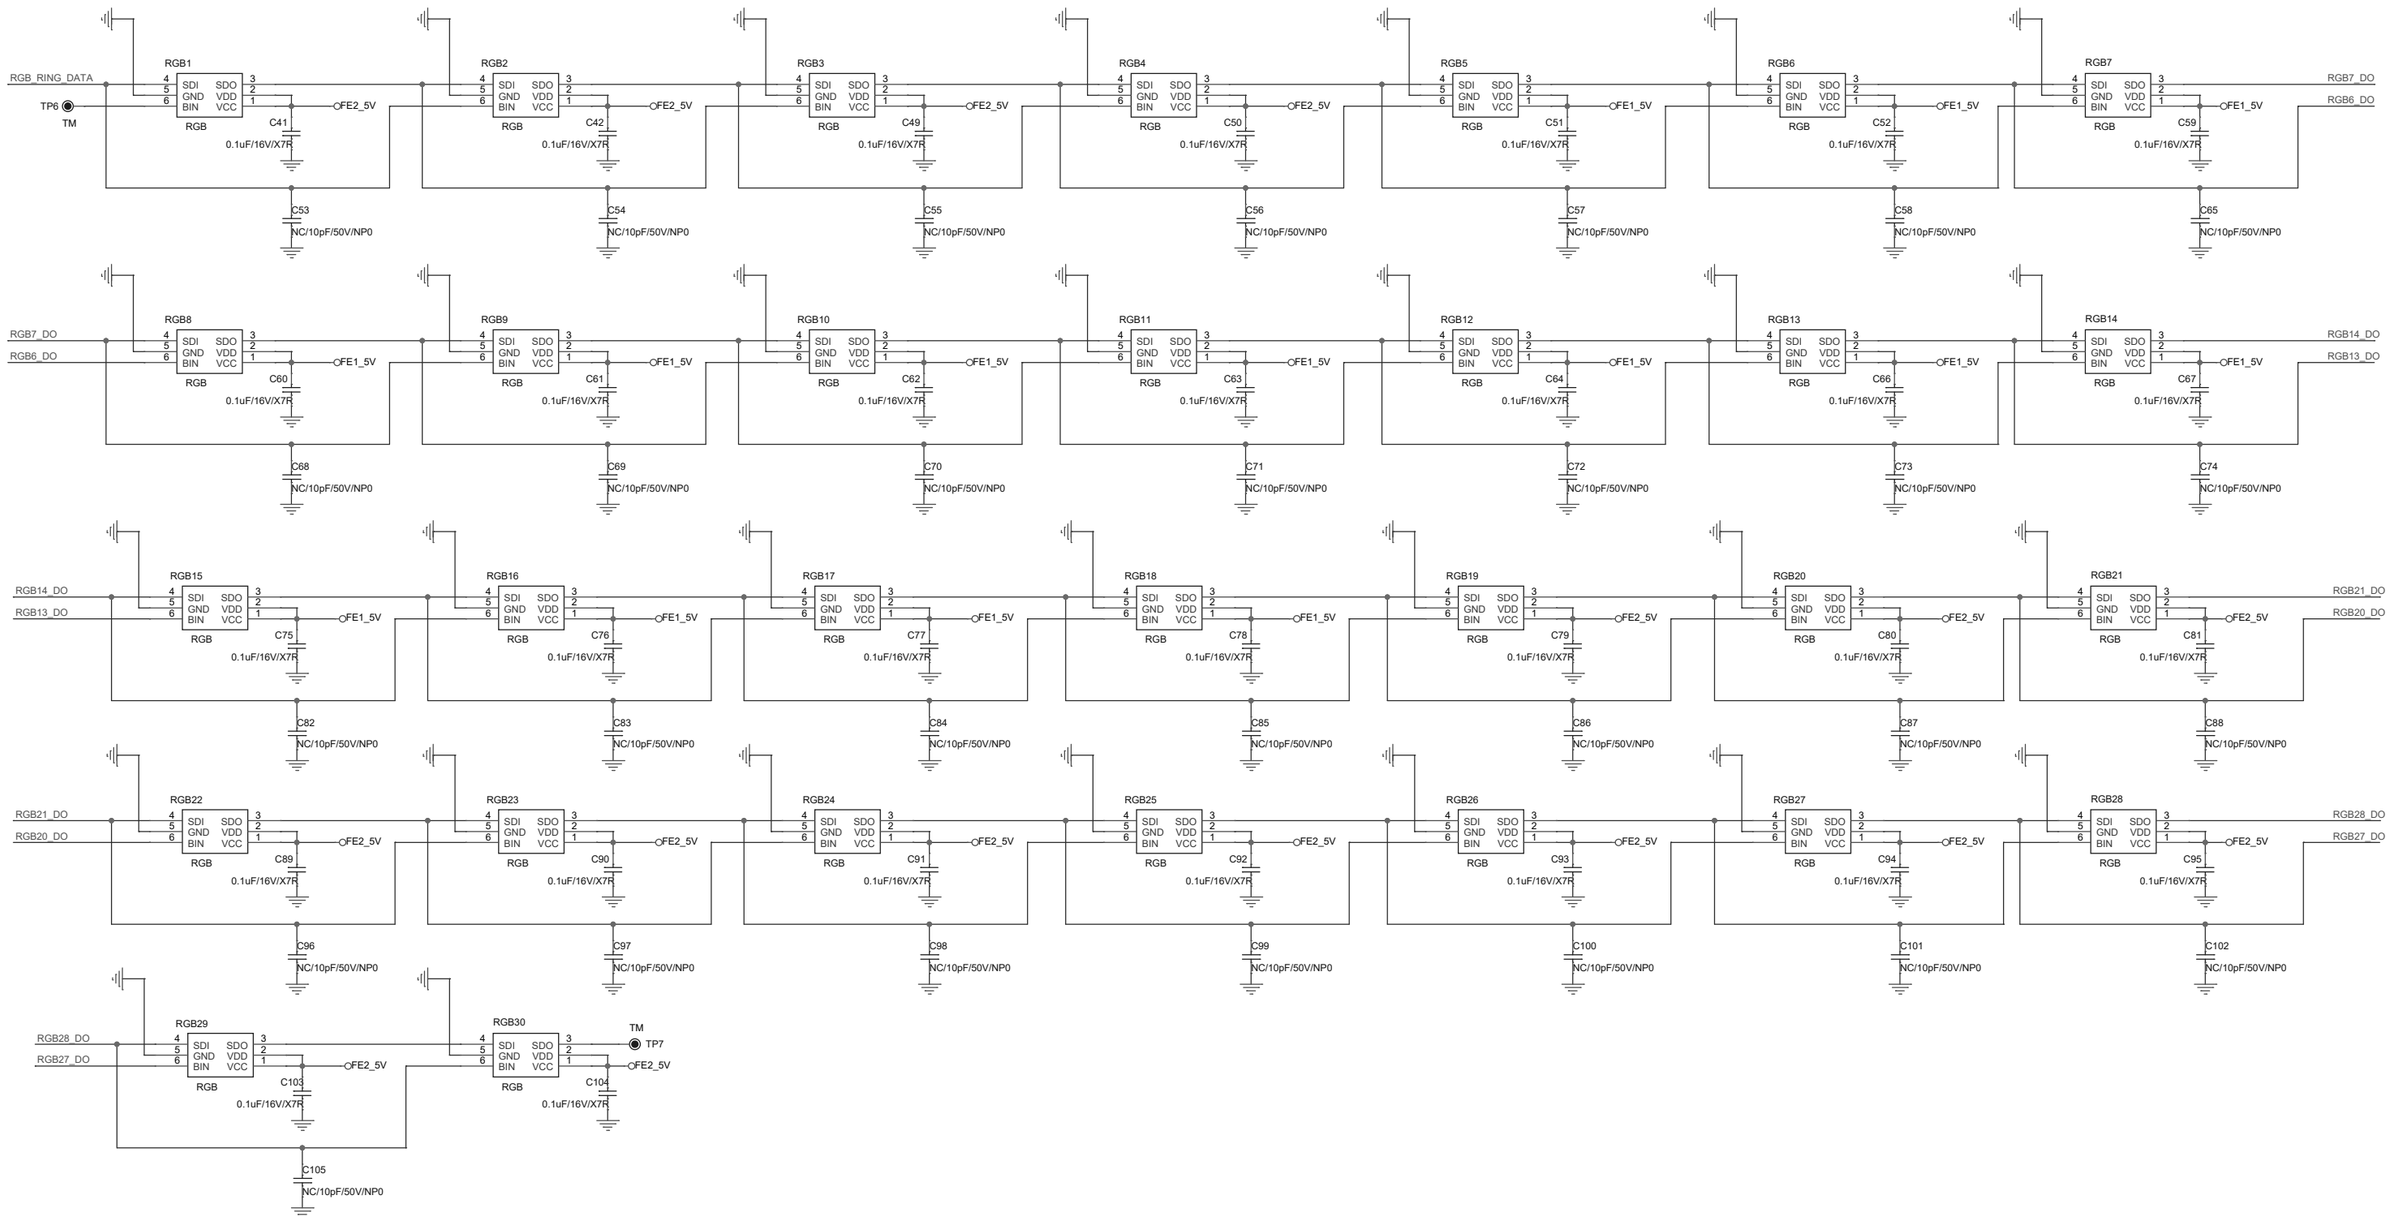


CIRCUIT DIAGRAM-TERMINAL BOARD

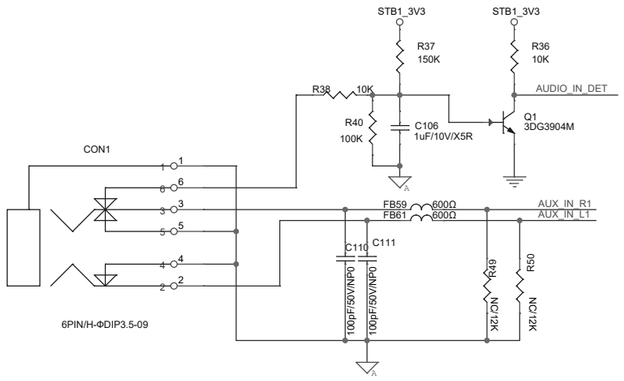

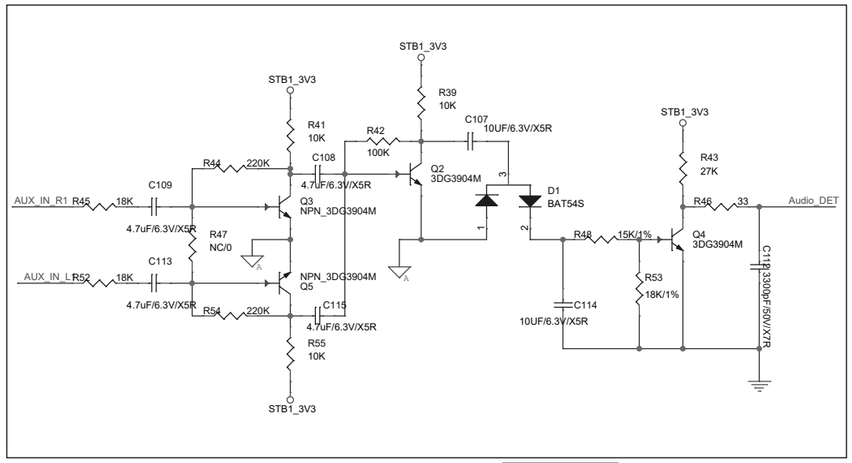


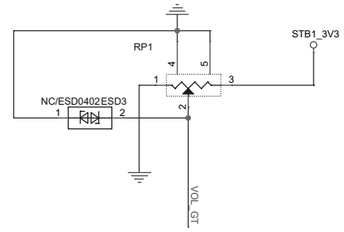


GT KNOB

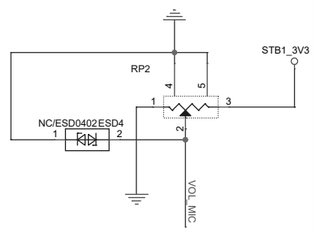


MIC KNOB

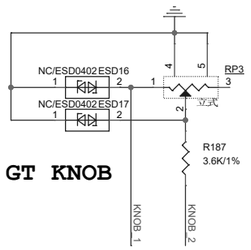



GT KNOB

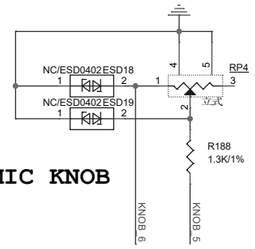



MIC KNOB

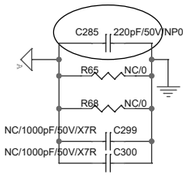

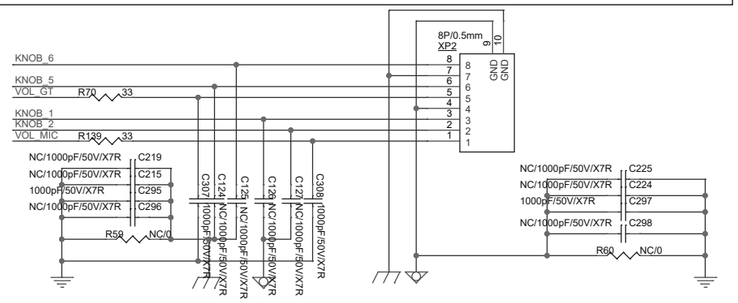


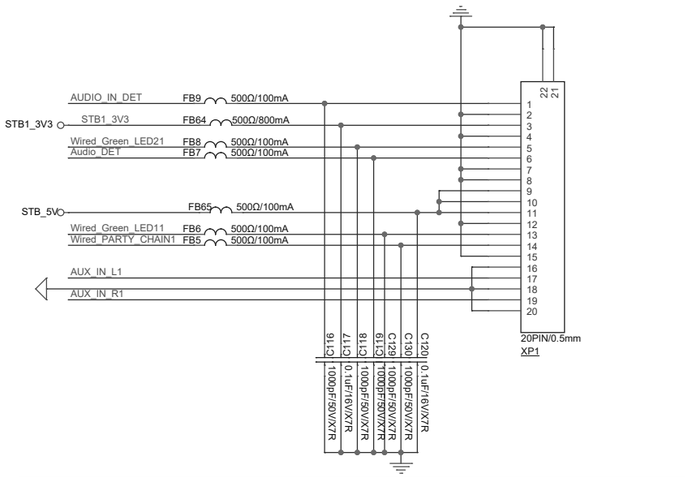

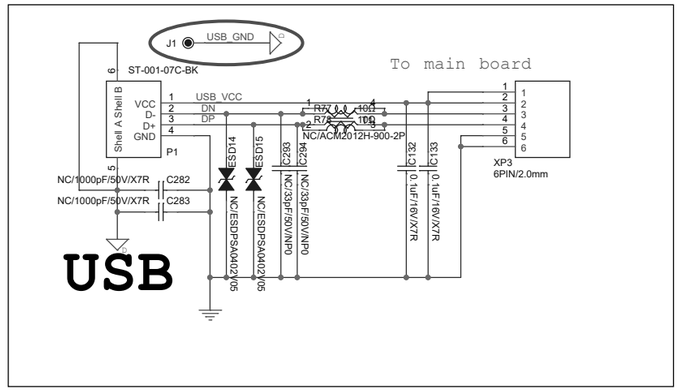


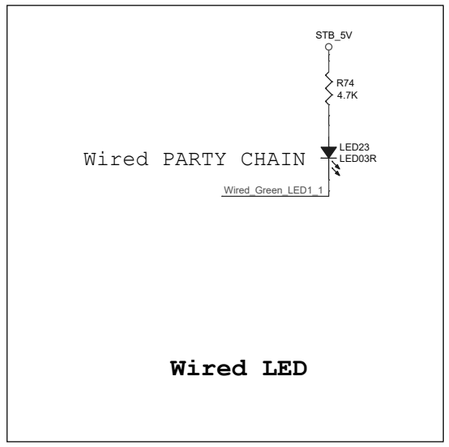


Wired LED

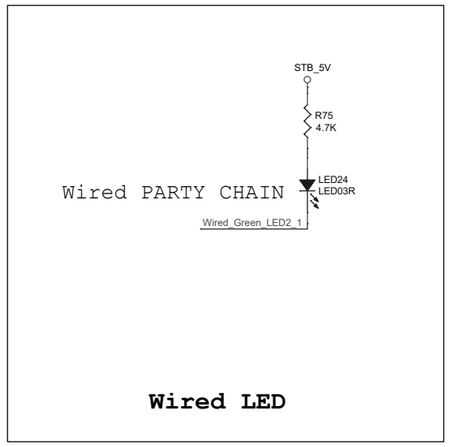

Wired LED

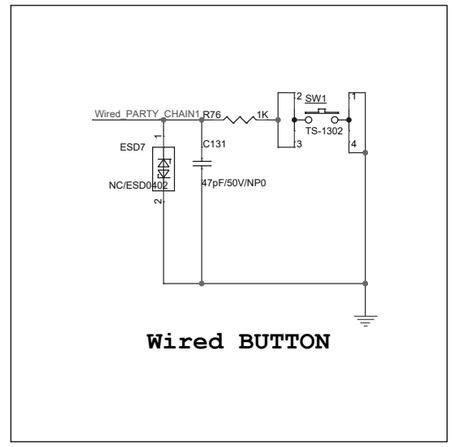



Wired BUTTON

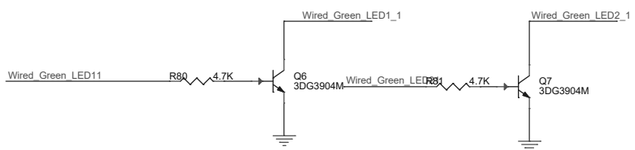



CIRCUIT DIAGRAM-TERMINAL BOARD


KARAOKE

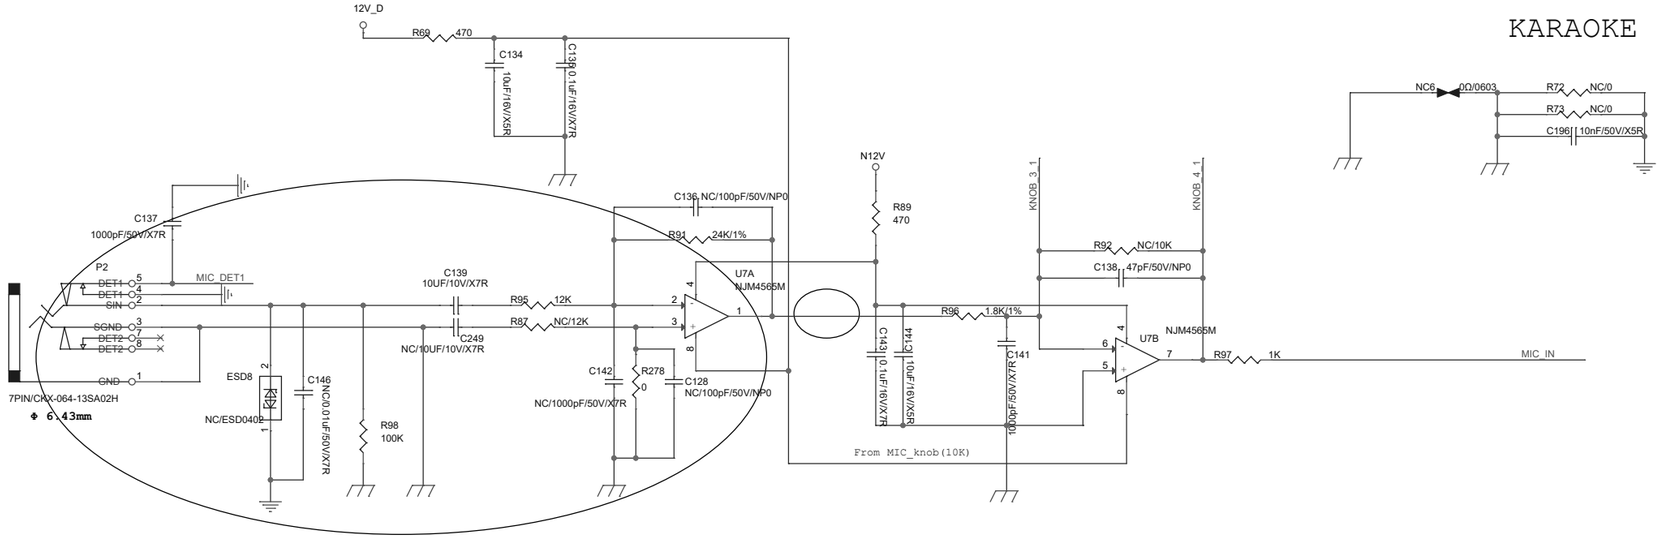

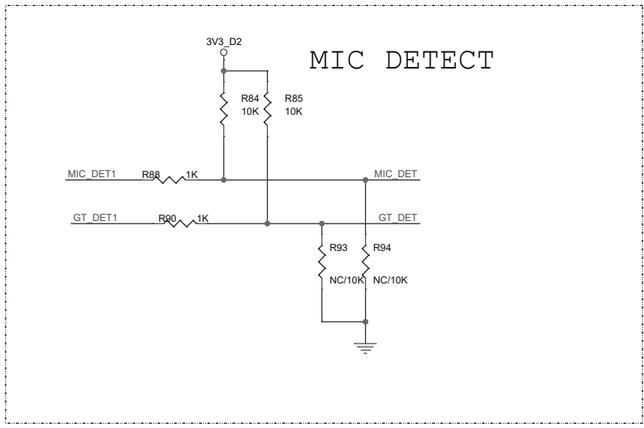

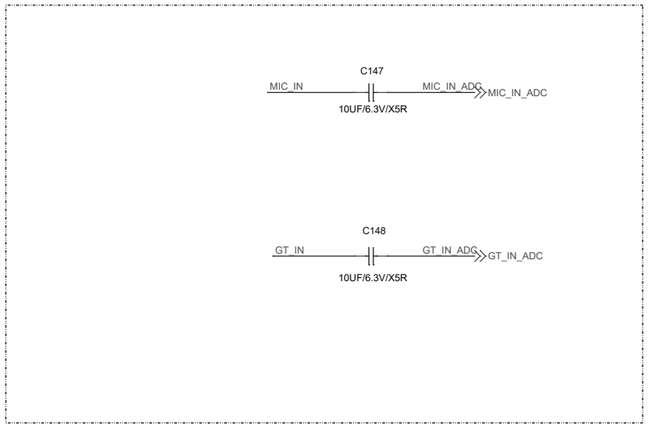


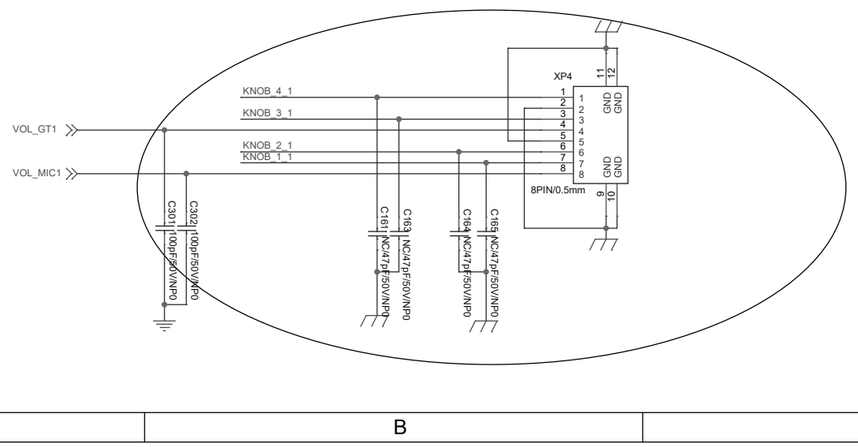





GT_DET	GT_DET	10
MIC_DET	MIC_DET	10
KNOB1	KNOB1	11
KNOB2	KNOB2	11
KNOB3	KNOB3	11
KNOB4	KNOB4	11
KNOB5	KNOB5	11
KNOB6	KNOB6	11


CIRCUIT DIAGRAM-TERMINAL BOARD

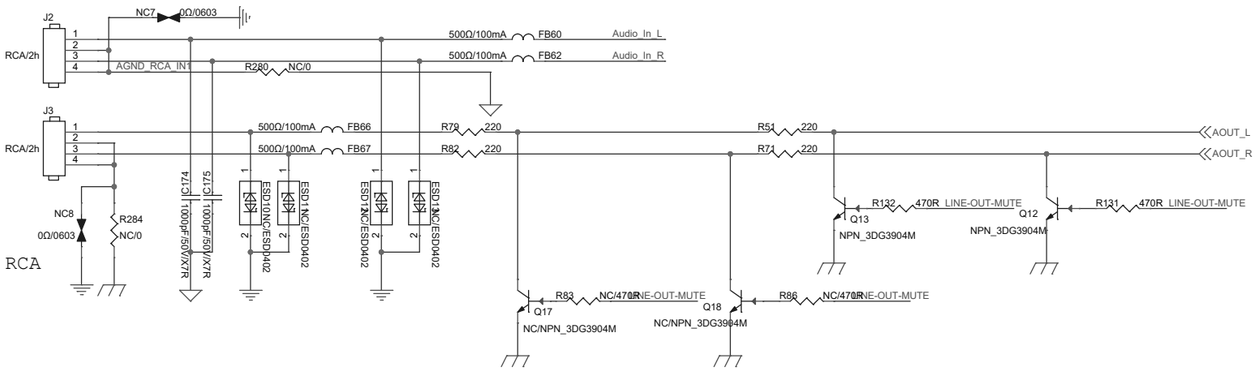


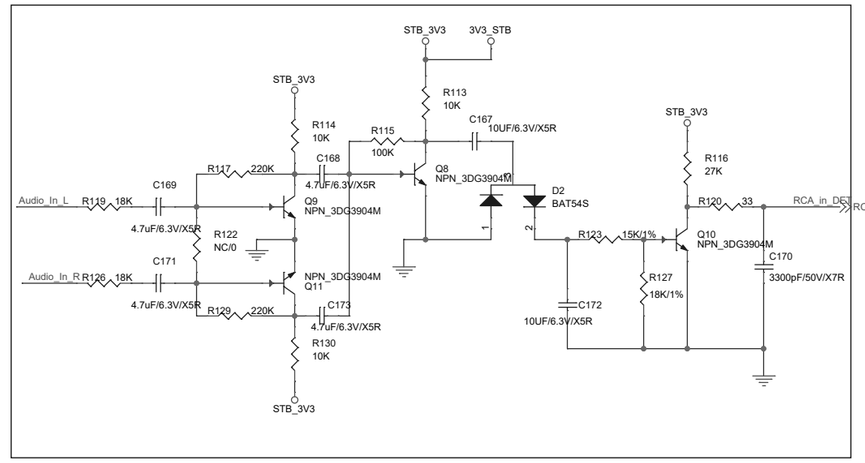



Audio IN

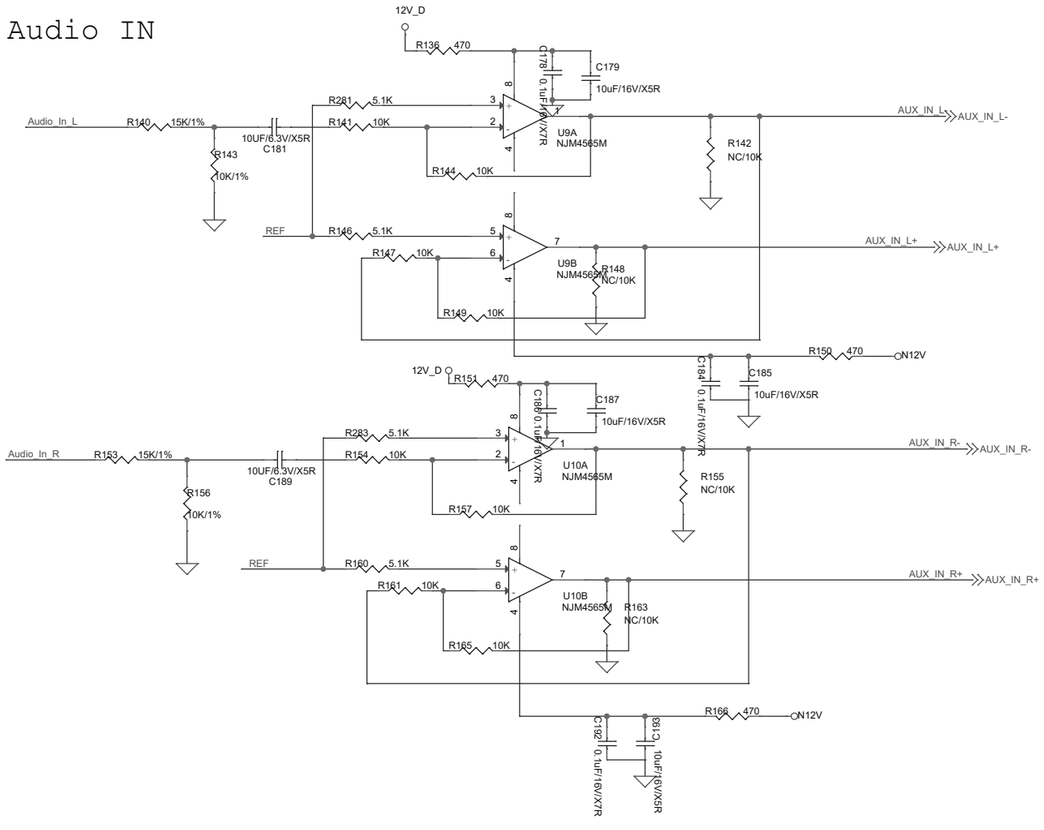

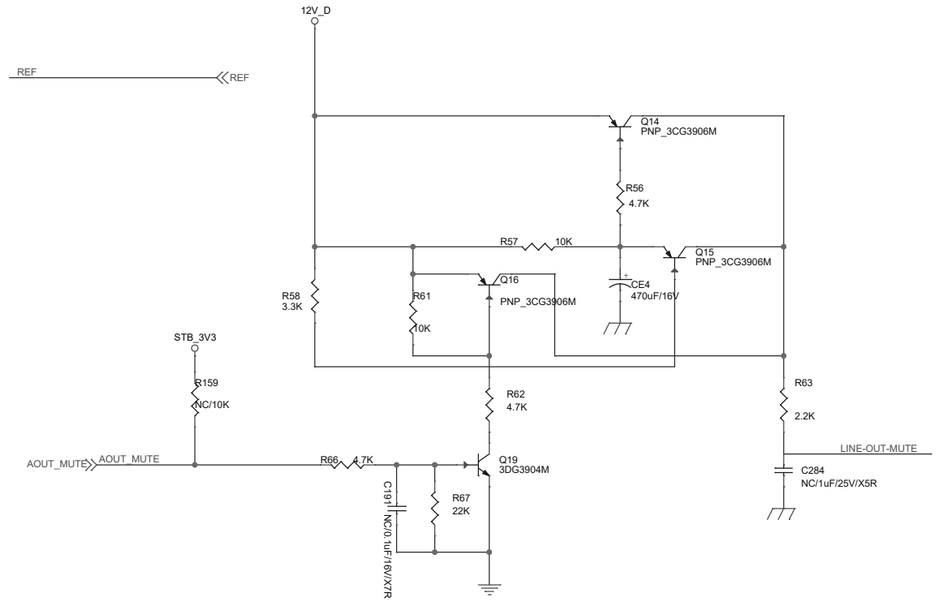

CIRCUIT DIAGRAM-TERMINAL BOARD

ADD:0010000

AK5536

ADC AK5536

U12A NJM4565M
U12B NJM4565M
U13A NJM4565M
U13B NJM4565M
U14A NJM4565M
U14B NJM4565M
U15A NJM4565M
U15B NJM4565M


D3 B5817WSFB69 600Ω/200mA


earphone 3.5

RCA in


CIRCUIT DIAGRAM-TERMINAL BOARD


Audio out

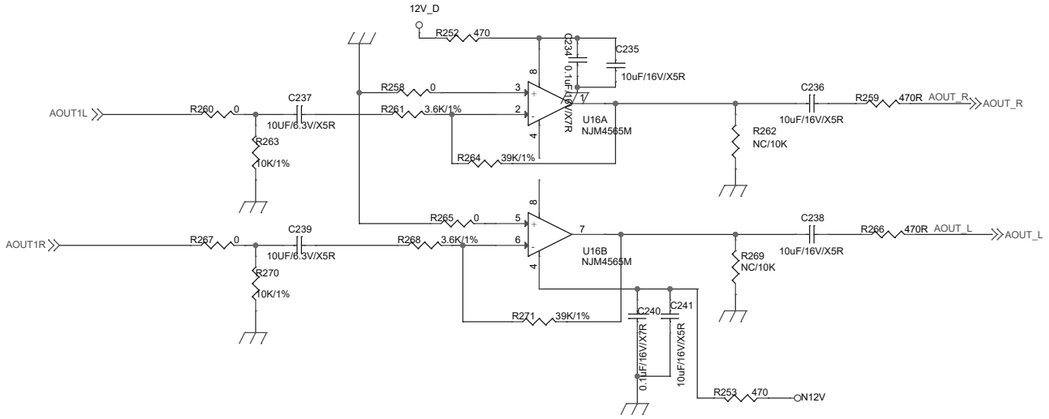

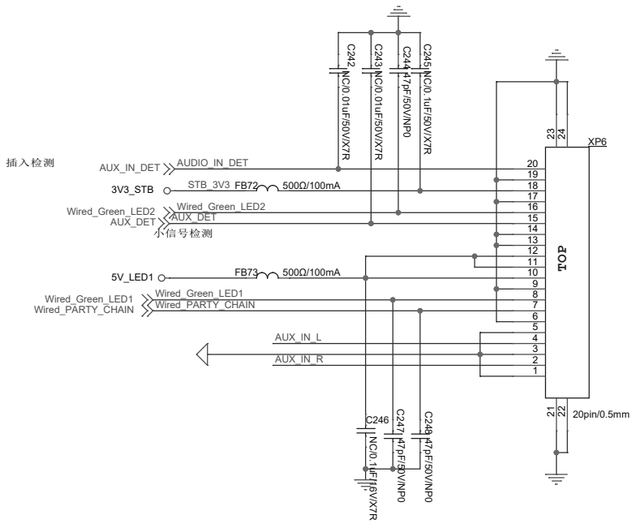




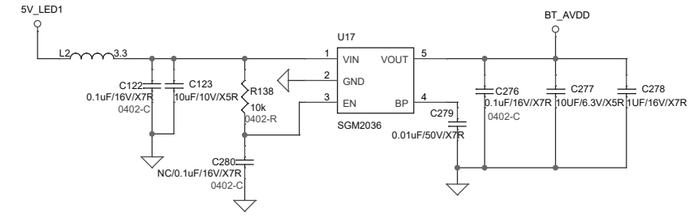


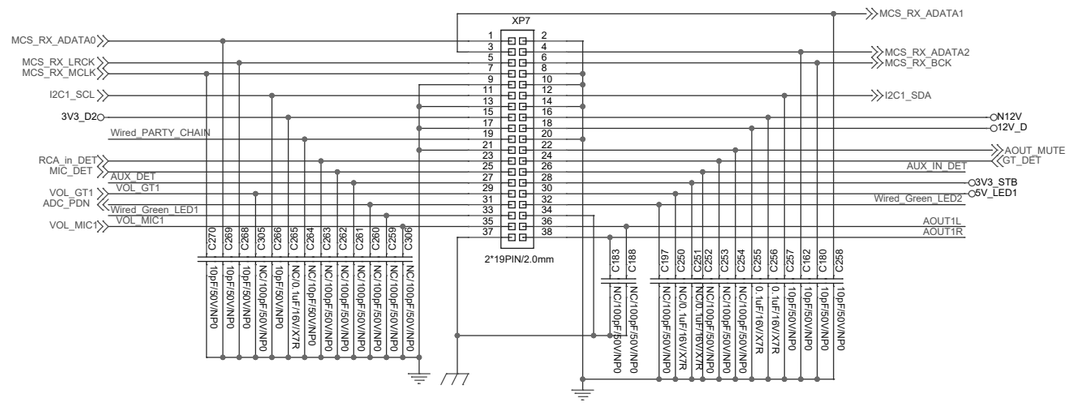



CIRCUIT DIAGRAM-FAN CONNECTING BOARD

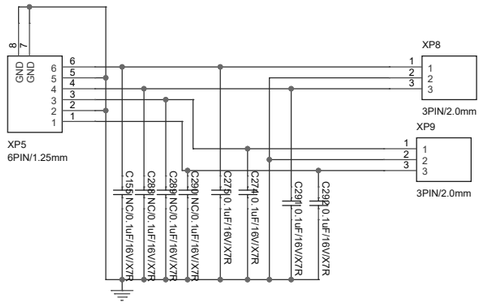


CIRCUIT DIAGRAM-KEY BOARD

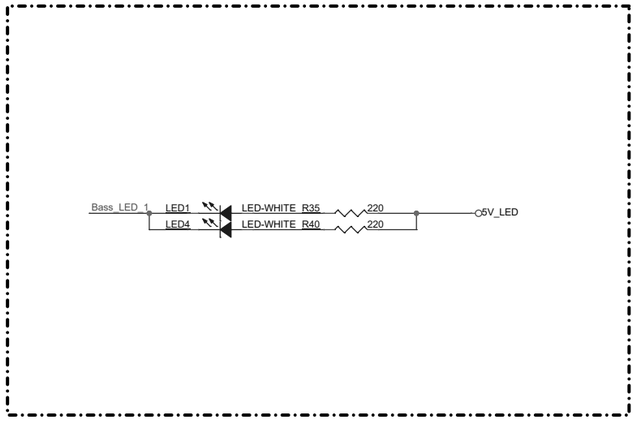

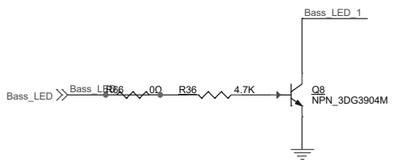


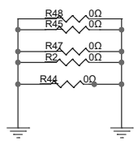



AD BUTOON

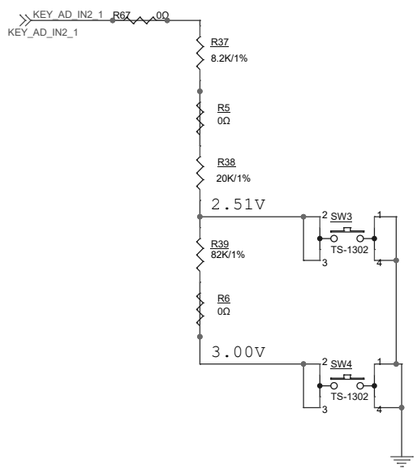



CIRCUIT DIAGRAM-KEY BOARD

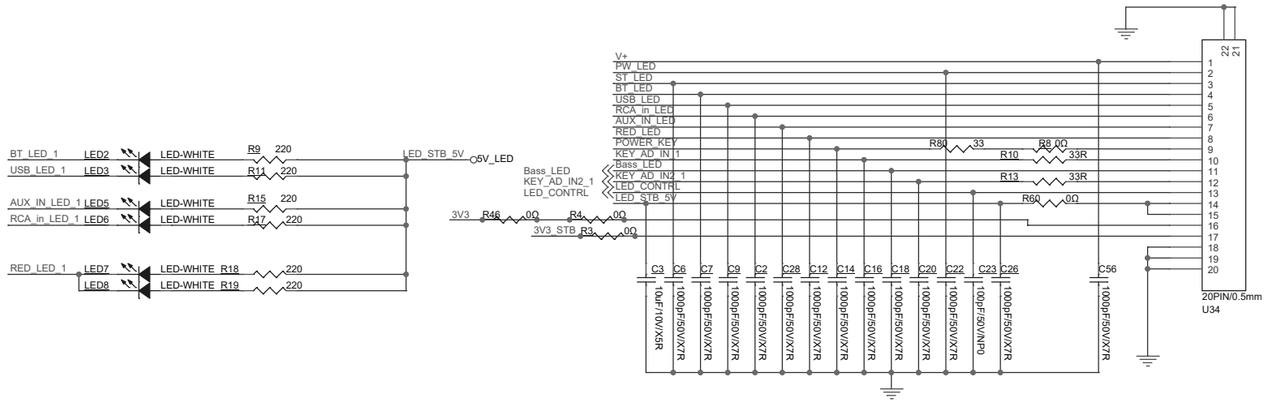


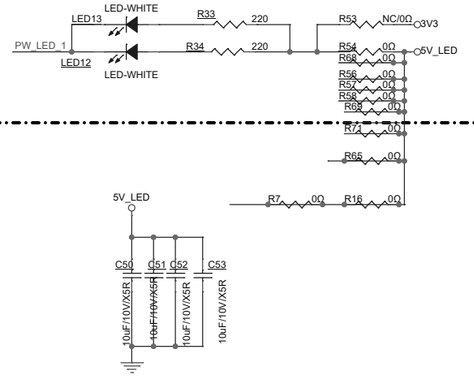


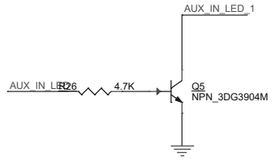

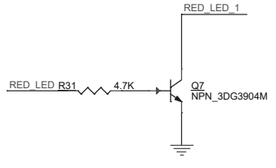

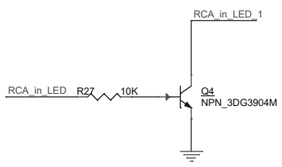


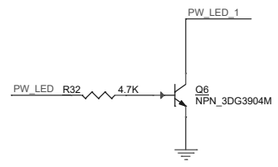

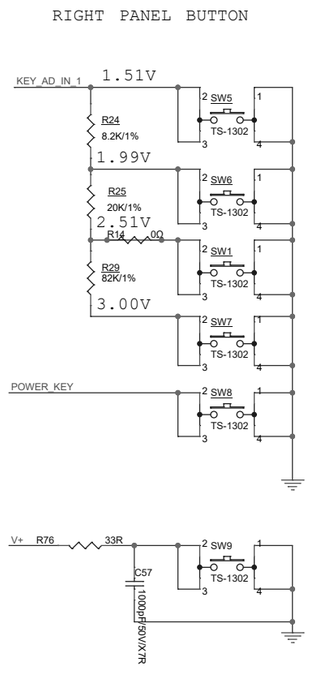


CIRCUIT DIAGRAM-3D TOUCH LAMP BOARD

3D TOUCH LED

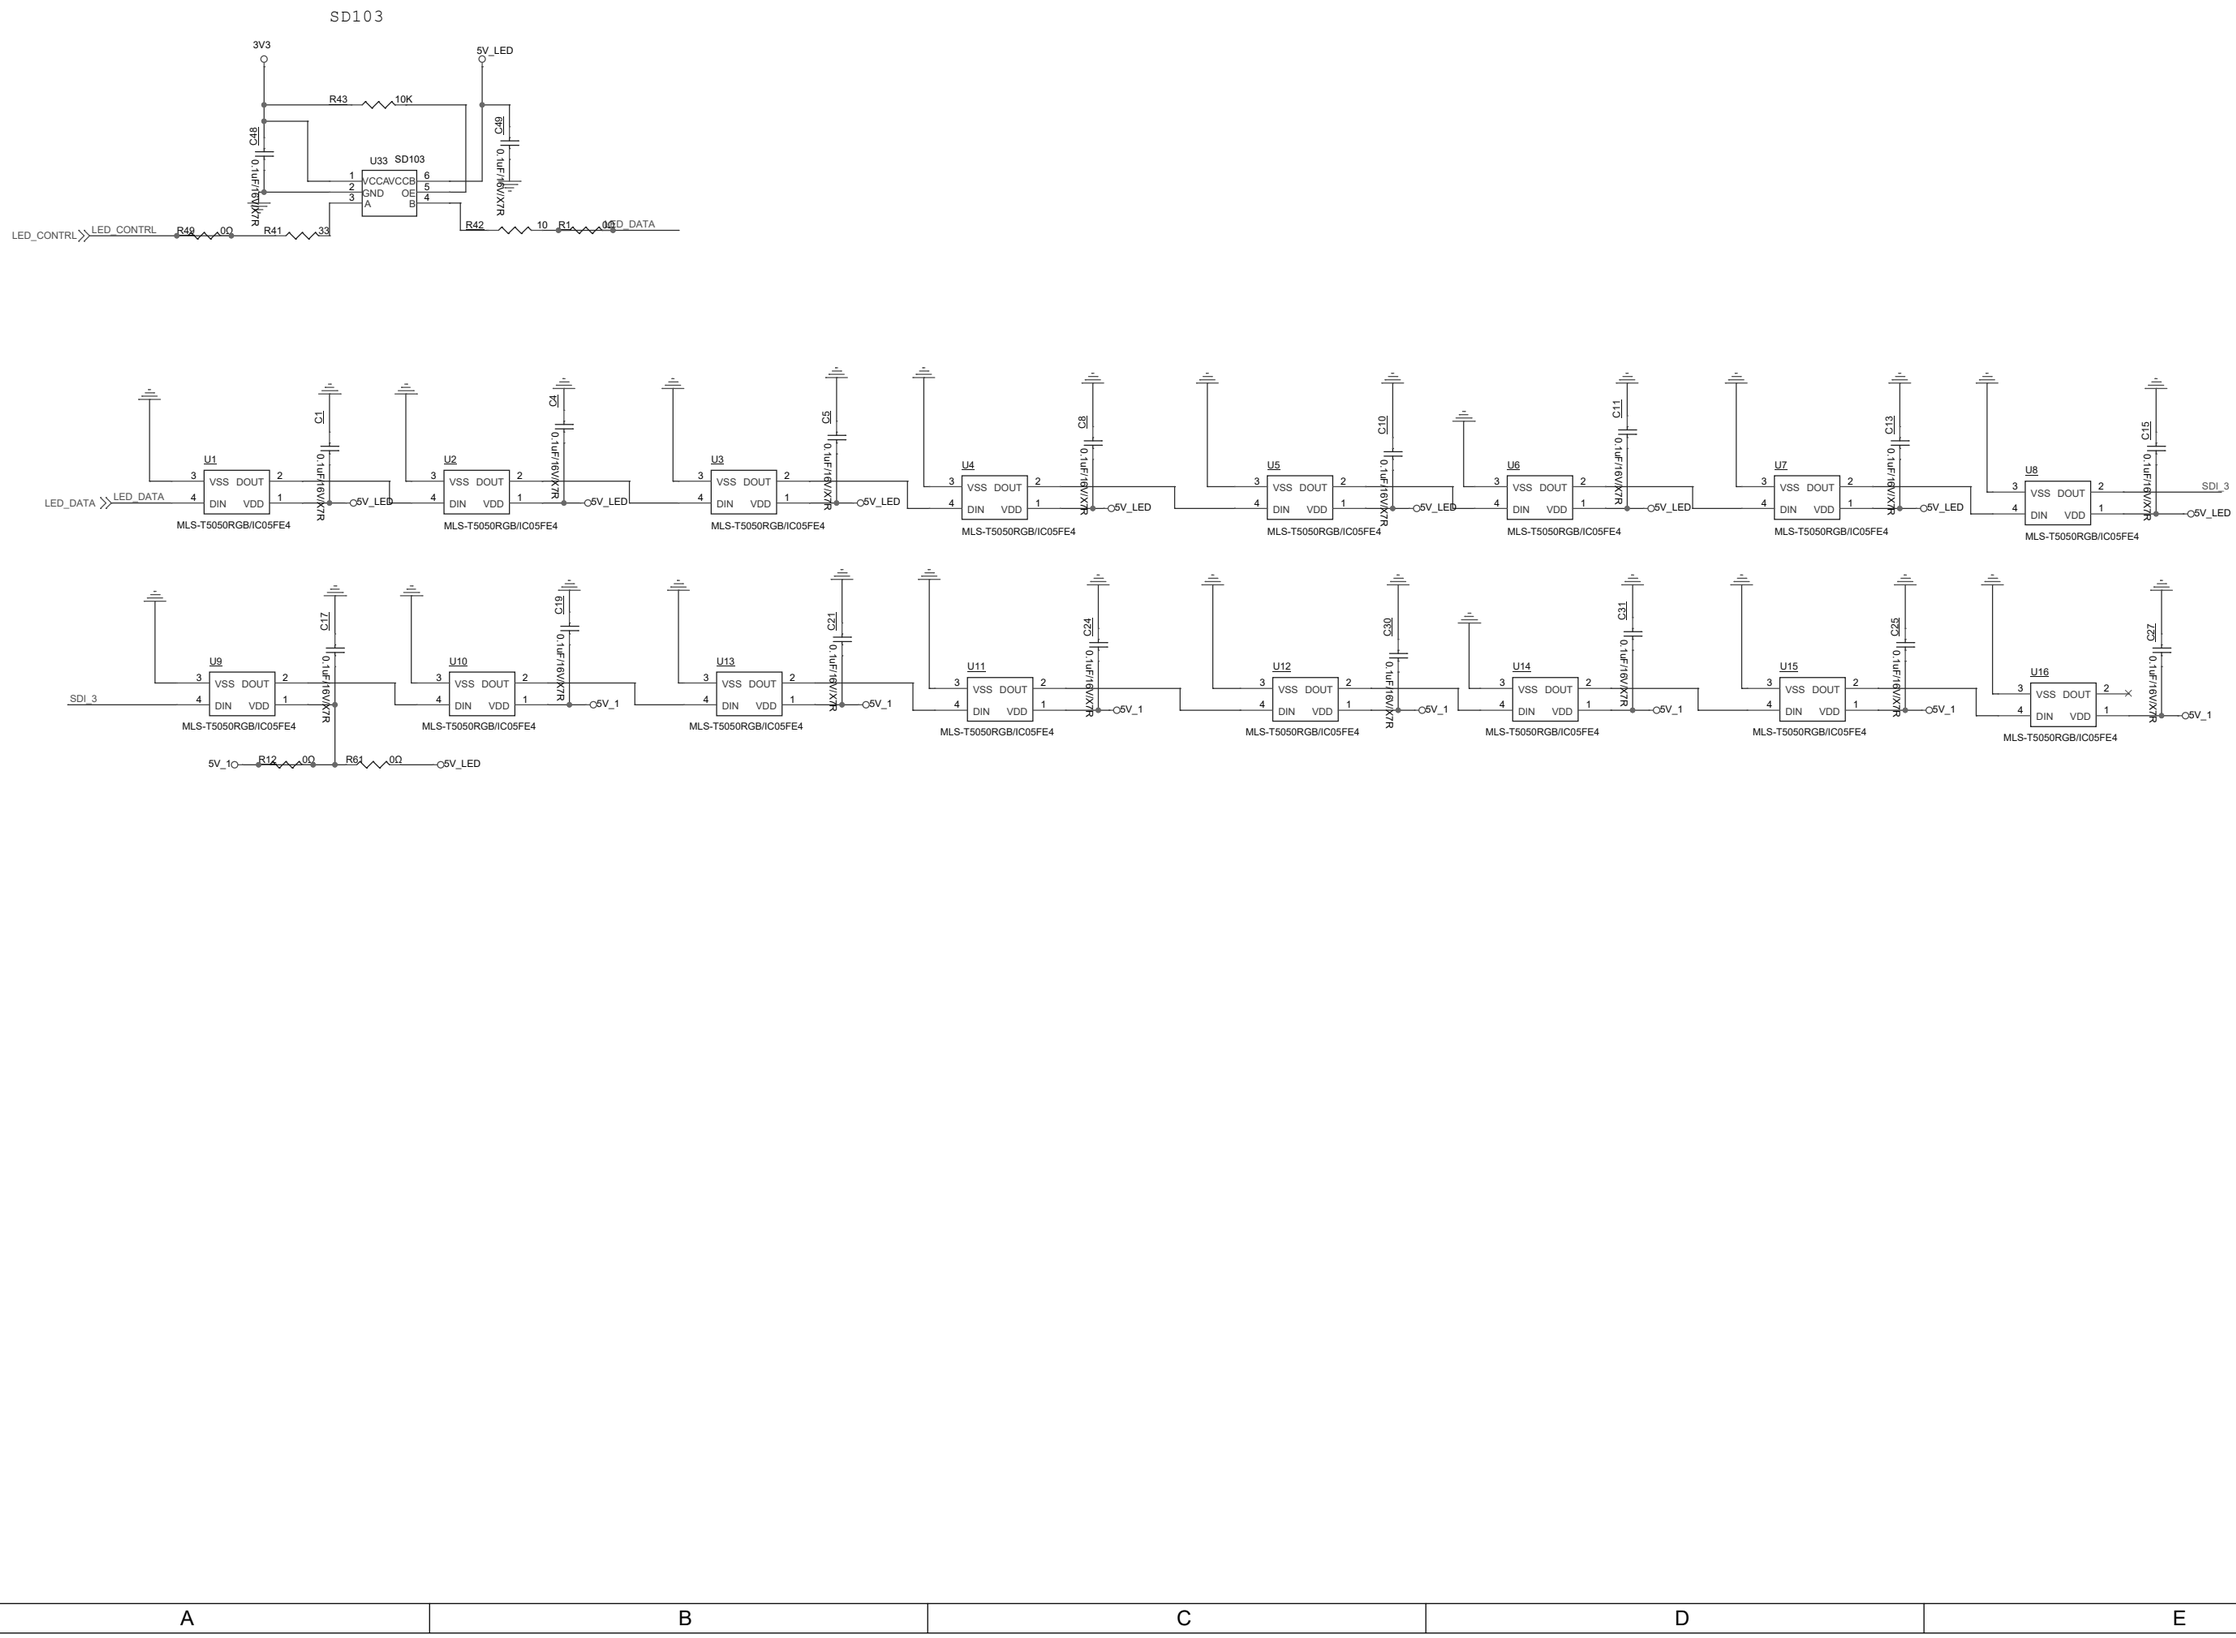



CIRCUIT DIAGRAM-FA LAMP BOARD


FLASH LED

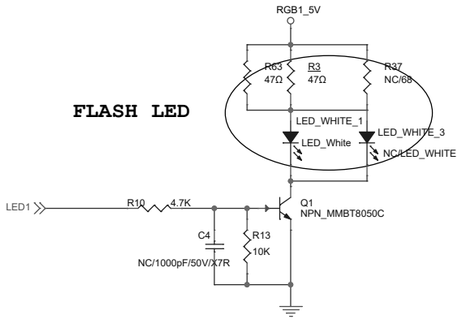


FLASH LED

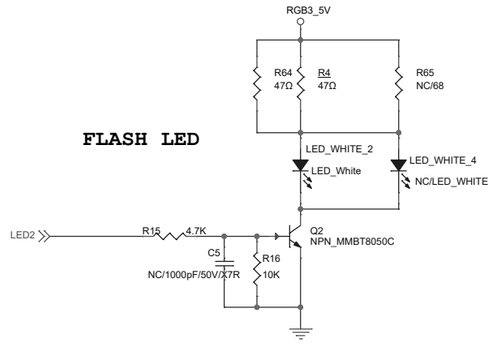


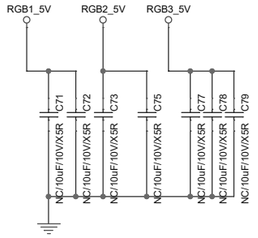


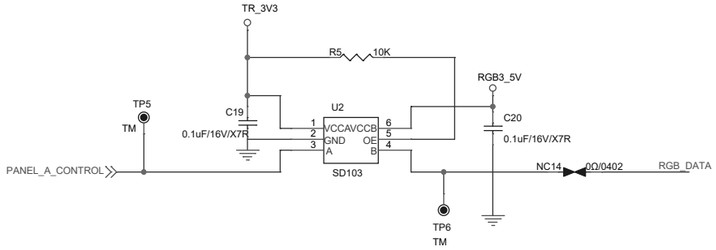

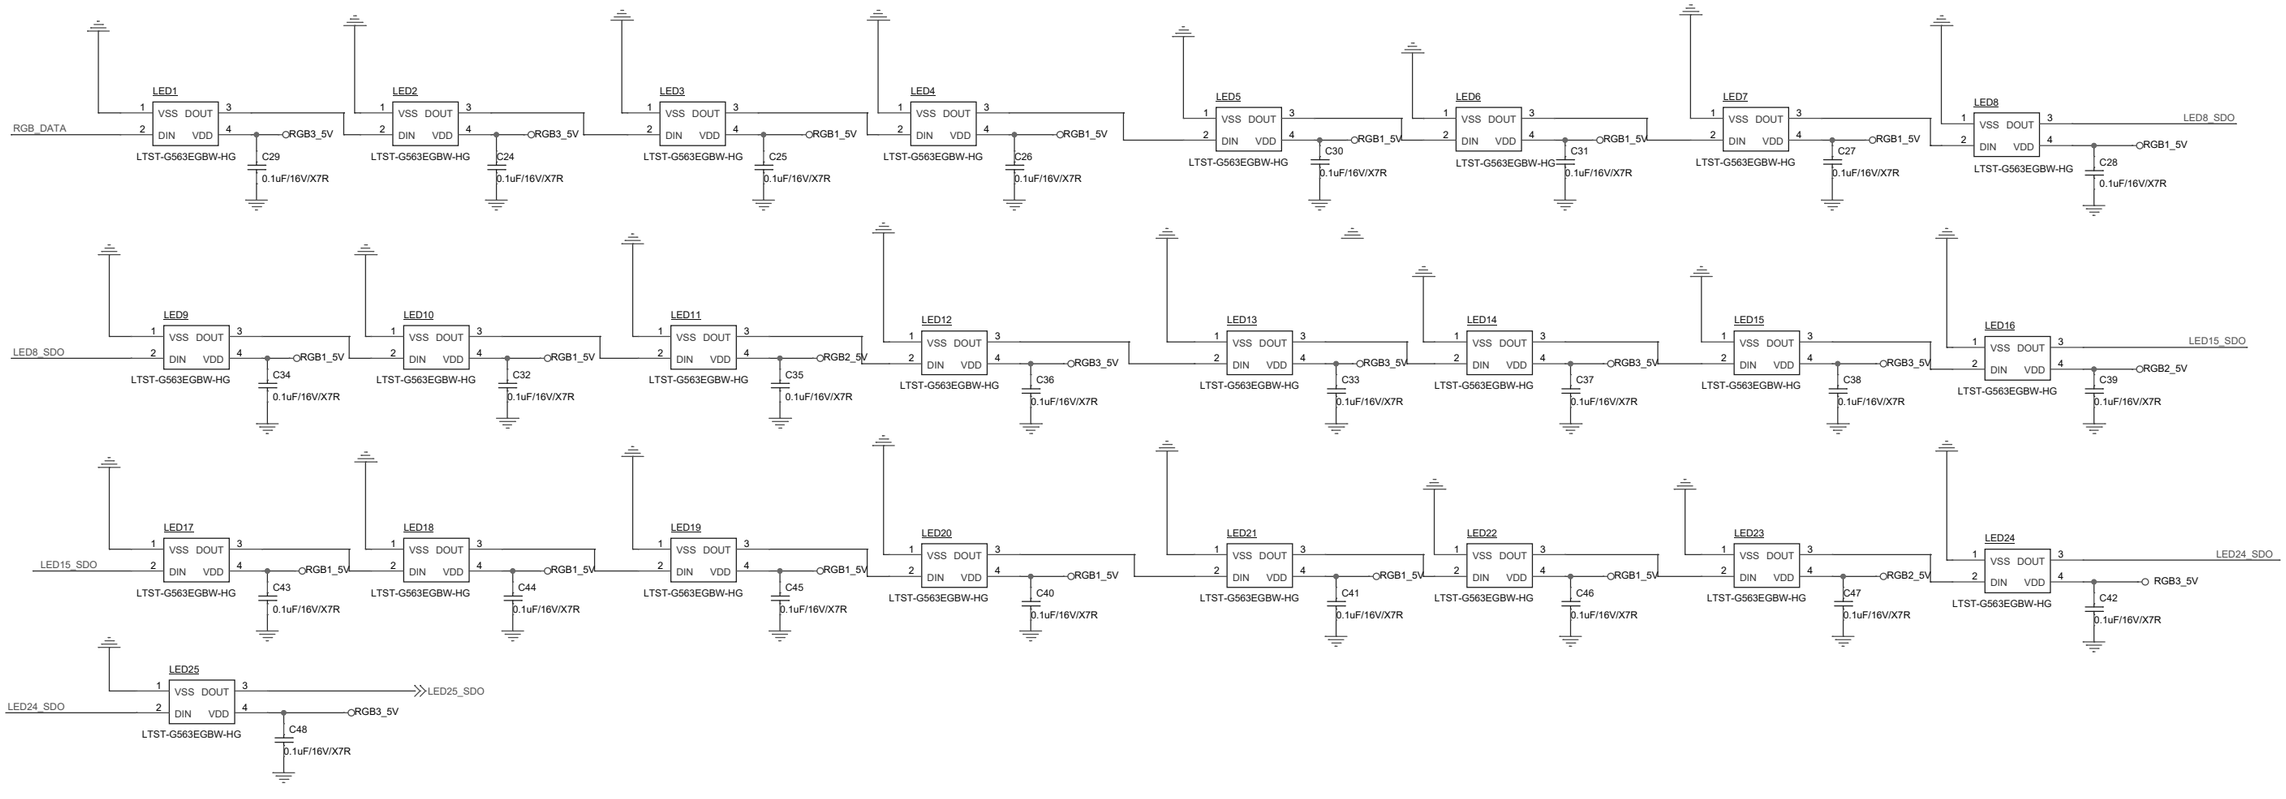


CIRCUIT DIAGRAM-FA LAMP BOARD

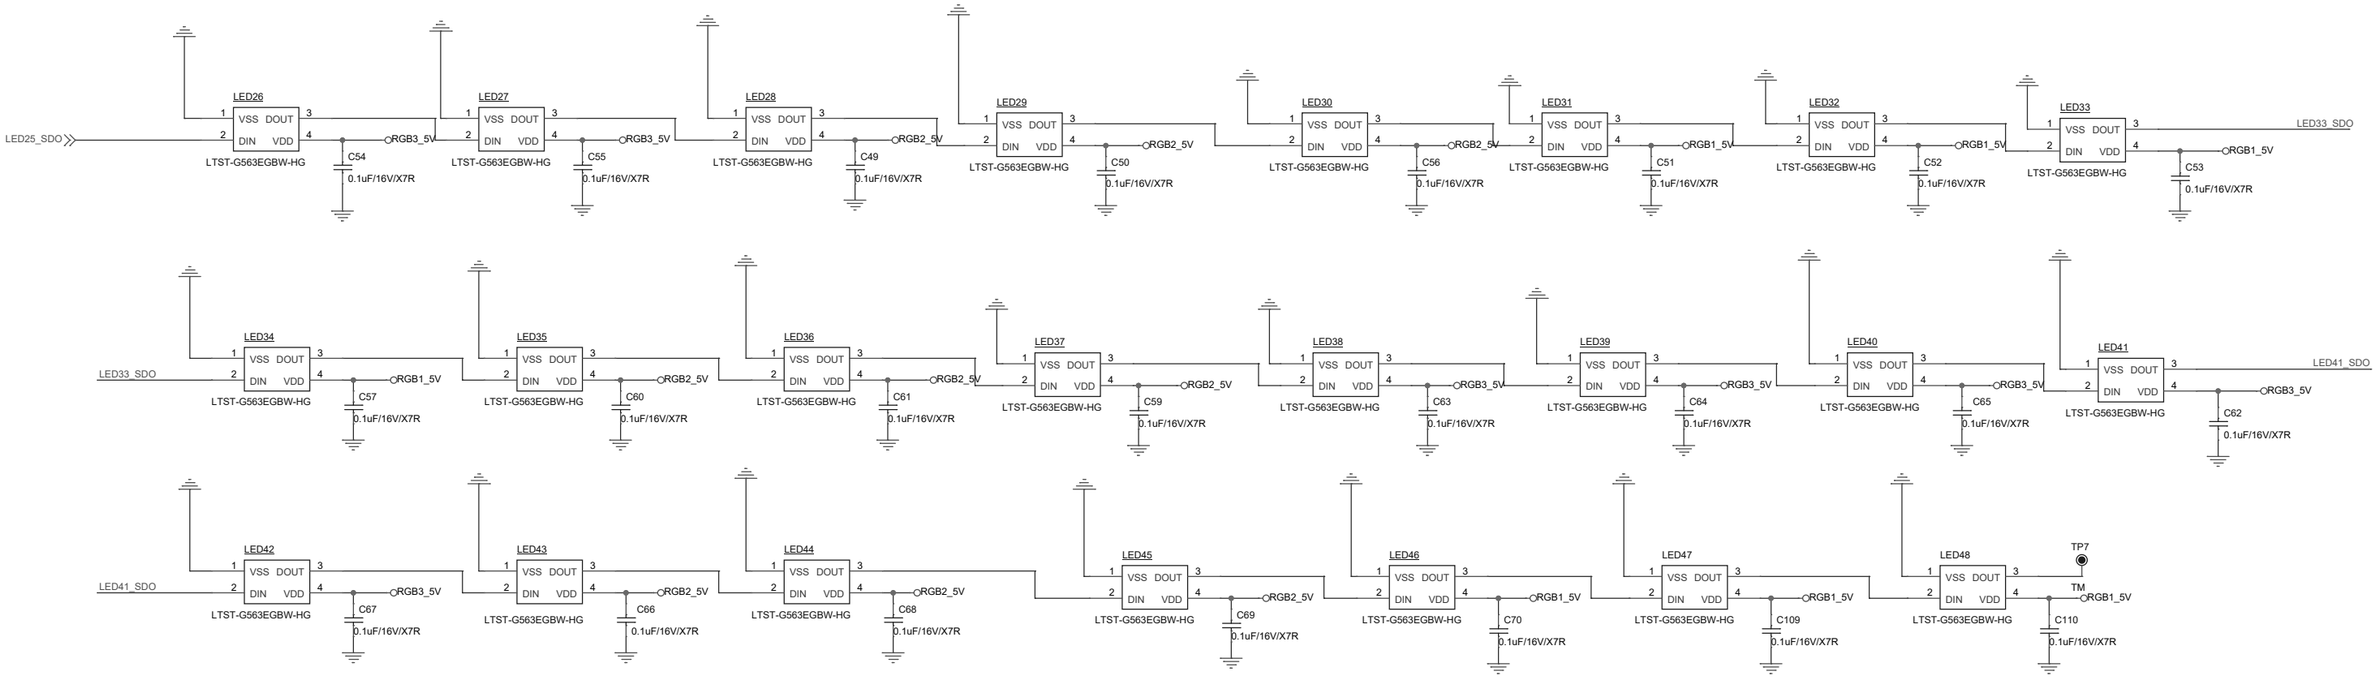


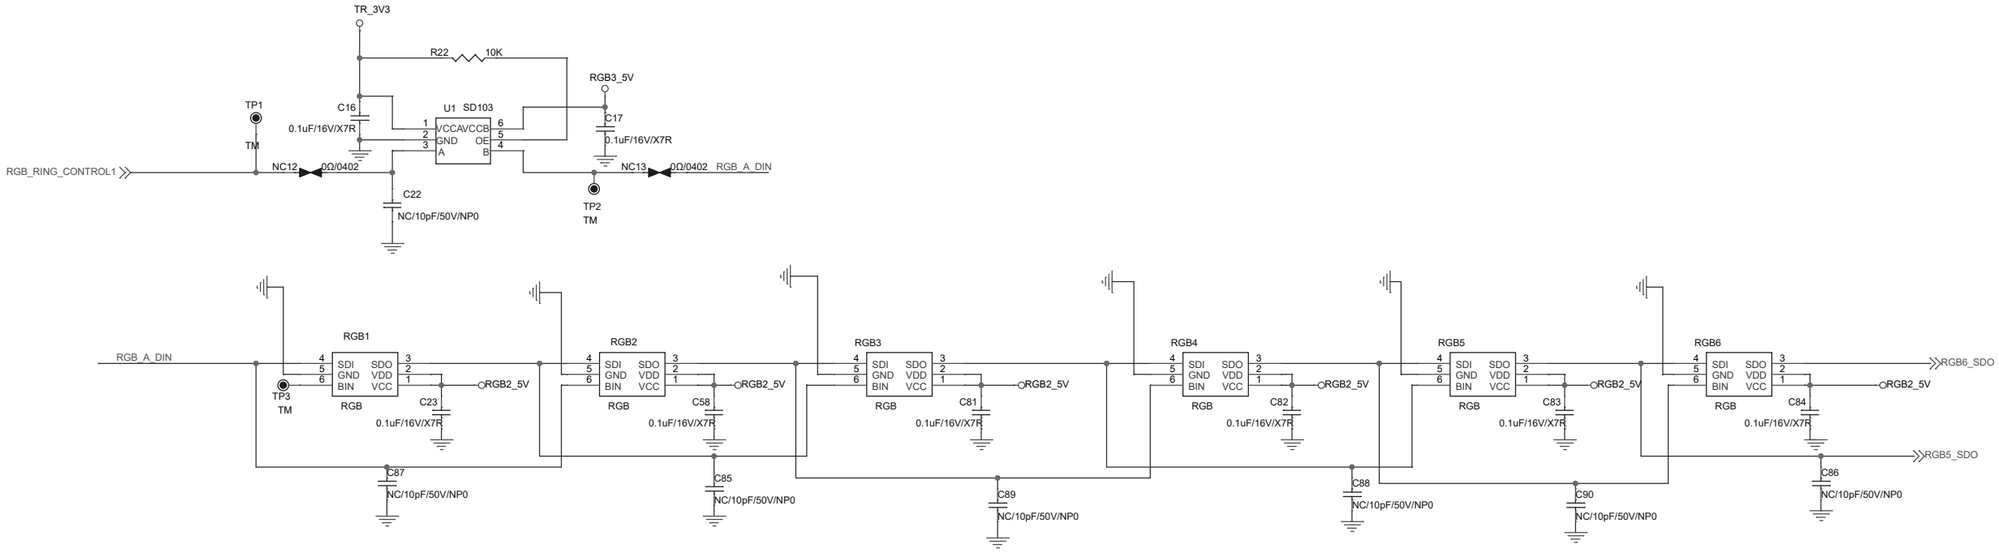


CIRCUIT DIAGRAM-FA LAMP BOARD

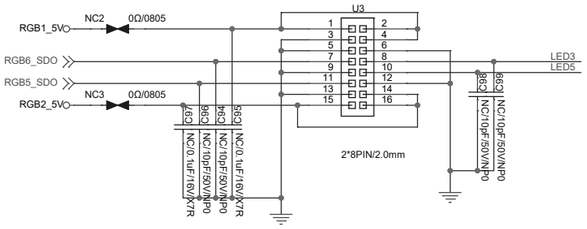



connect to FB U1

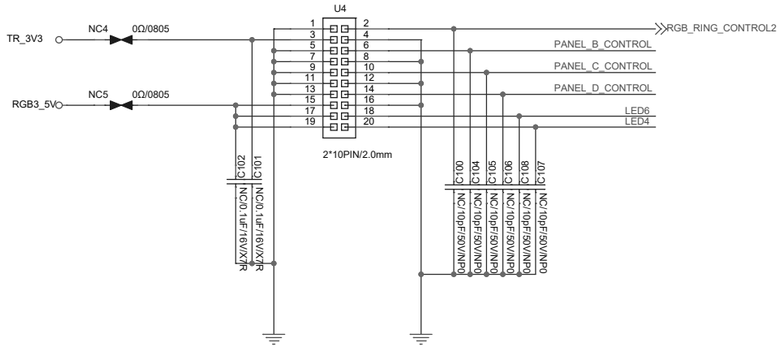



connect to FC U3

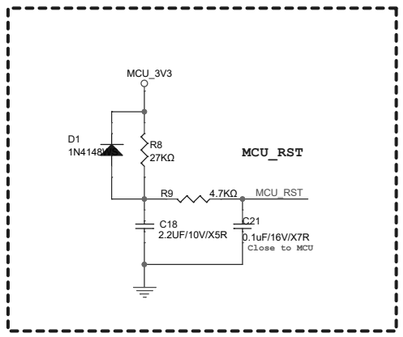


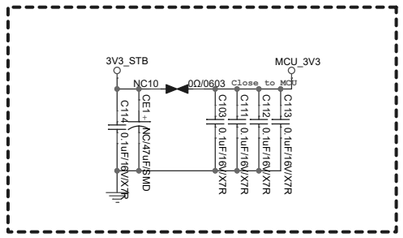

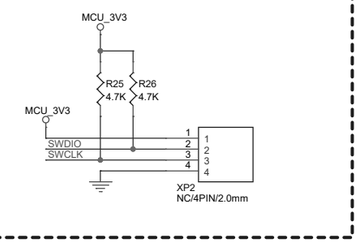


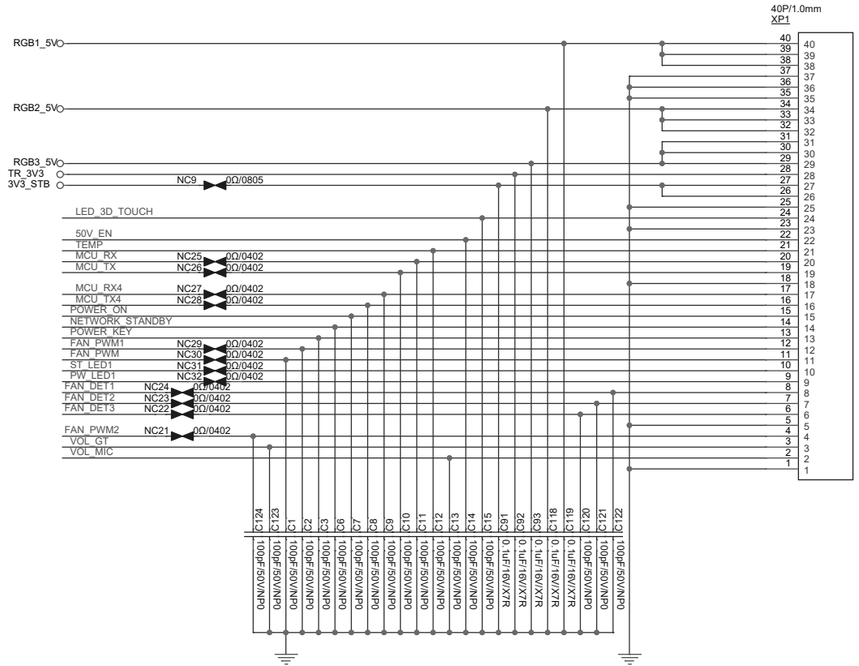

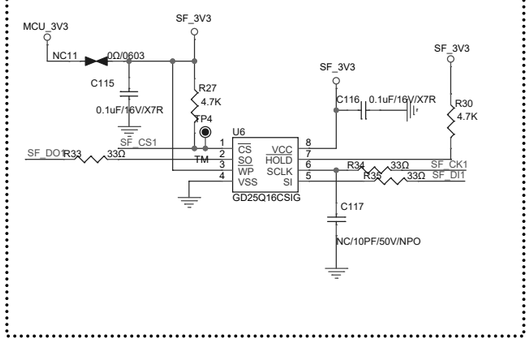


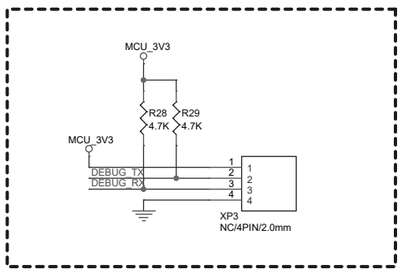


CIRCUIT DIAGRAM-FB LAMP BOARD

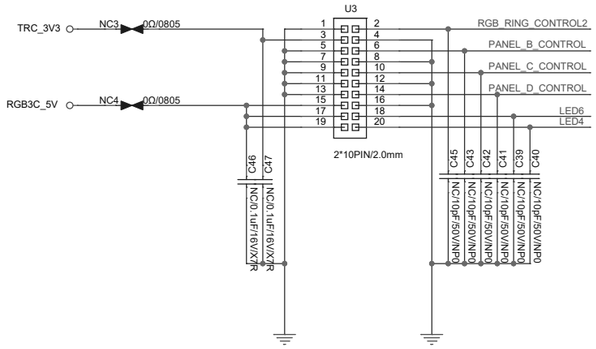



connect to FA U4

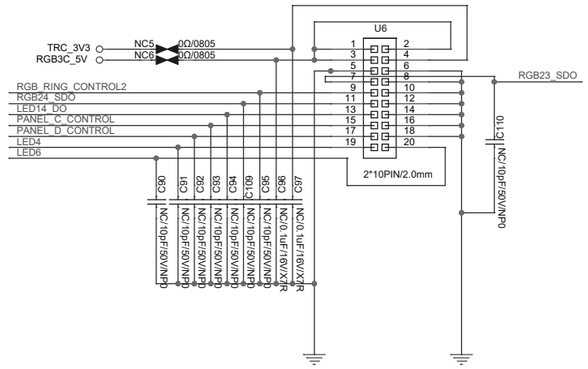


connect to FD U8

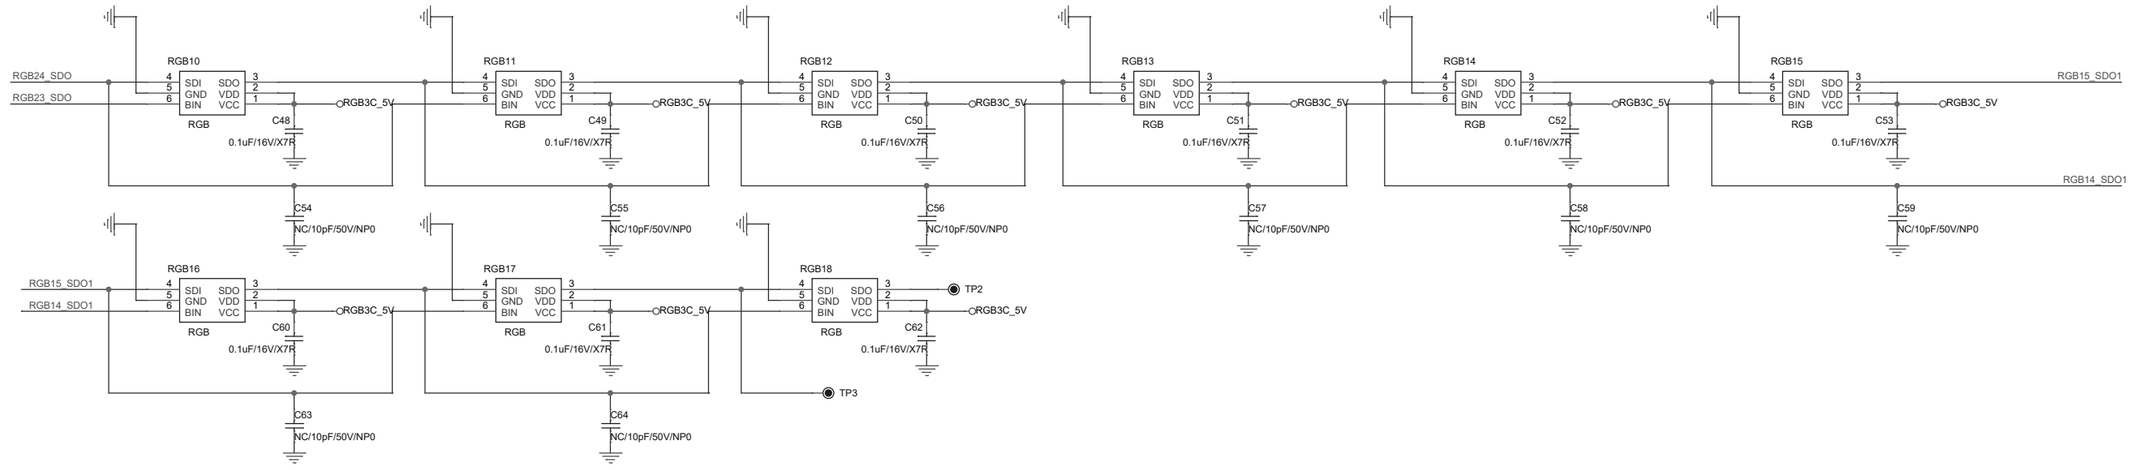


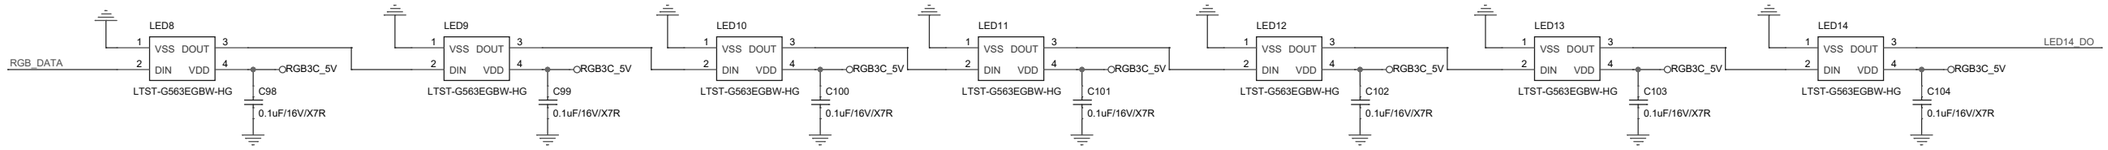


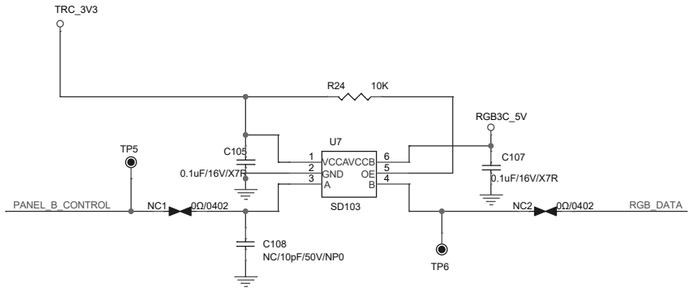


CIRCUIT DIAGRAM-FC LAMP BOARD

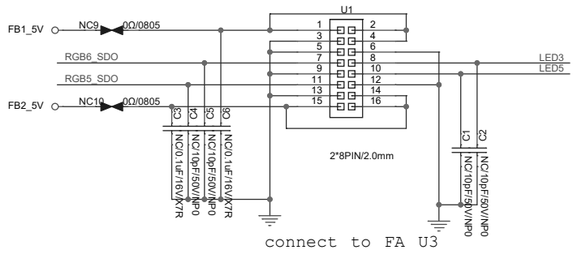


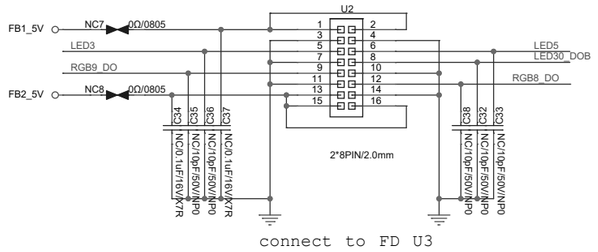

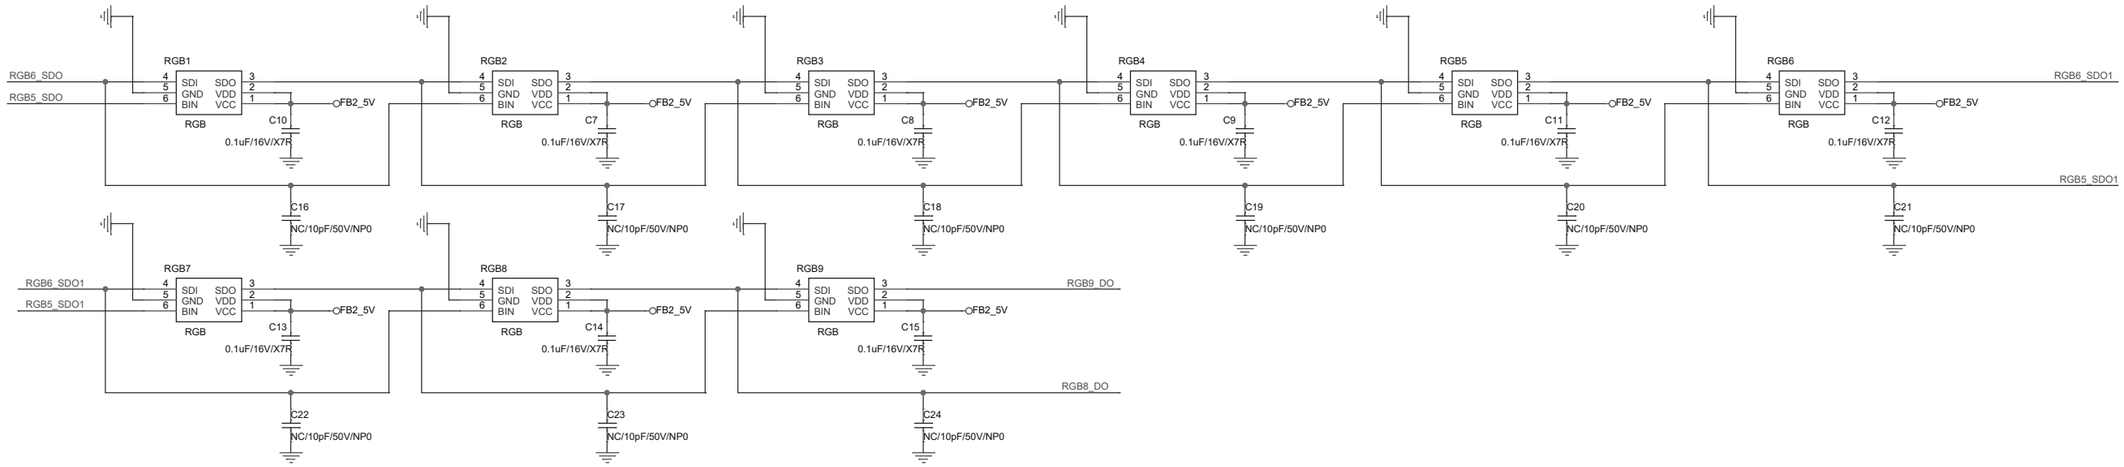


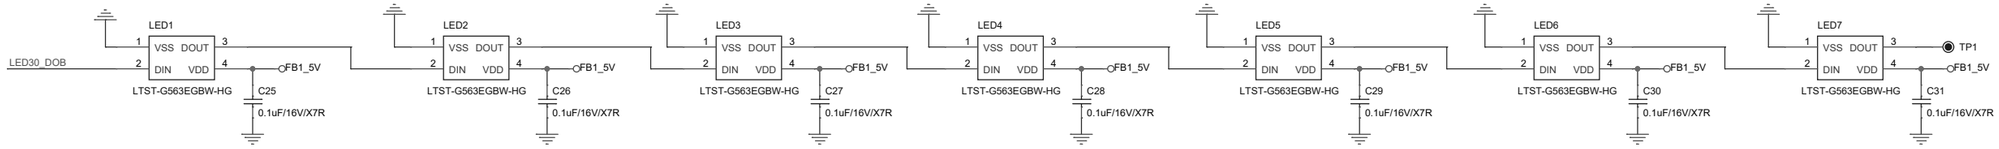


CIRCUIT DIAGRAM-FD LAMP BOARD

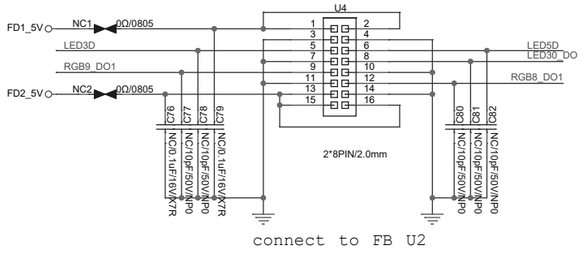


connect to FB U2

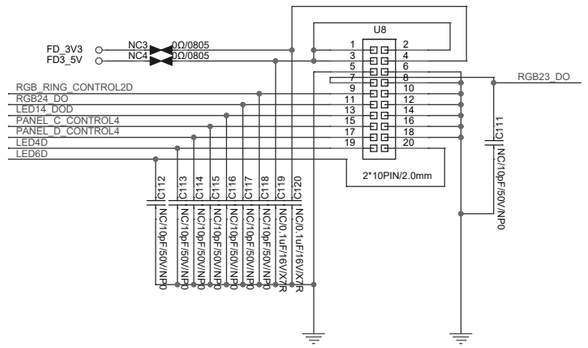


connect to FC U6

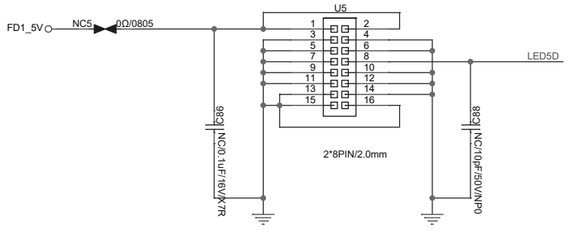



connect to FE U2

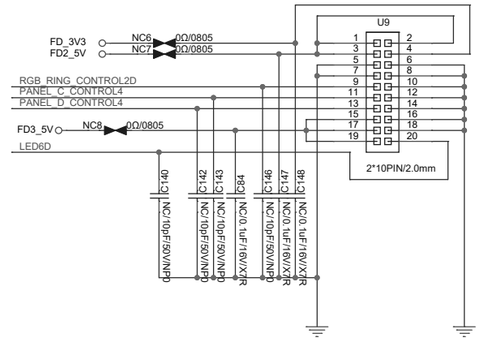


connect to FE U6

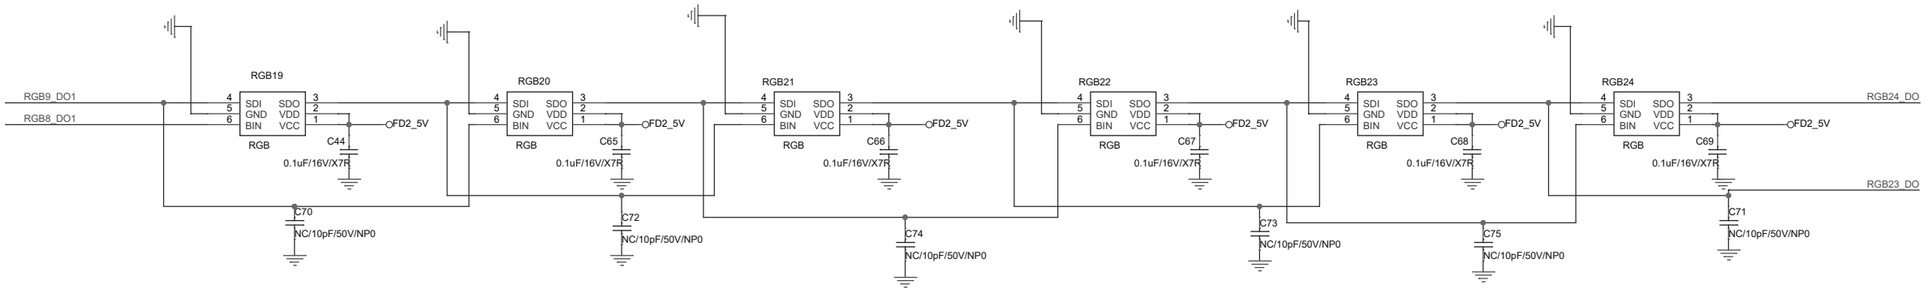


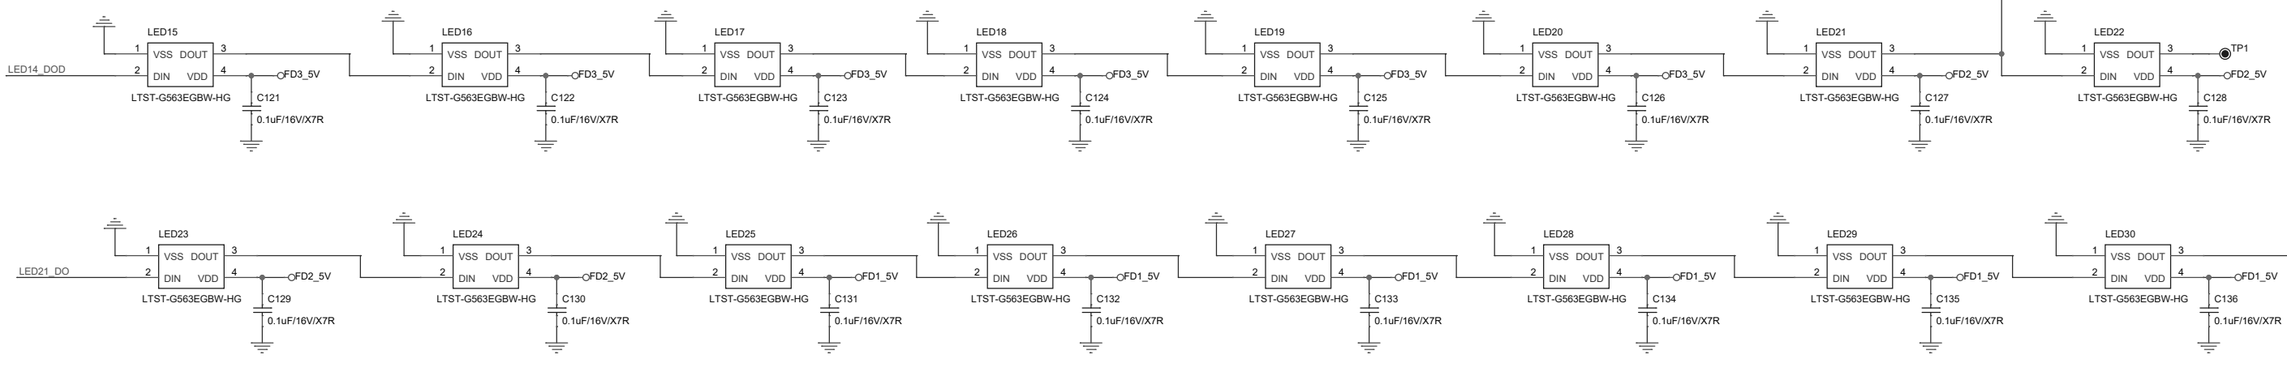


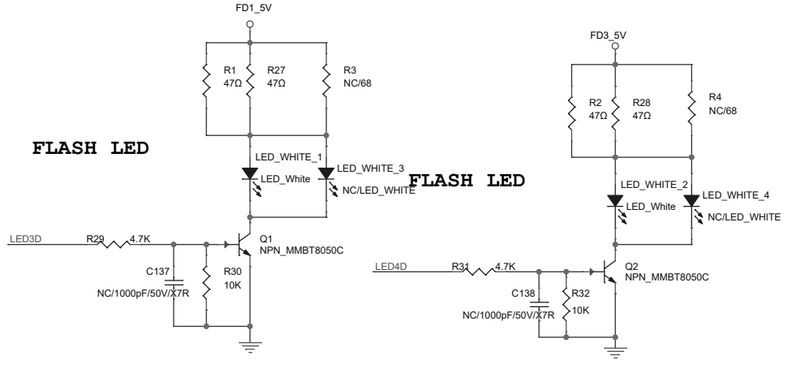


CIRCUIT DIAGRAM-FF LAMP BOARD

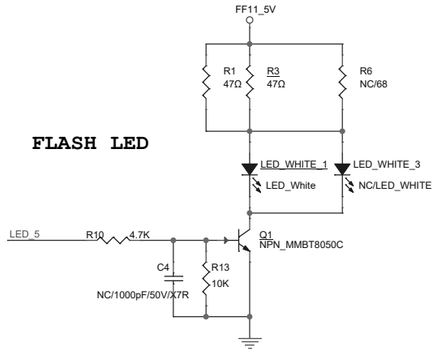

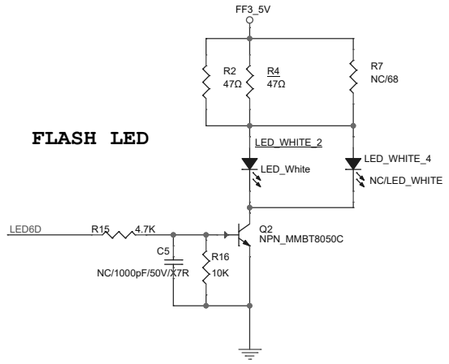


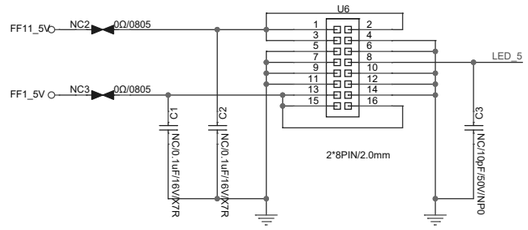


connect to FE U5

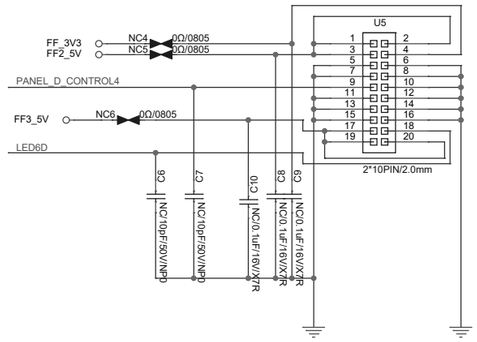


connect to FE U4

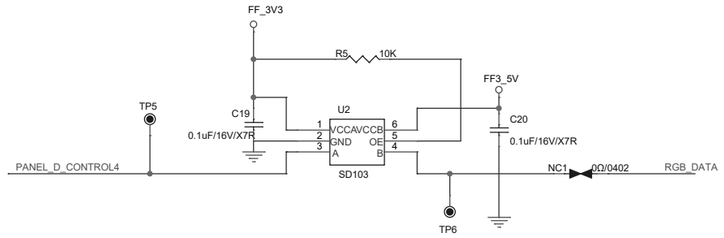


CIRCUIT DIAGRAM-FF LAMP BOARD

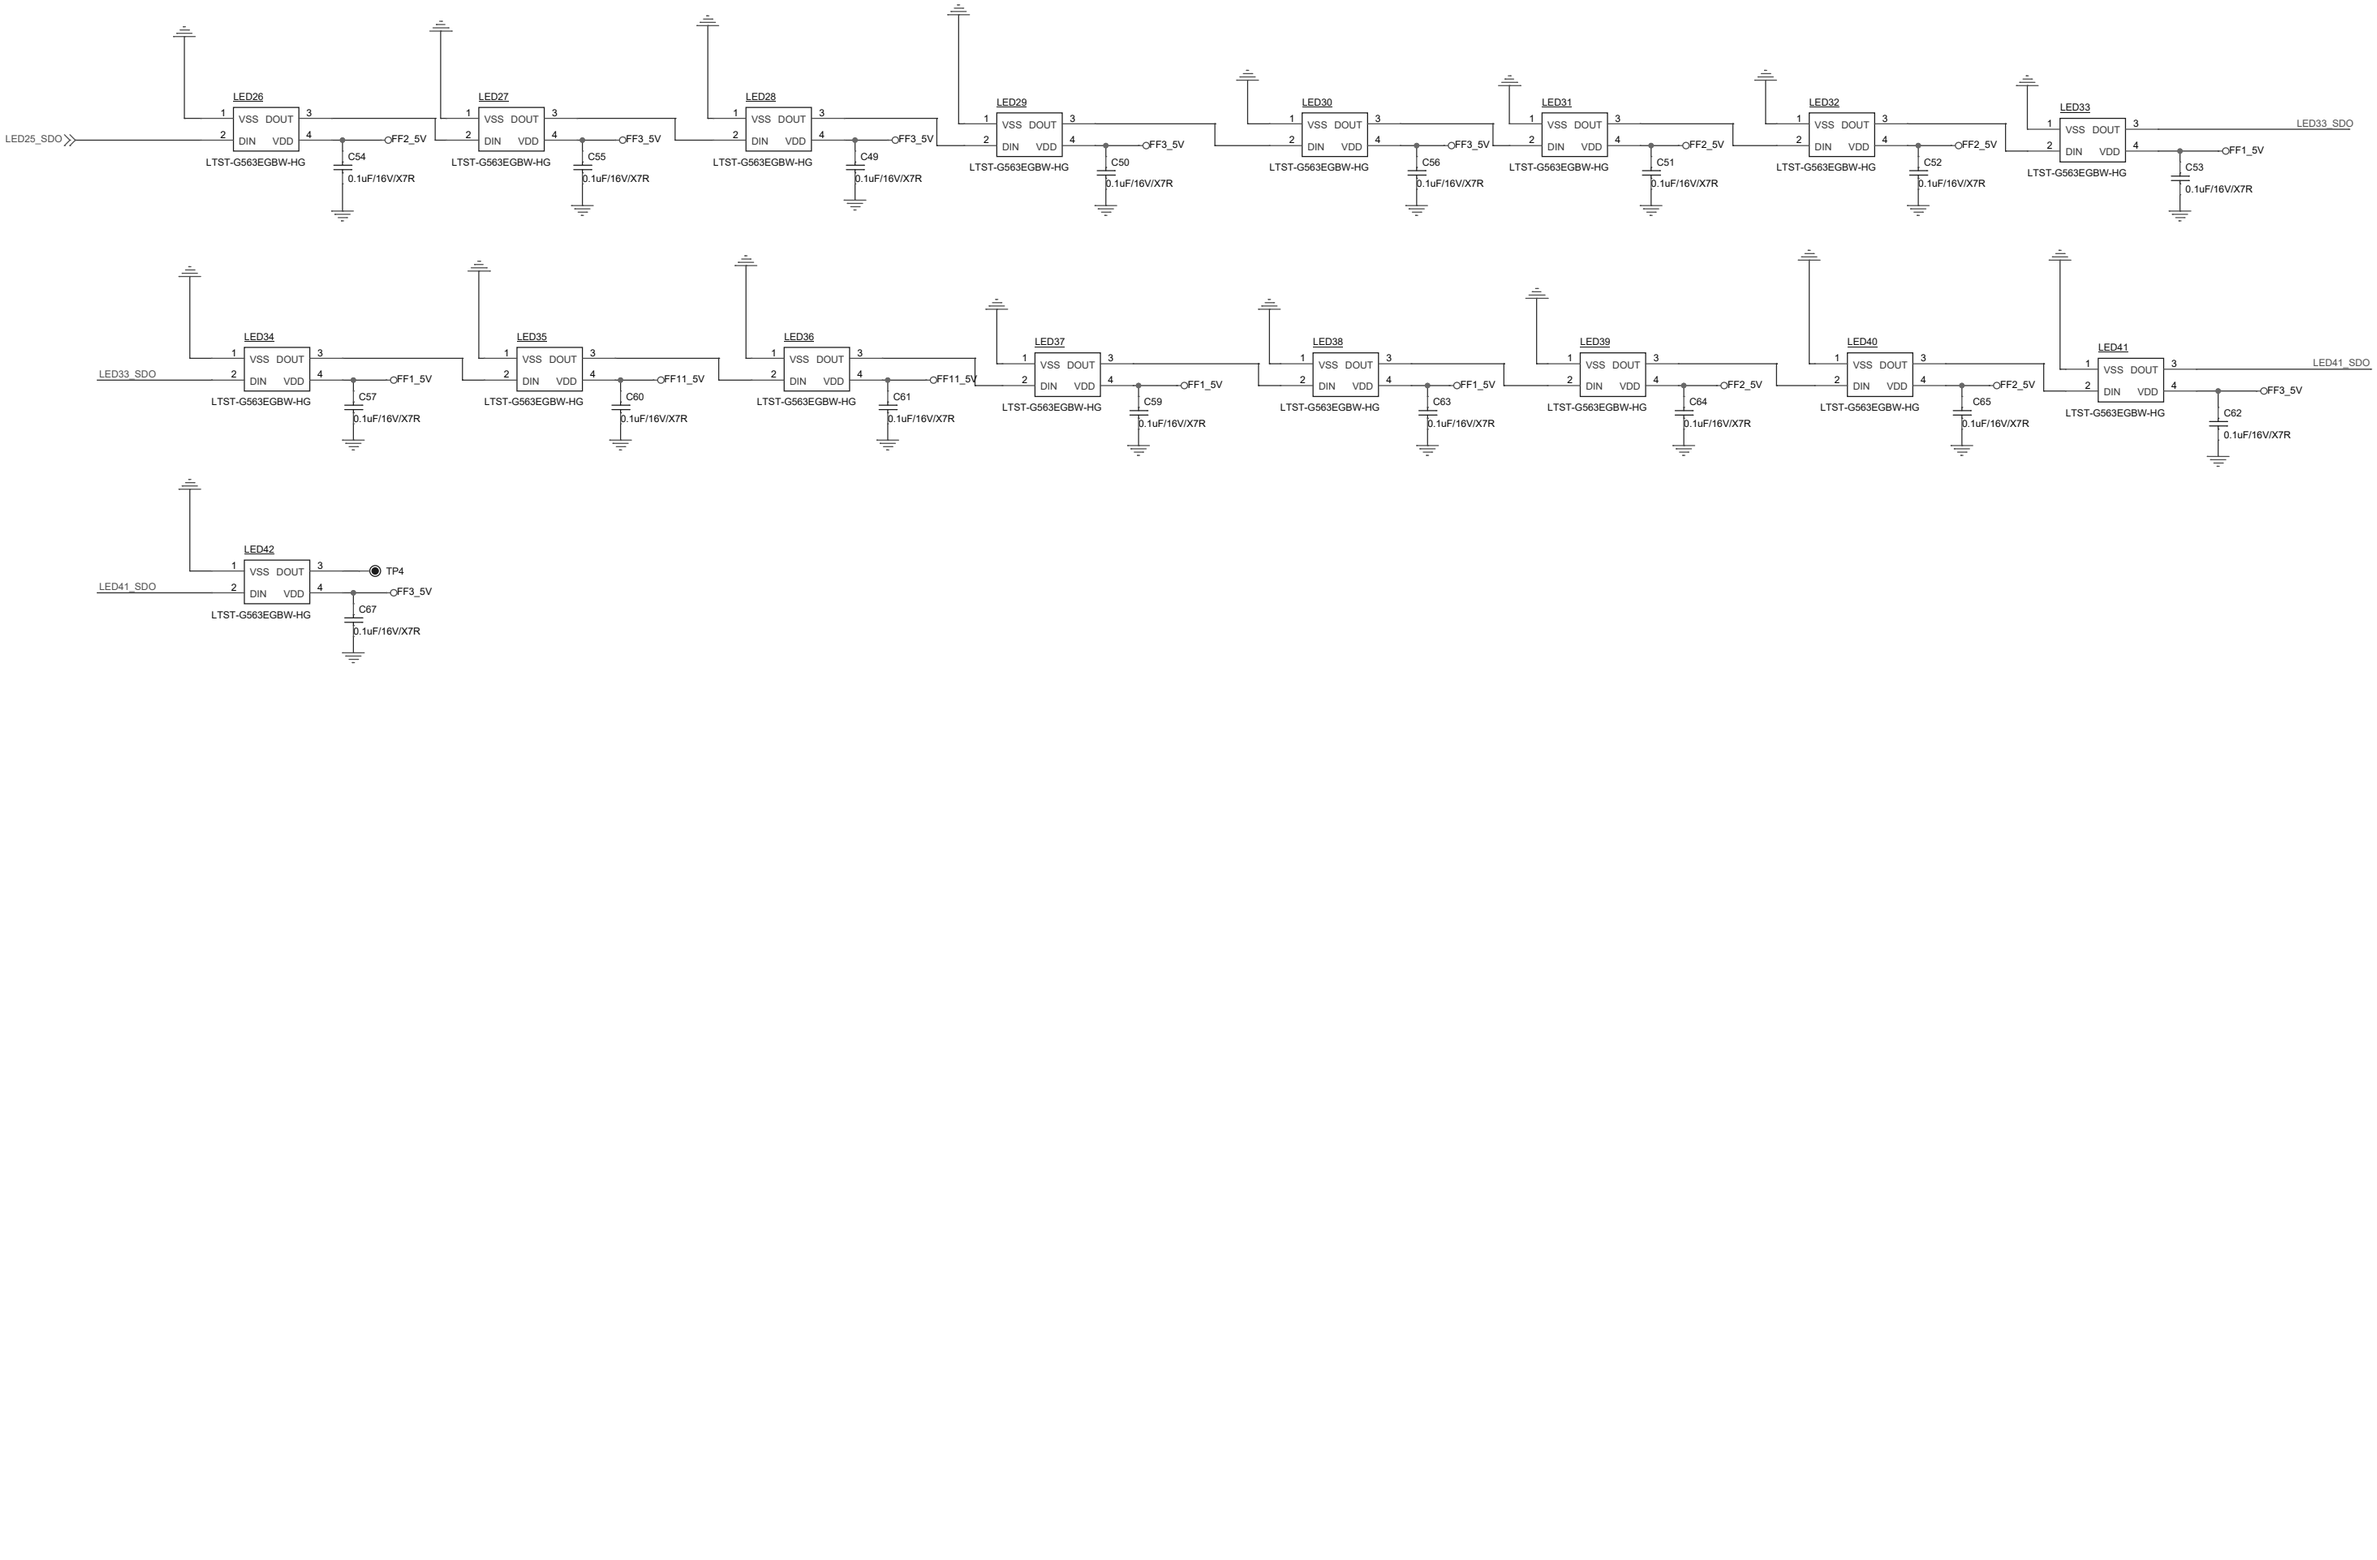


CIRCUIT DIAGRAM-POWER BOARD

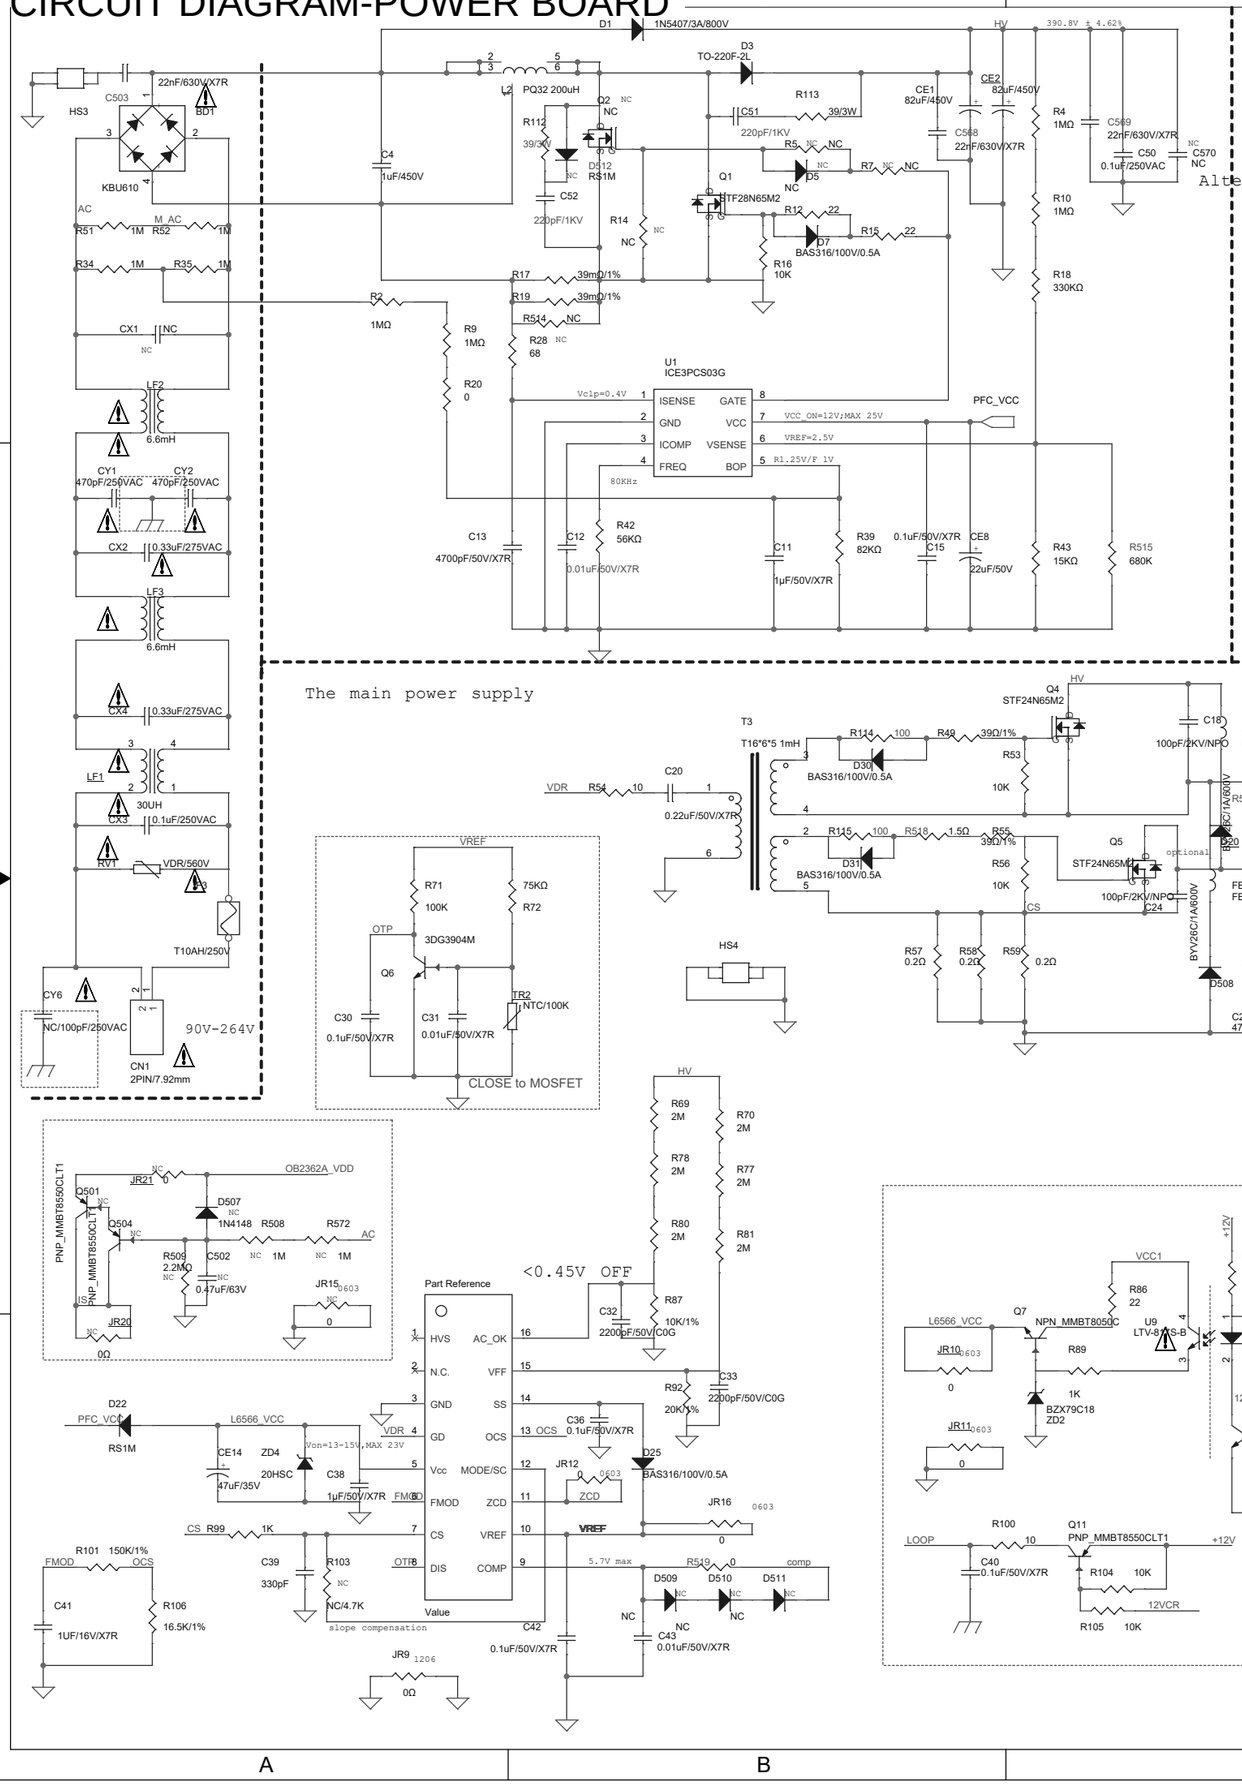

FA LAMP PCB - COMPONENT LAYOUT

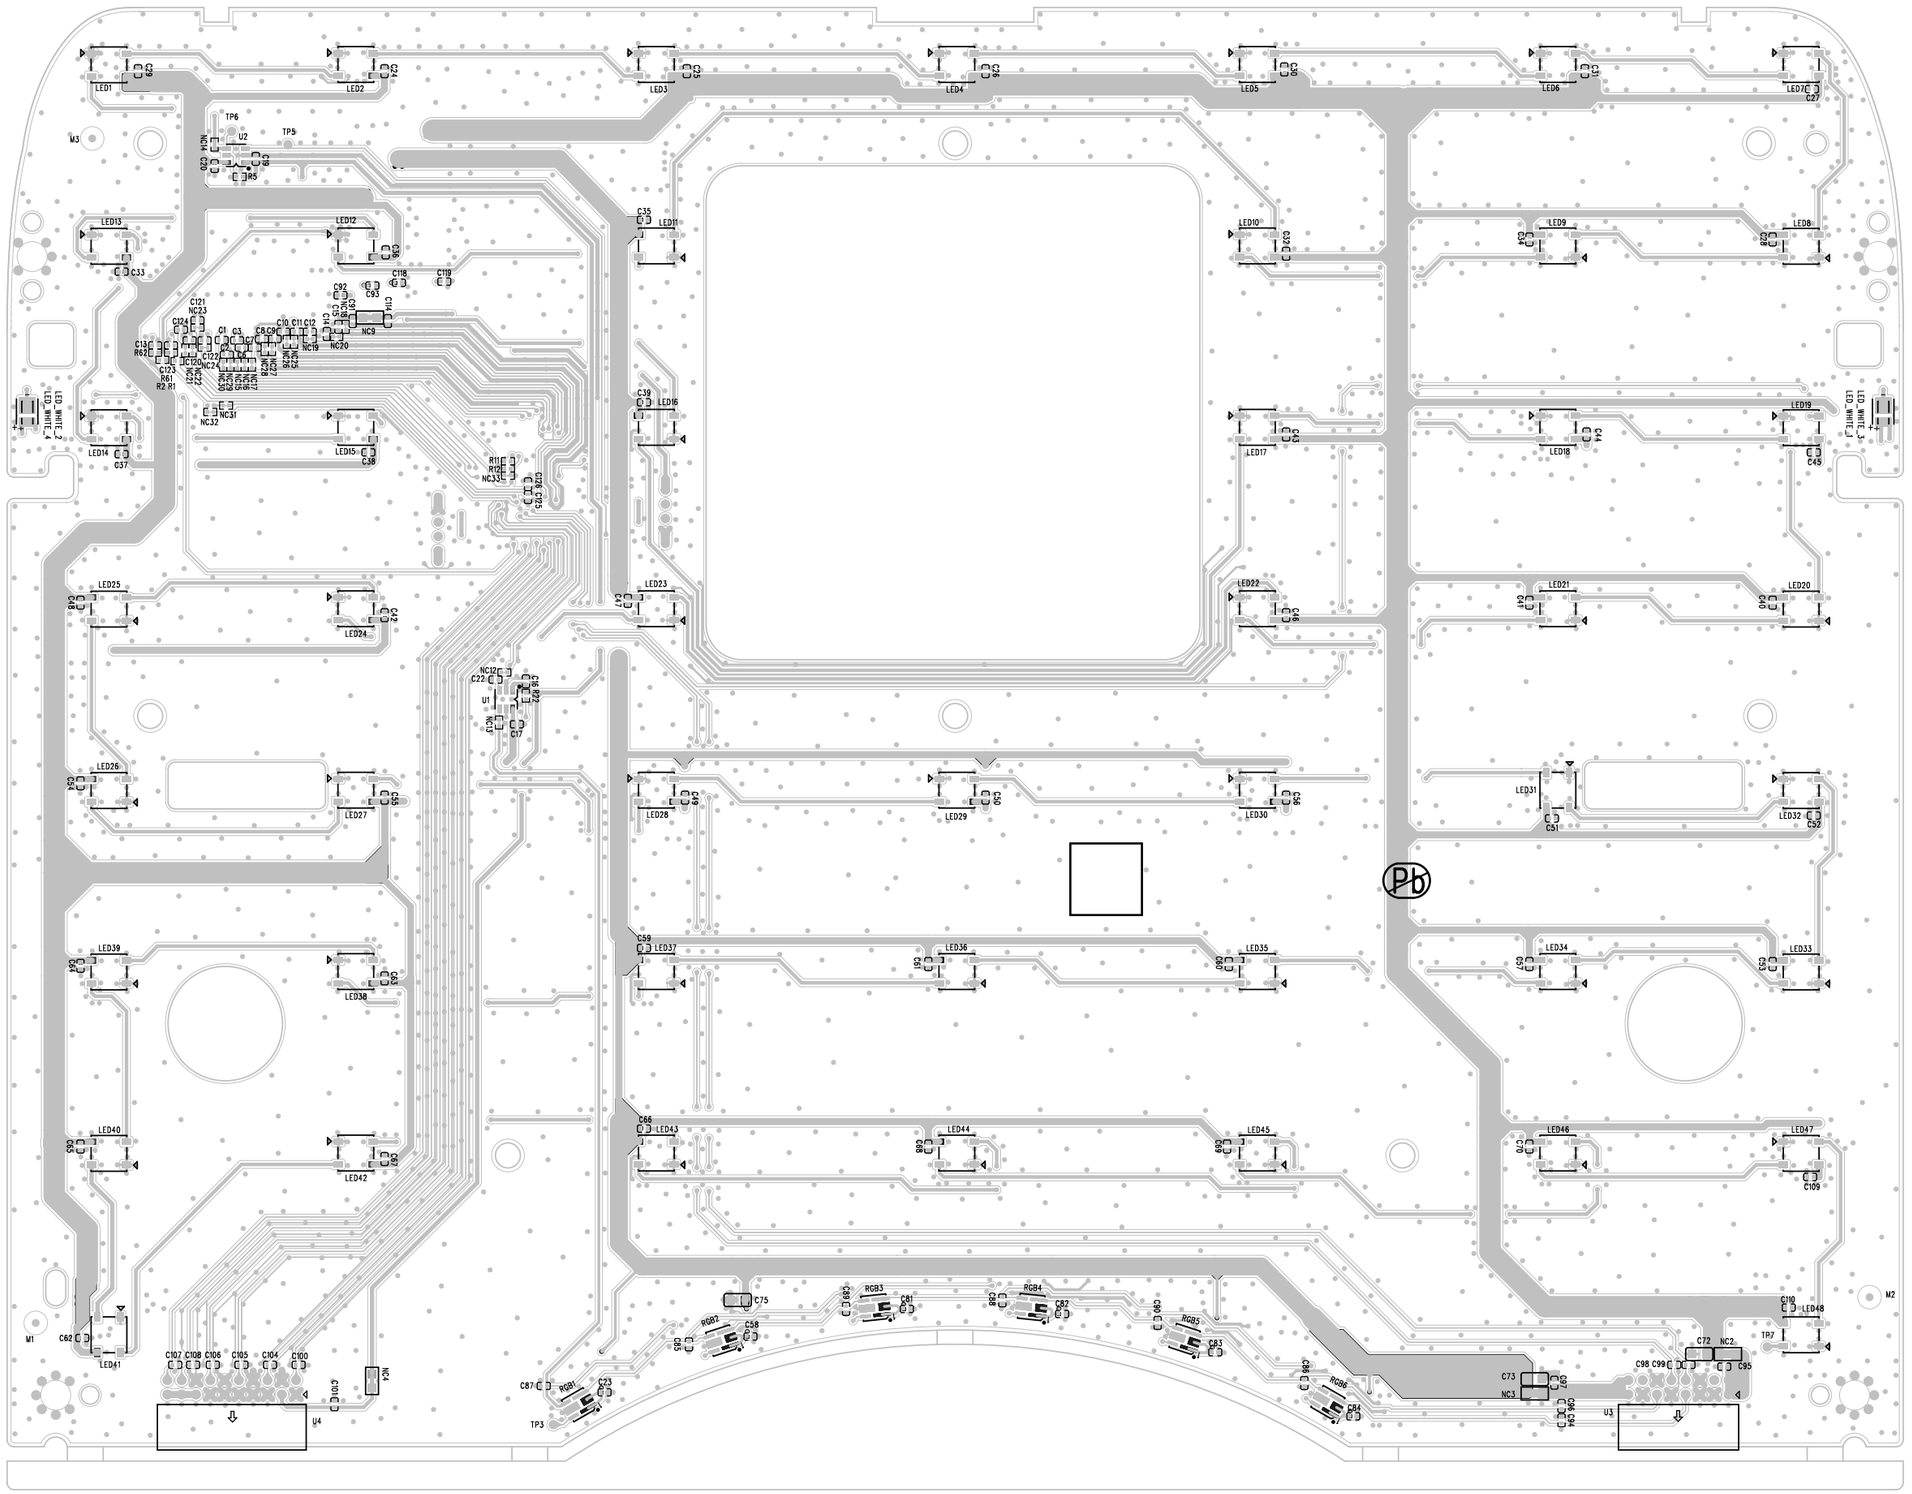


FA LAMP PCB - COMPONENT LAYOUT

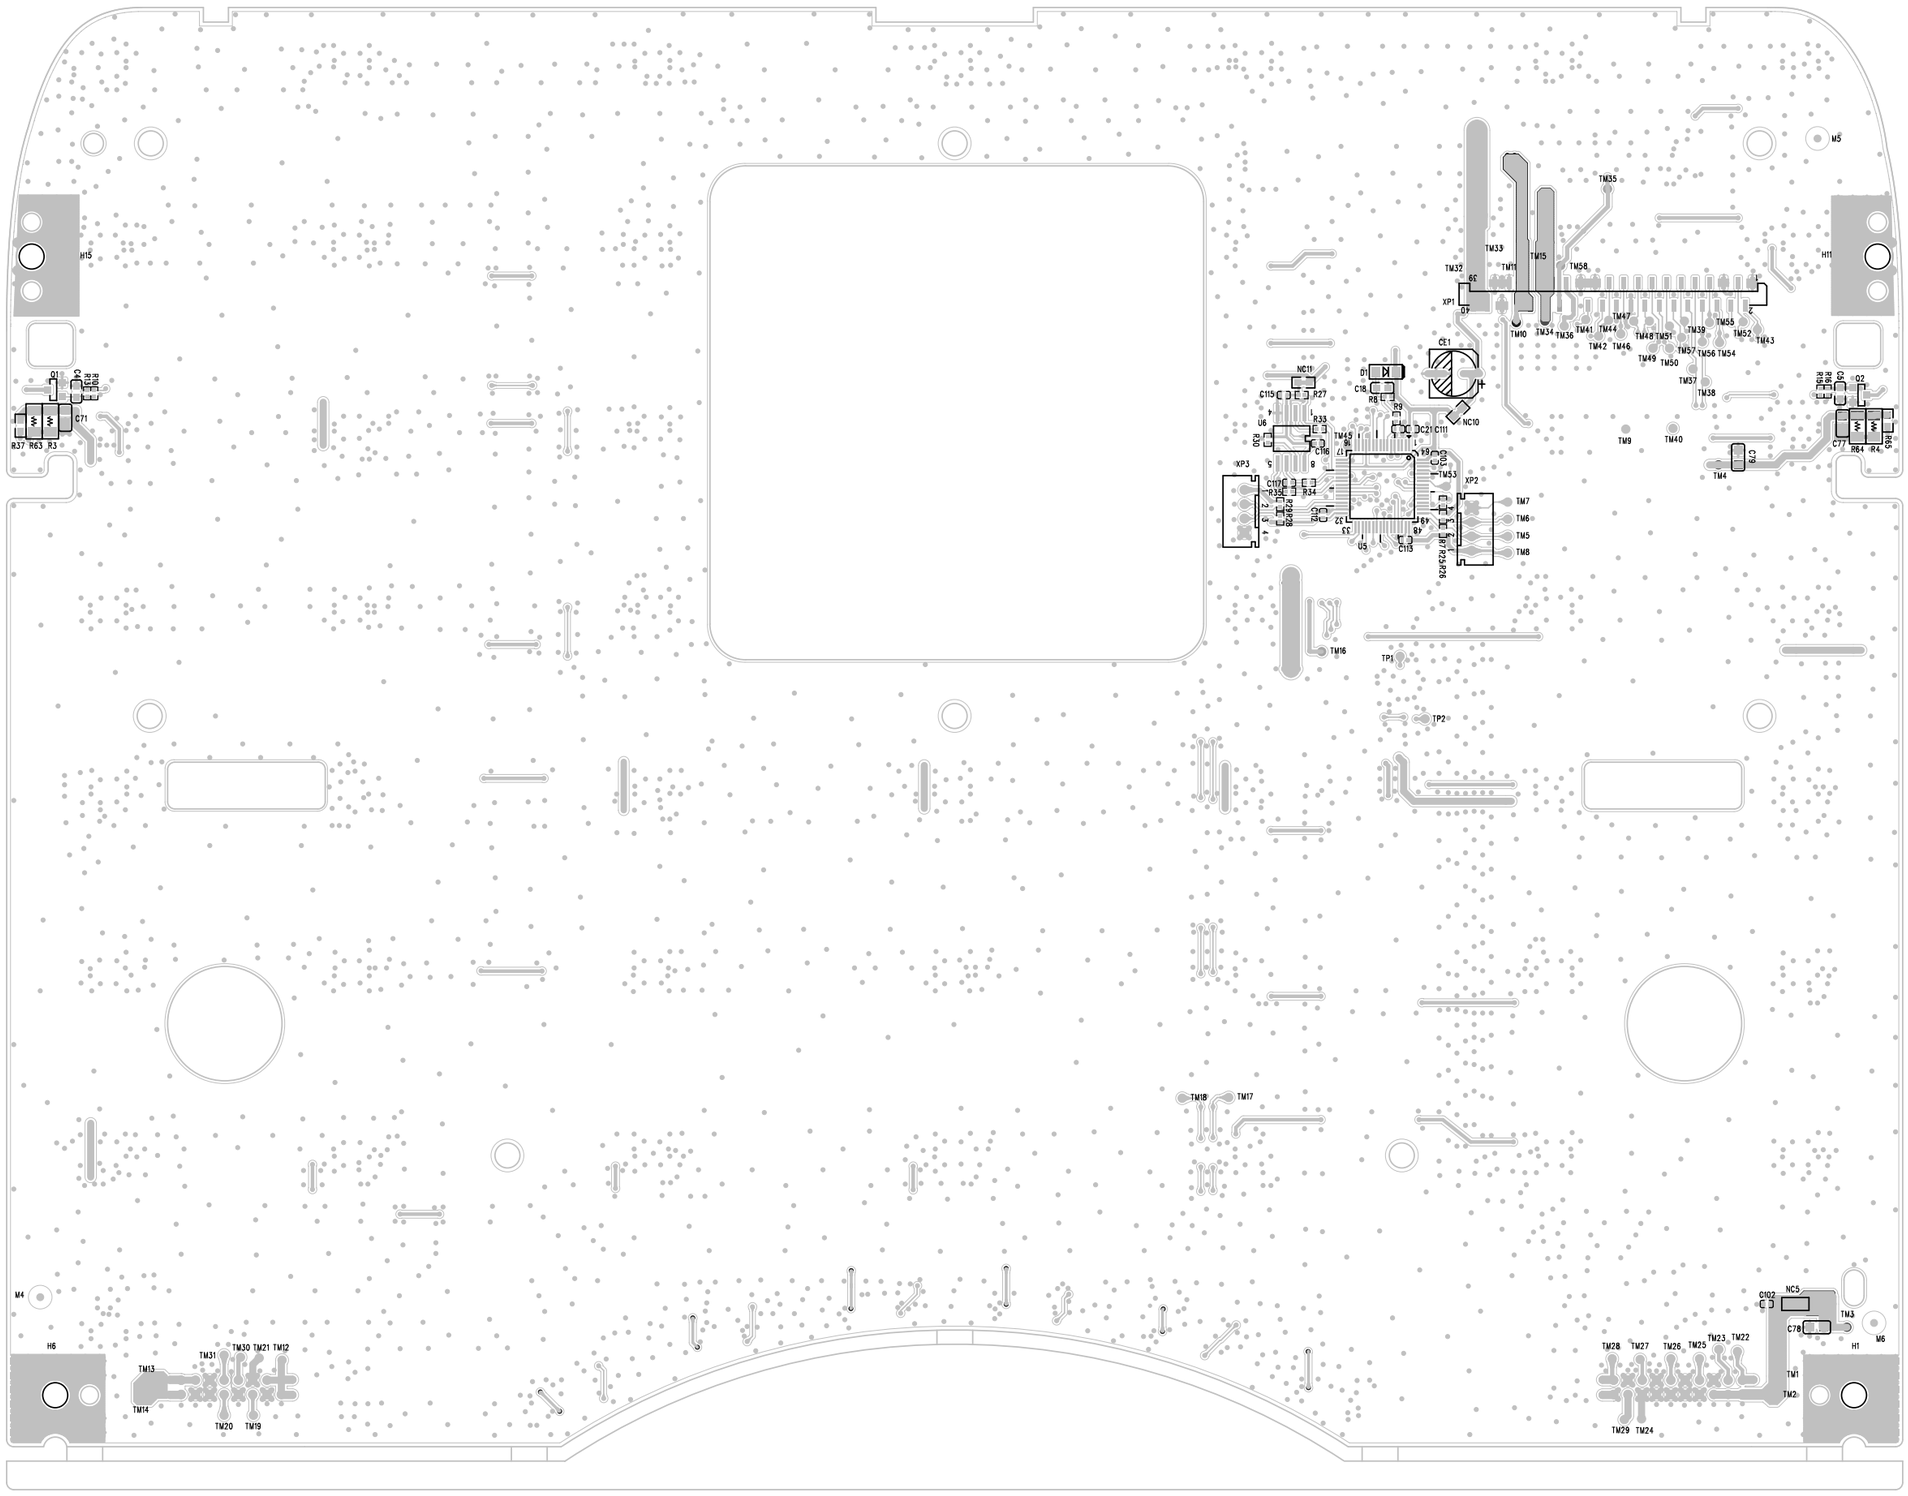


40-HPSG1K-FAD2G-1.pcb

FB/FC LAMP PCB - COMPONENT LAYOUT

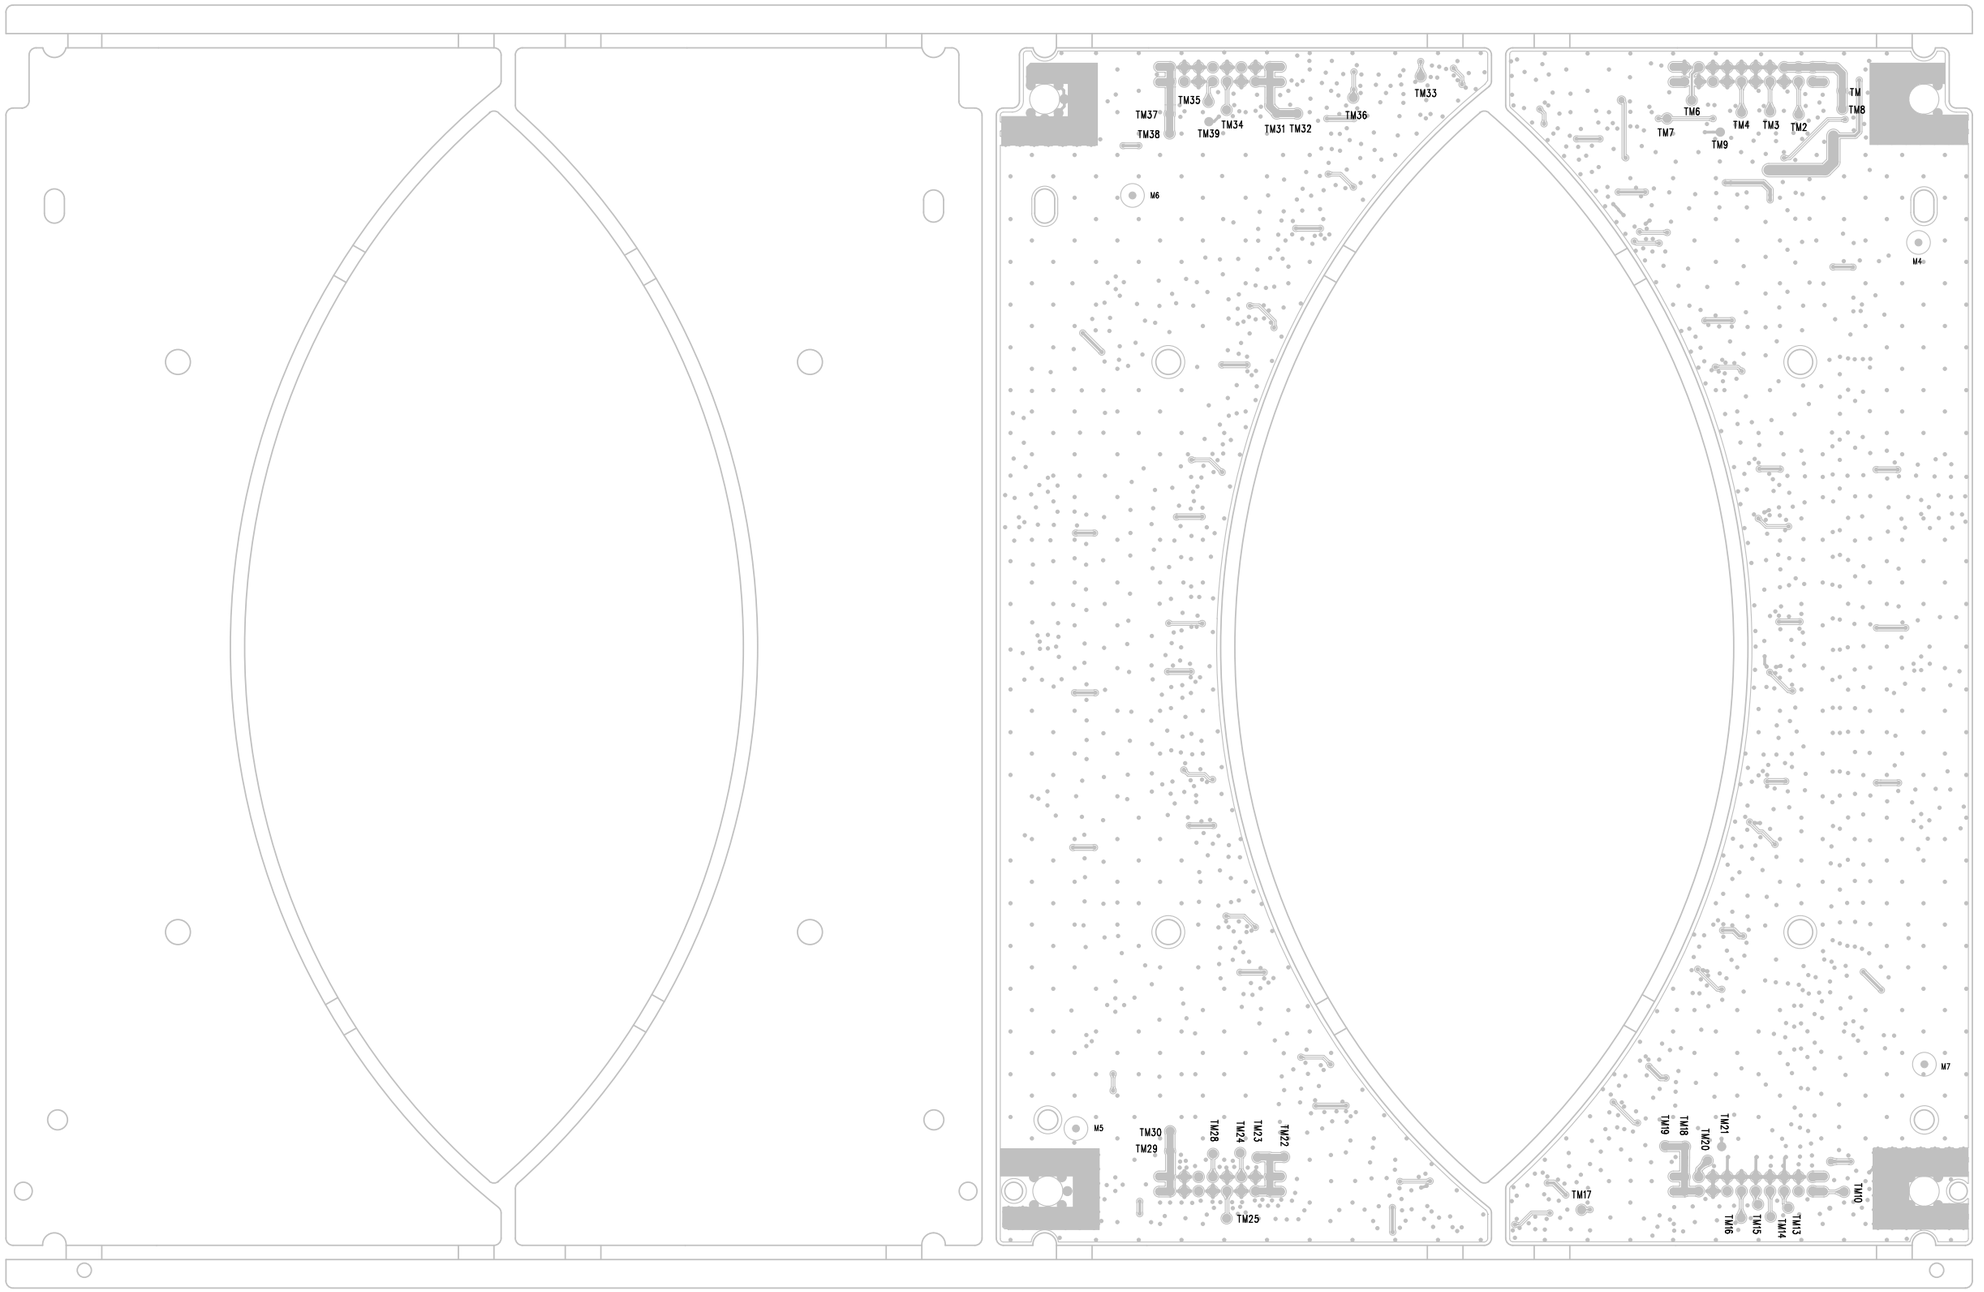


40-HPSG1K-FB&FCC2G.pcb

FB/FC LAMP PCB - COMPONENT LAYOUT

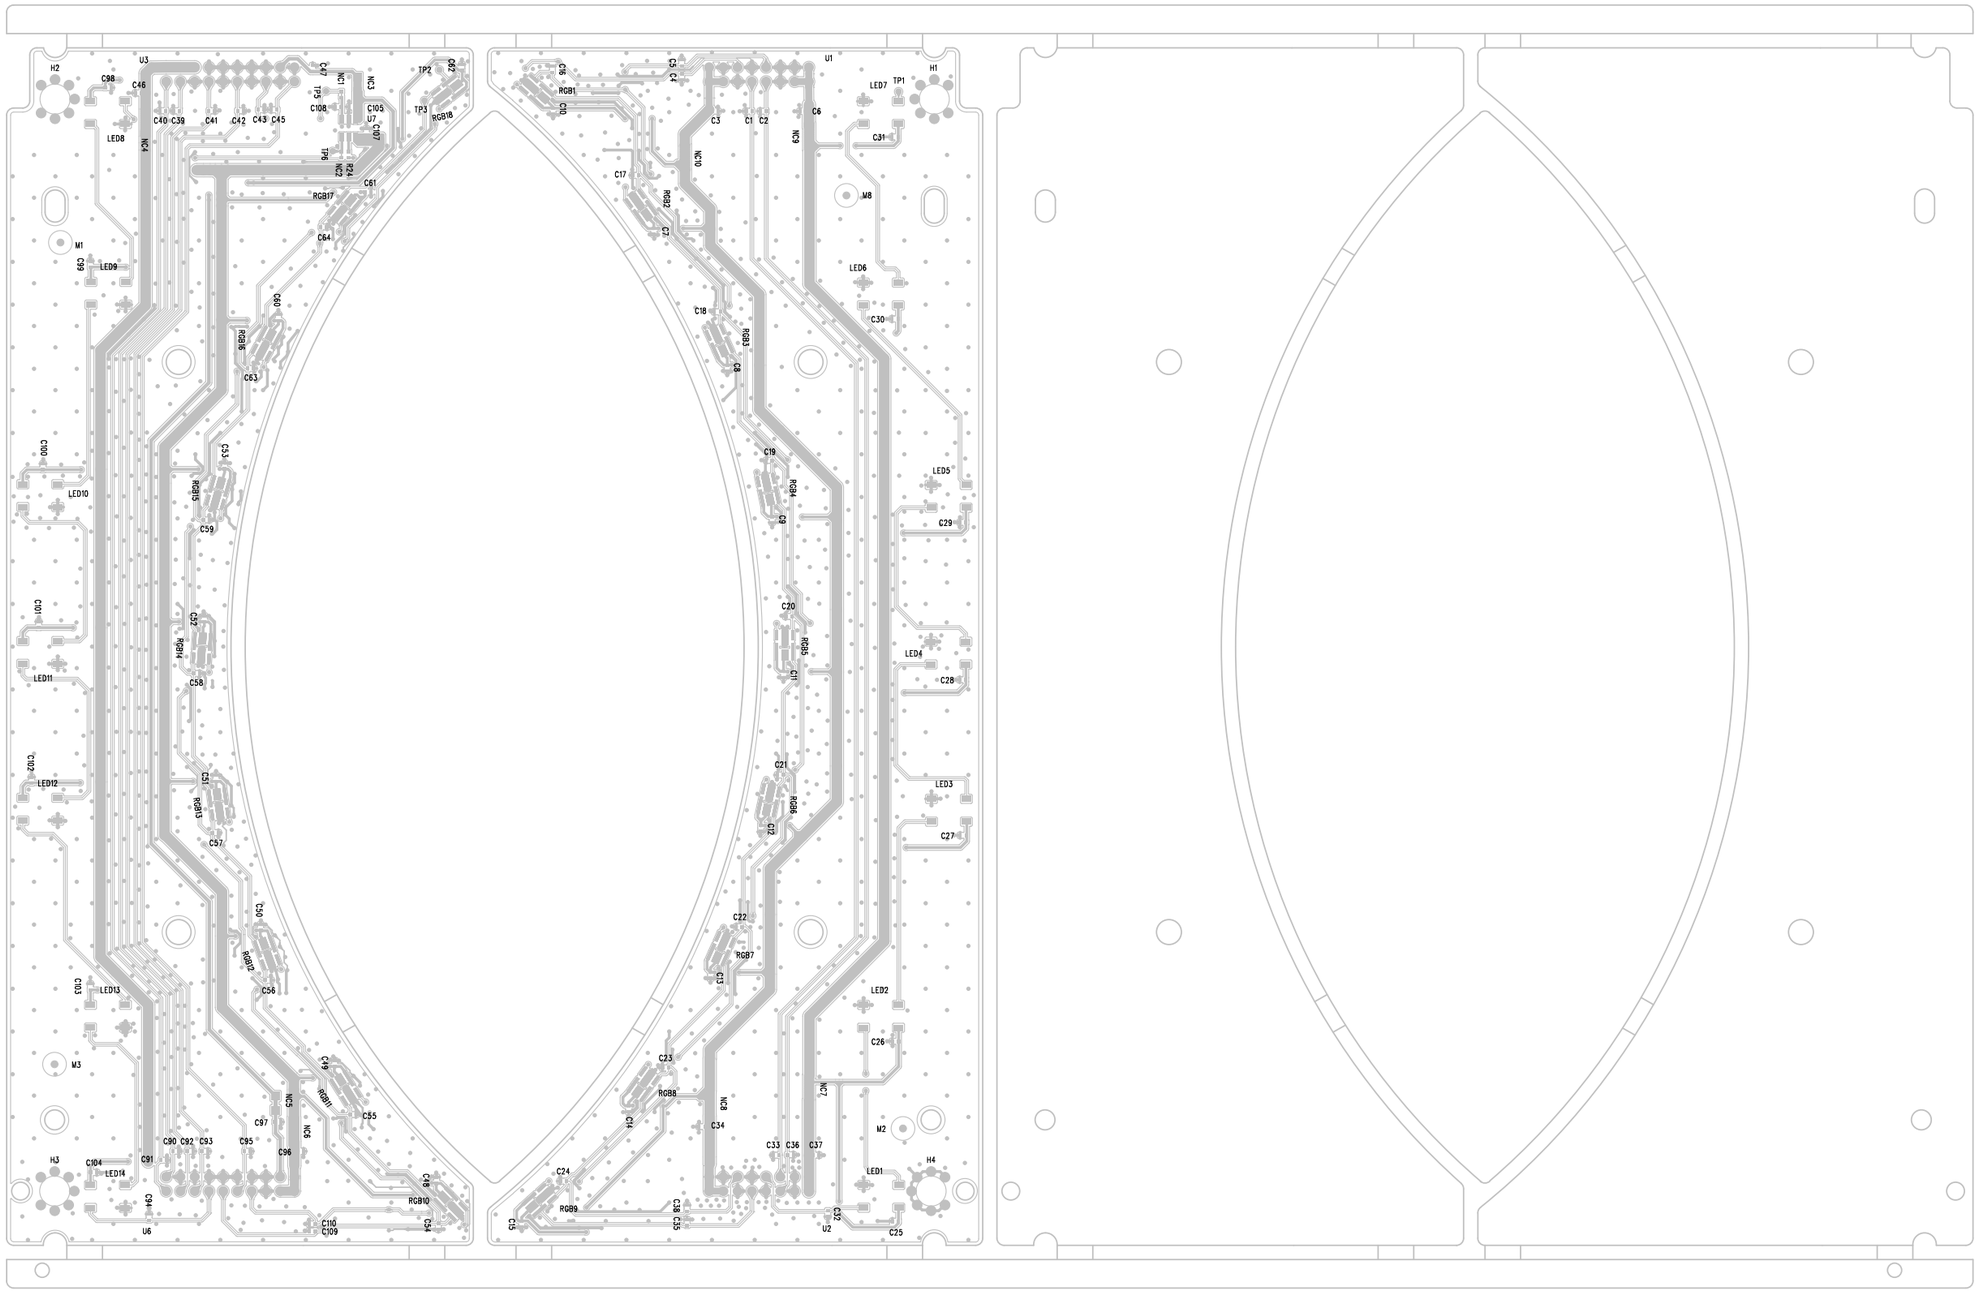


40-HPSG1K-FB&FCC2G.pcb

FD LAMP PCB - COMPONENT LAYOUT

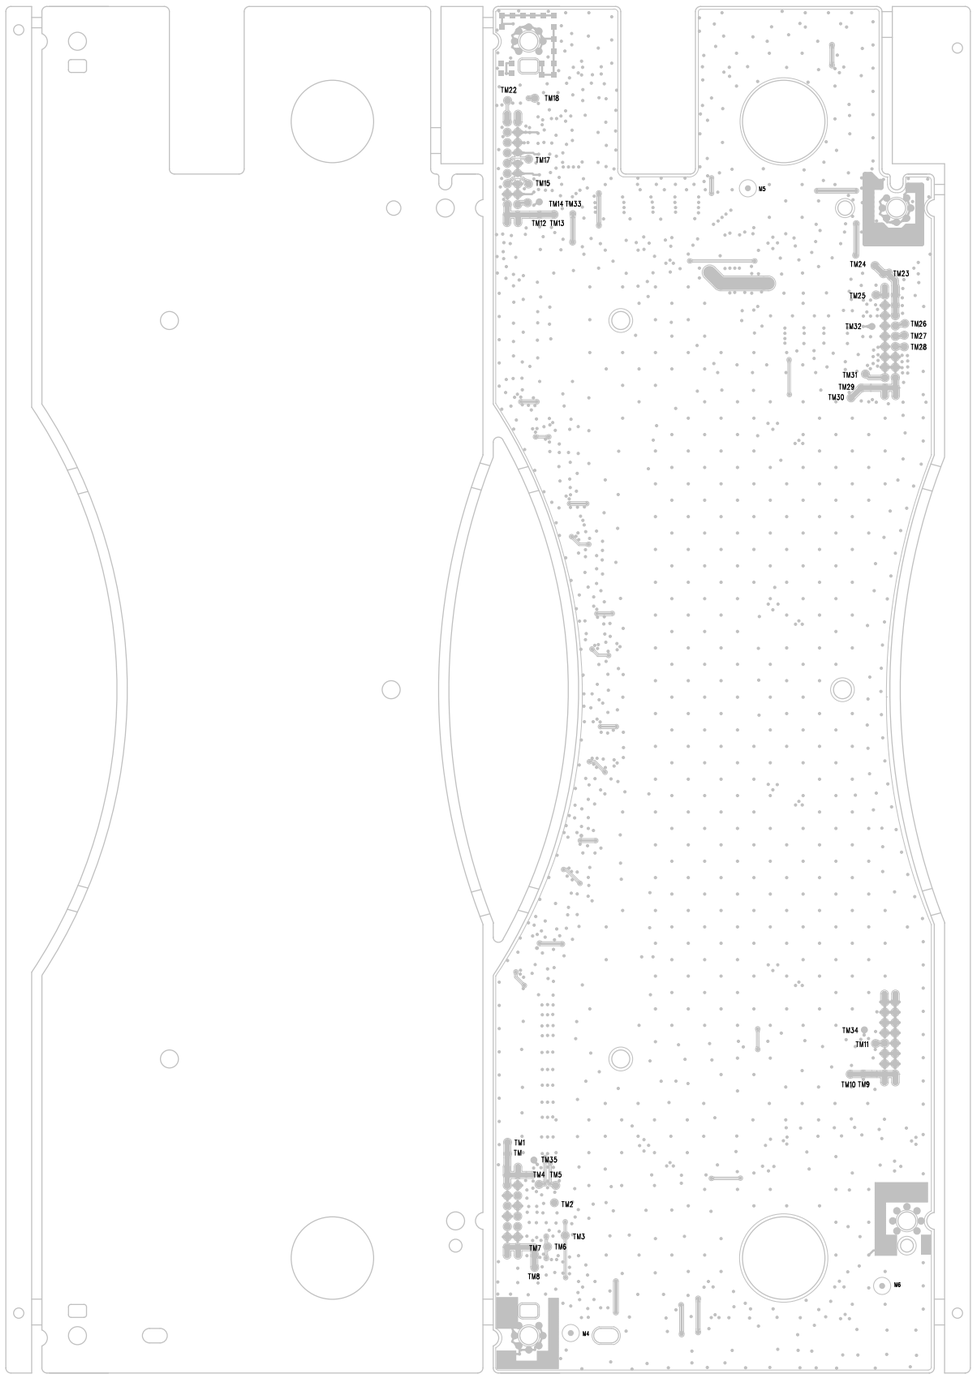


40-HPSG1K-FDD2G.pcb

FD LAMP PCB - COMPONENT LAYOUT

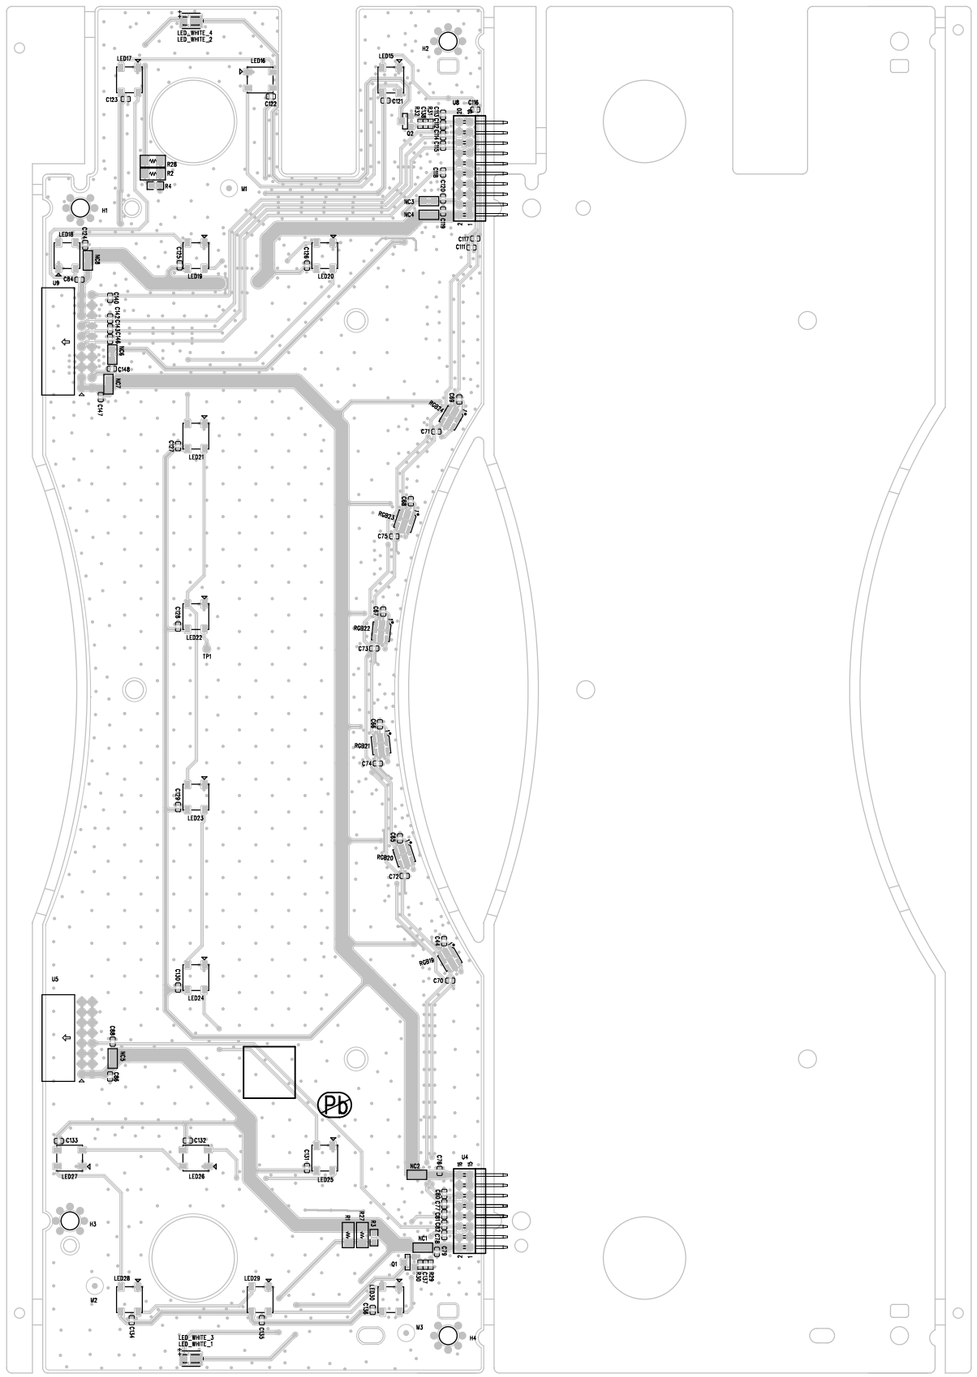


40-HPSG1K-FDD2G.pcb

FF LAMP PCB - COMPONENT LAYOUT

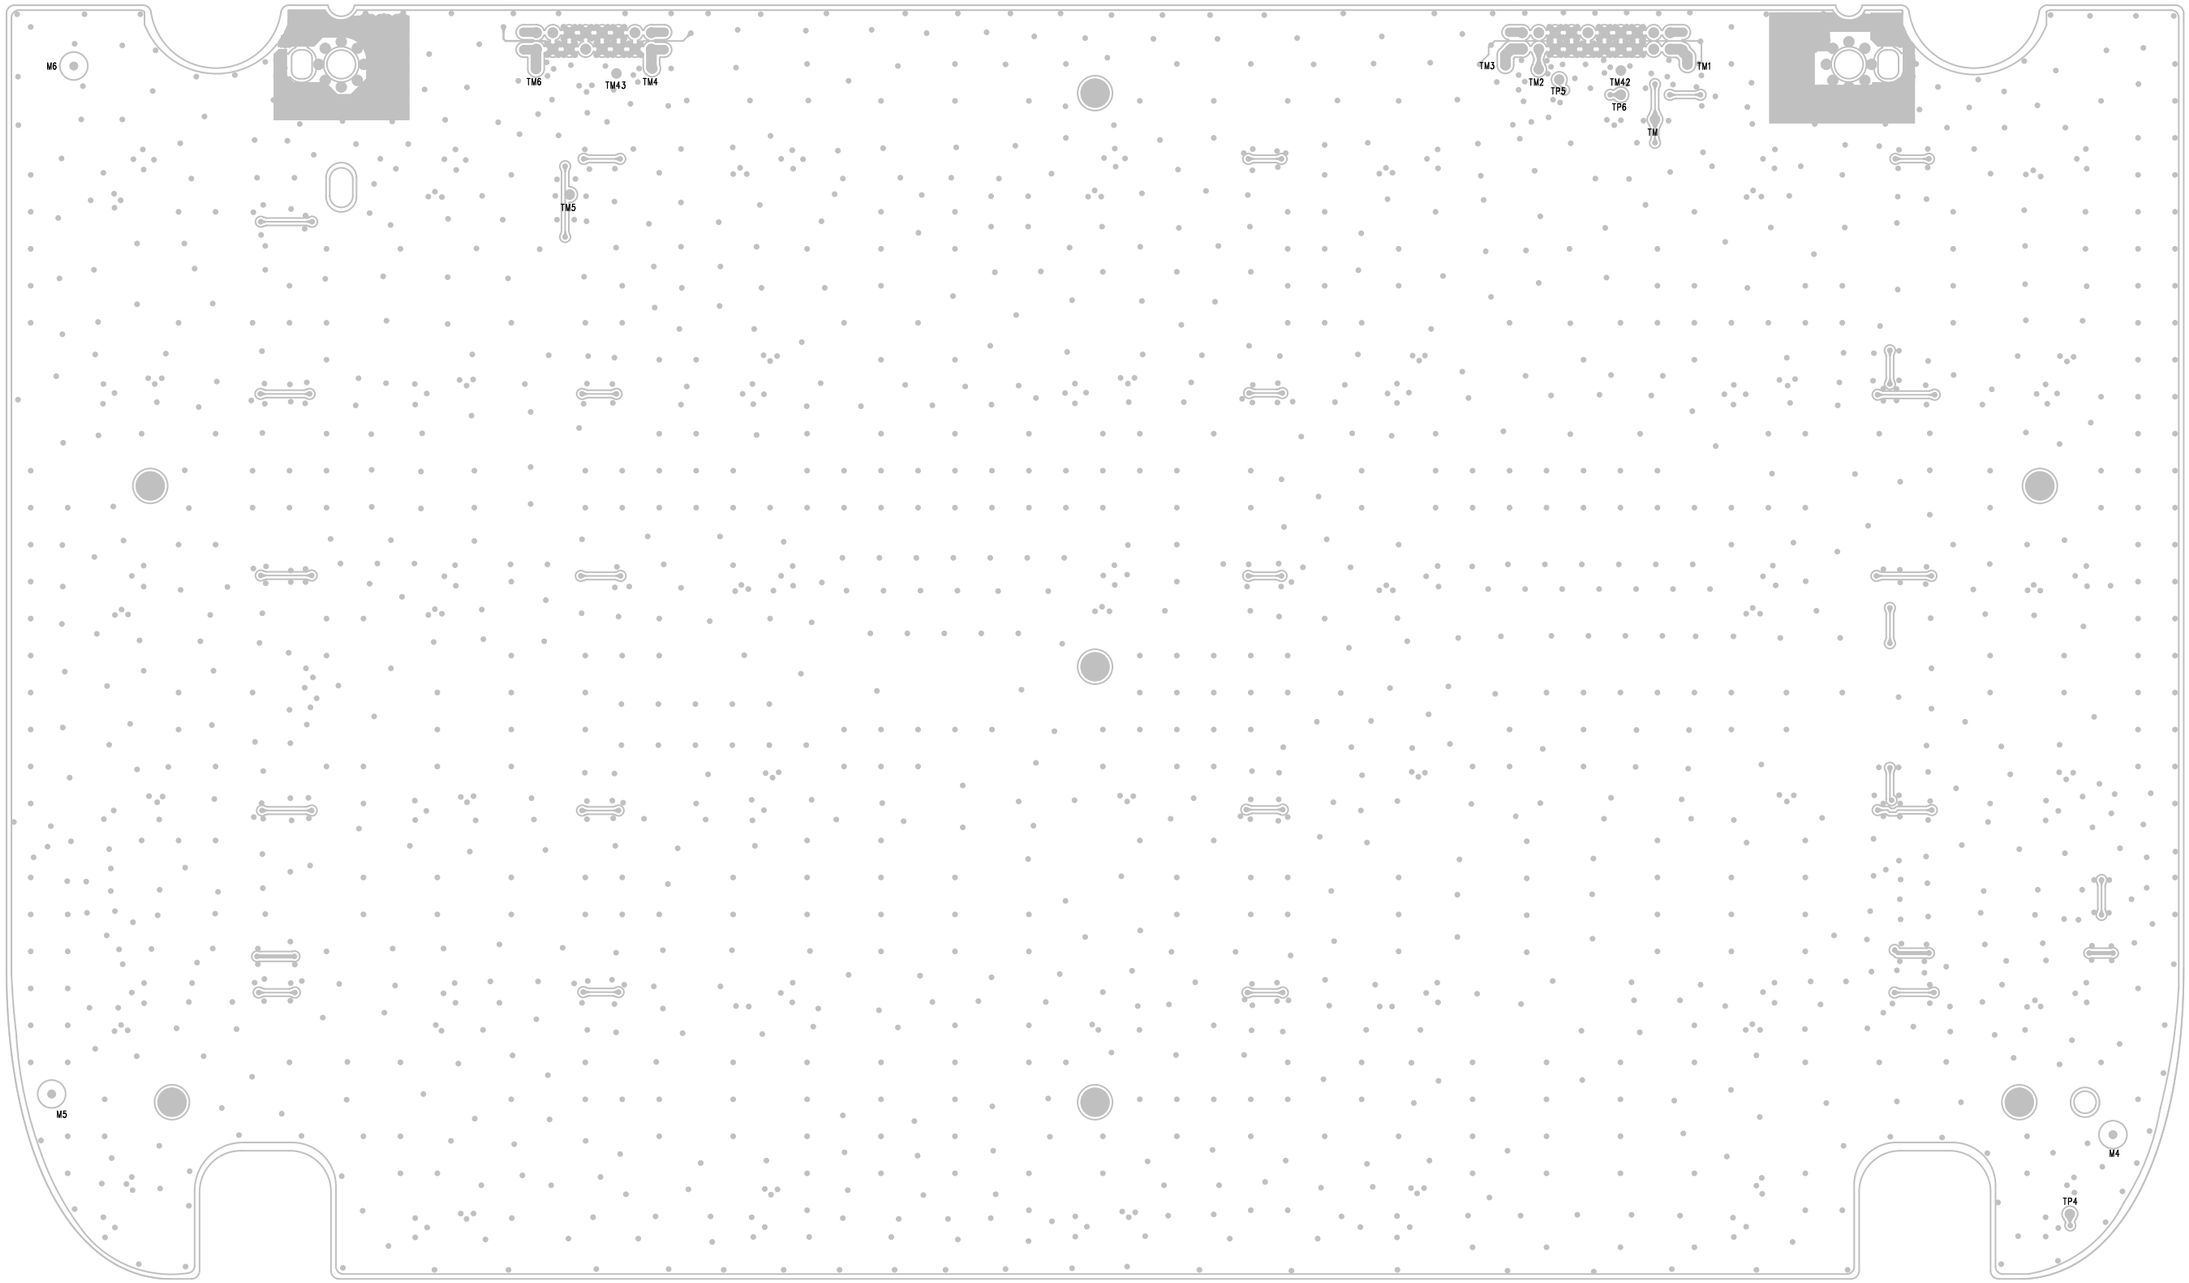


40-HPSG1K-FFC2G-a.pcb

FF LAMP PCB - COMPONENT LAYOUT

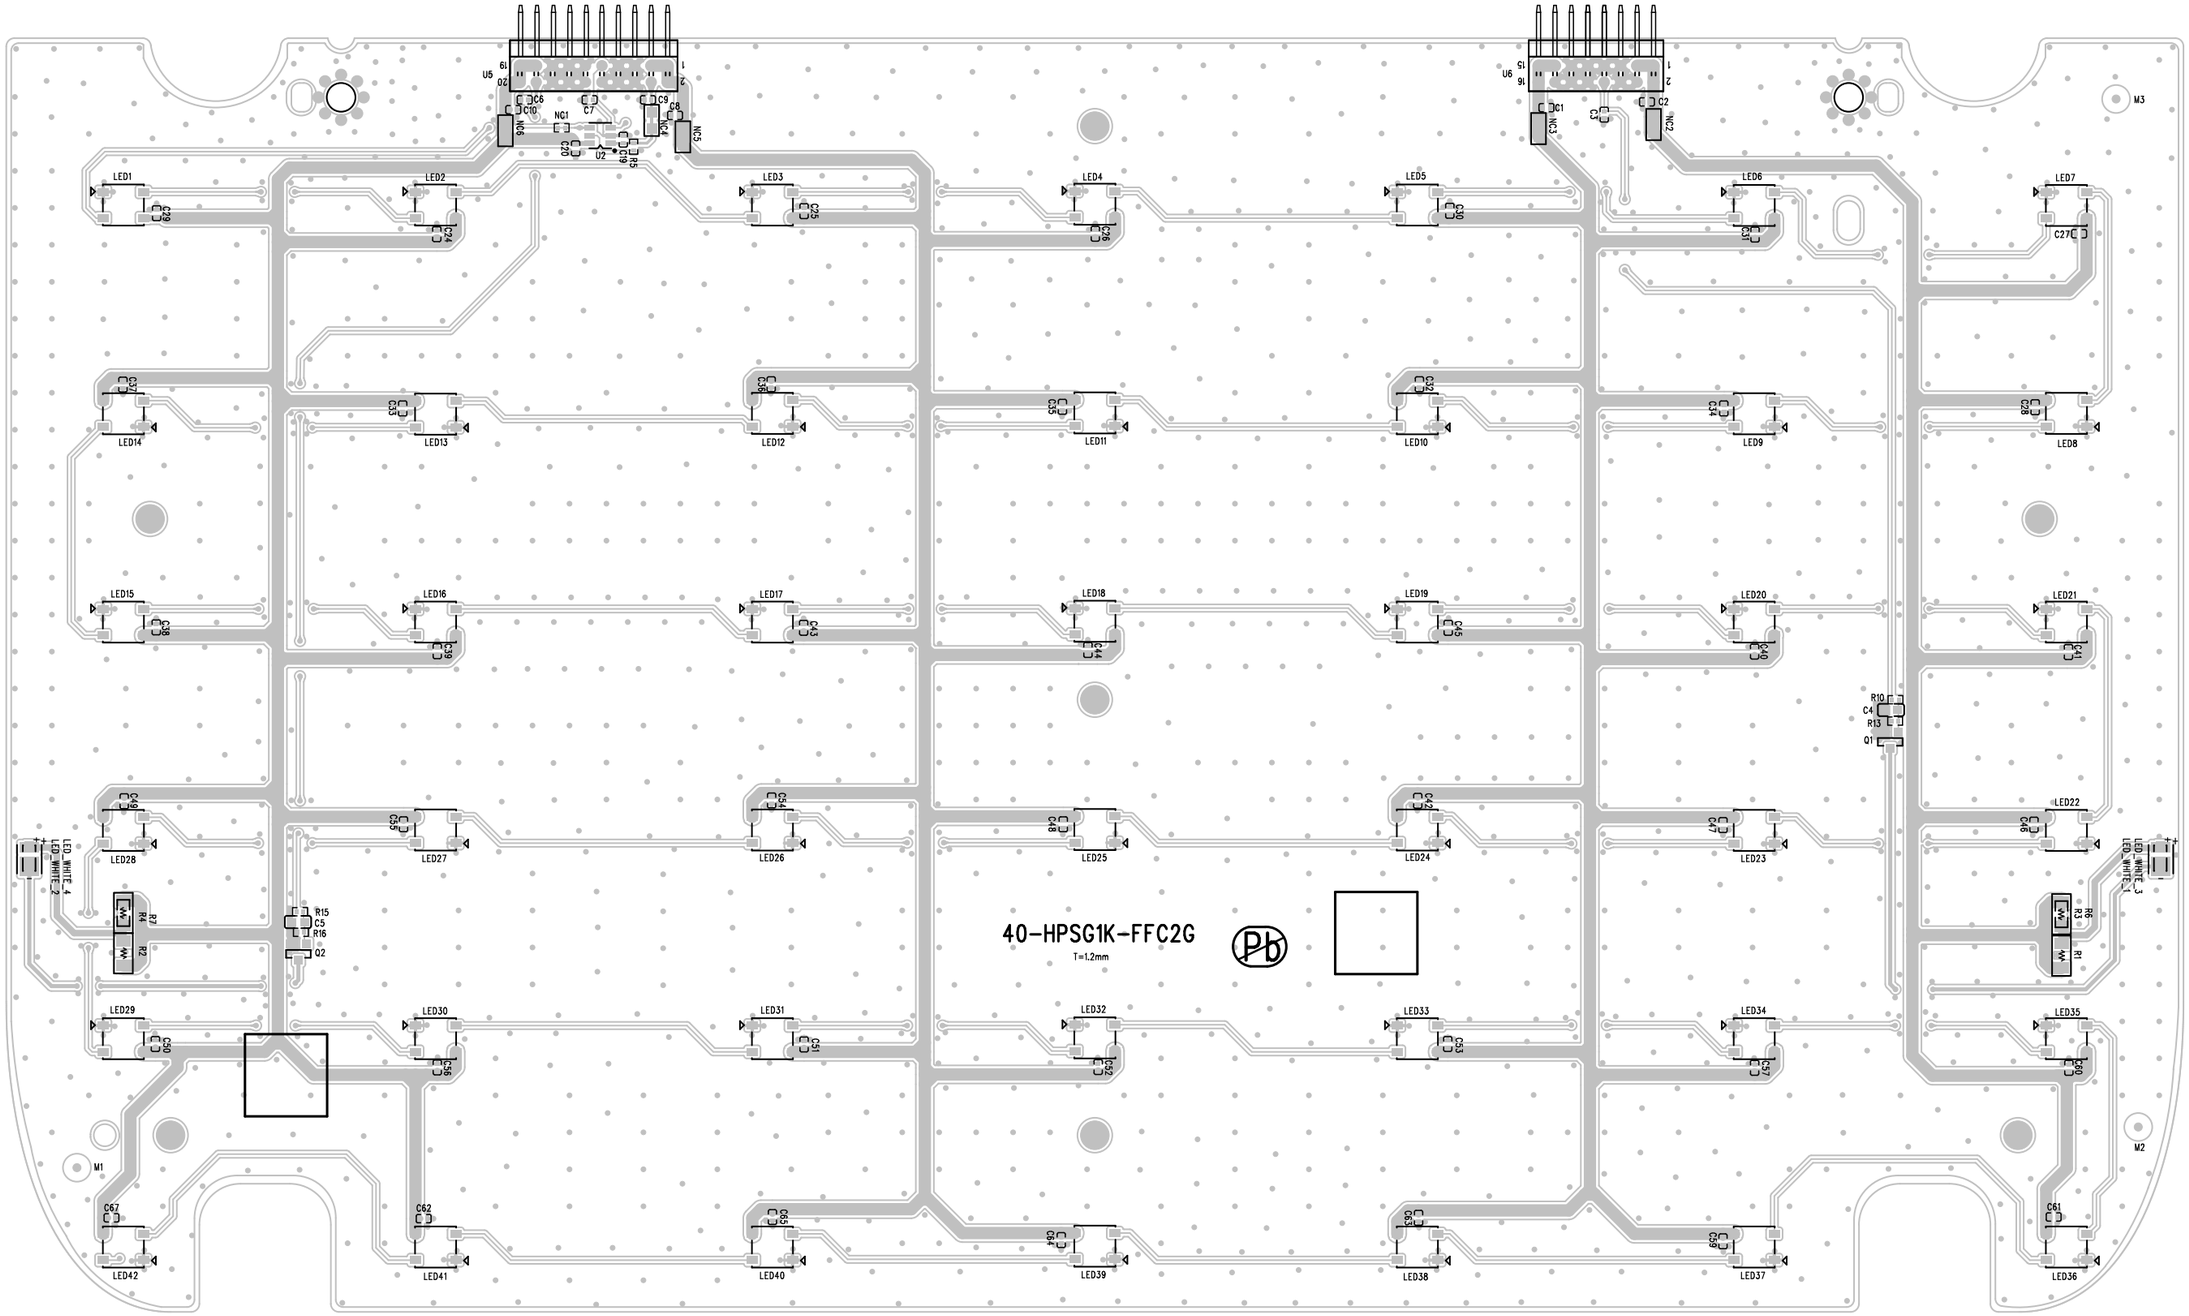


40-HPSG1K-FFC2G-a.pcb


FA LAMP/AUDIO/TERMINAL/FAN CONNECTOR PCB - COMPONENT LAYOUT

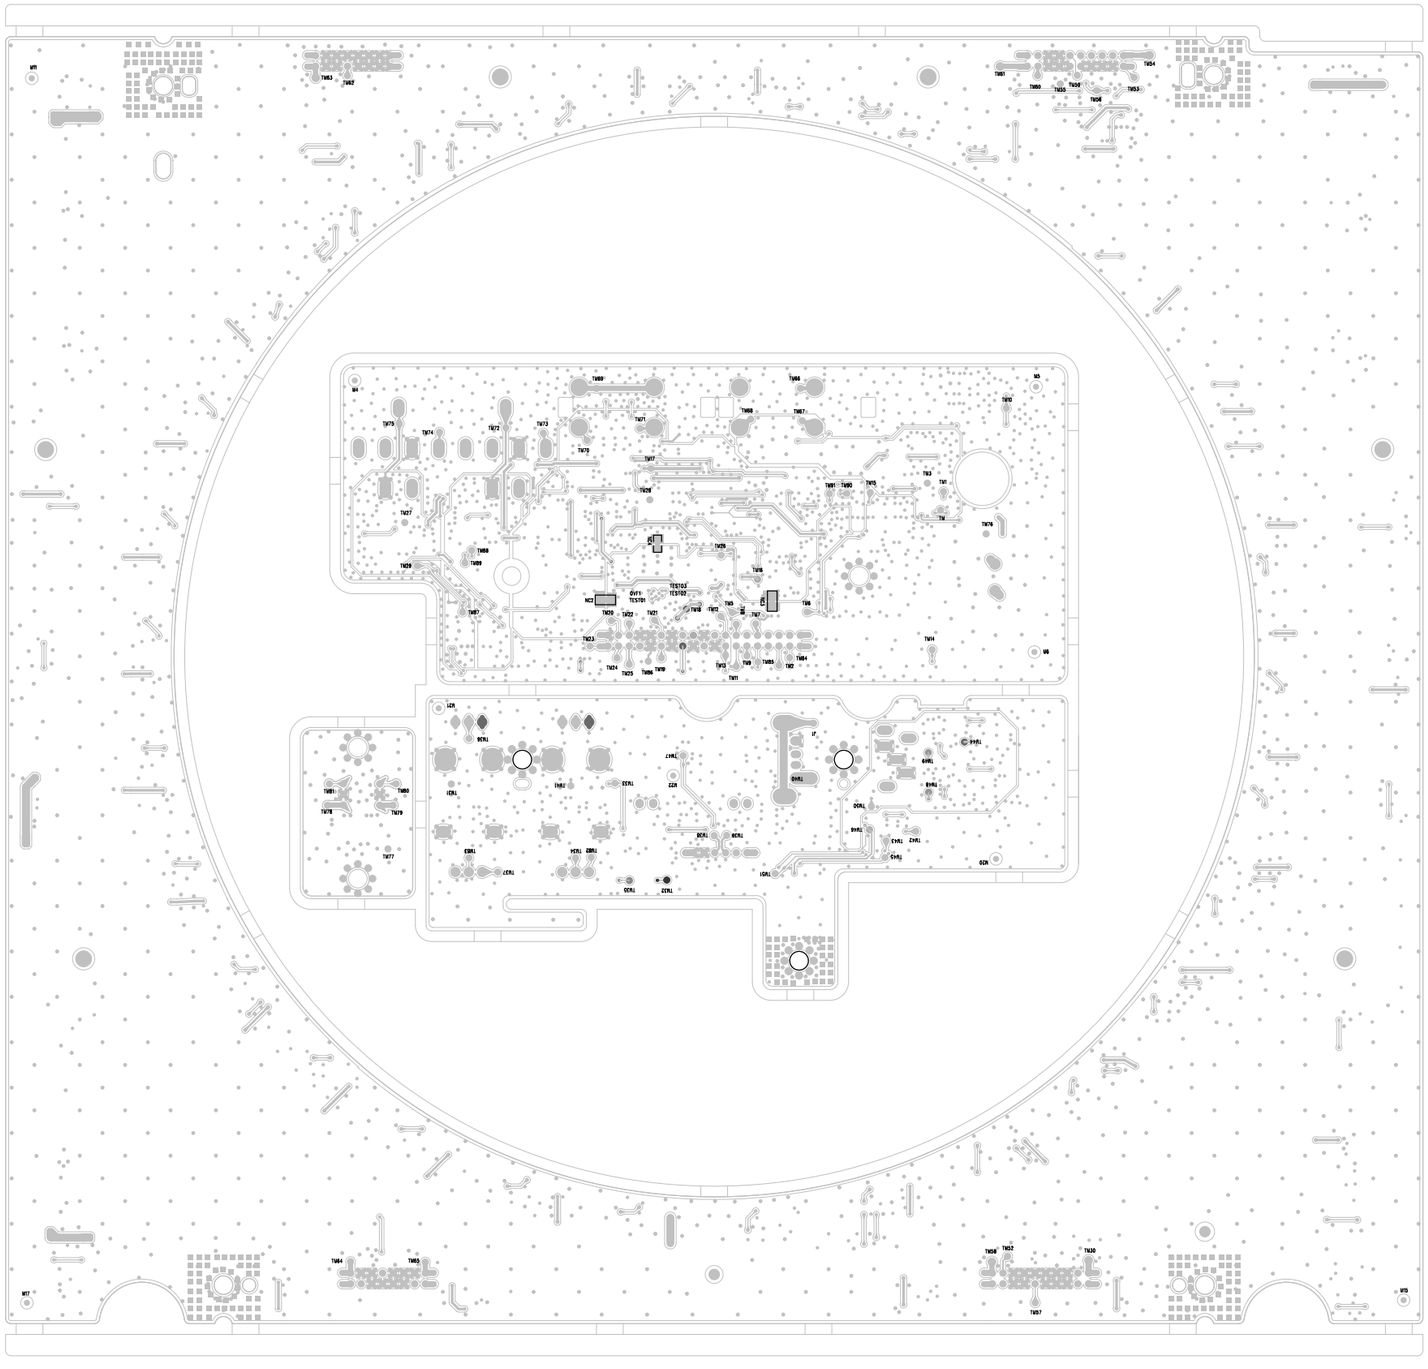

FA LAMP/AUDIO/TERMINAL/FAN CONNECTOR PCB - COMPONENT LAYOUT

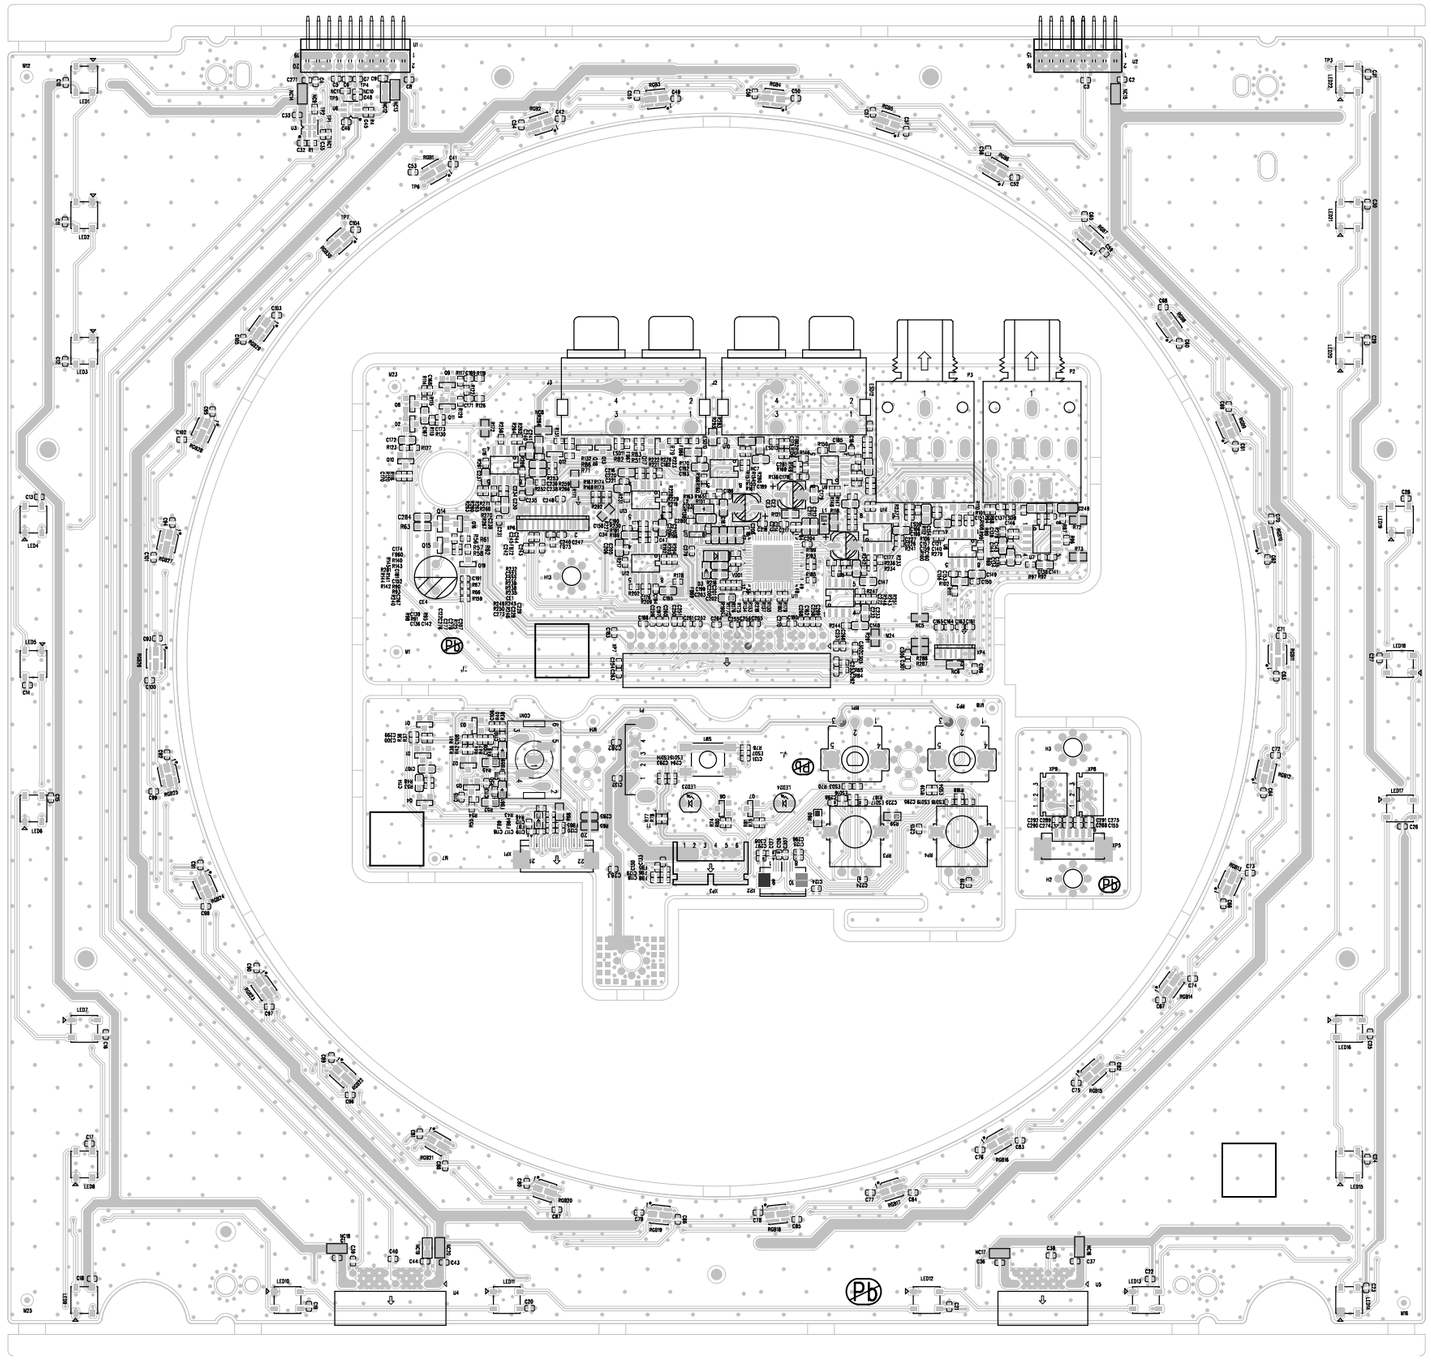


KEY PCB - COMPONENT LAYOUT

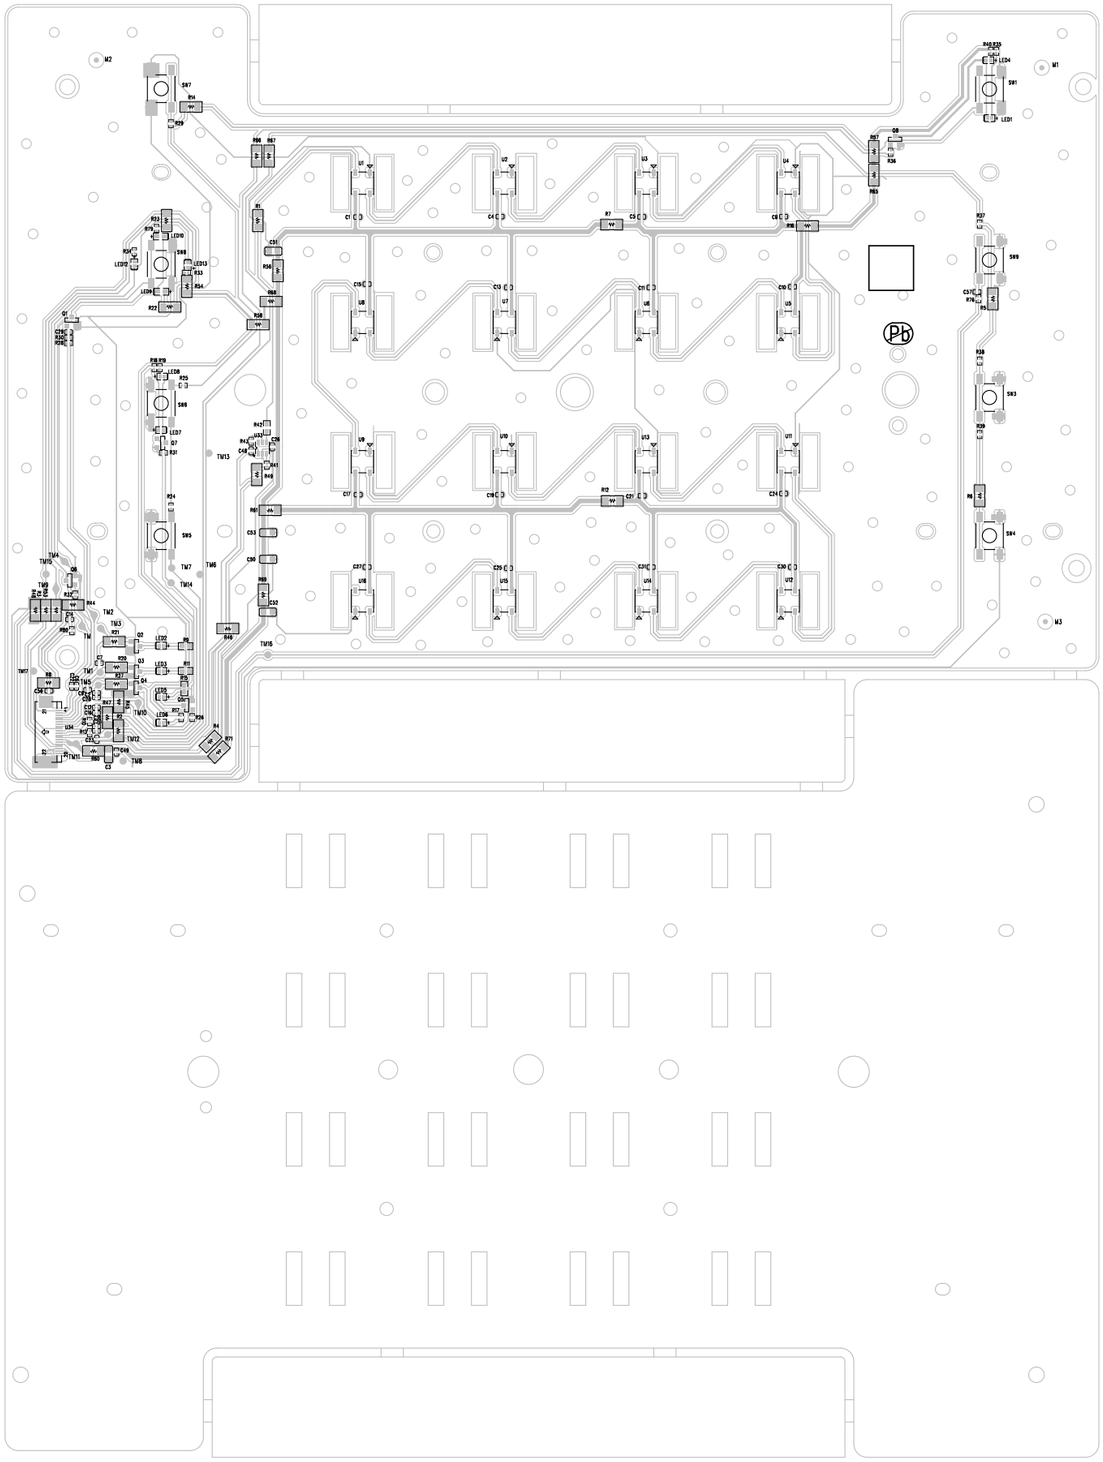


40-HPSG1K-KYD1G.pcb

KEY PCB - COMPONENT LAYOUT

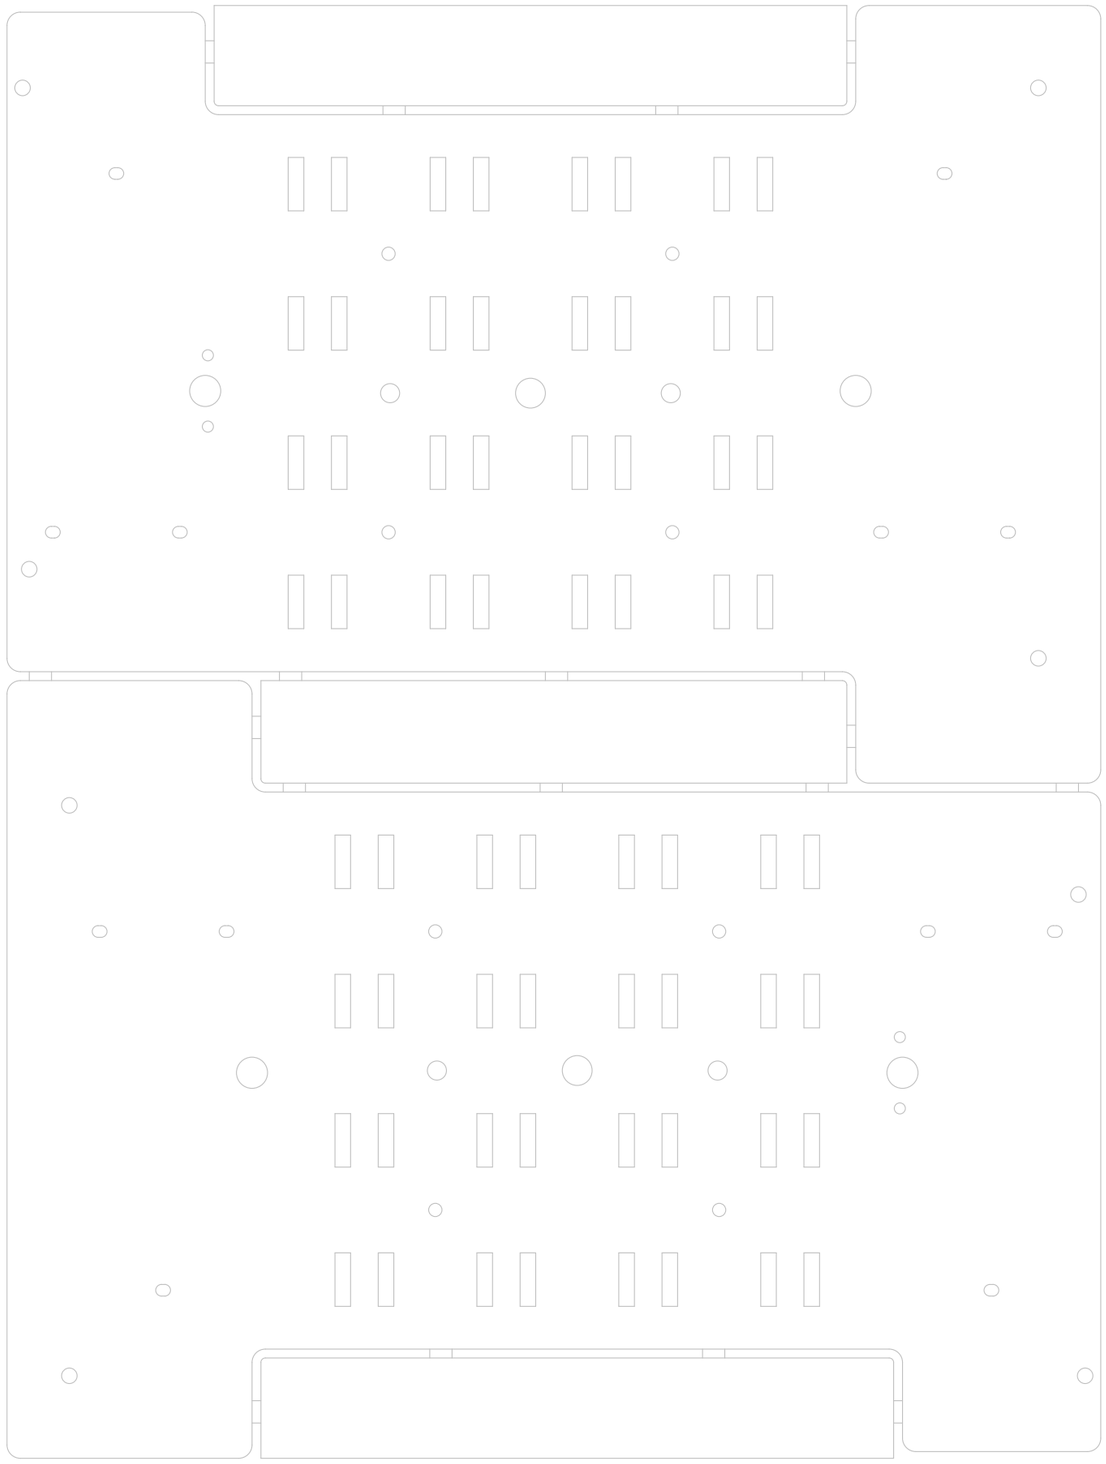


40-HPSG1K-KYD1G.pcb

MAIN PCB - COMPONENT LAYOUT

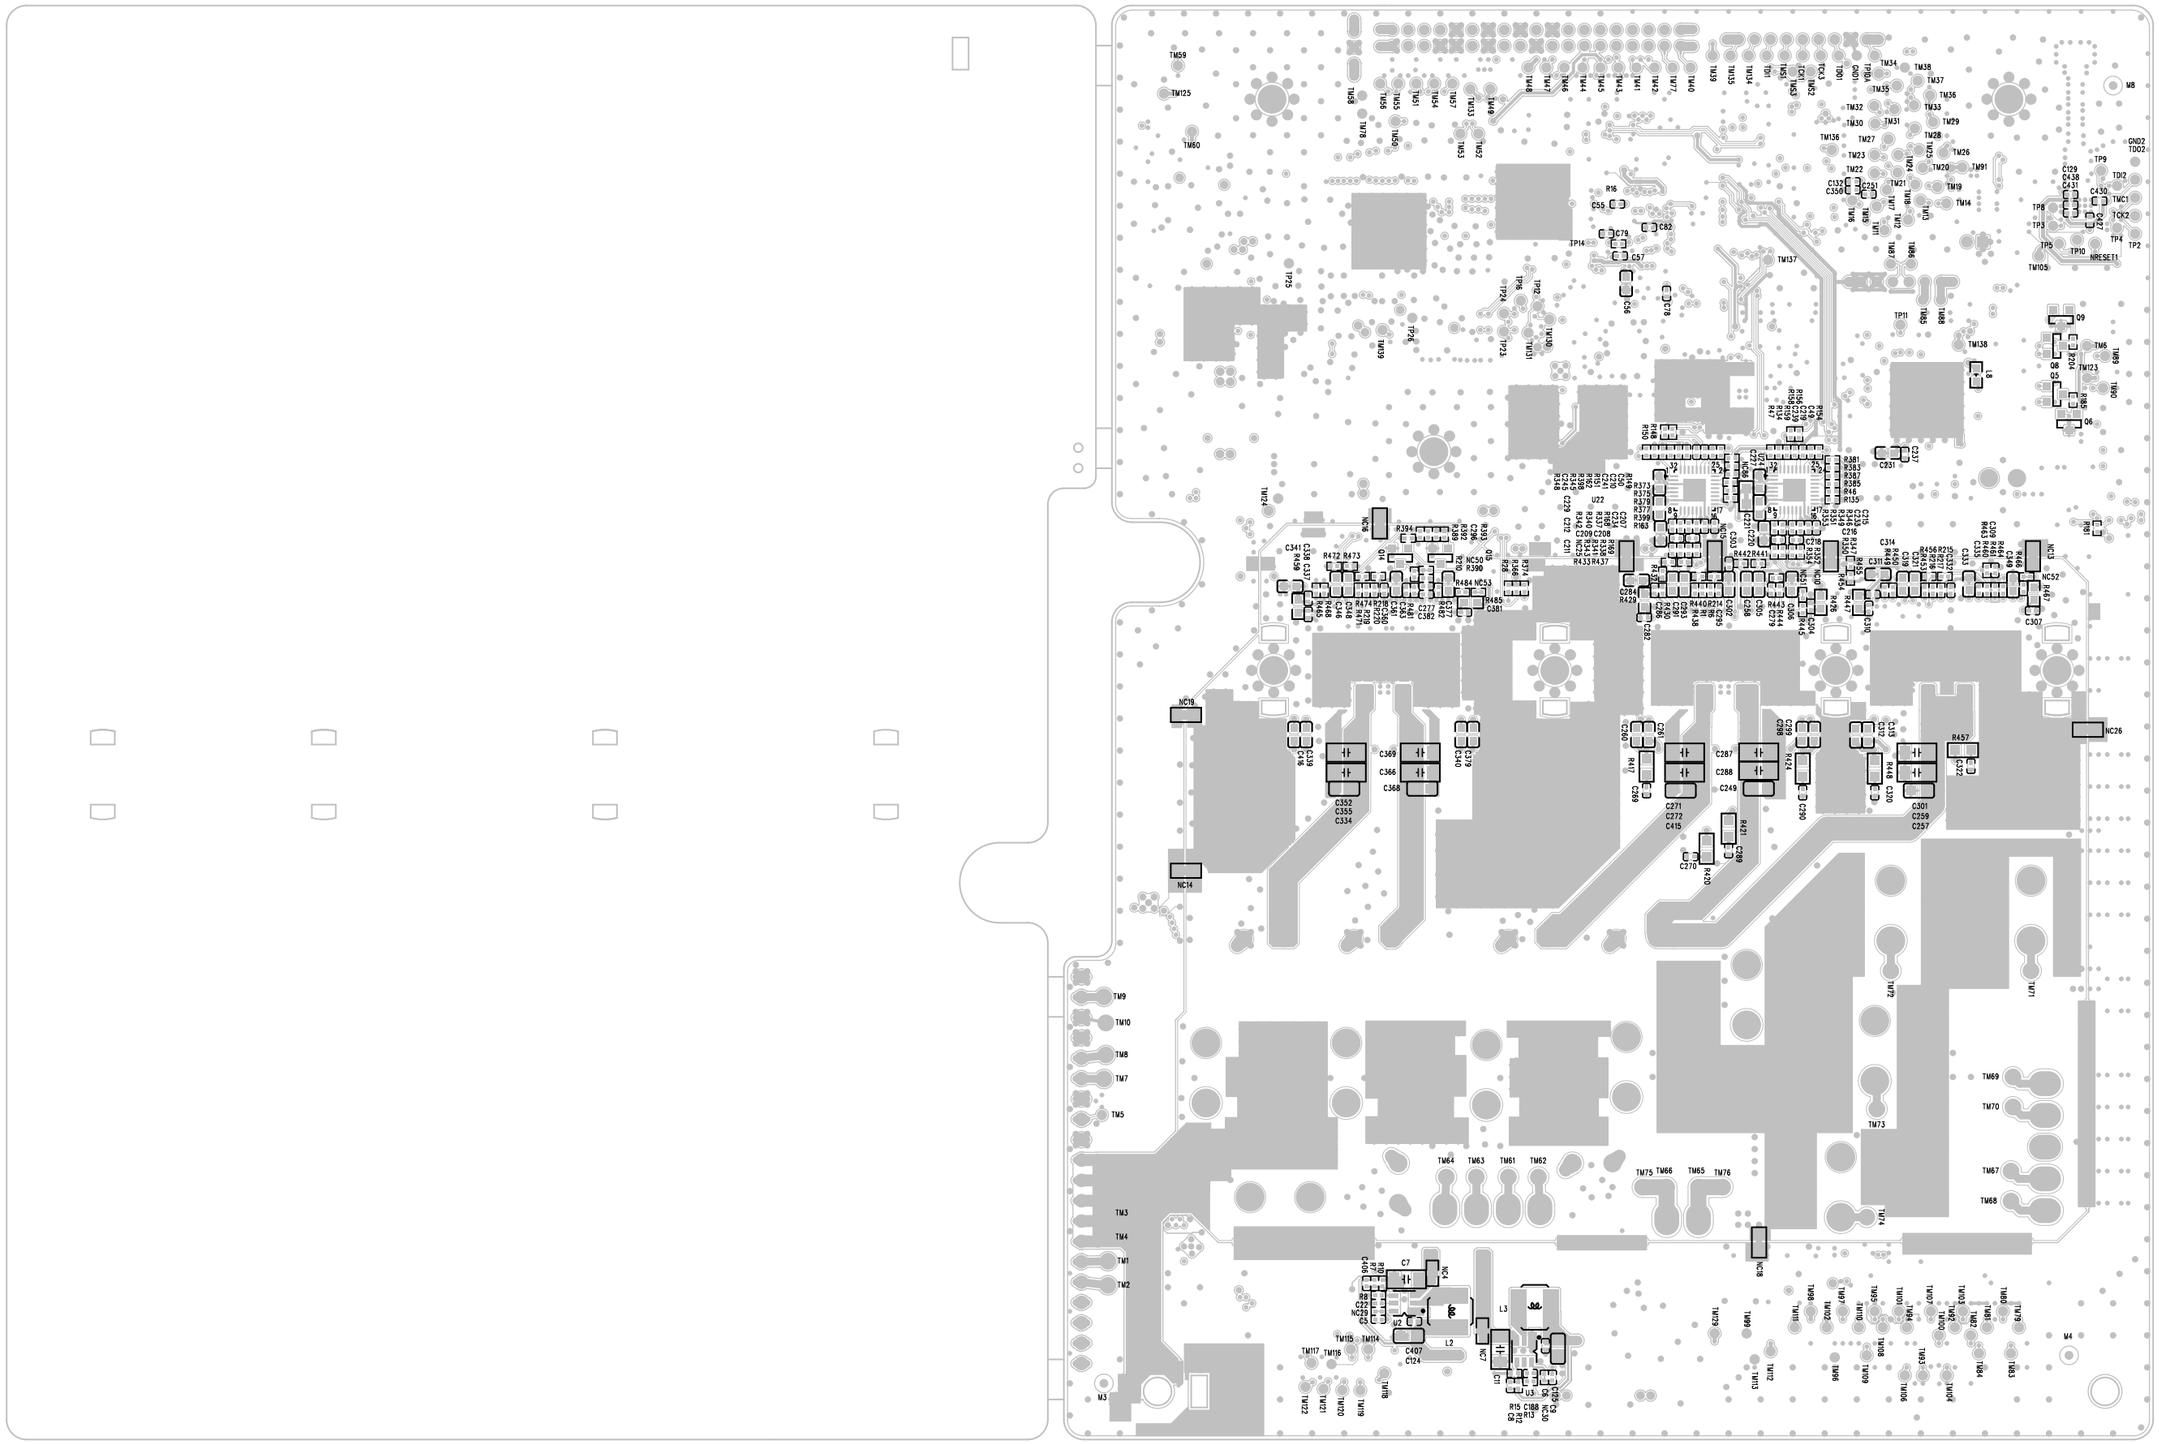


MAIN PCB - COMPONENT LAYOUT

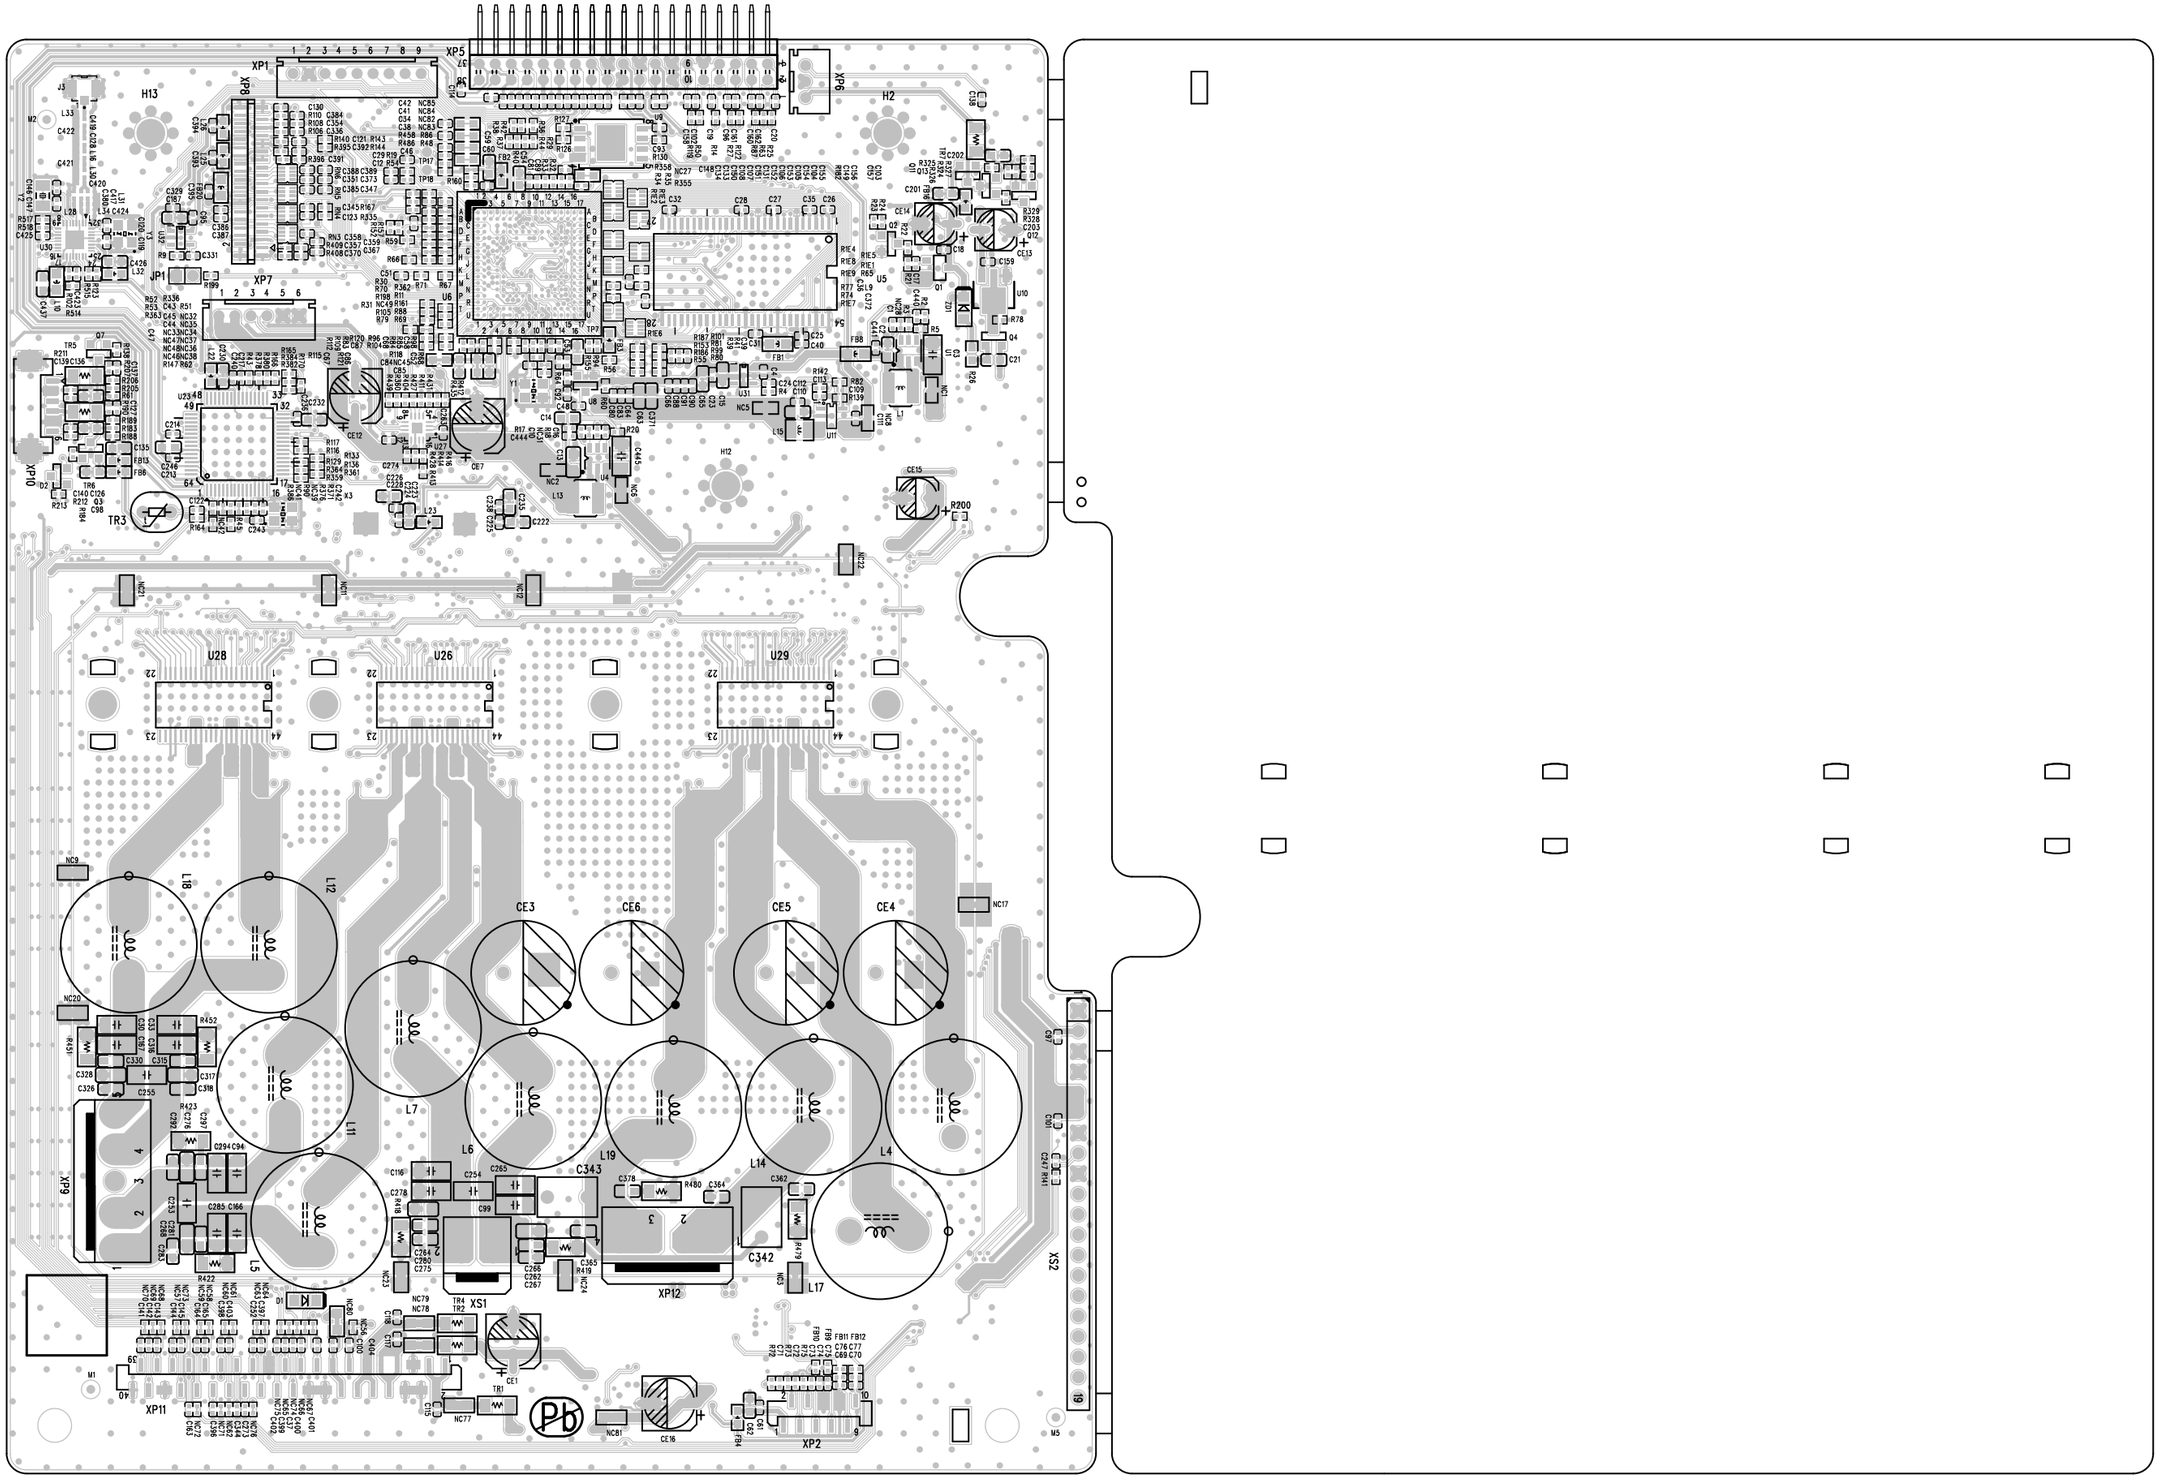


40-HPSG1K-MAE4G.pcb

TOUCH PCB - COMPONENT LAYOUT

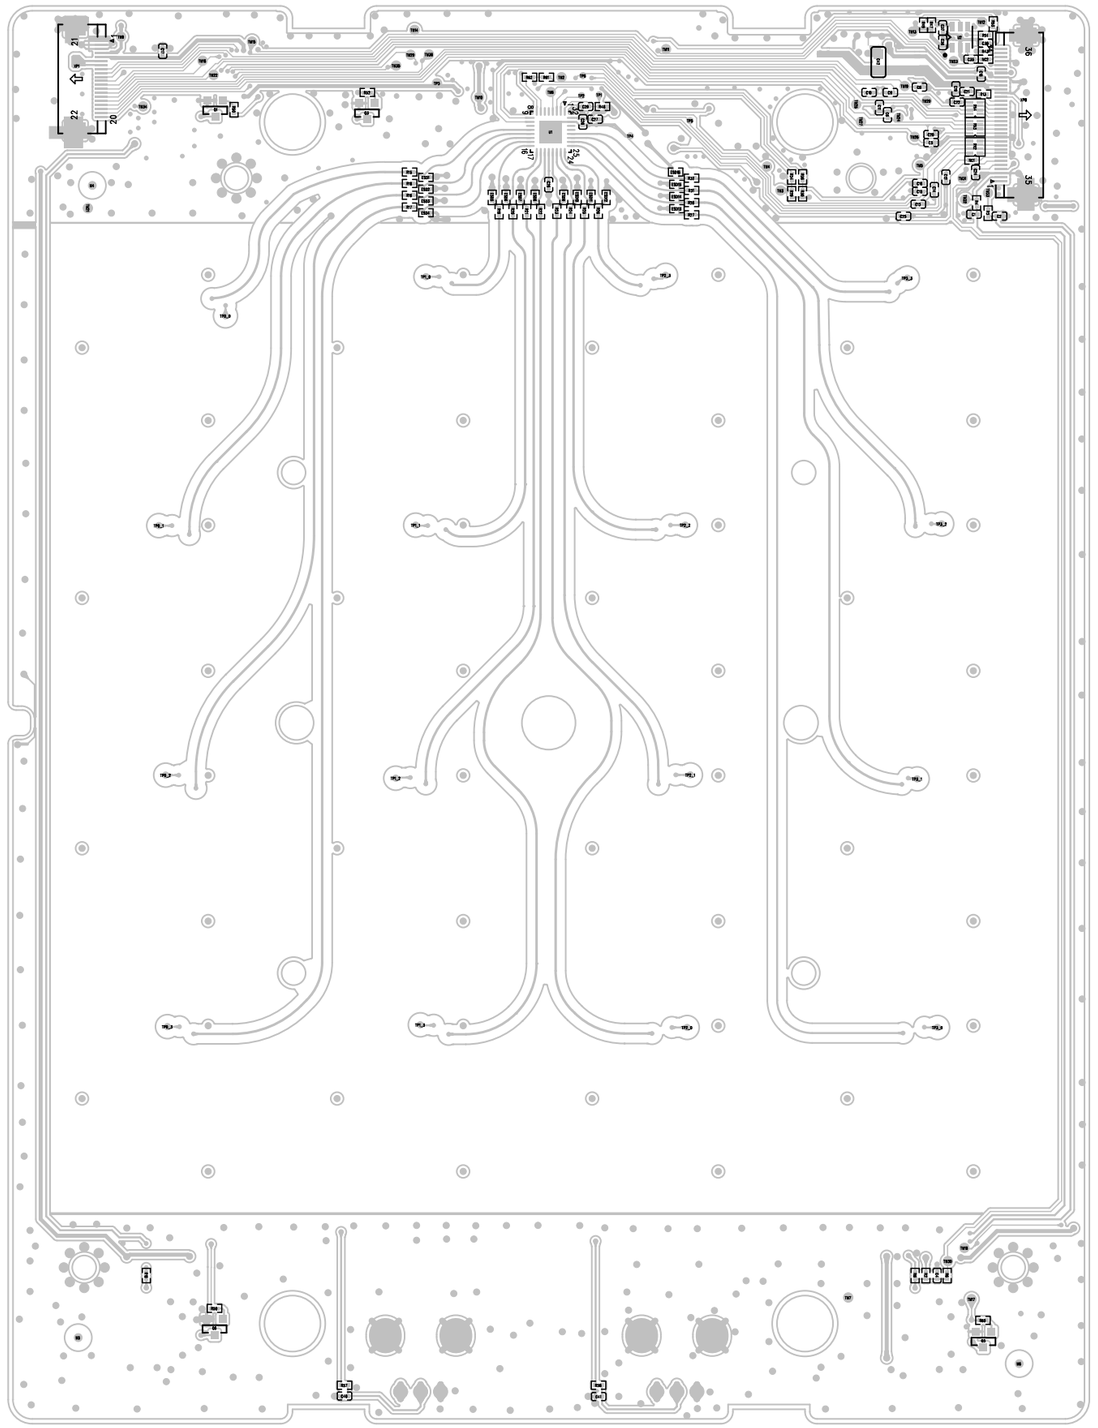


40-HPSG1K-THE2G-1.pcb

TOUCH PCB - COMPONENT LAYOUT

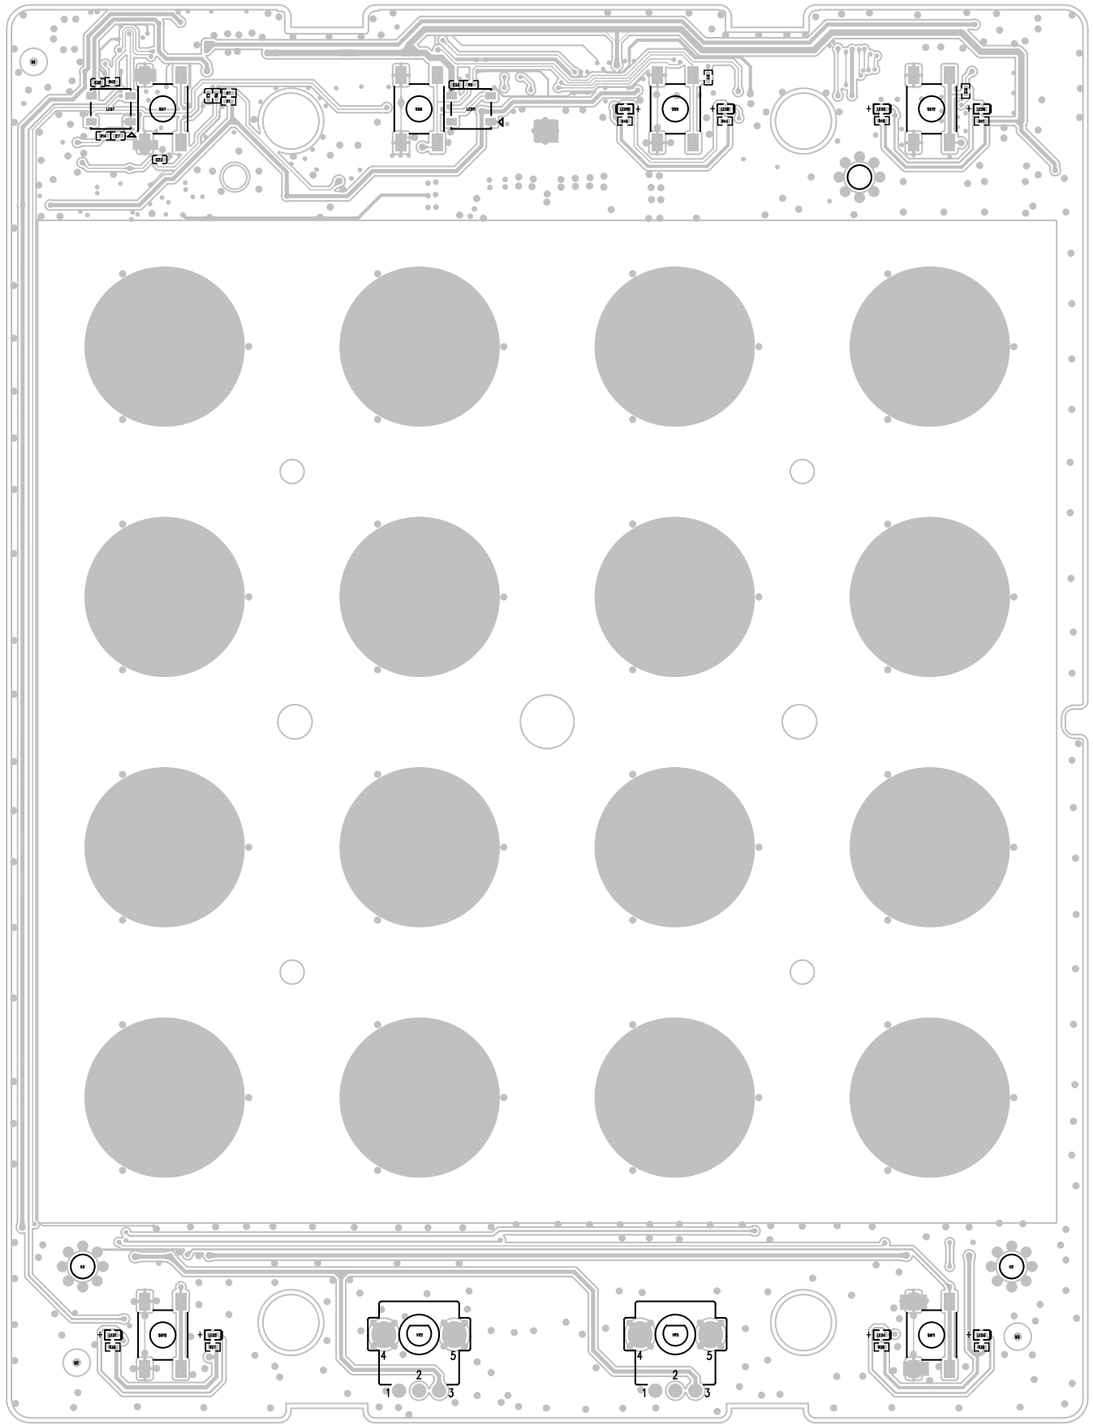


40-HPSG1K-THE2G-1.pcb

POWER PCB - COMPONENT LAYOUT

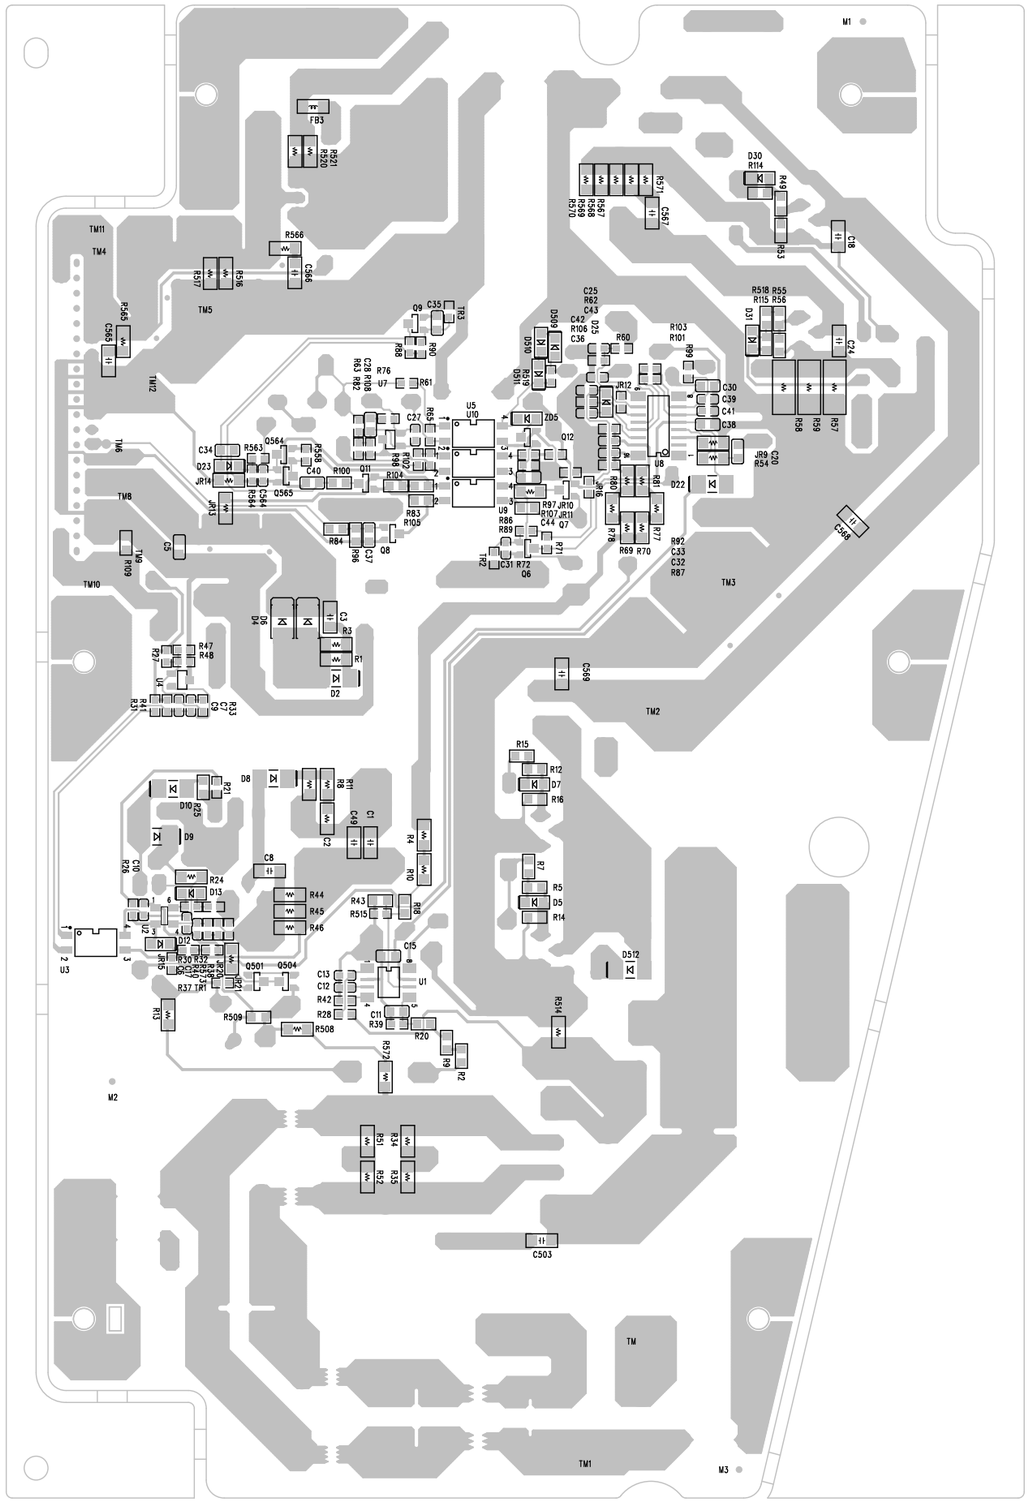

M1
TM11
TM4
TM5
TM12
TM6
TM8
TM10
TM3
TM2
TM
TM1
M2
M3
FB3
R521
R520
R566
C566
R507
R536
R565
C565
C35
R3
Q9
R80
R88
R76
R82
R83
R108
U7
R61
C27
R65
U5
C34
R563
Q564
R558
C40
R100
Q11
R104
R87
C564
R564
Q565
JR14
R83
R105
R84
C37
R86
Q8
C5
R109
C3
D6
D4
R3
R1
D2
R47
R48
R27
R33
Q2
D8
R18
D10
R25
D9
R28
C10
R24
D13
C8
R44
R45
R46
C1
C49
C2
R4
R10
R43
R515
R98
C15
U1
C13
C12
R42
R28
C11
R39
R20
R9
R2
R572
U3
Q501
Q504
R37
TR1
R13
R509
R508
R34
R31
R32
R35
C503
R15
R12
D7
R16
R7
R5
D5
R14
D512
R514
C569
R571
R567
R568
R569
R570
C567
D30
R114
R49
R53
C18
R518
R115
R55
R56
D31
C24
R58
R59
R57
C30
C29
C41
C38
R89
R54
C20
R103
R101
R99
D22
R81
R77
R78
R69
R70
C568
R92
C33
C32
R87
D25
C42
R106
C36
R60
D590
D591
R519
R511
JR12
Q12
D5
U5
R80
R96
JR10
JR11
R97
R107
C44
Q7
R71
U8
R86
R88
R72
Q6
R31
C31
D3
R33
Q3
R11
R21
D11
R29
C9
R30
R32
C7
R31
R34
C14
R35
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
R46
R47
R48
R49
R50
R51
R52
R53
R54
R55
R56
R57
R58
R59
R60
R61
R62
R63
R64
R65
R66
R67
R68
R69
R70
R71
R72
R73
R74

POWER PCB - COMPONENT LAYOUT

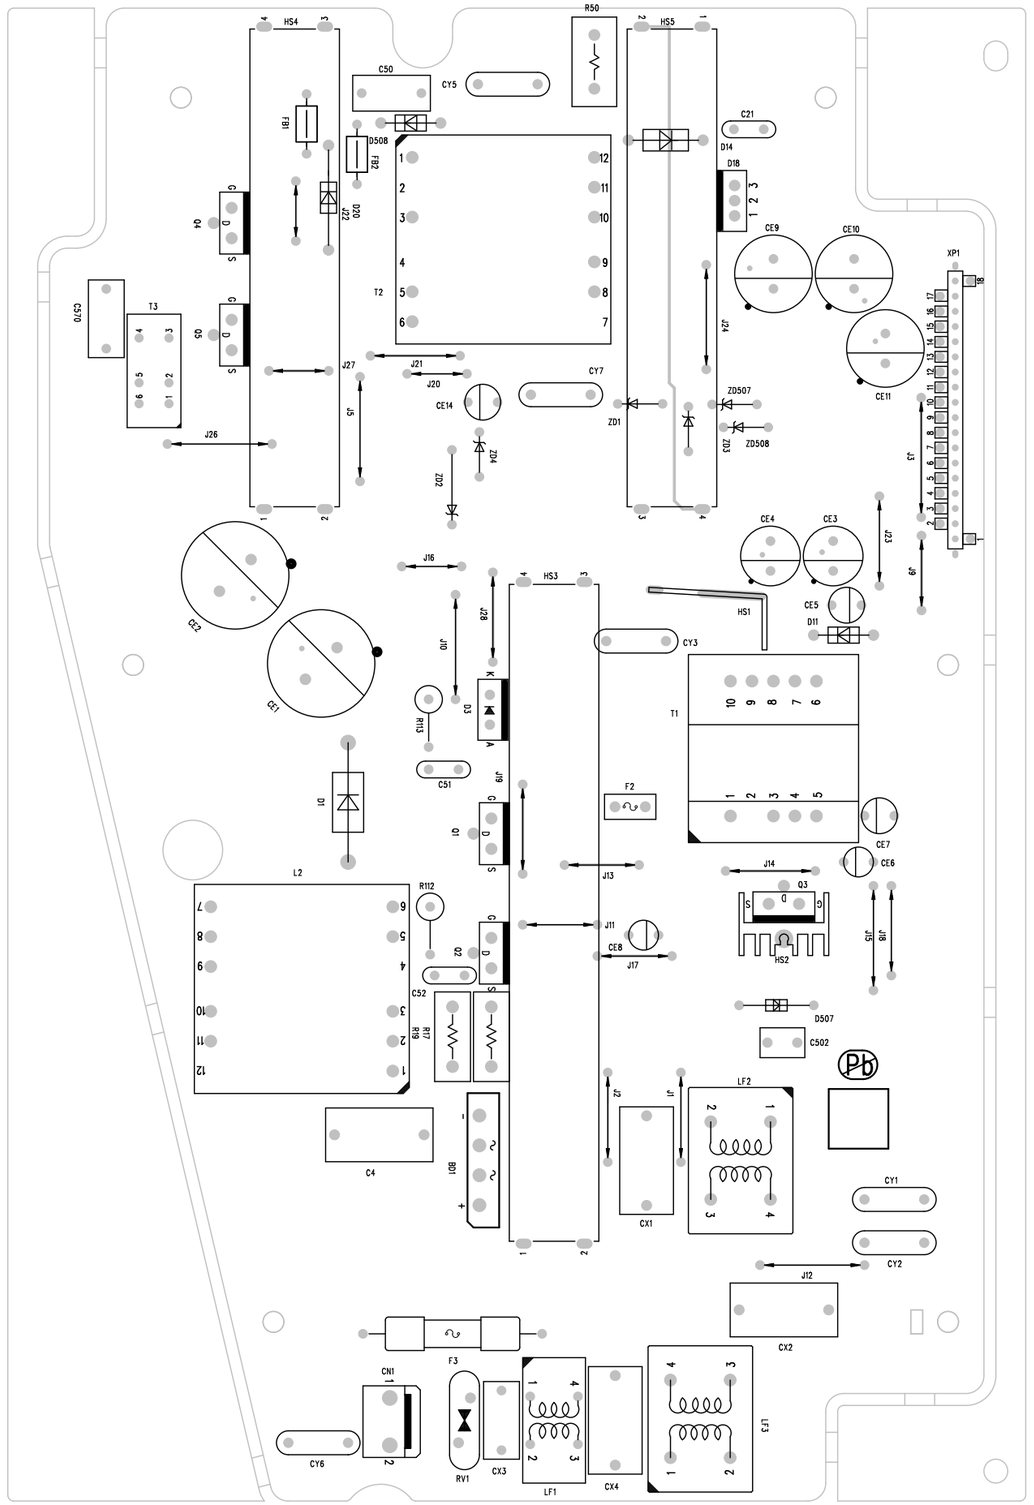


40-PF0750-PWC1G.pcb


EXPLODED VIEW

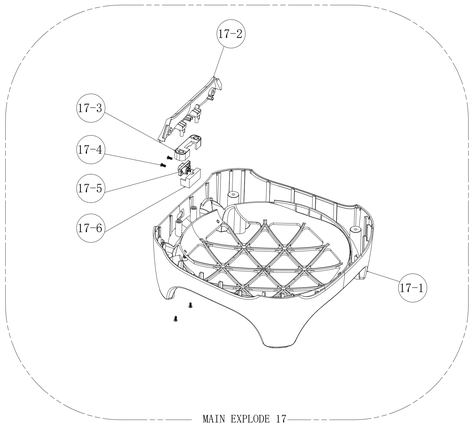


MAIN EXPLODE 17

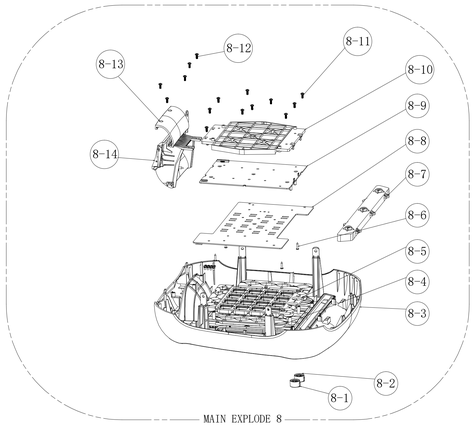


MAIN EXPLODE 8

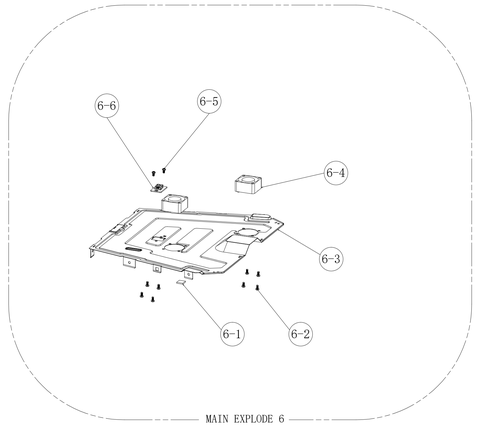


MAIN EXPLODE 6

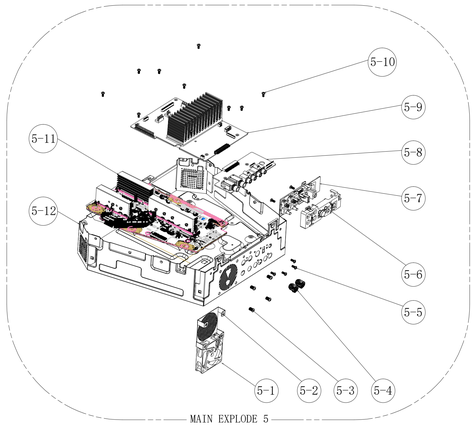


MAIN EXPLODE 5

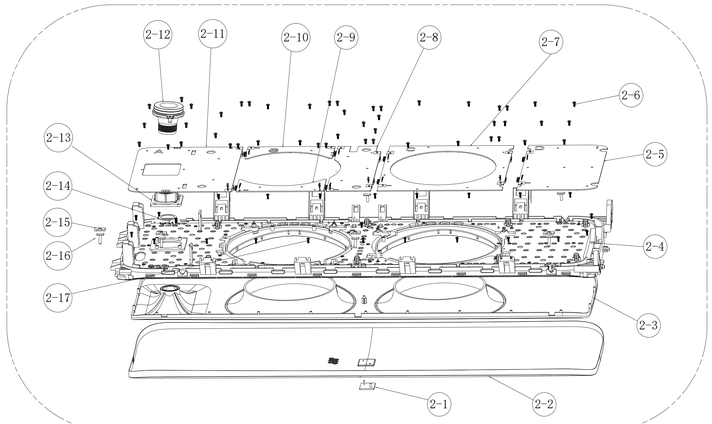

MAIN EXPLODE 2

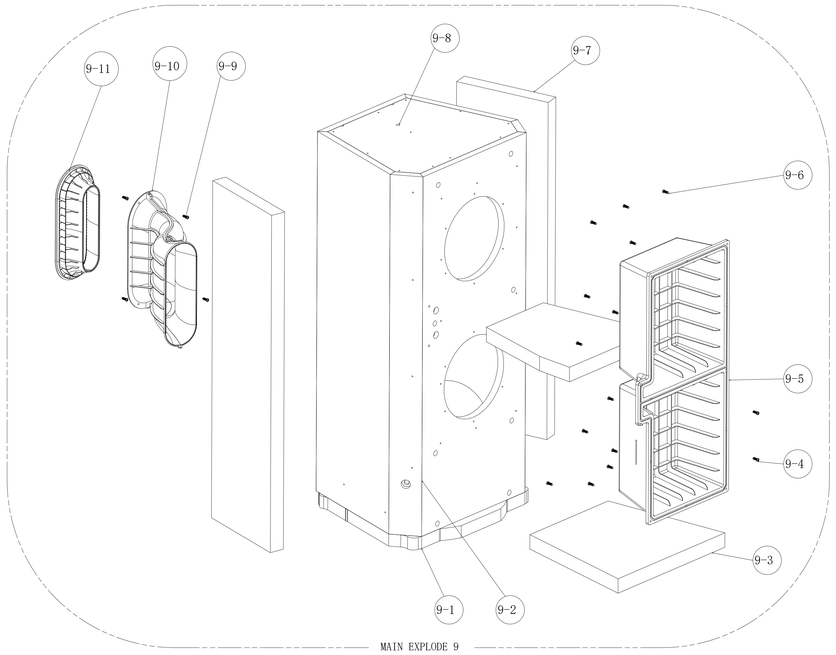

MAIN EXPLODE 9

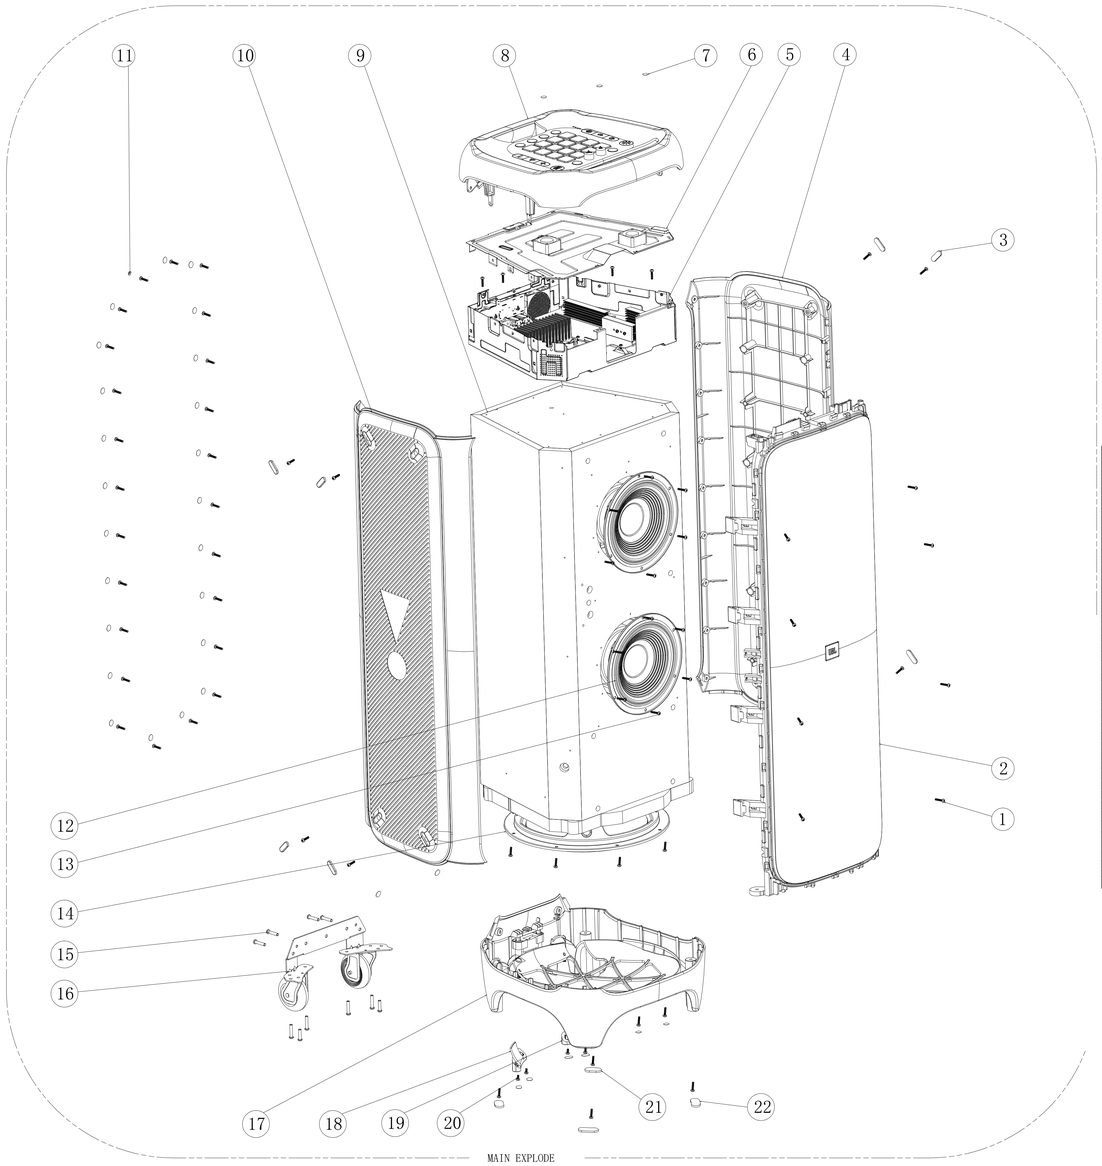


MAIN EXPLODE

Part Number	SAP Description	Usage	Pos. No.
08-HPSG1K-MA0S	MAIN BD PB1000	1	5-9
08-HPSG1K-TH0S	TOUCH BD PB1000	1	8-9
08-HPSG1K-AU0S	TERMINAL BD PB1000	1	5-7
08-HPSG1K-FA0S	FA LAMP BD PB1000	1	2-11
08-HPSG1K-FB0S	FB LAMP BD PB1000	1	2-10
08-HPSG1K-FC0S	FC LAMP BD PB1000	1	2-9
08-HPSG1K-FD0S	FD LAMP BD PB1000	1	2-8
08-HPSG1K-FE0S	FE LAMP BD PB1000	1	2-7
08-HPSG1K-FF0S	FF LAMP BD PB1000	1	2-5
08-HPSG1K-AD1S	NEW ADC TERMINAL BD PB1000	1	5-8
08-HPSG1K-KY0S	TOUCH LAMP BD PB1000	1	8-8
08-HPSG1K-PW0S	POWER BD PB1000	1	5-11
08-HPSG1K-FS0S	FAN BD PB1000	1	6-6
08-HPSG1K-WI0S	INNER POWER CORD PB1000	1	17-3,17-4,17-5,17-6
08-HPSG1K-PF0S	FRONT PANEL ASSY PB1000	1	2-1,2-2,2-3,2-4,2-13,2-16
08-HPSG1K-PT0S	TOP COVER ASSY PB1000	1	8-3,8-7,8-13,8-14
08-HPSG1K-PL0S	LEFT COVER ASSY PB1000	1	10
08-HPSG1K-PR0S	RIGHT COVER ASSY PB1000	1	4
08-HPSG1K-PC0S	CASTOR ASSY PB1000	1	16
08-BPB1R0-0HNS	BOTTOM COVER ASSY PB1000	1	17-1
08-BPB1R1-0HNS	BOTTOM COVER DECORATION ASSY PB1000	1	17-2
08-075150-04002	7 INCH SPEAKER PB1000	2	12
08-125300-03002	12 INCH SPEAKER PB1000	1	14
67-BPB1B0-0E0B2	REAR METAL PLATE PB1000	1	5-12
67-BPB1T0-0E0	TOP METAL COVER PB1000	1	6-3
67-BPB1V0-0E0	FAN SHIELD PB1000	1	5-2
55-BPB1K4-0UAB1	BUTTON BRACKET PB1000	1	5-6
56-J8G1N1-0HAB1	MIC KNOB PB1000	2	5-4
59-291530-000	SILICONE PLUG PB1000	1	11
59-315110-000B1	SILICONE BUTTON PB1000	1	8-5
59-316600-000B1	POWER BUTTON PB1000	1	8-4
55-BPB1K3-0UA	DJ BUTTON BRACKET PB1000	1	8-10
55-BPB1K1-0HAB1	KEY KNOB PB1000	1	8-1
55-BPB1K2-0HAB1	ECHO KNOB PB1000	1	8-2
59-315090-000B1	SIDE FOOT PAD PB1000	8	3
55-BPB1D1-0HNB1	AIR DUCT 1 PB1000	1	9-11
59-315070-000B1	LONGER SILICON FOOT PAD PB1000	2	22
59-315080-000B1	SHORTER SILICON FOOT PAD PB1000	2	21
55-BPB1R2-0HNB1	WHEEL DECORATION1 PB1000	1	18
55-BPB1R3-0HNB1	WHEEL DECORATION2 PB1000	1	19
57-316300-000	SCREW COVER PB1000	29	7
43-FM412Y-311	FAN 40X40X20MM 4000RPM PB1000	2	6-4
43-FM612Y-311	FAN 60X60X15MM 3000RPM PB1000	1	5-1
42-021012-04002	TWEETER PB1000	1	2_12

PACKING INSTRUCTION

修改				
标记	数量	更改说明	签名	日期

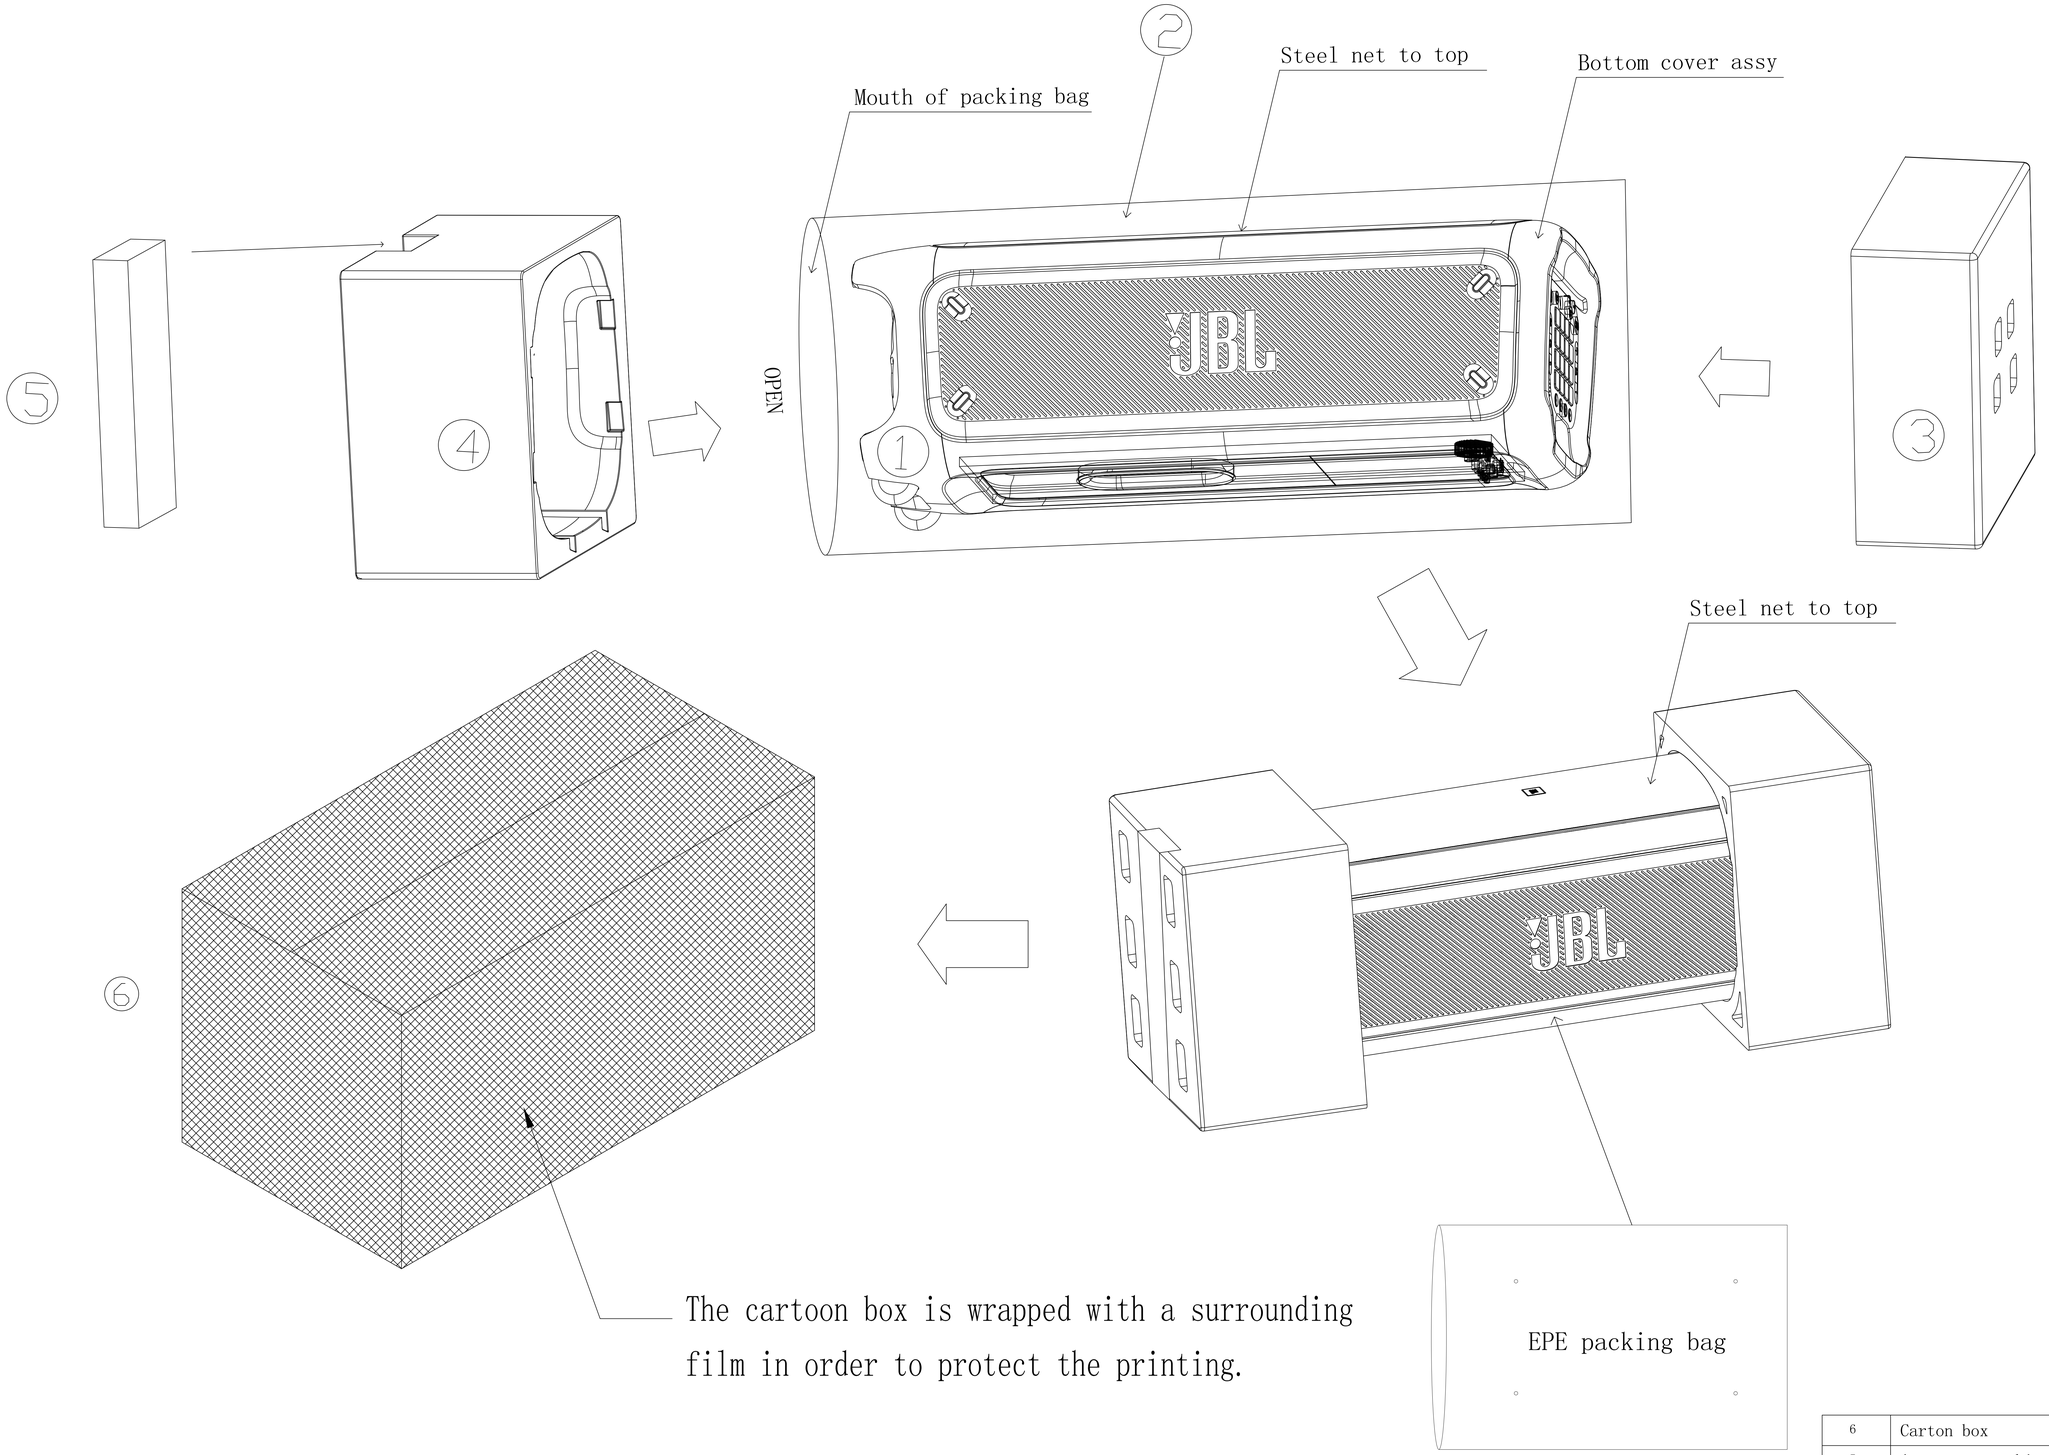

Packing requirements:

1. The opening position of the main plastic bag is sealed with small transparent paper;
2. There must be no crevice in the middle of the carton when sealed with transparent adhesive paper;
3. Accessory box contains power cord, manual (plastic bag) and other accessories;

NO.	Name	Part Number	QTY
6	Carton box	76-316390-0ATB1	1
5	Accessory packing box	76-316410-0BT	1
4	EPS Polyfoam-Top	75-BPB1R0-EA0	1
3	EPS Polyfoam-Bottom	75-BPB1L0-EA0	1
2	EPE packing bag	74-087135-50HB1	1
1	Main unit		1

JBL PARTY BOX 1000 Spare Parts List

Part Number	SAP Description	Usage	Pos. No.	UoM
08-HPSG1K-MA0S	MAIN BD PB1000	1	5-9	EA
08-HPSG1K-MA1S	NEW MAIN BD PB1000	1	5-9	EA
08-HPSG1K-TH0S	TOUCH BD PB1000	1	8-9	EA
08-HPSG1K-AU0S	TERMINAL BD PB1000	1	5-7	EA
08-HPSG1K-FA0S	FA LAMP BD PB1000	1	2-11	EA
08-HPSG1K-FB0S	FB LAMP BD PB1000	1	2-10	EA
08-HPSG1K-FC0S	FC LAMP BD PB1000	1	2-9	EA
08-HPSG1K-FD0S	FD LAMP BD PB1000	1	2-8	EA
08-HPSG1K-FE0S	FE LAMP BD PB1000	1	2-7	EA
08-HPSG1K-FF0S	FF LAMP BD PB1000	1	2-5	EA
08-HPSG1K-AD1S	NEW ADC TERMINAL BD PB1000	1	5-8	EA
08-HPSG1K-KY0S	TOUCH LAMP BD PB1000	1	8-8	EA
08-HPSG1K-BT0S	BT MODULE PB1000	1		EA
08-HPSG1K-PW0S	POWER BD PB1000	1	5-11	EA
08-HPSG1K-FS0S	FAN BD PB1000	1	6-6	EA
08-HPSG1K-WI0S	AC POWER SOCKET PB1000	1	17-3,17-4,17-5,17-6	EA
08-HPSG1K-PF0S	FRONT PANEL ASSY PB1000	1	2-1,2-2,2-3,2-4,2-13,2-16	EA
08-HPSG1K-PT0S	TOP COVER ASSY PB1000	1	8-3,8-7,8-13,8-14	EA
08-HPSG1K-PL0S	LEFT COVER ASSY PB1000	1	10	EA
08-HPSG1K-PR0S	RIGHT COVER ASSY PB1000	1	4	EA
08-HPSG1K-PC0S	CASTOR ASSY PB1000	1	16	EA
08-BPB1R0-0HNS	BOTTOM COVER ASSY PB1000	1	17-1	EA
08-BPB1R1-0HNS	BOTTOM COVER DECORATION ASSY PB1000	1	17-2	EA
08-075150-04002	7 INCH SPEAKER PB1000	2	12	EA
08-125300-03002	12 INCH SPEAKER PB1000	1	14	EA
76-316390-0ATC7	CARTON BOX AS PB1000	1		EA
76-316390-0ATC6	CARTON BOX BR PB1000	1		EA
76-316390-0ATC5	CARTON BOX CN PB1000	1		EA
76-316390-0ATD9	CARTON BOX EU PB1000	1		EA
76-316390-0ATC4	CARTON BOX IN PB1000	1		EA
76-316390-0ATC3	CARTON BOX RU PB1000	1		EA
76-316390-0ATC2	CARTON BOX AM PB1000	1		EA
67-BPB1B0-0E0B2	REAR METAL PLATE PB1000	1	5-12	EA
67-BPB1T0-0E0	TOP METAL COVER PB1000	1	6-3	EA
67-BPB1V0-0E0	FAN SHIELD PB1000	1	5-2	EA
55-BPB1K4-0UAB1	BUTTON BRACKET PB1000	1	5-6	EA
56-JBG1N1-0HAB1	MIC KNOB PB1000	2	5-4	EA
59-291530-000	SILICONE PLUG PB1000	1	11	EA
59-221450-000	THERMAL SILICA1 PB1000	1		EA
59-247130-000	THERMAL SILICA2 PB1000	3		EA
59-315110-000B1	SILICONE BUTTON PB1000	1	8-5	EA
59-316600-000B1	POWER BUTTON PB1000	1	8-4	EA
55-BPB1K3-0UA	DJ BUTTON BRACKET PB1000	1	8-10	EA
55-BPB1W3-0HM	DJ LIGHT GUIDE PB1000	1		EA
55-BPB1K1-0HAB1	KEY KNOB PB1000	1	8-1	EA
55-BPB1K2-0HAB1	ECHO KNOB PB1000	1	8-2	EA
59-315090-000B1	SIDE FOOT PAD PB1000	8	3	EA
55-BPB1D1-0HNB1	AIR DUCT 1 PB1000	1	9-11	EA
67-BPB1Q0-0E0	GROUND PLATE PB1000	2		EA
59-315070-000B1	LONGER SILICON FOOT PAD PB1000	2	22	EA
59-315080-000B1	SHORTER SILICON FOOT PAD PB1000	2	21	EA
55-BPB1R2-0HNB1	WHEEL DECORATION1 PB1000	1	18	EA
55-BPB1R3-0HNB1	WHEEL DECORATION2 PB1000	1	19	EA
57-316290-000	PC SLICE PB1000	4		EA
57-316300-000	SCREW COVER PB1000	29	7	EA

76-316410-0BTB1	ACCESSARY BOX PB1000	1		EA
59-322420-000	SILICON PAD PB1000	1		EA
08-HPSG1K-WB0S	DJ WRISTBAND PB1000	1		EA
43-FM412Y-311	FAN 40X40X20MM 4000RPM PB1000	2	6-4	EA
43-FM612Y-311	FAN 60X60X15MM 3000RPM PB1000	1	5-1	EA
46-FF014T-06MAF	CABLE 6P PH2.0 140MM PB1000	1		EA
46-HH022C-10BVF	FFC CABLE 10P L=220MM B PB1000	1		EA
46-FF010C-08AUF	FFC CABLE 8P L=100MM A PB1000	1		EA
46-KK010C-20AUF	FFC CABLE 0.5MM 20P 100MM A PB1000	1		EA
46-KK030C-34BUFT	FFC CABLE 34P L=300MM B PB1000	1		EA
46-KK160C-40AVF	FFC CABLE 40P L=160MM A PB1000	1		EA
46-KL012T-04XF	SPEAKER CABLE 4PIN L=1240M PB1000	1		EA
46-KL022T-02JF	SPEAKER CABLE L=220MM 20AWG PB1000	1		EA
46-KL900T-05XF	SPEAKER CABLE L=800MM PB1000	1		EA
46-NN016T-06XF	CABLE 6P L=160MM 28AWG PB1000	1		EA
47-ANT421-XX1	2.4G BLUTETOOTH ANTENNA L=160MM PB1000	1		EA
51-D70200-0DY08-M	POWER CORD 2000MM THA PB1000	1		EA
51-D70200-0PY08-M	POWER CORD 2000MM AU PB1000	1		EA
51-B80200-0LY08-M	POWER CORD 2000MM AM PB1000	1		EA
51-D70200-01Y08-M	POWER CORD 2000MM BR PB1000	1		EA
51-D70200-0AY08-M	POWER CORD 2000MM UK PB1000	1		EA
51-D70200-0CY08-M	POWER CORD 2000MM AS/EU/RU PB1000	1		EA
51-D70200-0KY08-M	POWER CORD 2000MM KO PB1000	1		EA
51-D70200-0NY08-M	POWER CORD 2000MM IN PB1000	1		EA
51-G70200-0GY08-M	POWER CORD 2000MM CN PB1000	1		EA
42-021012-04002	TWEETER PB1000	1	2_12	EA
75-BPB1L0-EA1	LEFT EPS FOAM PB1000	1		EA
75-BPB1M0-EA0	MIDDLE EPS FOAM PB1000	1		EA
75-BPB1R0-EA1	RIGHT EPS FOAM PB1000	1		EA

ODM TCL is changing the new IC component on Main PCBA and studying new ADC terminal PCBA to companied with it. That means both new Main PCBA and new ADC terminal PCBA are replaced together on those old FG unit.
Currently, this change is ongoing, there are still old IC stock in TCL.

SKU Group	Cut-in SN
JBLPARTYBOX1000EU2	TL0818-CL0041487

New materials involved:

Part Number	SAP Description	Usage	Pos. No.	UoM
08-HPSG1K-MA1S	NEW MAIN BD PB1000	1	5-9	EA
08-HPSG1K-AD1S	NEW ADC TERMINAL BD PB1000	1	5-8	EA

Service Info

Service Info # JBL2021-003

Dec. 2021

To: **All JBL Service Centers**

Models: **JBL PARTYBOX 1000**

Subject: **Module/parts changes**

Part Change in new revision:

1. Please note JBL Partybox 1000 has changed into 2 versions of hardware and software.

2. New and old module are compatibility but with matching ADC Terminal Boards.

3. When repairing a unit produced before the cut-in serial number using the new versions of spare parts, no matter the defect is on the main Board or ADC Terminal Board, both boards must be replaced together. Vice versa, if you need to repair a new unit produced after the cut-in serial number using old stocks of spare parts, then you will need to replace both Main Board & ADC Terminal Board of the old versions together.

4. Note: Only units produced after the serial number cut-in, or with new hardware, can be loaded with software version 75 or higher.

Old material involved:

Pos. No.	Part Number	Description	Usage	Software version:	Cut-in Number
5-9	08-HPSG1K-MA0S	MAIN BOARD PB1000	1	Less than or equal to SW version 64	< TL0818-AL0039110
5-8	08-HPSG1K-AD0S	ADC TERMINAL BOARD PB1000	1		

New material involved:

Pos. No.	Part Number	Description	Usage	Software version:	Cut-in Number
5-9	08-HPSG1K-MA1S	NEW MAIN BOARD PB1000	1	SW version 75 or higher	TL0818-AL0039111 <
5-8	08-HPSG1K-AD1S	NEW ADC TERMINAL BD PB1000	1		

REVISION LIST

Version 1.0 2019-4-15 Initial release

Version 1.1 2020-2-10 Correct Pos. No. in Exploded View and Spare Parts List

Version 1.2 2021-12-31 Add one page for Service Information and update Spare Parts List.