

Glee Wireshark Guide

Setup and Usage

April 11, 2024

© 2017-2024 Six Degrees Space Ltd.
Legal disclaimer: All hardware and software (including firmware) included in the product ("Product") is licensed to Customer pursuant to a nonexclusive, limited license, solely for its intended purpose. Customer may not copy, disclose, modify, translate or adapt the Product, and may not disassemble or reverse engineer the Product, or seek in any manner to discover, disclose or use any proprietary design (included but not limited to optics, algorithms and techniques) contained therein. SIXDOF AND ITS SUPPLIERS SHALL IN NO EVENT BE LIABLE TO CUSTOMER (OR ANY THIRD PARTY), WITH RESPECT TO ANY CLAIM RELATING TO THE PRODUCT, WHETHER BASED IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE (EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR IF SUCH DAMAGES ARE FORESEEABLE) FOR: LOST PROFITS OR INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES; OR ANY AMOUNTS EXCEEDING (IN THE AGGREGATE) THE PURCHASE PRICE FOR THE PRODUCT.

Contents

1 Introduction 3

2 Installation 4

3 Usage 5

1 Introduction

Wireshark is a powerful network protocol analyzer that allows users to capture and inspect the data traveling back and forth between a computer and the network to which it is connected. It provides a detailed view of network traffic, enabling users to analyze and troubleshoot network issues, detect security vulnerabilities, and investigate suspicious activity. Wireshark supports a wide range of protocols and offers various features such as live capture, deep packet inspection, and the ability to filter and search through captured data for detailed analysis.

The provided "glee" Wireshark plugin enables Wireshark to parse all network communications that are associated with the Sixdof tracking system.


2 Installation

The provided "glee" Wireshark plugin will only work with Wireshark version 3.6.2. Therefore the Windows installer is provided in the folder `wireshark_installer`. Run the installer and use the default options.


Copy and paste the `glee.dll` file into the folder `C:\Program Files\Wireshark\plugins\3.6\epan\`

3 Usage

Run Wireshark by double clinking the icon on your desktop or Start menu. The opening screen will look like this:

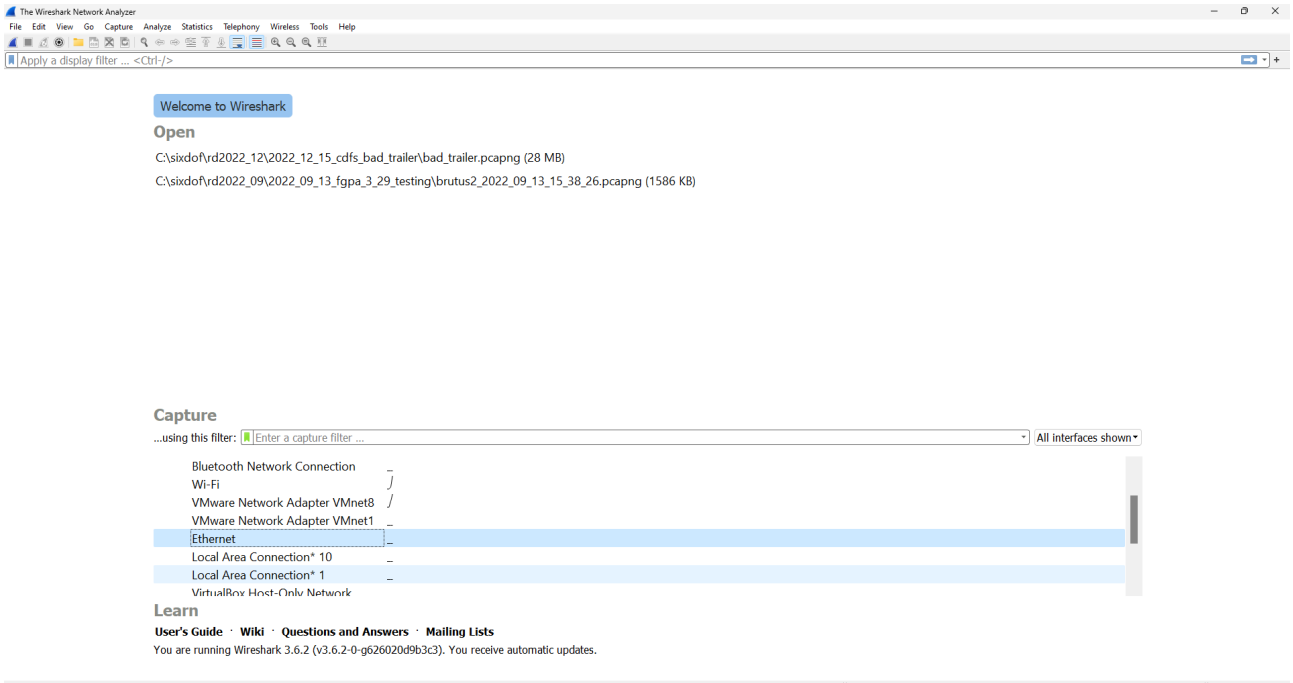

Select the Network that the sensor is connected to. To find out which network the sensor is connected to you can run sixdof_studio.exe and proceed to the "Network Setup" window. Next run the Sixdof system, either by running sixdof_studio, or by running a program that utilized the SdsDroneSdk.dll shared library. You should see something like this:

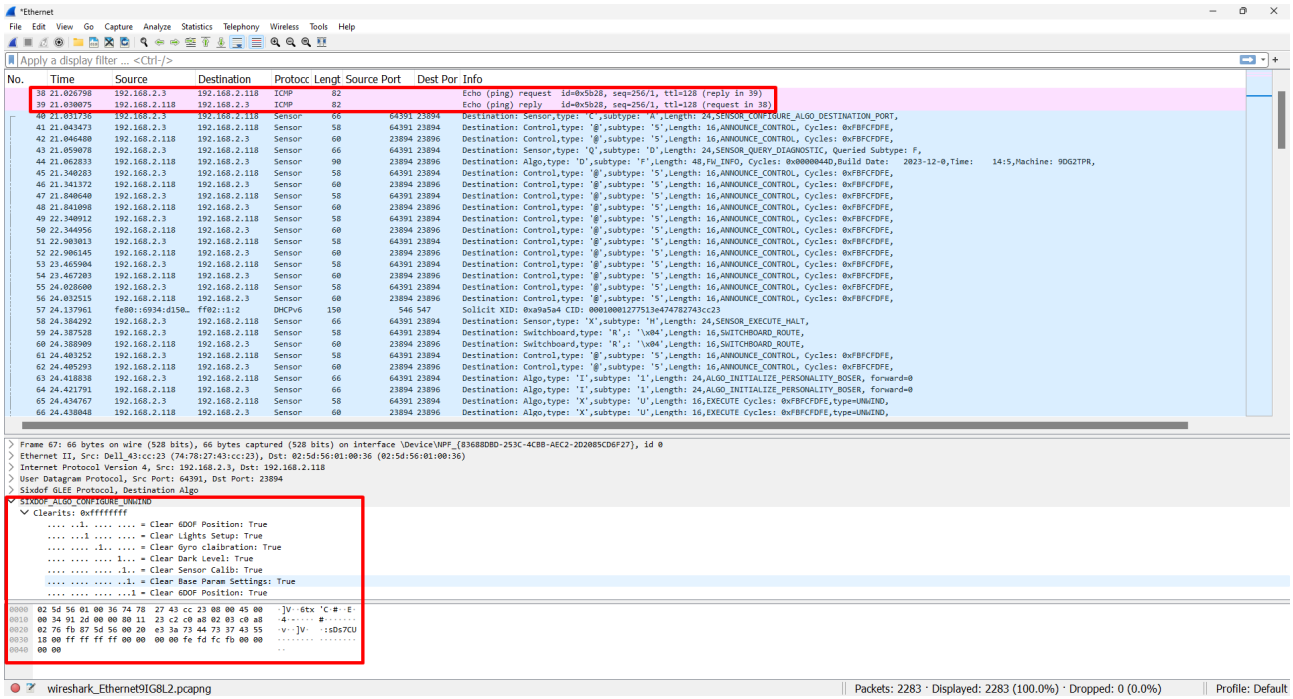

Each row in the Wireshark interface corresponds to a communication packet over the network. Highlighted in pink at the top is the ping from the host computer to the sensor, which is returned from the sensor to the computer. After that are the UDP packets that are parsed by the `glee.dll` plugin. Packets that are supported by the plug in can be view in in the bottom bar in their raw data form, or in the parsed form and shown in the example above.

The most important thing to see in this example is that there are communication packets going between the host computer and the Sixdof sensor. For more detailed debugging please contact the Sixdof team at `support@sixdofspace.com`.