

Hai everyone,

Here is instruksion how to use BMP is Dell force10 step by step.

I am using Windows 10 pro and gonna use Dell force10 4810 OS9

1. You need to download Tftpd64 or any alternative TFTP/DHCP server to host the boot files

↳ <https://pjo2.github.io/tftpd64/>

3. Make folder, example name "Dell"
4. In folder make .txt file or download "bmp-config.txt"
5. If you download jump to 5

File Name: bmp-config.txt

Copy this text and save

hostname S4810-1

username admin password Your-Password privilege 15

enable password Your-Password

interface ManagementEthernet 0/0

ip address 192.168.100.10/24

no shutdown

management route 0.0.0.0/0 192.168.100.1

ip ssh server enable

line vty 0 9

password Your-Password

login

6. Go to network card settings and configure like that:

IPv4 Settings

Ip address: 192.168.100.1

subnet mask 255.255.255.0

Save

8. Now you need start Tftpd64

Click setting → DHCP and configure like that:

The screenshot shows the 'Tftpd64: Settings' dialog box with the 'DHCP' tab selected. The dialog is divided into three main sections: 'DHCP Pool definition', 'DHCP Options', and 'DHCP Settings'. The 'DHCP Pool definition' section includes fields for 'IP pool start address' (192.168.100.50), 'Size of pool' (10), 'Lease (minutes)' (2880), and 'Boot File'. The 'DHCP Options' section includes fields for 'Def. router (Opt 3)' (192.168.100.1), 'Mask (Opt 1)' (255.255.255.0), 'DNS Servers (Opt 6)', 'WINS server (Opt 44)', 'NTP server (Opt 42)', 'SIP server (Opt 120)', 'Domain Name (15)', and 'Additional Option' (209 bmp-config.txt). The 'DHCP Settings' section includes checkboxes for 'Ping address before assignation' (checked), 'Persistant leases' (checked), 'Double answer if relay detected' (unchecked), and 'Bind DHCP to this address' (checked, with a dropdown menu showing 192.168.100.1). At the bottom are buttons for 'OK', 'Default', 'Help', and 'Cancel'.

Section	Field	Value
DHCP Pool definition	IP pool start address	192.168.100.50
	Size of pool	10
	Lease (minutes)	2880
	Boot File	
DHCP Options	Def. router (Opt 3)	192.168.100.1
	Mask (Opt 1)	255.255.255.0
	DNS Servers (Opt 6)	
	WINS server (Opt 44)	
	NTP server (Opt 42)	
	SIP server (Opt 120)	
	Domain Name (15)	
	Additional Option	209 bmp-config.txt
DHCP Settings	☒ Ping address before assignation	
	☒ Persistant leases	
	☐ Double answer if relay detected	
	☒ Bind DHCP to this address	192.168.100.1

7. Go now to TFTP (setting → TFTP) Click browse in base directory and navigate to your new folder from step 2. Configure the rest as shown in the photo.

The screenshot shows the 'Tftpd64: Settings' dialog box with the 'TFTP' tab selected. The 'Base Directory' is set to 'C:\Users\Catboy\Desktop\Dell'. Under 'TFTP Security', 'Standard' is selected. Under 'TFTP configuration', 'Timeout (seconds)' is 3, 'Max Retransmit' is 6, 'Tftp port' is 69, and 'local ports pool' is empty. The 'Advanced TFTP Options' section includes several checked options: 'Option negotiation', 'Show Progress bar', 'Translate Unix file names', and 'Bind TFTP to this address' (set to 192.168.100.1). Other options like 'PXE Compatibility', 'Allow \ As virtual root', 'Use anticipation window of 0 Bytes', 'Hide Window at startup', 'Create "dir.txt" files', 'Create md5 files', 'Beep for long transfer', and 'Reduce "/" in file path' are unchecked.

Tftpd64: Settings

GLOBAL TFTP DHCP SYSLOG DNS

Base Directory
C:\Users\Catboy\Desktop\Dell Browse


TFTP Security
☐ None
☒ Standard
☐ High
☐ Read Only

TFTP configuration
Timeout (seconds) 3
Max Retransmit 6
Tftp port 69
local ports pool

Advanced TFTP Options
☒ Option negotiation
☐ PXE Compatibility
☒ Show Progress bar
☒ Translate Unix file names
☒ Bind TFTP to this address 192.168.100.1
☐ Allow \ As virtual root
☐ Use anticipation window of 0 Bytes
☐ Hide Window at startup
☐ Create "dir.txt" files
☐ Create md5 files
☐ Beep for long transfer
☐ Reduce "/" in file path

OK Default Help Cancel

8. Last step before start. Restart Tftpd64. Connect mgmt port in your switch to your PC/Laptop. (Network card we configured before) Power on switch. If you go to Log Viewer and press Server Interface to 192.168.100.1 you gonna see that switch get ip and file via Tftp.

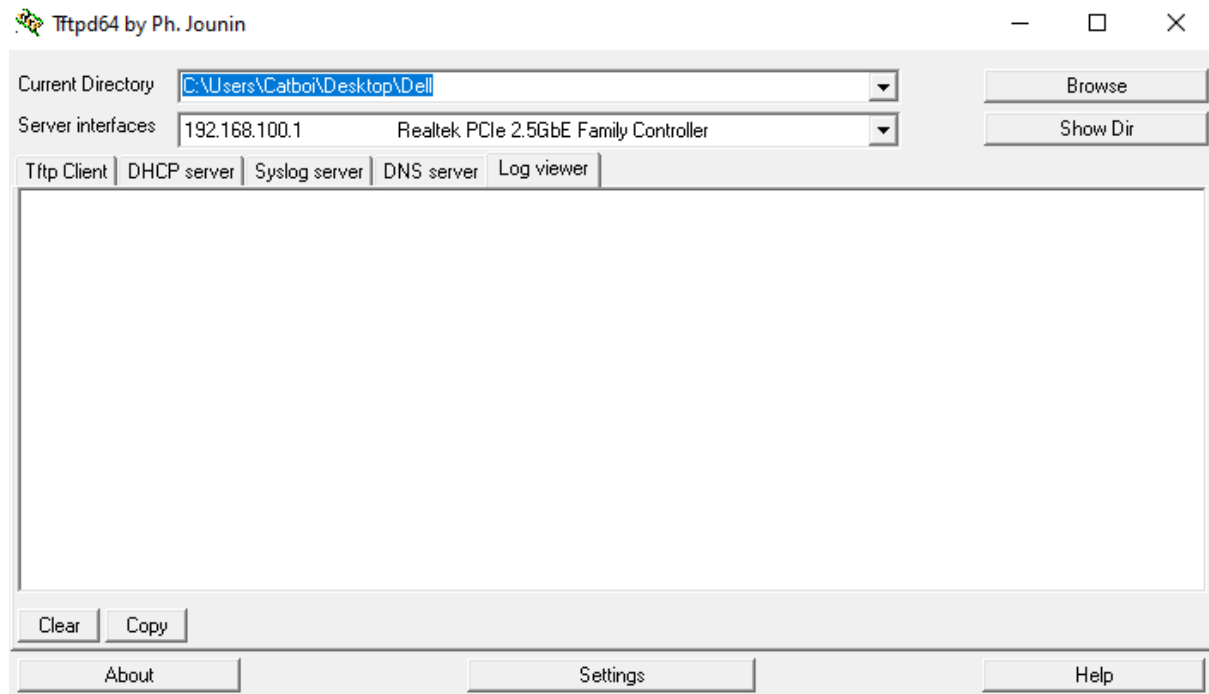

9. Wait for the switch to start up and load the initialization file.

10. Now use putty and go to ssh. Port: 22 Ip address: 192.168.100.10 Username: admin
Password: Your-Password

11. Enjoy your bmp.