

Hai everyone,

Here is instruksion how to use BMP for Dell force10 step by step.

I am using Windows 10 pro and gonna use Dell force10 4810 OS9

1. You need to download Tftpd64 or any alternative TFTP/DHCP server to host the boot files

↳ <https://pjo2.github.io/tftpd64/>

2. Make folder, example name "Dell"
3. In folder make .txt file or download "bmp-config.txt"

★File Name: bmp-config.txt

★Copy this text and save

```
hostname S4810-1

username admin password Your-Password privilege 15

enable password Your-Password

interface ManagementEthernet 0/0

ip address 192.168.100.10/24

no shutdown

management route 0.0.0.0/0 192.168.100.1

ip ssh server enable

line vty 0 9

password Your-Password

login
```

4. Go to network card settings and configure like that:

IPv4 Settings

*Ip address: 192.168.100.1

*subnet mask 255.255.255.0

*Save

5. Now you need start Tftpd64


Click setting → DHCP and configure like that:

The screenshot shows the 'Tftpd64: Settings' dialog box with the 'DHCP' tab selected. The dialog has four tabs: GLOBAL, TFTP, DHCP, and SYSLOG. The DHCP tab contains three sections: 'DHCP Pool definition', 'DHCP Options', and 'DHCP Settings'. In the 'DHCP Pool definition' section, the 'IP pool start address' is 192.168.100.50, 'Size of pool' is 10, 'Lease (minutes)' is 2880, and 'Boot File' is empty. In the 'DHCP Options' section, 'Def. router (Opt 3)' is 192.168.100.1, 'Mask (Opt 1)' is 255.255.255.0, and other options (DNS Servers, WINS server, NTP server, SIP server, Domain Name) are empty. The 'Additional Option' is set to 209 with the value 'bmp-config.txt'. In the 'DHCP Settings' section, 'Ping address before assignation' and 'Persistant leases' are checked, 'Double answer if relay detected' is unchecked, and 'Bind DHCP to this address' is checked with the value 192.168.100.1. At the bottom are buttons for OK, Default, Help, and Cancel.

Section	Option	Value
DHCP Pool definition	IP pool start address	192.168.100.50
	Size of pool	10
	Lease (minutes)	2880
	Boot File	
DHCP Options	Def. router (Opt 3)	192.168.100.1
	Mask (Opt 1)	255.255.255.0
	DNS Servers (Opt 6)	
	WINS server (Opt 44)	
	NTP server (Opt 42)	
	SIP server (Opt 120)	
	Domain Name (15)	
Additional Option	209	bmp-config.txt
DHCP Settings	☒ Ping address before assignation	
	☒ Persistant leases	
	☐ Double answer if relay detected	
	☒ Bind DHCP to this address	192.168.100.1

6. Go now to TFTP (setting → TFTP). Click browse in base directory and navigate to your new folder from step 2.


Configure the rest as shown in the photo.

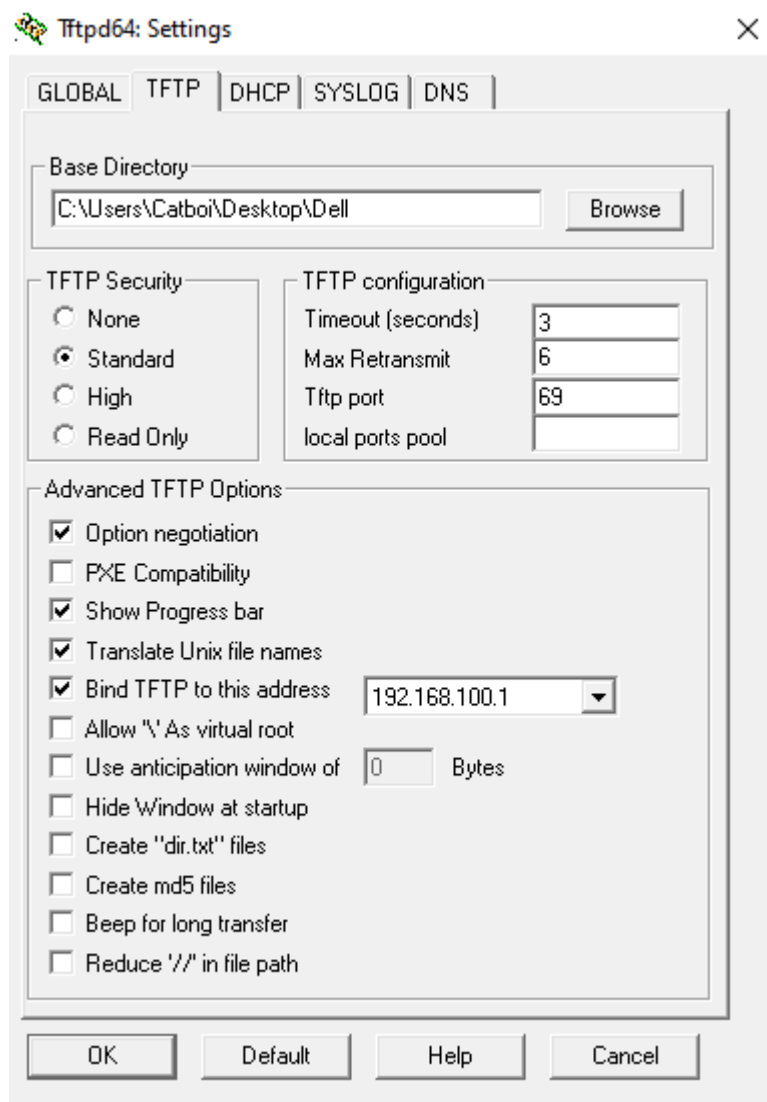

7. Last step before start.

- ★ Restart Tftpd64.
- ★ Connect mgmt port in your switch to your PC/Laptop. (Network card we configured before)
- ★ Power on switch.

If you go to Log Viewer and press Server Interface to 192.168.100.1 you gonna see that switch get ip and file via Tftp.

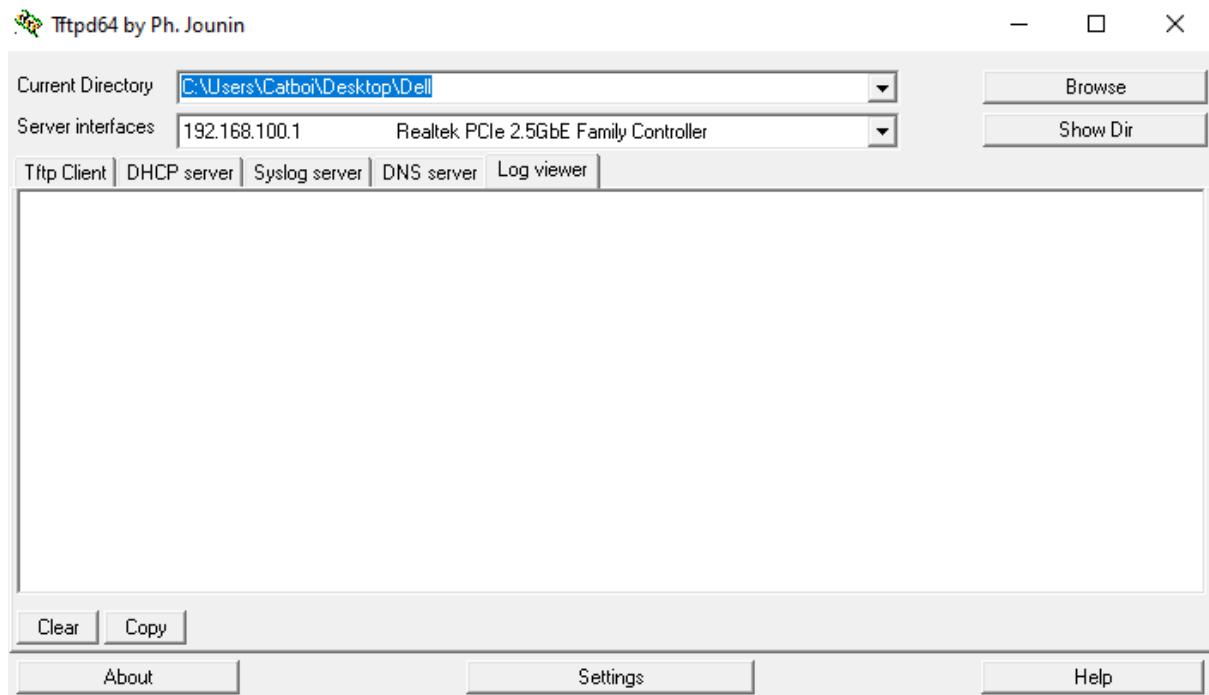

8. Wait for the switch to start up and load the initialization file.

Now use putty and go to ssh.

Port: 22

Ip address: 192.168.100.10

Username: admin

Password: Your-Password

9. Enjoy your bmp.