
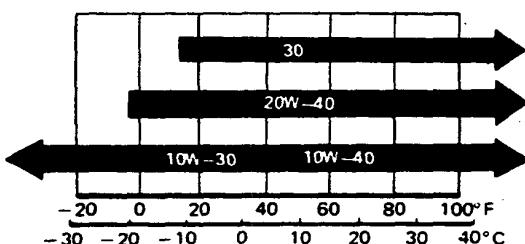


Lubrication Points

No.	LUBRICATION POINTS		LUBRICANT
1	Engine		API Service Grade: SE or SF SAE Viscosity: See chart below
2	Transmission		Manual Automatic
3	Brake reservoir		
4	Clutch reservoir		Brake fluid DOT 3 or DOT 4
5	Steering gearbox (Power)		Honda steering grease P/N 08740-99969
6	Steering ball joint		
7	Suspension ball joints		
8	Steering boot		
9	Shift lever pivot (Manual)		
10	Steering column bushings		
11	Select lever (Automatic)		
12	Pedal linkage		
13	Brake master cylinder push rod		Multi-purpose Grease
14	Trunk hinges		
15	Door hinges upper and lower		
16	Door opening detents		
17	Fuel filler lid		
18	Engine hood hinges		
19	Engine hood latch		
20	Caliper		Piston seal Dust seal Caliper pin Piston
21	Power steering reservoir		Honda power steering fluid P/N 08208-99961

Recommended Engine Oil
(SE or SF Grade Only)

Recommended Manual Transmission Oil

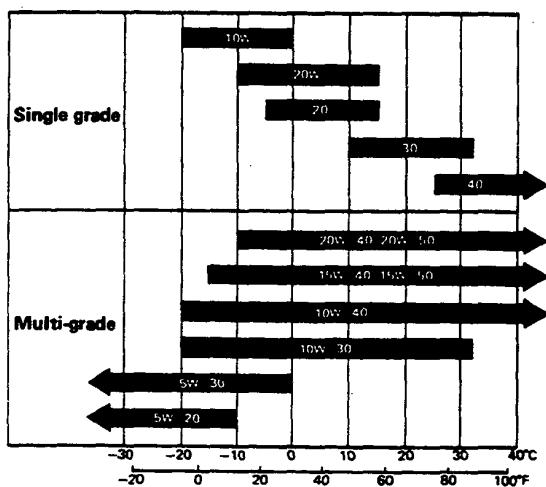

Transmission oil viscosity for
ambient temperature ranges.

Engine oil viscosity for
ambient temperature ranges.

