


Swapping the X and Y Axis Orientation


This will guide you through changing the X and Y axis Orientation of your ez-Router

Step 1: In Mach3 click config. >Ports and Pins >Motor Outputs.

Step 2: Swap places of the step and dir. Values of the X and Y axis. Now click apply.

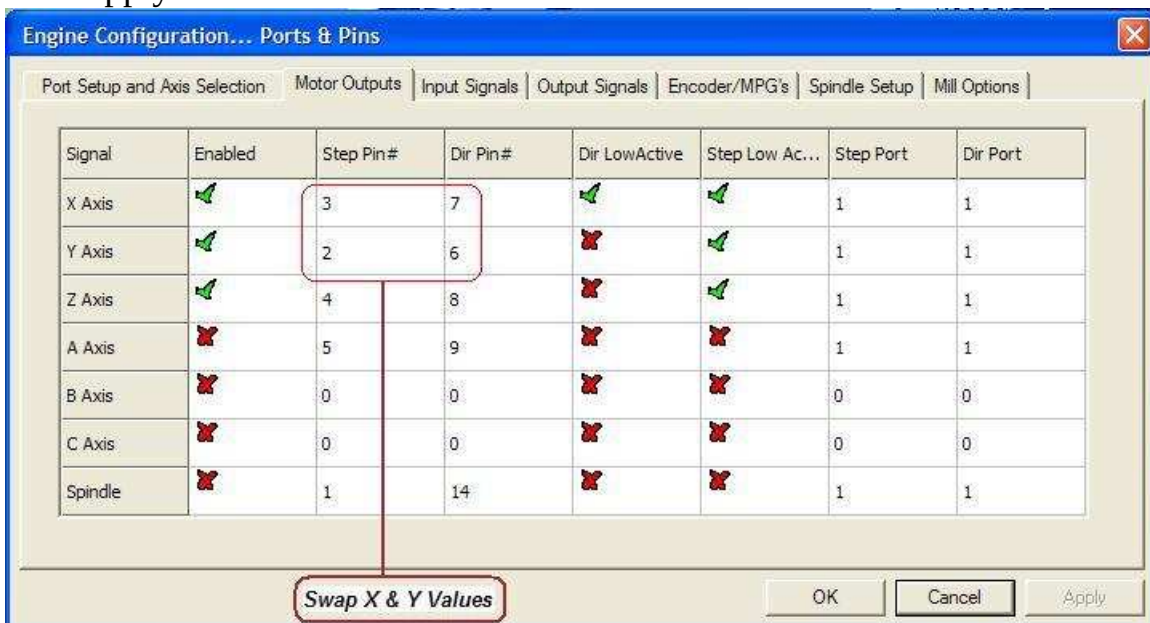

Step 3: Select Input Signals. Swap places of all pin number values for the X and Y axis. Now click apply.

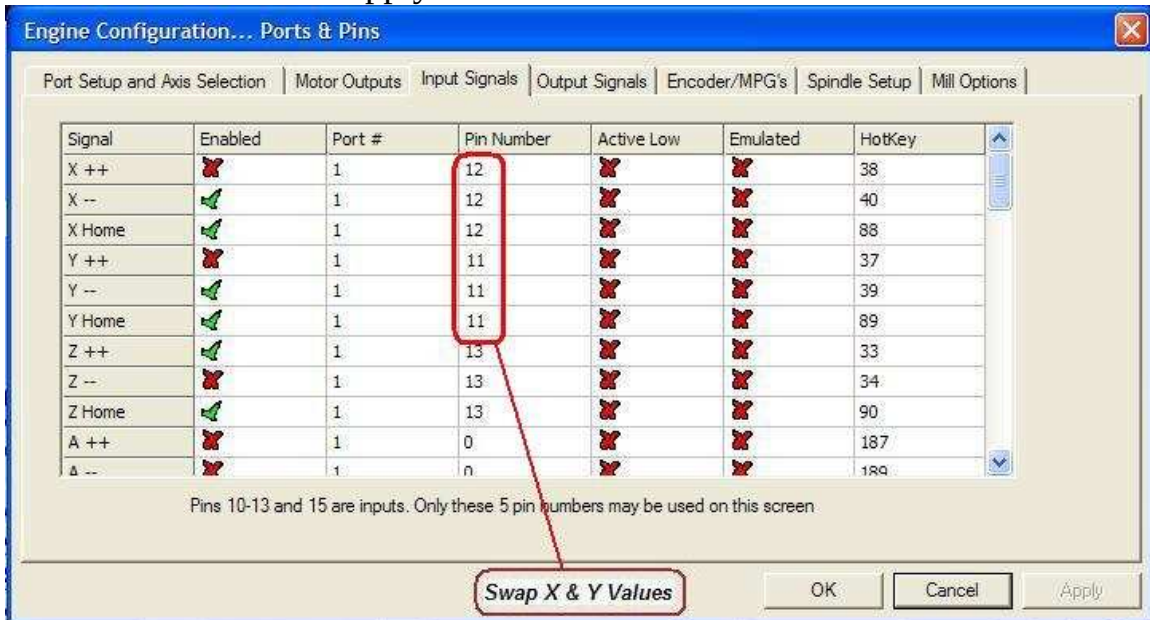


Step 4: Click OK of the configuration window.

Step 5: Click Config. >Homing/Limits

Step 6: Swap the soft max values of the X & Y axis. Now click OK.



Step 7: Click Config. >System Hot Keys. Reassign the X and Y axis hot keys. Example: click the X++ and then press the button on the keyboard that you want to use to jog the X axis in a positive direction.

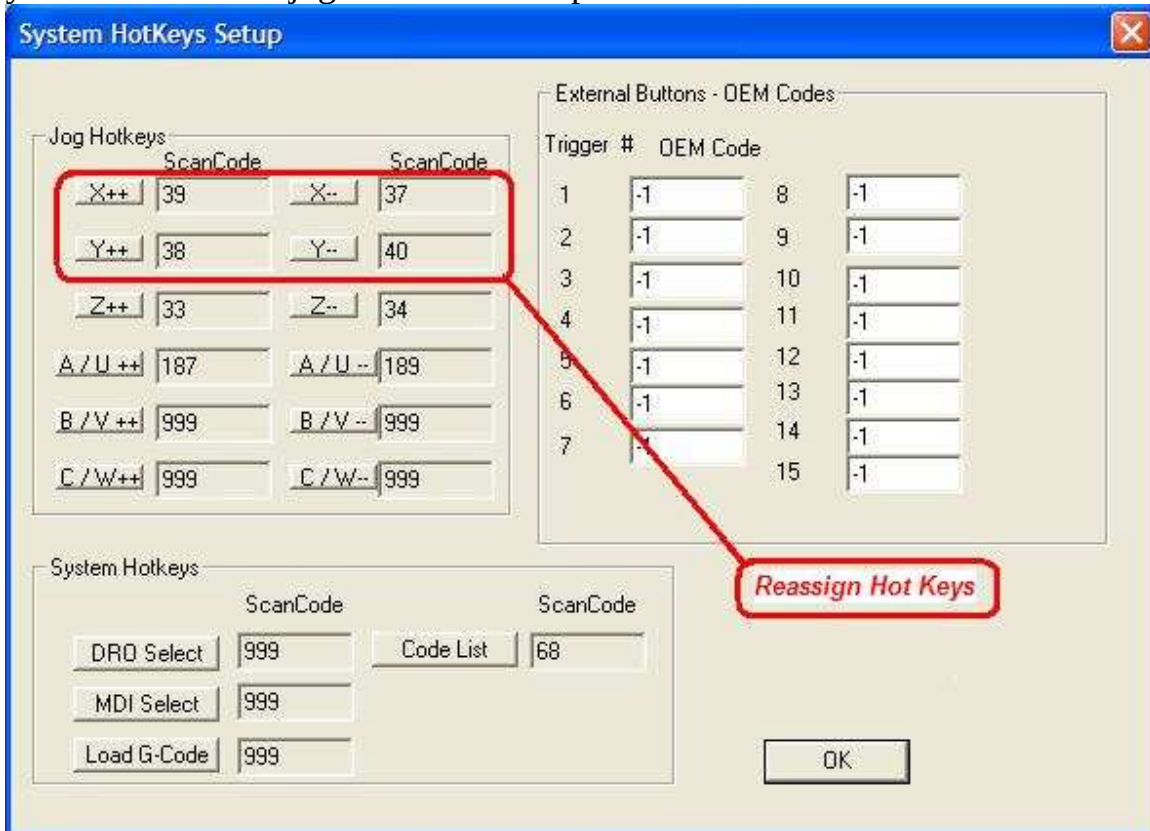

Step 8: Click ok after reassigning all of these keys.

Step 9: Close and restart the Mach3 software.


Your X and Y axis orientation should now be changed.

Swapping the X and Y Axis Orientaion


This will guide you through changing the X and Y
axis Orientation of your ez-Router

Step 1: In Mach3 click config. >Ports and Pins >Motor Outputs.

Step 2:Swap places of the step and dir. Values of the X and Y axis. Now
click apply.

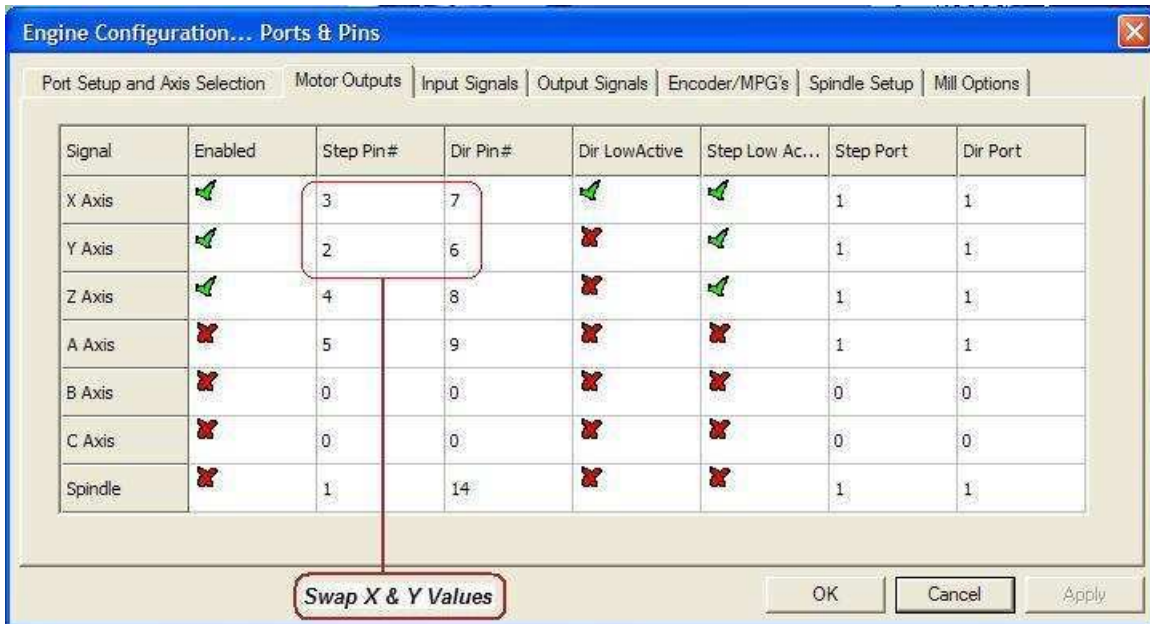

Step 3: Select Input Signals. Swap places of all pin number values for the X and Y axis. Now click apply.

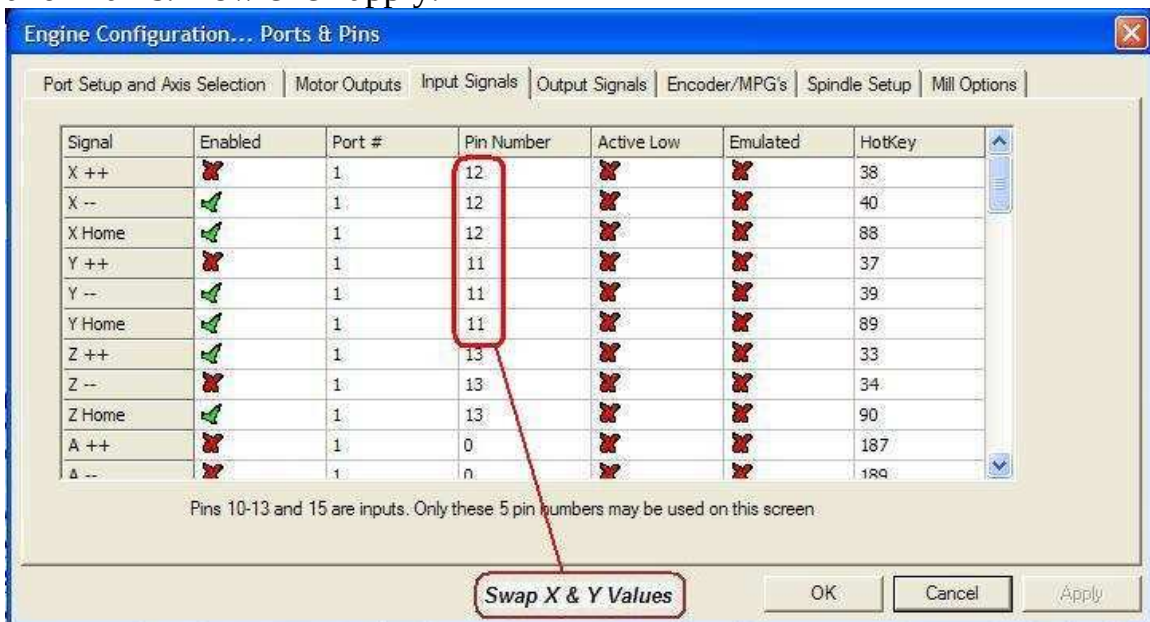

Step 4: Click OK of the configuration window.

Step 5: Click Config. >Homing/Limits

Step 6: Swap the soft max values of the X & Y axis. Now click OK.

Motor Home/SoftLimits

Entries are in setup units.

Axis	Reversed	Soft Max	Soft Min	Slow Zone	Home Off.	Home Neg	Auto Zero	Speed %
X		49.50	0.00	3.00	0.0000			5
Y		98.75	0.00	3.00	0.0000			5
Z		0.00	-8.00	1.00	0.0000			5
A		100.00	-100.00	1.00	0.0000			5
B		100.00	-100.00	1.00	0.0000			5
C		100.00	-100.00	1.00	0.0000			5

G28 home location coordinates

X 0.4 A 0
Y 2.25 B 0
Z 0 C 0

Swap X & Y Values

OK

Step 7: Click Config. >System Hot Keys. Reassign the X and Y axis hot keys. Example: click the X++ and then press the button on the keyboard that you want to use to jog the X axis in a positive direction.

System HotKeys Setup

Jog Hotkeys

	ScanCode		ScanCode
X++	39	X--	37
Y++	38	Y--	40
Z++	33	Z--	34
A / U ++	187	A / U --	189
B / V ++	999	B / V --	999
C / W ++	999	C / W --	999

System Hotkeys

	ScanCode		ScanCode
DR0 Select	999	Code List	68
MDI Select	999		
Load G-Code	999		

External Buttons - OEM Codes

Trigger #	OEM Code		OEM Code
1	-1	8	-1
2	-1	9	-1
3	-1	10	-1
4	-1	11	-1
5	-1	12	-1
6	-1	13	-1
7	-1	14	-1
		15	-1

Reassign Hot Keys

OK

Step 8: Click ok after reassigning all of these keys.

Step 9: Close and restart the Mach3 software.


Your X and Y axis orientation should now be changed.

Swapping the X and Y Axis


This will guide you through changing the X and Y axis of your cnc router

Step 1: In Mach3 click config. >Ports and Pins >Motor Outputs.

Step 2: Swap places of the step and dir. Values of the X and Y axis. Now click apply.

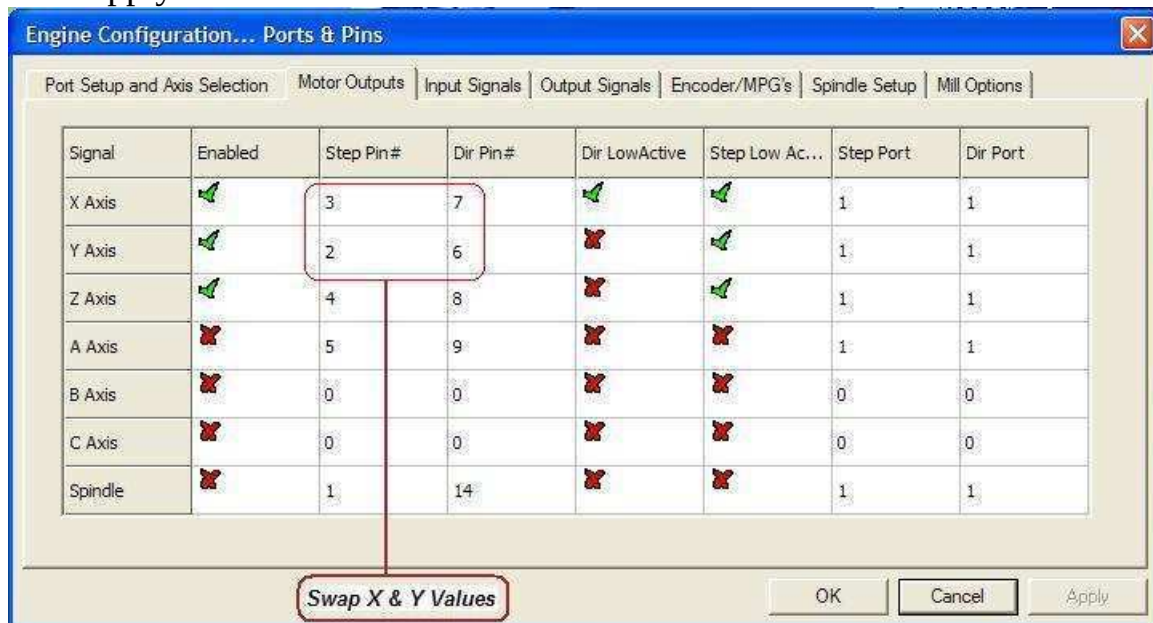

Step 3: Select Input Signals. Swap places of all pin number values for the X and Y axis. Now click apply.

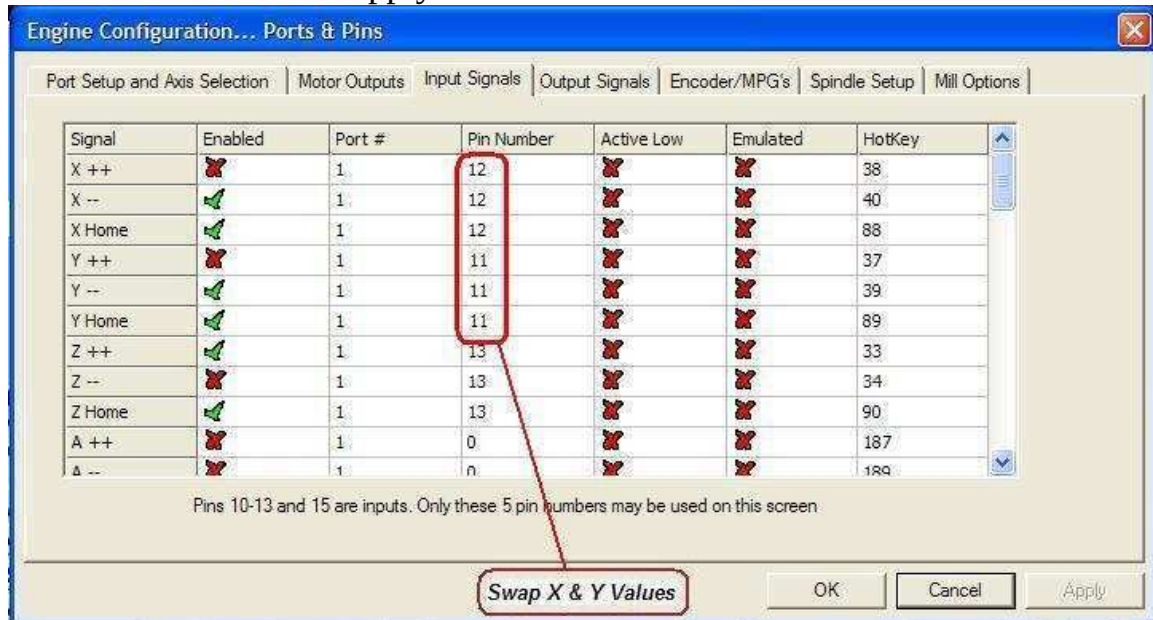


Step 4: Click OK of the configuration window.

Step 5: Click Config. >Homing/Limits

Step 6: Swap the soft max values of the X & Y axis. Now click OK.



Step 7: Click Config. >System Hot Keys. Reassign the X and Y axis hot keys. Example: click the X++ and then press the button on the keyboard that you want to use to jog the X axis in a positive direction.

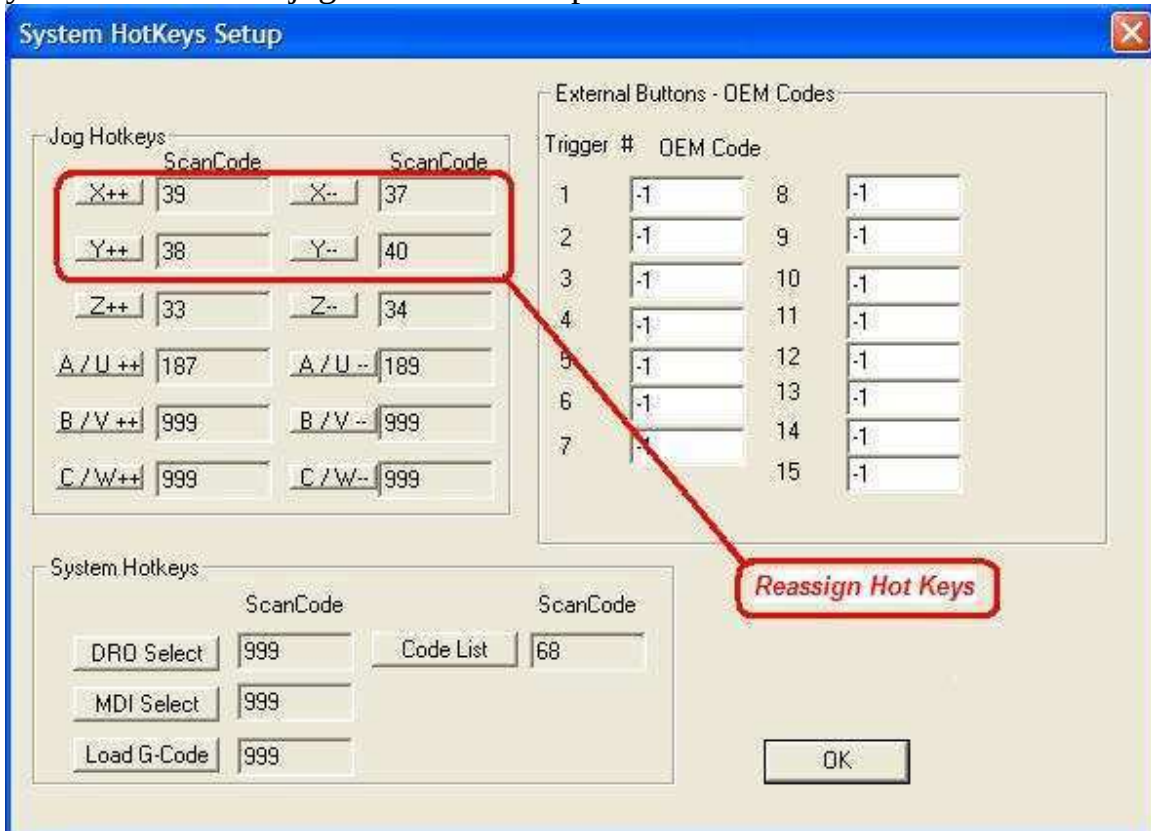

Step 8: Click ok after reassigning all of these keys.

Step 9: Close and restart the Mach3 software.

Your X and Y axis should now be changed.