Northwind Aurora Owner's Manual

Model year 2026 · Electric sedan · Chapter 1: Introduction and vehicle identification

This manual describes the operation and care of the Northwind Aurora, a fictional battery-electric sedan used as sample content for DriveDocs. Read the safety chapters before driving.

Vehicle identification number (VIN)

The 17-character vehicle identification number is stamped on a plate at the lower left corner of the windshield, visible from outside the vehicle, and printed on the certification label on the driver-side door pillar (B-pillar). Quote the VIN when ordering parts or booking service.

Key specifications

The high-voltage traction battery has a usable capacity of 82 kWh. The estimated driving range is 520 km on the WLTP combined cycle. The rear-mounted motor produces 250 kW, and the Aurora accelerates from 0 to 100 km/h in 5.9 seconds. Kerb weight is 2,050 kg.

Chapter 2: Instrument cluster and warning lights

Warning lights use three colours. A red light means stop safely as soon as possible. An amber light means the vehicle needs service soon. Green and blue lights are for information only.

If the red brake system warning light stays on after you release the parking brake, the brake fluid level may be low. Stop the vehicle safely and contact Northwind Assistance; do not continue driving.

The amber tire pressure warning light comes on when the pressure in one or more tires is 25% or more below the recommended cold pressure. Check and adjust the pressures as soon as possible.

The red 12V battery light indicates a fault in the low-voltage charging system. Accessories may stop working; drive to a safe place and contact service.



Figure 2.1: Dashboard warning and indicator lights of the Aurora instrument cluster.

Chapter 3: Tires and wheels

The recommended cold tire pressure is 2.5 bar (36 psi) for the front tires and 2.7 bar (39 psi) for the rear tires. Check pressures monthly, when the tires are cold, using the values on the tire and loading information placard on the driver-side door pillar.

Rotate the tires every 10,000 km to even out wear. After rotating the tires or adjusting pressures, reset the tire pressure monitoring system (see the troubleshooting guide).

Tighten the wheel lug nuts to 140 N·m in a star pattern. The Aurora has no spare wheel; a tire repair kit with sealant and a 12V compressor is stored under the rear cargo floor.

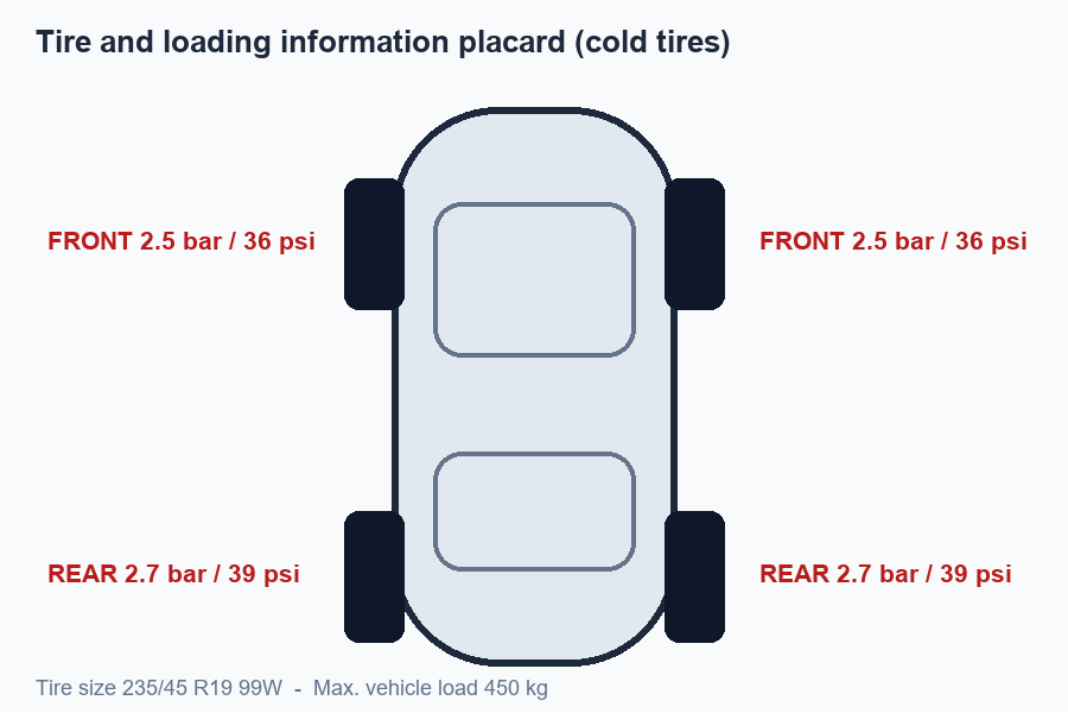


Figure 3.1: Tire and loading information placard showing front and rear cold pressures.

Chapter 4: Charging

The charging inlet behind the left rear flap accepts Type 2 AC charging at up to 11 kW and CCS Combo 2 DC fast charging at up to 150 kW. On a DC fast charger, charging from 10% to 80% takes about 28 minutes when the battery is at operating temperature.

The status light next to the inlet shows the charging state: pulsing green means charging, solid green means charging is complete, blue means the vehicle is waiting for a scheduled charge, and red means a charging fault. If the light is red, unplug the cable, wait 10 seconds and reconnect.

For daily use, set the charge limit to 80% to reduce battery wear, and charge to 100% only before long trips.



Figure 4.1: CCS Combo 2 charging inlet with the AC connector, DC pins and status light.

Chapter 5: Fuses and 12V electrical system

The interior fuse box is located behind the trim panel in the front passenger footwell, below the glovebox. Switch the vehicle off before replacing a fuse, and replace a fuse only with one of the same rating.

Fuse F12 (15 A) protects the rear window defroster. Fuse F7 (10 A) protects the infotainment display, and fuse F6 (30 A) protects the electric seat heaters. Fuse F15 (30 A) supplies the 12V power outlet.

The 12V battery is located in the front compartment under the hood, and powers the computers, lights and door locks.

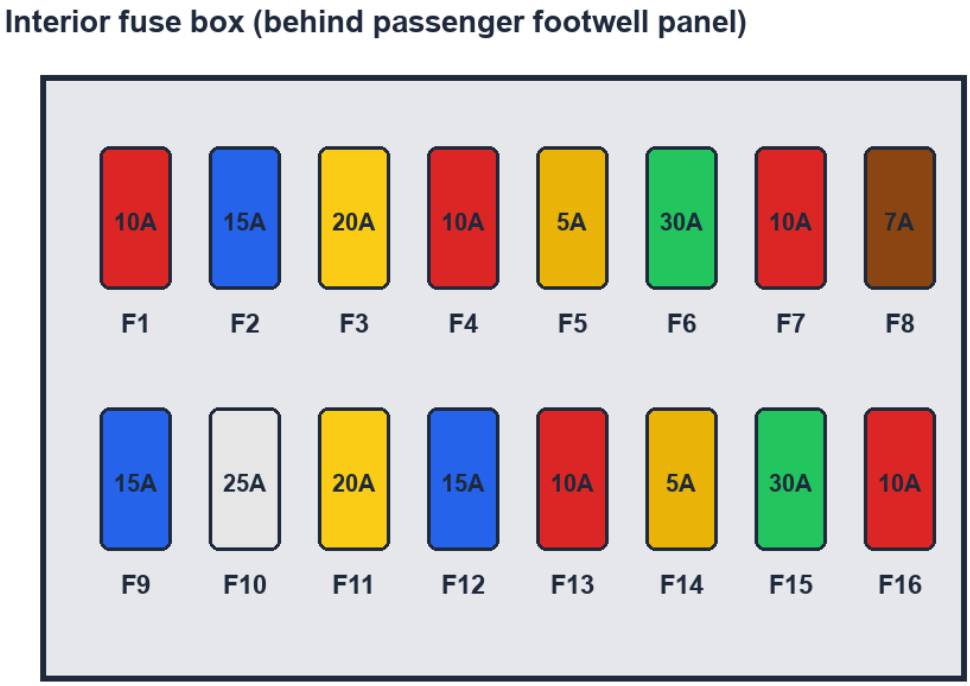


Figure 5.1: Interior fuse box layout with fuse positions F1 to F16 and ratings.

Chapter 6: Emergencies and towing

If the vehicle will not power on, the 12V battery may be discharged. Connect a booster or another vehicle's 12V battery to the jump-start terminals in the front compartment: red to positive first, then black to the marked ground point. Never connect jump leads to the high-voltage battery.

The Aurora must be transported on a flatbed truck. If a flatbed is not available, it may be towed with the wheels on the ground in Tow Mode for a maximum of 10 km at no more than 40 km/h.

In a collision that deploys the airbags, the high-voltage system is disconnected automatically. Have the vehicle inspected by an authorized Northwind service center before driving it again.