Instrument Cluster Warning Lights

Aurora S5 Owner's Manual (2024) | Section 1

Warning lights on the instrument cluster use a colour code. Red lights indicate a serious problem that requires immediate attention, amber lights indicate a condition that should be checked soon, and green or blue lights are for information only.

Low oil pressure warning (red oil can): if this light comes on while driving, stop the vehicle as soon as it is safe, switch off the engine and check the engine oil level. Continuing to drive with this light on can cause serious engine damage.

Check engine light (amber engine outline): a steady light means the on-board diagnostic system has detected an emission-related fault, so have the vehicle inspected soon. A flashing check engine light indicates a severe engine misfire that can damage the catalytic converter; reduce speed and have the vehicle serviced immediately.

Engine coolant temperature warning (red thermometer): the engine is overheating. Pull over safely, switch off the engine and let it cool for at least 30 minutes before checking the coolant level.

Tire pressure monitoring system (TPMS) warning (amber horseshoe with an exclamation mark): one or more tires is at least 25 percent below the recommended cold inflation pressure. If the light flashes for about one minute and then stays on, the TPMS itself has a malfunction.

Brake system warning (red BRAKE): the parking brake is applied or the brake fluid level is low. Battery warning (red battery symbol): the charging system is not charging the 12-volt battery.



Figure 1: Instrument cluster warning light symbols (oil pressure, check engine, coolant temperature, TPMS, brake system and charging system).

Tires and Loading

Aurora S5 Owner's Manual (2024) | Section 2

The recommended cold tire inflation pressure for the Aurora S5 is 35 psi (240 kPa) for both the front and the rear tires with the standard 225/45R18 tires. The compact spare tire must be inflated to 60 psi (420 kPa).

The Tire and Loading Information placard is located on the driver's side door pillar (B-pillar). It lists the original tire sizes, the recommended cold inflation pressures and the maximum vehicle load. The combined weight of occupants and cargo should never exceed 850 lb (385 kg).

Check the tire pressure at least once a month when the tires are cold, which means the vehicle has been parked for at least three hours. Replace the tires when the tread depth reaches 2/32 inch (1.6 mm); the tread wear indicator bars become visible across the tread at this depth.

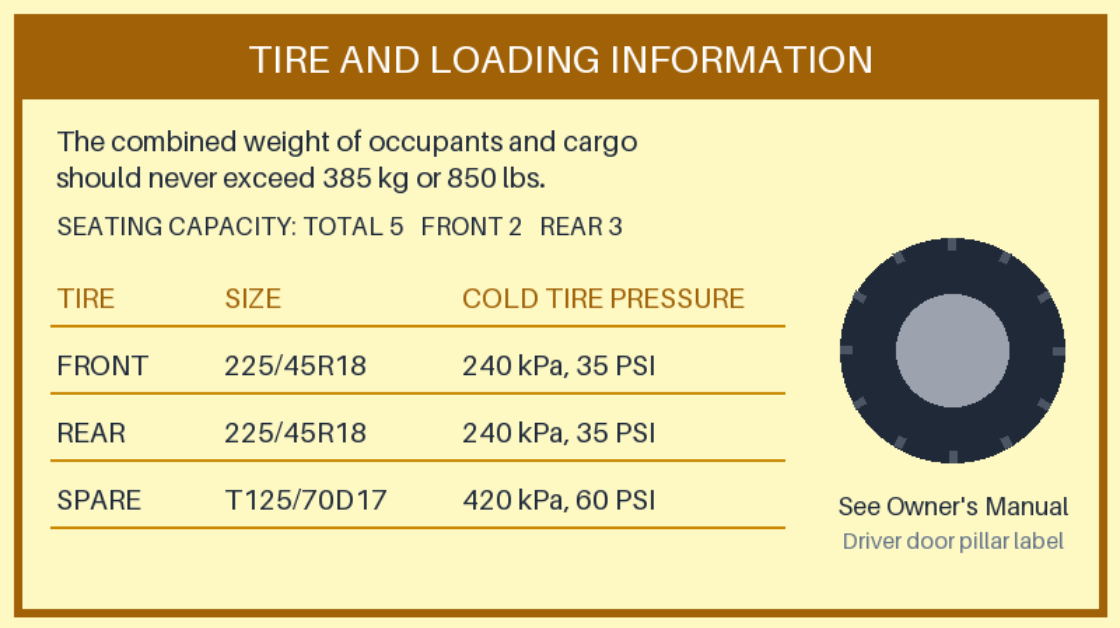


Figure 2: Tire and Loading Information placard on the driver's door pillar, showing the cold tire pressures for the front, rear and spare tires.

Fluids and Capacities

Aurora S5 Owner's Manual (2024) | Section 3

Engine oil: use SAE 0W-20 full synthetic oil that meets the API SP specification. The engine oil capacity with an oil filter change is 4.8 quarts (4.5 litres).

Engine coolant: use a 50/50 mixture of long-life ethylene glycol coolant and distilled water. The cooling system capacity is 7.4 quarts (7.0 litres).

Brake fluid: use DOT 4 brake fluid only. Brake fluid absorbs moisture over time, so it must be replaced every 3 years regardless of mileage.

Fuel: use unleaded gasoline with an octane rating of 87 (AKI) or higher. The fuel tank capacity is 14.5 gallons (55 litres).

Transmission: the continuously variable transmission (CVT) uses Aurora CVF-2 fluid, which is replaced every 60,000 miles. The windshield washer fluid reservoir holds 4.2 quarts (4.0 litres).

Vehicle identification: the Vehicle Identification Number (VIN) is stamped on a plate at the top left of the instrument panel, visible through the windshield, and is repeated on the driver's door pillar label.

Jump Starting

Aurora S5 Owner's Manual (2024) | Section 4

If the 12-volt battery is discharged, the vehicle can be jump started with a booster battery and jumper cables. Make sure that the booster battery is also a 12-volt battery.

Connect the jumper cables in this order. First, connect one end of the red positive (+) cable to the positive terminal of the discharged battery. Second, connect the other end of the red cable to the positive terminal of the booster battery. Third, connect one end of the black negative (-) cable to the negative terminal of the booster battery. Fourth, connect the other end of the black cable to an unpainted metal ground point on the engine block, away from the discharged battery.

Never connect the black cable directly to the negative terminal of the discharged battery, because a spark could ignite the hydrogen gas released by the battery. Start the engine of the booster vehicle, wait a few minutes, then start the vehicle with the discharged battery. Remove the cables in the exact reverse order.

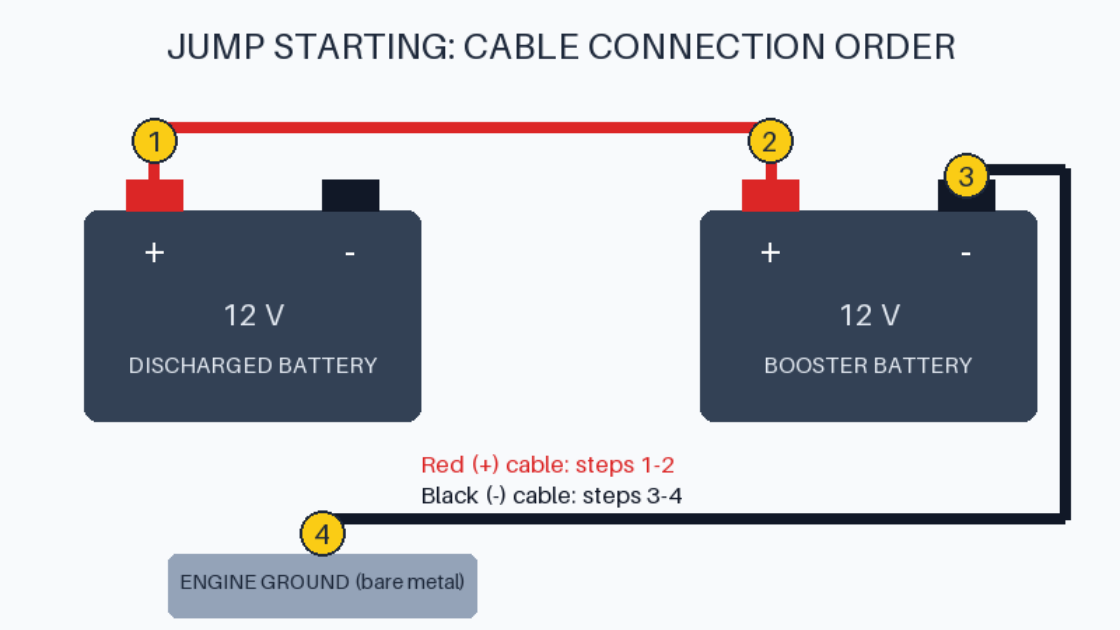


Figure 3: Jump-start cable connection diagram showing the red positive cable and the black negative cable connected to the engine ground.

Fuses

Aurora S5 Owner's Manual (2024) | Section 5

The vehicle has two fuse boxes. The interior fuse box is located behind the cover on the driver's side lower dashboard panel. The engine compartment fuse box is next to the battery.

Interior fuse box assignments: fuse 7 (10 A) protects the horn, fuse 12 (15 A) the front power outlet, fuse 15 (20 A) the heated seats, fuse 21 (7.5 A) the instrument cluster and fuse 24 (10 A) the rear-view camera.

If an electrical component stops working, check its fuse first. Replace a blown fuse only with a fuse of the same amperage rating, because a higher-rated fuse can cause wiring damage or a fire. A fuse puller and spare fuses are stored inside the engine compartment fuse box cover.

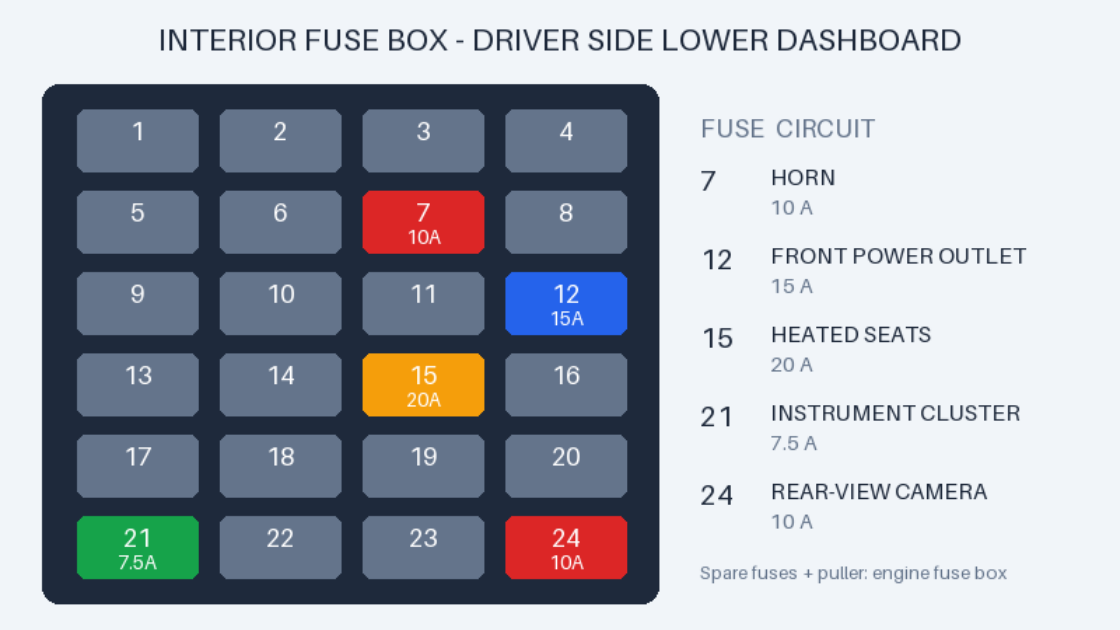


Figure 4: Interior fuse box layout behind the driver's side lower dashboard cover, with the fuse numbers and amperage ratings.

Driver Assistance Systems

Aurora S5 Owner's Manual (2024) | Section 6

Adaptive Cruise Control (ACC) maintains a set speed and a selected following distance to the vehicle ahead. ACC can be set at speeds between 20 mph and 90 mph (30 to 145 km/h) and offers four following-distance settings.

Lane Keeping Assist (LKA) gently steers the vehicle back toward the center of the lane when it drifts without the turn signal on. Lane Keeping Assist operates at speeds above 40 mph (65 km/h).

Automatic Emergency Braking (AEB) uses the front camera behind the windshield and the radar sensor behind the grille emblem to detect vehicles and pedestrians. Keep the windshield in front of the camera and the grille emblem clean.

Driver assistance systems are aids only. They do not replace attentive driving, and the driver remains responsible for controlling the vehicle at all times.