


Messier-Dowty SA

18785-200-01, 18786-200-01 COMPONENT MAINTENANCE MANUAL MAIN LANDING GEAR LEG

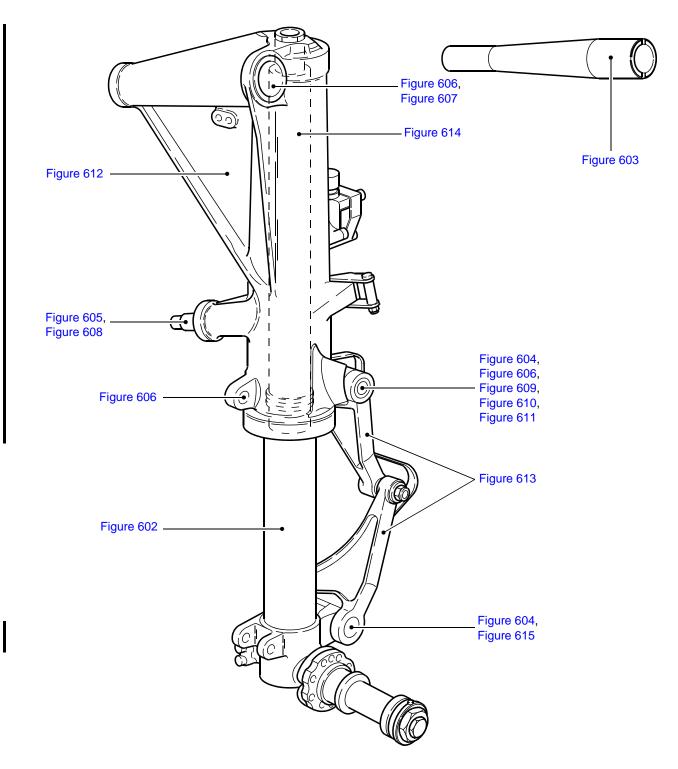

Location of repair figures Figure 601