This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scripter Modules, refer to the "Guide to Using Scripter Modules" document.

Device Specifications

Device Type: Lighting Control
Manufacturer: iLight
Firmware Version: N/A
Model(s): SI-2, EG2

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scripter Version
3.18.0001-b002	2.23.0.13

Version History

Module Version	Date	Notes
1_10_0_0	12/12/2024	Custom Version. Initial Version.

Module Notes

- EG2 model is for Ethernet control; SI-2 model is for Serial control.

Supported Classes and Examples

SerialClass
`InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SI-2')`
SerialOverEthernetClass
`InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SI-2')`
EthernetClass
`InterfaceName = ModuleName.EthernetClass('192.168.254.254', 30087, Model='EG2')`

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command **ChannelLevel**	Value 0 to 100 in steps of 1 %
Qualifier Key **'Channel'** [1]	Qualifier Value 0 – 999
Qualifier Key **'Area'**	Qualifier Value 1 – 65535
Qualifier Key **'Fade'**	Qualifier Value 0 – 999 seconds
`# ChannelLevel example` `InterfaceName.Set('ChannelLevel', 100, {'Channel': 999, 'Area': 65535, 'Fade': 999})`	
Command **SceneRecall** [2]	Value 0 – 999
Qualifier Key **'Area'**	Qualifier Value 1 – 65535
Qualifier Key **'Fade'**	Qualifier Value 0 – 999 seconds
`# SceneRecall example` `InterfaceName.Set('SceneRecall', 999, {'Area': 65535, 'Fade': 999})`	
Command **SceneSave** [3]	Value 0 – 999
Qualifier Key **'Area'**	Qualifier Value 1 – 65535
`# SceneSave example` `InterfaceName.Set('SceneSave', 999, {'Area': 65535})`	
Command **StopFade**	Value None
Qualifier Key **'Channel'** [1]	Qualifier Value 0 – 999
Qualifier Key **'Area'**	Qualifier Value 1 – 65535
`# StopFade example` `InterfaceName.Set('StopFade', None, {'Channel': 999, 'Area': 65535})`	

[1] Channel set to 0 means all Channels.
[2] Value set to 0 means Off.
[3] Value set to 0 means Current Scene.

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Ensure that the serial communication settings on the device match the settings shown below.

Serial communication

Port Type:	RS-232	**Parity:**	None
Baud Rate:	9600	**Stop Bits:**	One
Data Bits:	8	**Flow Control:**	None

Pin Assignments Diagram

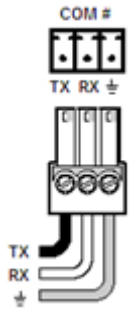

Signal	Main Cable	Pin	Signal
RxD	←	2	TxD
TxD	→	3	RxD
GND	—	5	GND

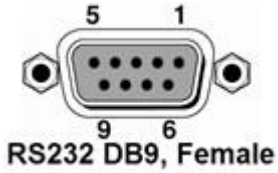

Network Communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface.

Port Type:	Ethernet (TCP)
Default Port:	30087
Logon Credentials Supported:	No
Multi-Connection Capabilities:	No
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Channel Level 0 Channel 0 Area 1 Fade 0	`@SC0:A1:L0:F0\x0D`
Channel Level 0 Channel 0 Area 1 Fade 999	`@SC0:A1:L0:F999\x0D`
Channel Level 0 Channel 0 Area 65535 Fade 0	`@SC0:A65535:L0:F0\x0D`
Channel Level 0 Channel 0 Area 65535 Fade 999	`@SC0:A65535:L0:F999\x0D`
Channel Level 0 Channel 999 Area 1 Fade 0	`@SC999:A1:L0:F0\x0D`
Channel Level 0 Channel 999 Area 1 Fade 999	`@SC999:A1:L0:F999\x0D`
Channel Level 0 Channel 999 Area 65535 Fade 0	`@SC999:A65535:L0:F0\x0D`
Channel Level 0 Channel 999 Area 65535 Fade 999	`@SC999:A65535:L0:F999\x0D`
Channel Level 100 Channel 0 Area 1 Fade 0	`@SC0:A1:L100:F0\x0D`
Channel Level 100 Channel 0 Area 1 Fade 999	`@SC0:A1:L100:F999\x0D`
Channel Level 100 Channel 0 Area 65535 Fade 0	`@SC0:A65535:L100:F0\x0D`
Channel Level 100 Channel 0 Area 65535 Fade 999	`@SC0:A65535:L100:F999\x0D`
Channel Level 100 Channel 999 Area 1 Fade 0	`@SC999:A1:L100:F0\x0D`
Channel Level 100 Channel 999 Area 1 Fade 999	`@SC999:A1:L100:F999\x0D`
Channel Level 100 Channel 999 Area 65535 Fade 0	`@SC999:A65535:L100:F0\x0D`
Channel Level 100 Channel 999 Area 65535 Fade 999	`@SC999:A65535:L100:F999\x0D`
Scene Recall 0 Area 1 Fade 0	`@SS0:A1:F0\x0D`
Scene Recall 0 Area 1 Fade 999	`@SS0:A1:F999\x0D`
Scene Recall 0 Area 65535 Fade 0	`@SS0:A65535:F0\x0D`
Scene Recall 0 Area 65535 Fade 999	`@SS0:A65535:F999\x0D`
Scene Recall 999 Area 1 Fade 0	`@SS999:A1:F0\x0D`
Scene Recall 999 Area 1 Fade 999	`@SS999:A1:F999\x0D`
Scene Recall 999 Area 65535 Fade 0	`@SS999:A65535:F0\x0D`
Scene Recall 999 Area 65535 Fade 999	`@SS999:A65535:F999\x0D`
Scene Save 0 Area 1	`@SA0:A1\x0D`
Scene Save 0 Area 65535	`@SA0:A65535\x0D`
Scene Save 999 Area 1	`@SA999:A1\x0D`
Scene Save 999 Area 65535	`@SA999:A65535\x0D`
Stop Fade None Channel 0 Area 1	`@SF0:A1\x0D`
Stop Fade None Channel 0 Area 65535	`@SF0:A65535\x0D`
Stop Fade None Channel 999 Area 1	`@SF999:A1\x0D`
Stop Fade None Channel 999 Area 65535	`@SF999:A65535\x0D`