This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scripter Modules, refer to the "Guide to Using Scripter Modules" document.

Device Specifications

Device Type:	Touch Display
Manufacturer:	ViewSonic
Firmware Version:	3.10.0_s5 rel@iip #1 Tue Dec 12 21:53:33 CST 2017
Model(s):	IFP5550, IFP6550, IFP7550, IFP8650

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scripter Version
3.01.0000-b010	2.1.0

Version History

Module Version	Date	Notes
1_3_0_0	12/4/2018	• Renamed Input value 'Main' to 'Embd Player' • Updated Input and ExecutiveMode command • Updated module to Rev. B1
1_0_1_0	12/11/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
  Example: `InterfaceName.Unidirectional = 'True'`

- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
  Example: `InterfaceName.connectionCounter = 5`

- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from '1' to '98' or 'Broadcast'. If DeviceID is set to 'Broadcast', status is unavailable.
  Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
`InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='IFP5550')`
SerialOverEthernetClass
`InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='IFP5550')`
EthernetClass
`InterfaceName = ModuleName.EthernetClass('192.168.254.254', 5000, Model='IFP5550')`

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command **AspectRatio**	Value 'Full (16:9)'	Value 'Normal (4:3)'	Value 'Real (1:1)'
`# AspectRatio example` `InterfaceName.Set('AspectRatio', 'Full (16:9)')`			
Command **AudioMute**	Value 'On'	Value 'Off'	
`# AudioMute example` `InterfaceName.Set('AudioMute', 'On')`			
Command **Brightness**	Value 0 to 100 in steps of 1		
`# Brightness example` `InterfaceName.Set('Brightness', 100)`			
Command **ExecutiveMode**	Value 'On'	Value 'Off'	
Qualifier Key **'Type'**	Qualifier Value 'Power'	Qualifier Value 'Button'	Qualifier Value 'Menu'
`# ExecutiveMode example` `InterfaceName.Set('ExecutiveMode', 'On', {'Type': 'Power'})`			
Command **Input**	Value 'AV' 'HDMI 3' 'OPS 2' [2] 'OPS' [1]	Value 'HDMI 1' 'VGA' 'DisplayPort'	Value 'HDMI 2' 'OPS 1' [2] 'Embd Player'
`# Input example` `InterfaceName.Set('Input', 'AV')`			
Command **IRRemote**	Value 'Enable'	Value 'Disable'	
`# IRRemote example` `InterfaceName.Set('IRRemote', 'Enable')`			
Command **Keypad**	Value '0' – '9'		
`# Keypad example` `InterfaceName.Set('Keypad', '0')`			
Command	Value	Value	Value

MenuNavigation	'Up' 'Right' 'Exit'	'Down' 'Enter'	'Left' 'Menu'
`# MenuNavigation example` `InterfaceName.Set('MenuNavigation', 'Up')`			
Command **Power**	Value 'On'	Value 'Off'	
`# Power example` `InterfaceName.Set('Power', 'On')`			
Command **Volume**	Value 0 to 100 in steps of 1		
`# Volume example` `InterfaceName.Set('Volume', 100)`			
Command **VolumeStep**	Value 'Up'	Value 'Down'	
`# VolumeStep example` `InterfaceName.Set('VolumeStep', 'Up')`			

[1] Only available for model IFP5550.

[2] Only available for model IFP6550/7550/8650.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
```

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
```

FeedbackHandler will be called when any qualifier gets a new status.

Command **AudioMute**	Value 'On'	Value 'Off'	

`# AudioMute examples`
`InterfaceName.Update('AudioMute')`
`Value = InterfaceName.ReadStatus('AudioMute')`
`InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)`			

Command **Brightness**	Value 0 to 100 in steps of 1		

`# Brightness examples`
`InterfaceName.Update('Brightness')`
`Value = InterfaceName.ReadStatus('Brightness')`
`InterfaceName.SubscribeStatus('Brightness', None, FeedbackHandler)`			

Command **ConnectionStatus**	Value 'Connected'	Value 'Disconnected'	

`# ConnectionStatus examples`
`Value = InterfaceName.ReadStatus('ConnectionStatus')`
`InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)`			

Command **ExecutiveMode**	Value 'On'	Value 'Off'	
Qualifier Key **'Type'**	Qualifier Value 'Power'	Qualifier Value 'Button'	Qualifier Value 'Menu'

`# ExecutiveMode examples`
`InterfaceName.Update('ExecutiveMode', {'Type': 'Power'})`
`Value = InterfaceName.ReadStatus('ExecutiveMode', {'Type': 'Power'})`
`InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)`			

Command **Input**	Value 'AV' 'HDMI 3'	Value 'HDMI 1' 'VGA'	Value 'HDMI 2' 'OPS 1' [2]

	'OPS 2' [2] 'OPS' [1]	'DisplayPort'	'Embd Player'

```
# Input examples
InterfaceName.Update('Input')
Value = InterfaceName.ReadStatus('Input')
InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)
```

Command	Value	Value
IRRemote	'Enable'	'Disable'

```
# IRRemote examples
InterfaceName.Update('IRRemote')
Value = InterfaceName.ReadStatus('IRRemote')
InterfaceName.SubscribeStatus('IRRemote', None, FeedbackHandler)
```

Command	Value	Value
Power	'On'	'Off'

```
# Power examples
InterfaceName.Update('Power')
Value = InterfaceName.ReadStatus('Power')
InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)
```

Command	Value
Volume	0 to 100 in steps of 1

```
# Volume examples
InterfaceName.Update('Volume')
Value = InterfaceName.ReadStatus('Volume')
InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)
```

[1] Only available for model IFP5550.

[2] Only available for model IFP6550/7550/8650.

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type:	RS-232	**Parity:**	None
Baud Rate:	9600	**Stop Bits:**	One
Data Bits:	8	**Flow Control:**	None

Pin Assignments Diagram

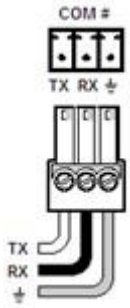

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	—	5	GND

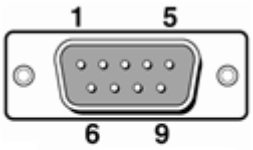

RS232 DB9 Male
Touch Display

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	5000
Logon Credentials Supported:	No
Multi-Connection Capabilities:	No
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Ensure that Standby Mode is set to **Sleep** in the display's menu setting for the module to work after power off.

- Menu (IR Remote) → Startup and shutdown → Standby Mode

Appendix A. Set Commands

Commands below only work when DeviceID is set to '1'

Aspect Ratio Full (16:9)	801s1000\x0D
Aspect Ratio Normal (4:3)	801s1001\x0D
Aspect Ratio Real (1:1)	801s1004\x0D
Audio Mute Off	801s6000\x0D
Audio Mute On	801s6001\x0D
Brightness 0	801s$000\x0D
Brightness 100	801s$100\x0D
Executive Mode Off Type Button	801s8000\x0D
Executive Mode Off Type Menu	801s>000\x0D
Executive Mode Off Type Power	801s4000\x0D
Executive Mode On Type Button	801s8001\x0D
Executive Mode On Type Menu	801s>001\x0D
Executive Mode On Type Power	801s4001\x0D
Input AV	801s"001\x0D
Input DisplayPort	801s"009\x0D
Input Embd Player	801s"00A\x0D
Input HDMI 1	801s"004\x0D
Input HDMI 2	801s"014\x0D
Input HDMI 3	801s"024\x0D
Input OPS	801s"007\x0D
Input OPS 1	801s"007\x0D
Input OPS 2	801s"017\x0D
Input VGA	801s"006\x0D
IR Remote Disable	801sB000\x0D
IR Remote Enable	801sB001\x0D
Keypad 0	801s@000\x0D
Keypad 9	801s@009\x0D
Menu Navigation Down	801sA001\x0D
Menu Navigation Enter	801sA004\x0D
Menu Navigation Exit	801sA007\x0D
Menu Navigation Left	801sA002\x0D
Menu Navigation Menu	801sA006\x0D
Menu Navigation Right	801sA003\x0D
Menu Navigation Up	801sA000\x0D
Volume 0	801s5000\x0D
Volume 100	801s5100\x0D

Volume Step Down	801s5900\x0D
Volume Step Up	801s5901\x0D

Appendix B. Update Commands

Commands below only work when DeviceID is set to '1'

Audio Mute	801gg000\x0D
Brightness	801gb000\x0D
Executive Mode Type Button	801gp000\x0D
Executive Mode Type Menu	801gq000\x0D
Executive Mode Type Power	801go000\x0D
Input	801gj000\x0D
IR Remote	801gn000\x0D
Power	801gl000\x0D
Volume	801gf000\x0D