





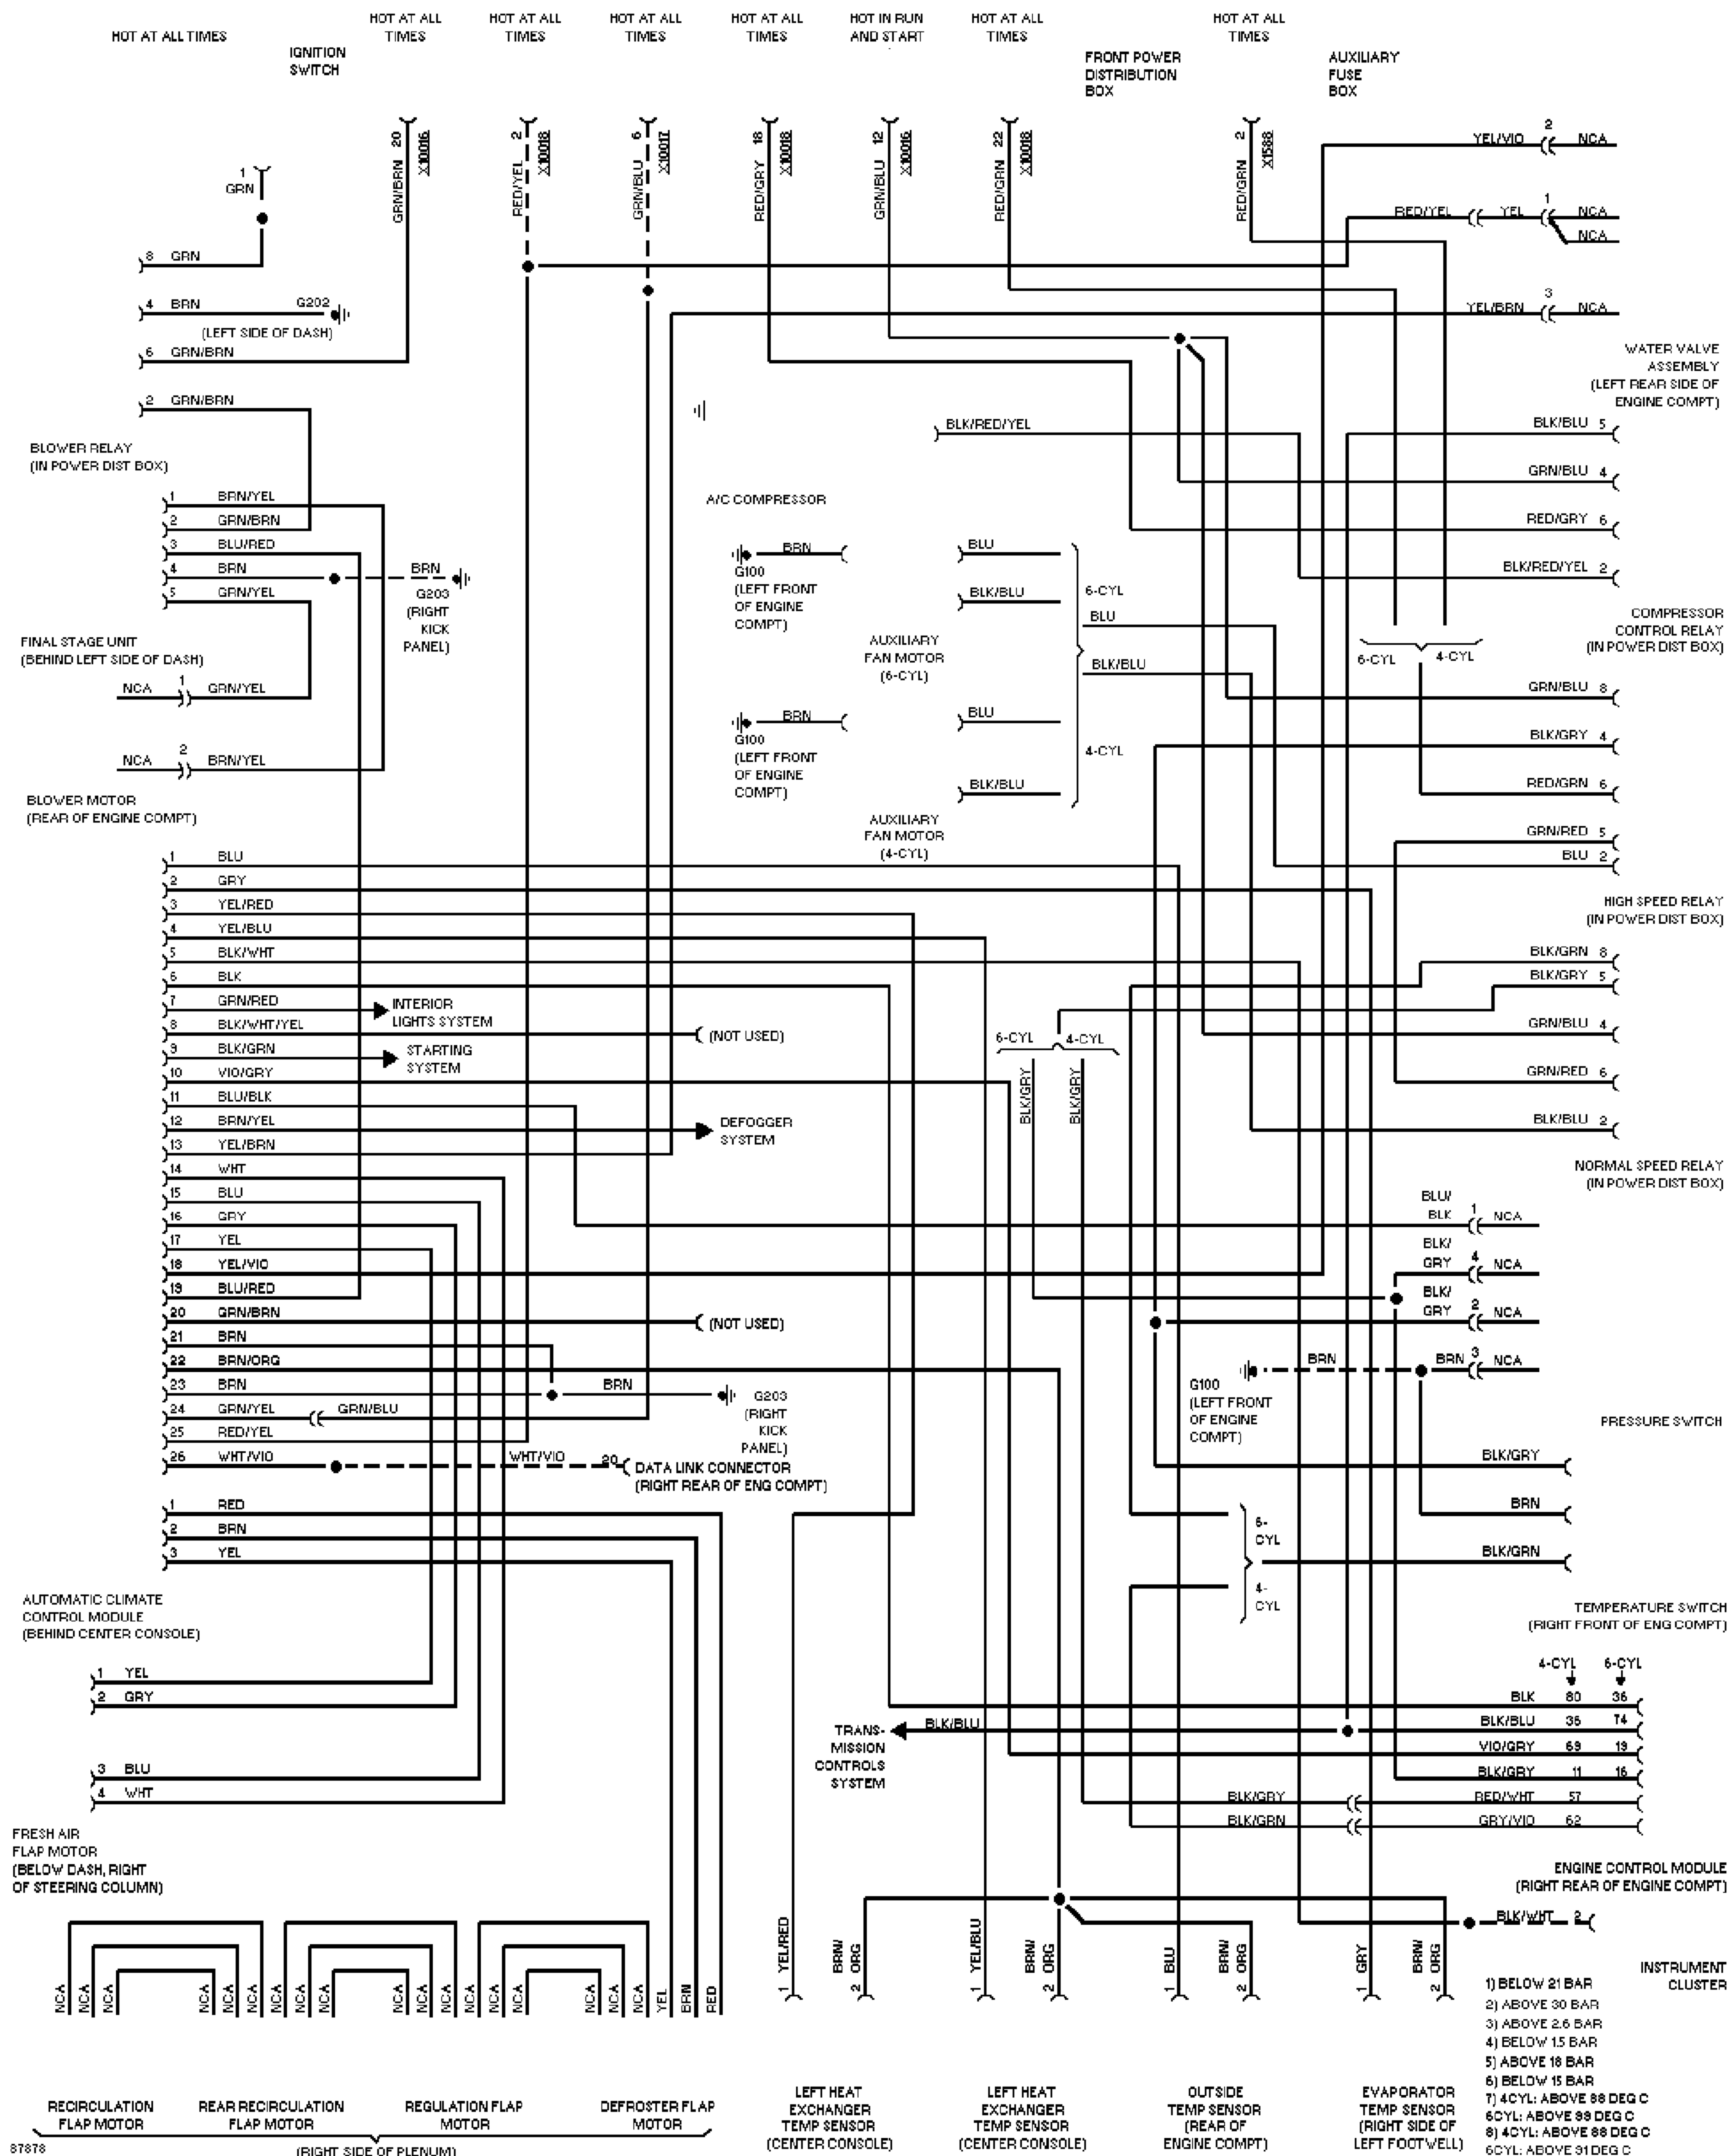

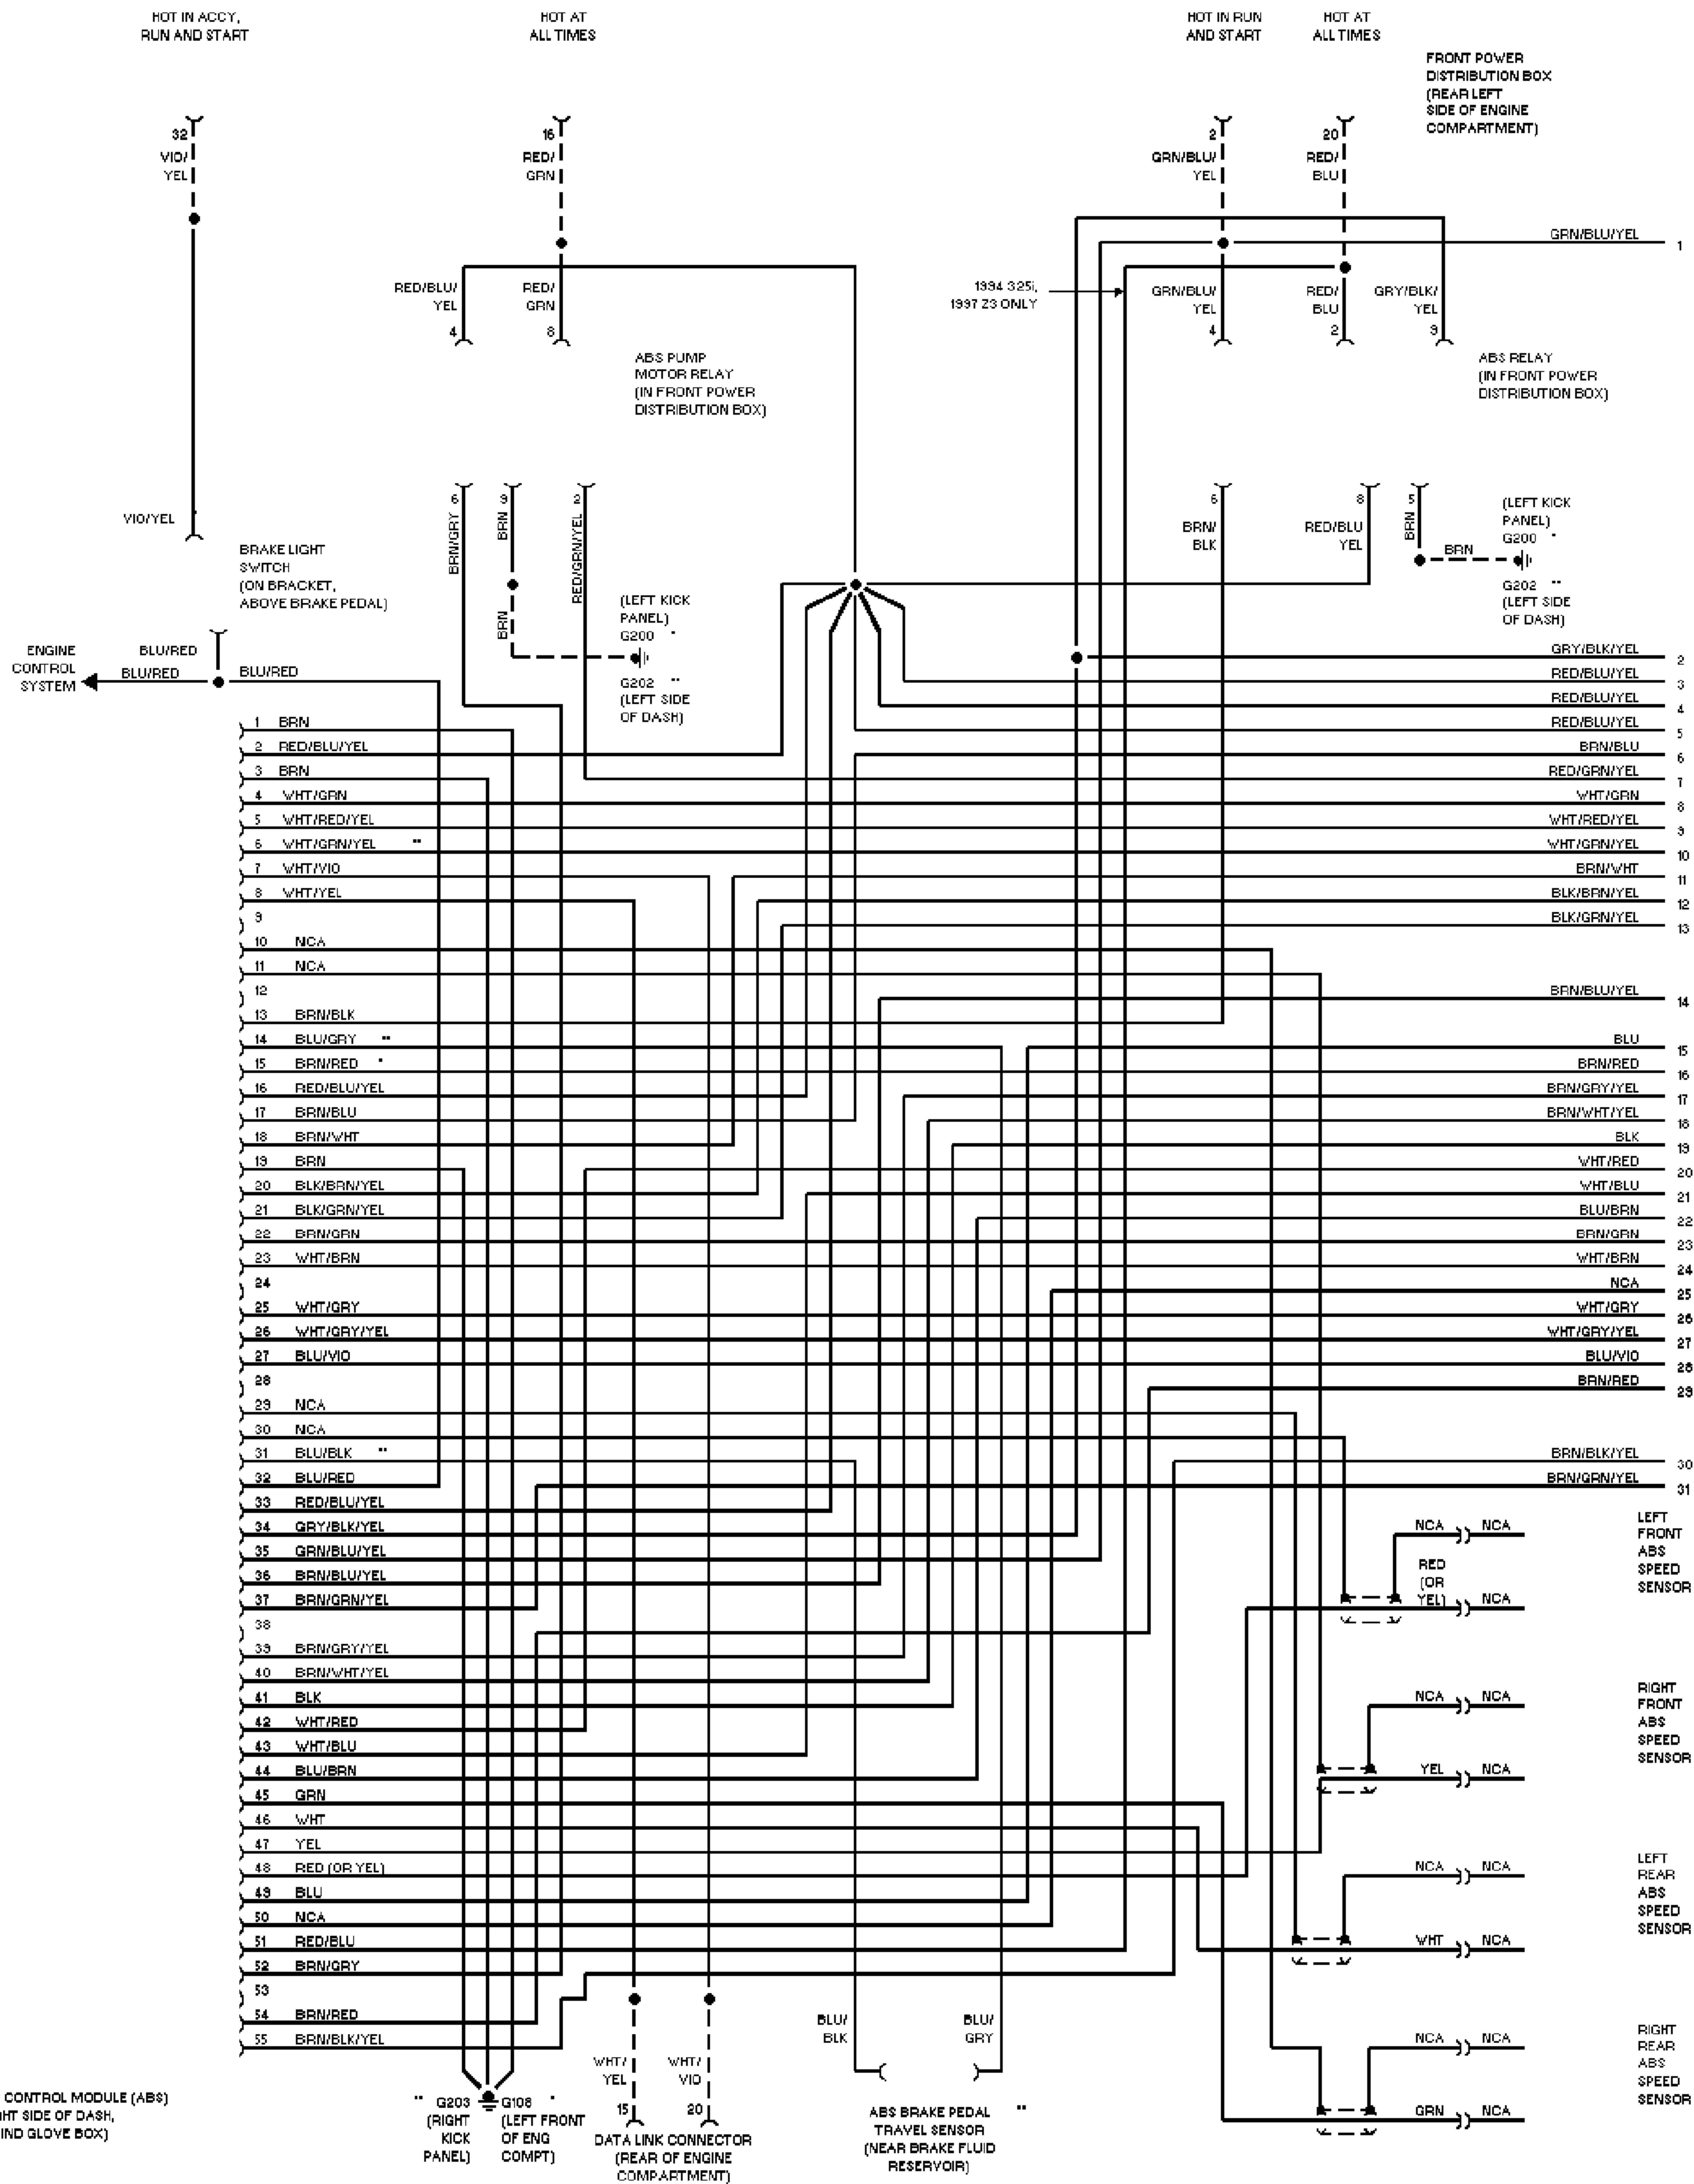

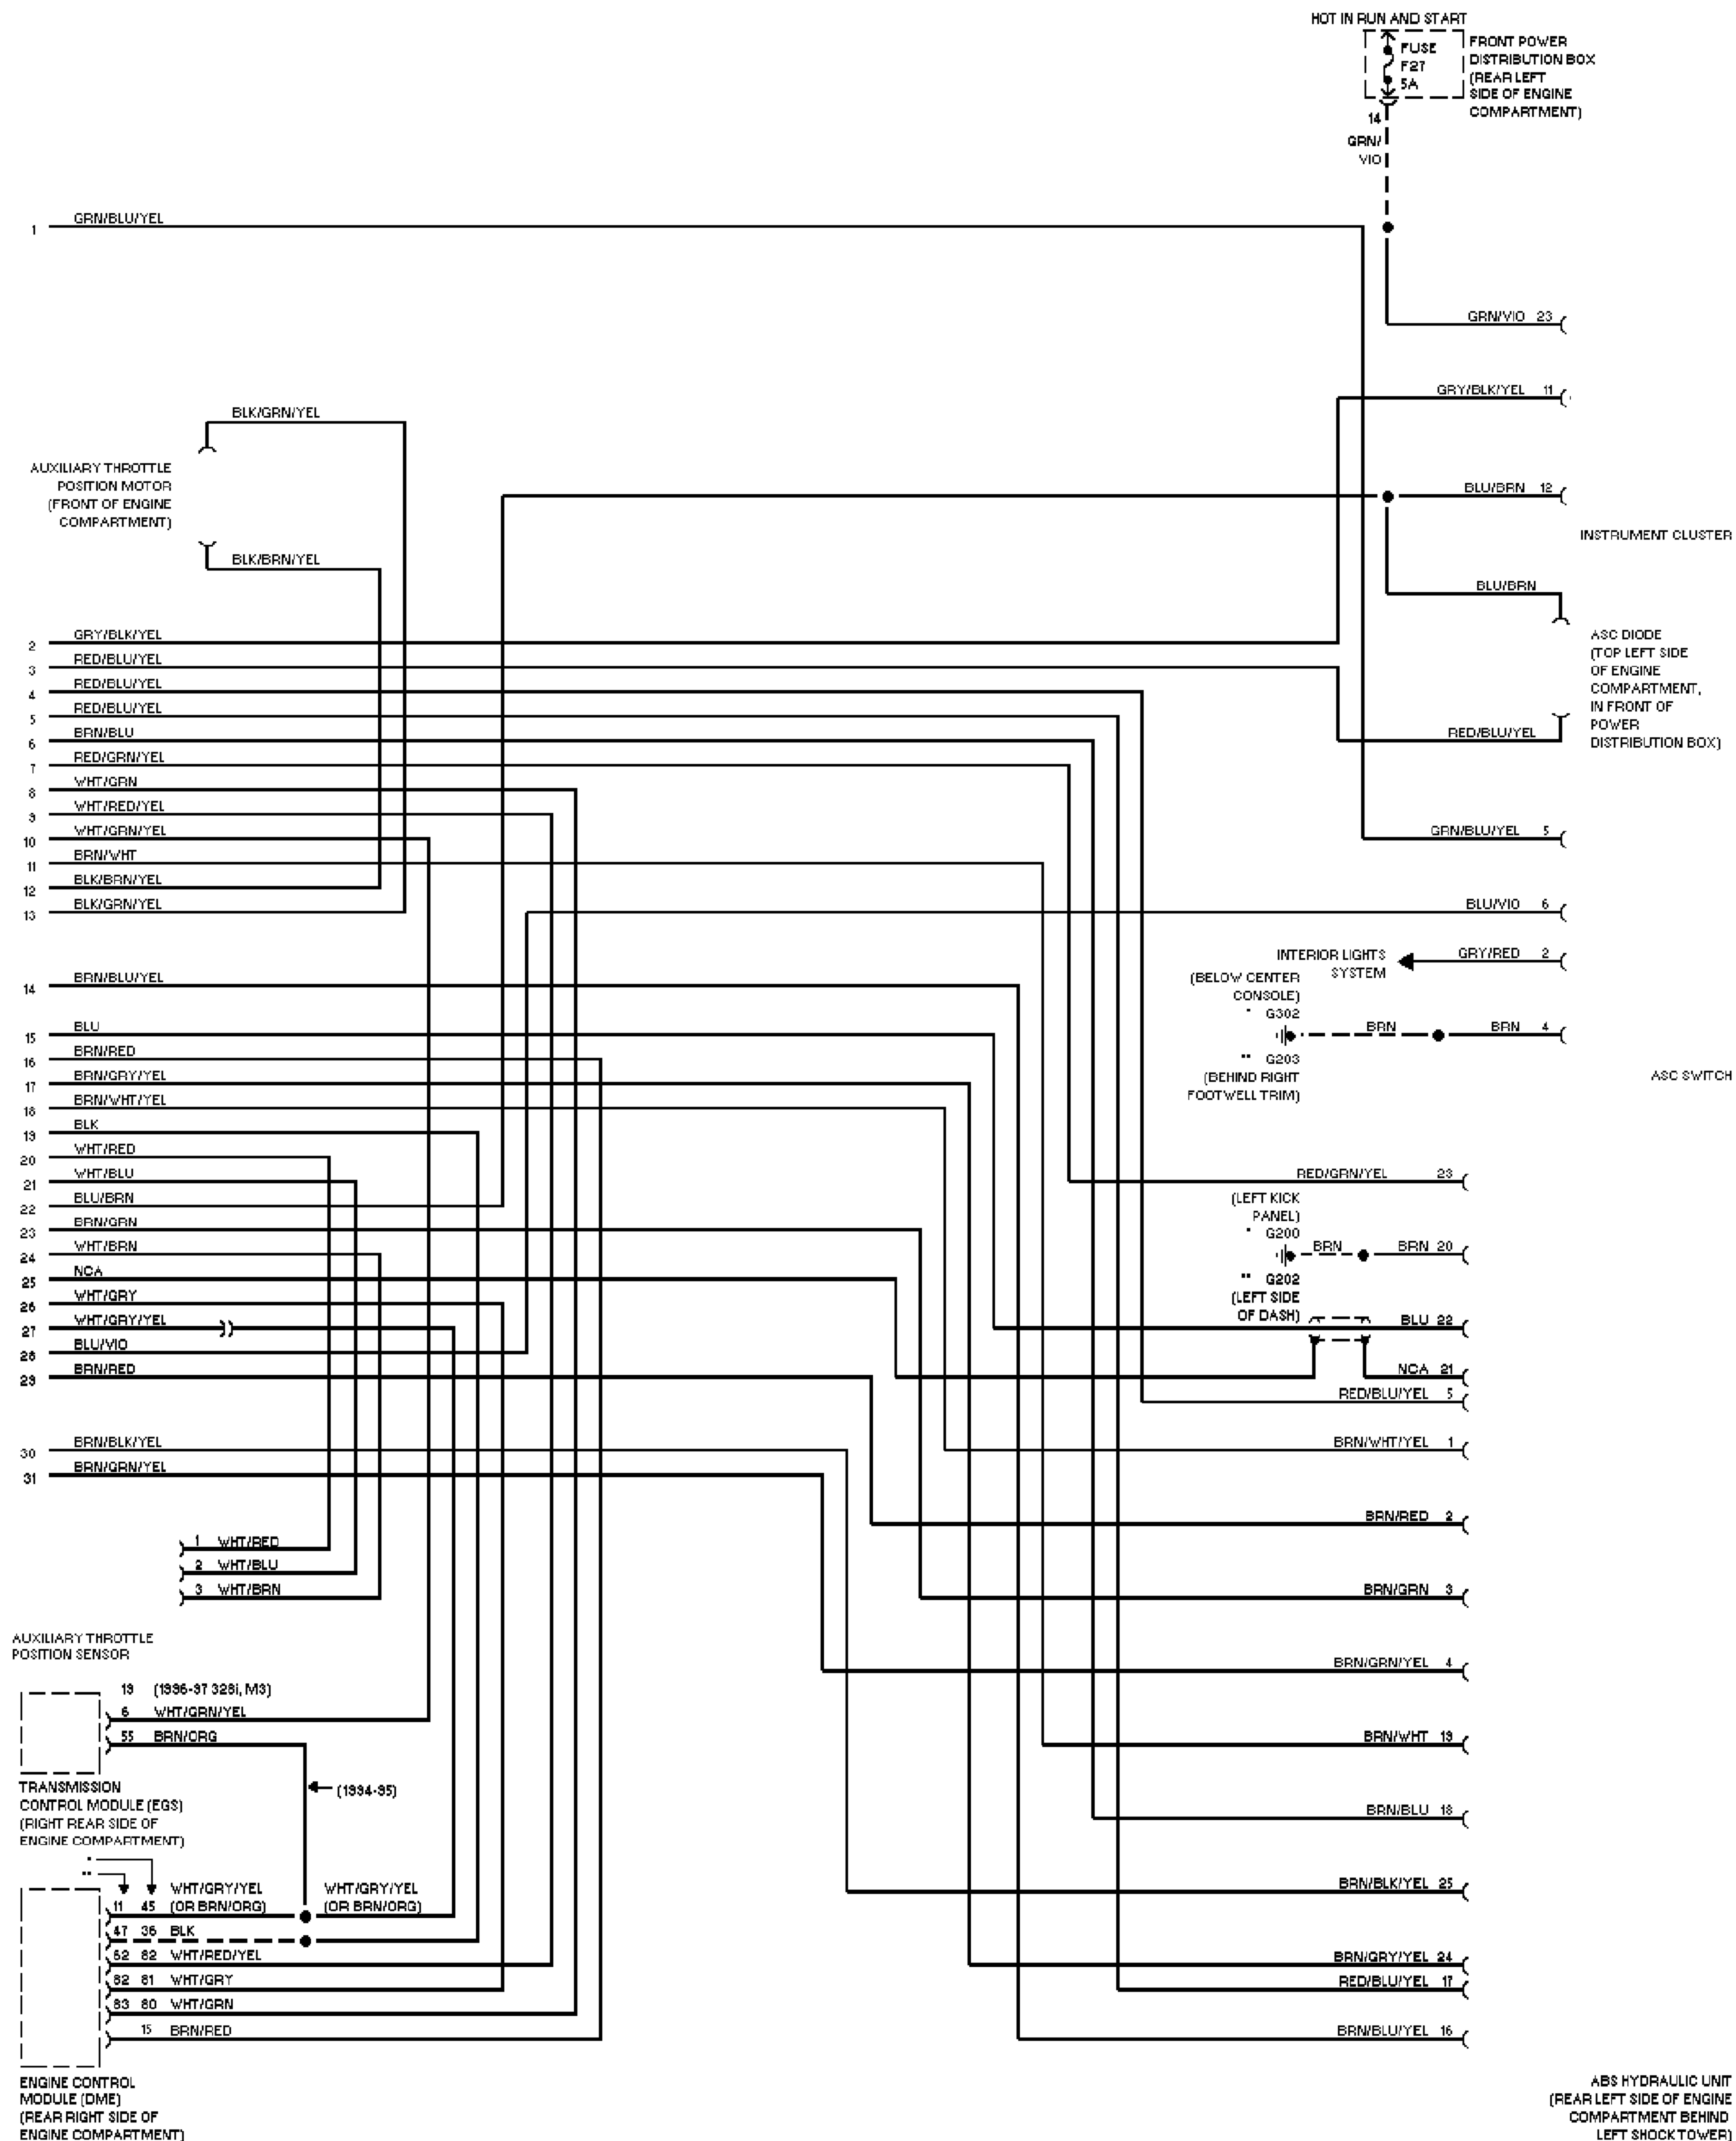

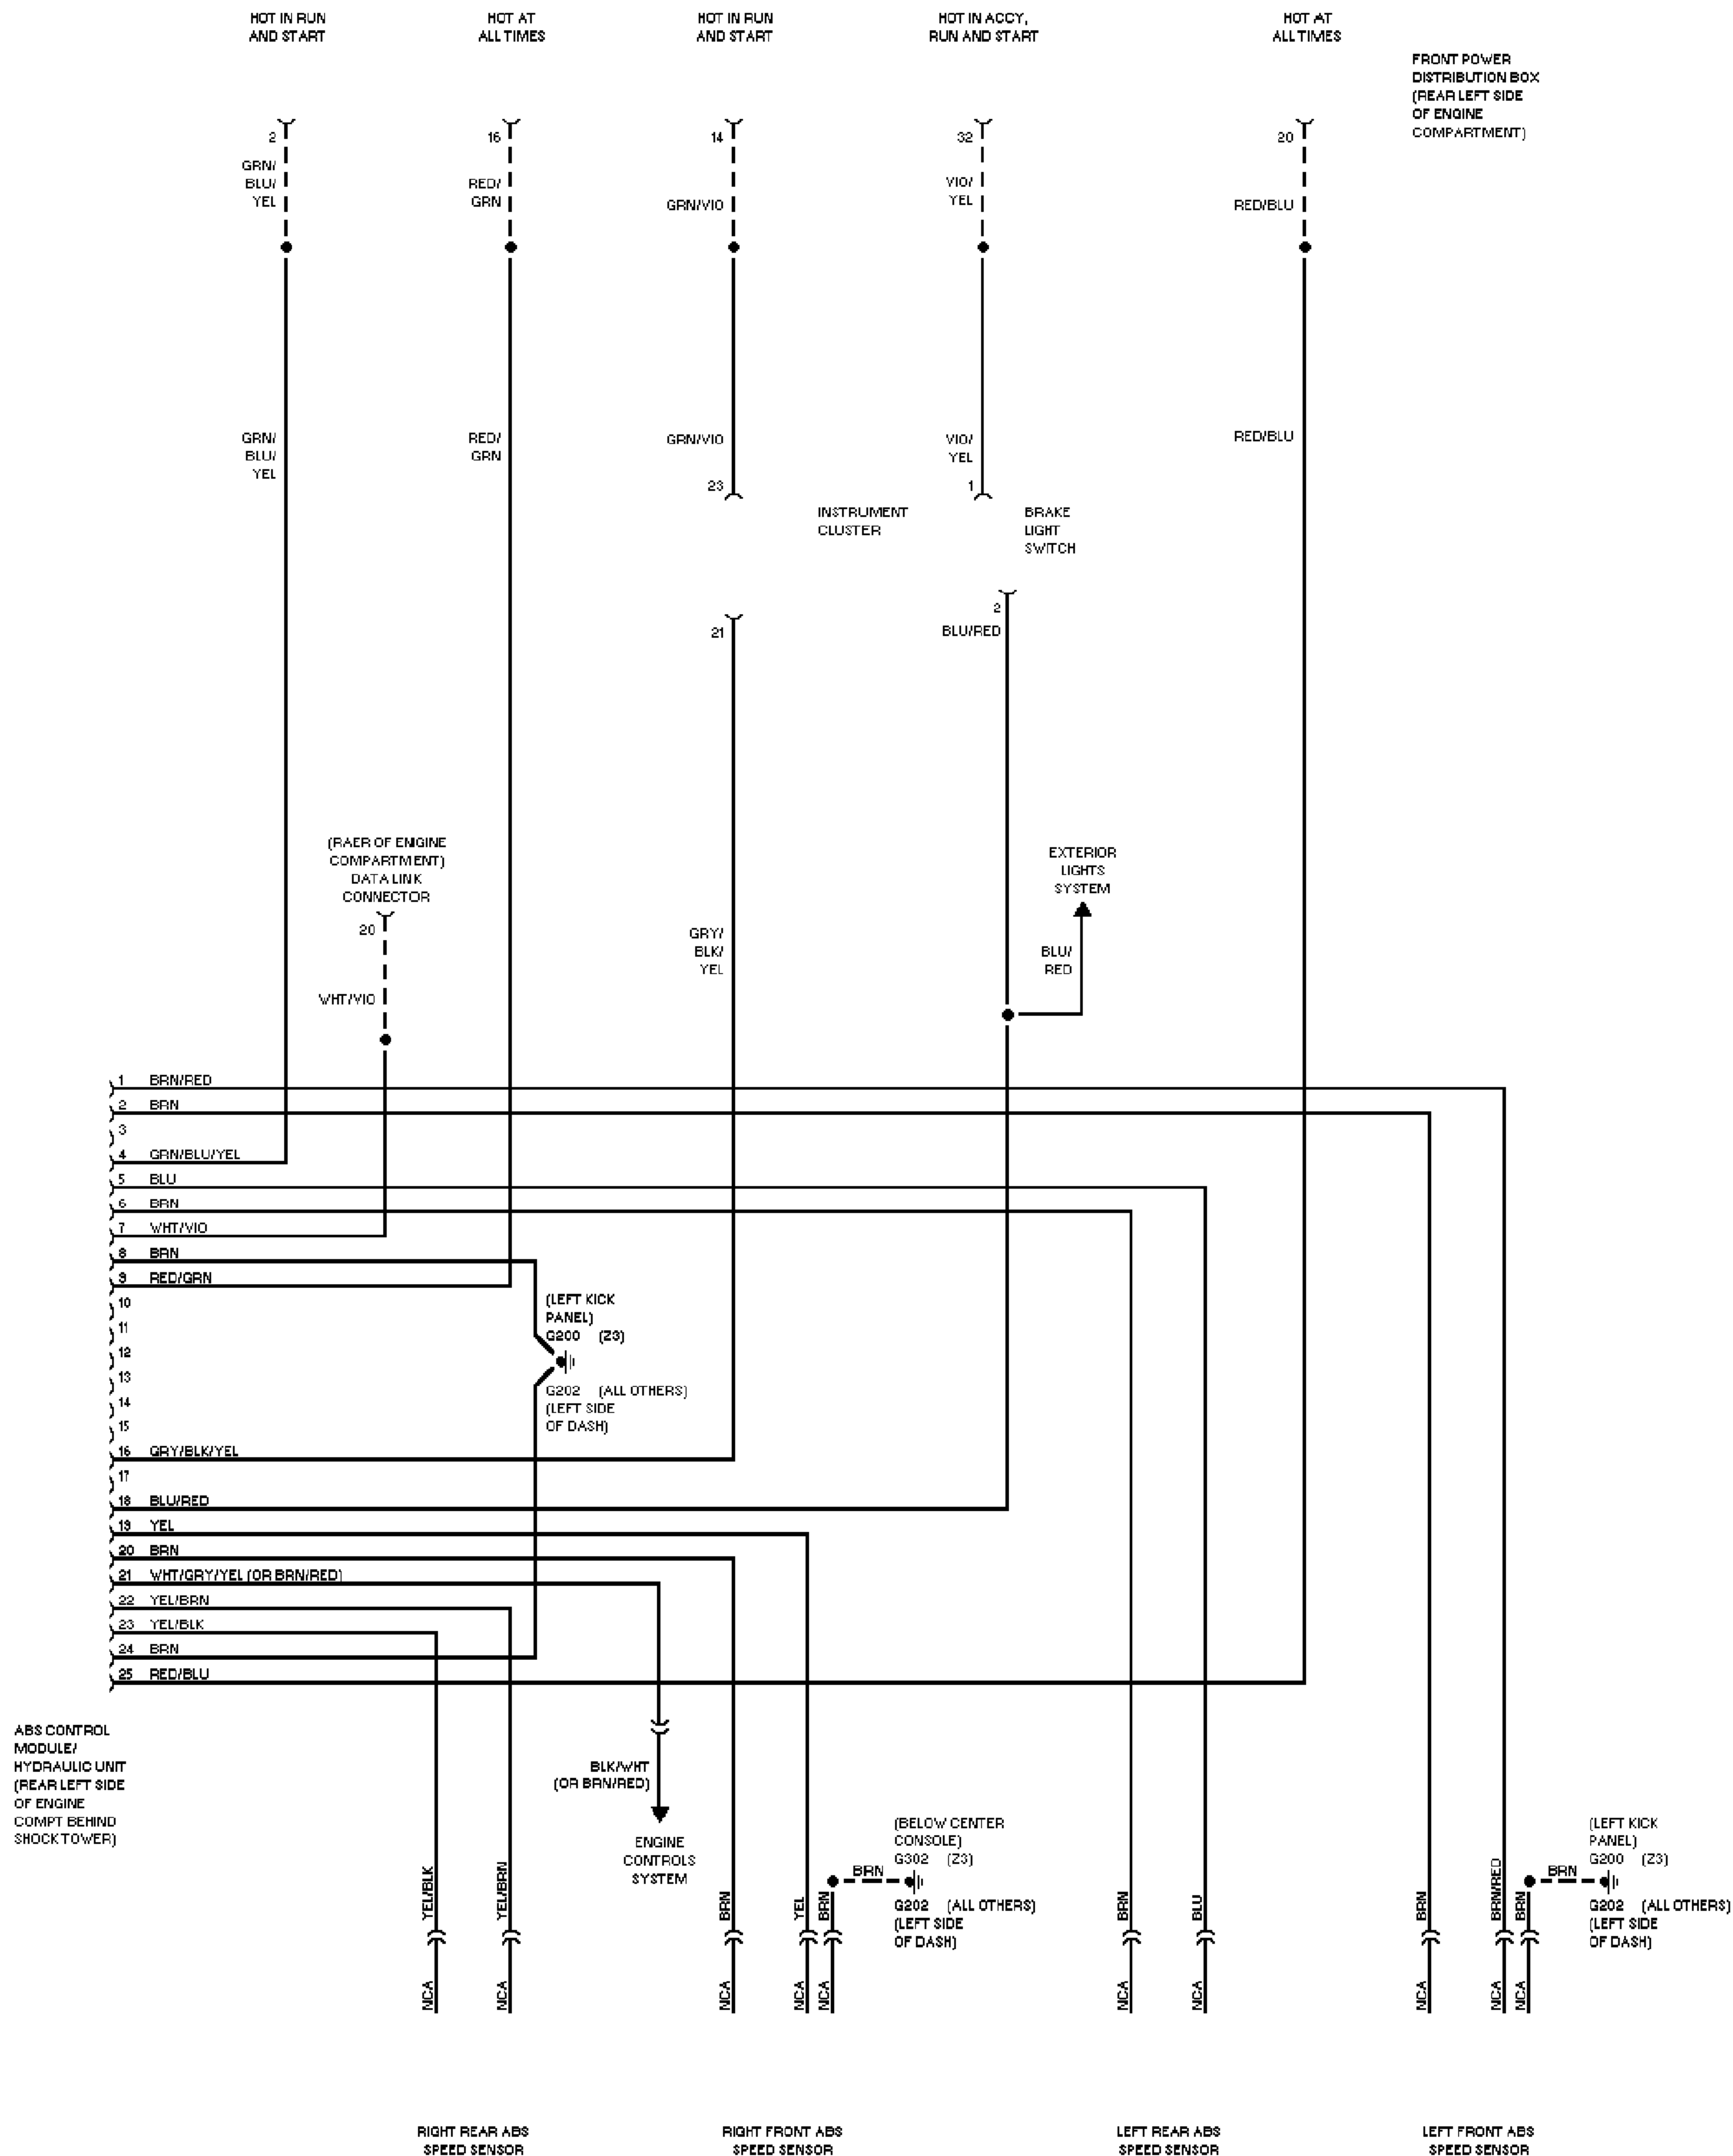

HOT AT ALL TIMES

IGNITION
SWITCH

HOT AT
ALL TIMES

HOT IN RUN
ALL START

HOT IN ACCY,
RUN AND START

FRONT POWER
DISTRIBUTION
BOX
(LEFT REAR
CORNER OF
ENGINE COMPT)

