





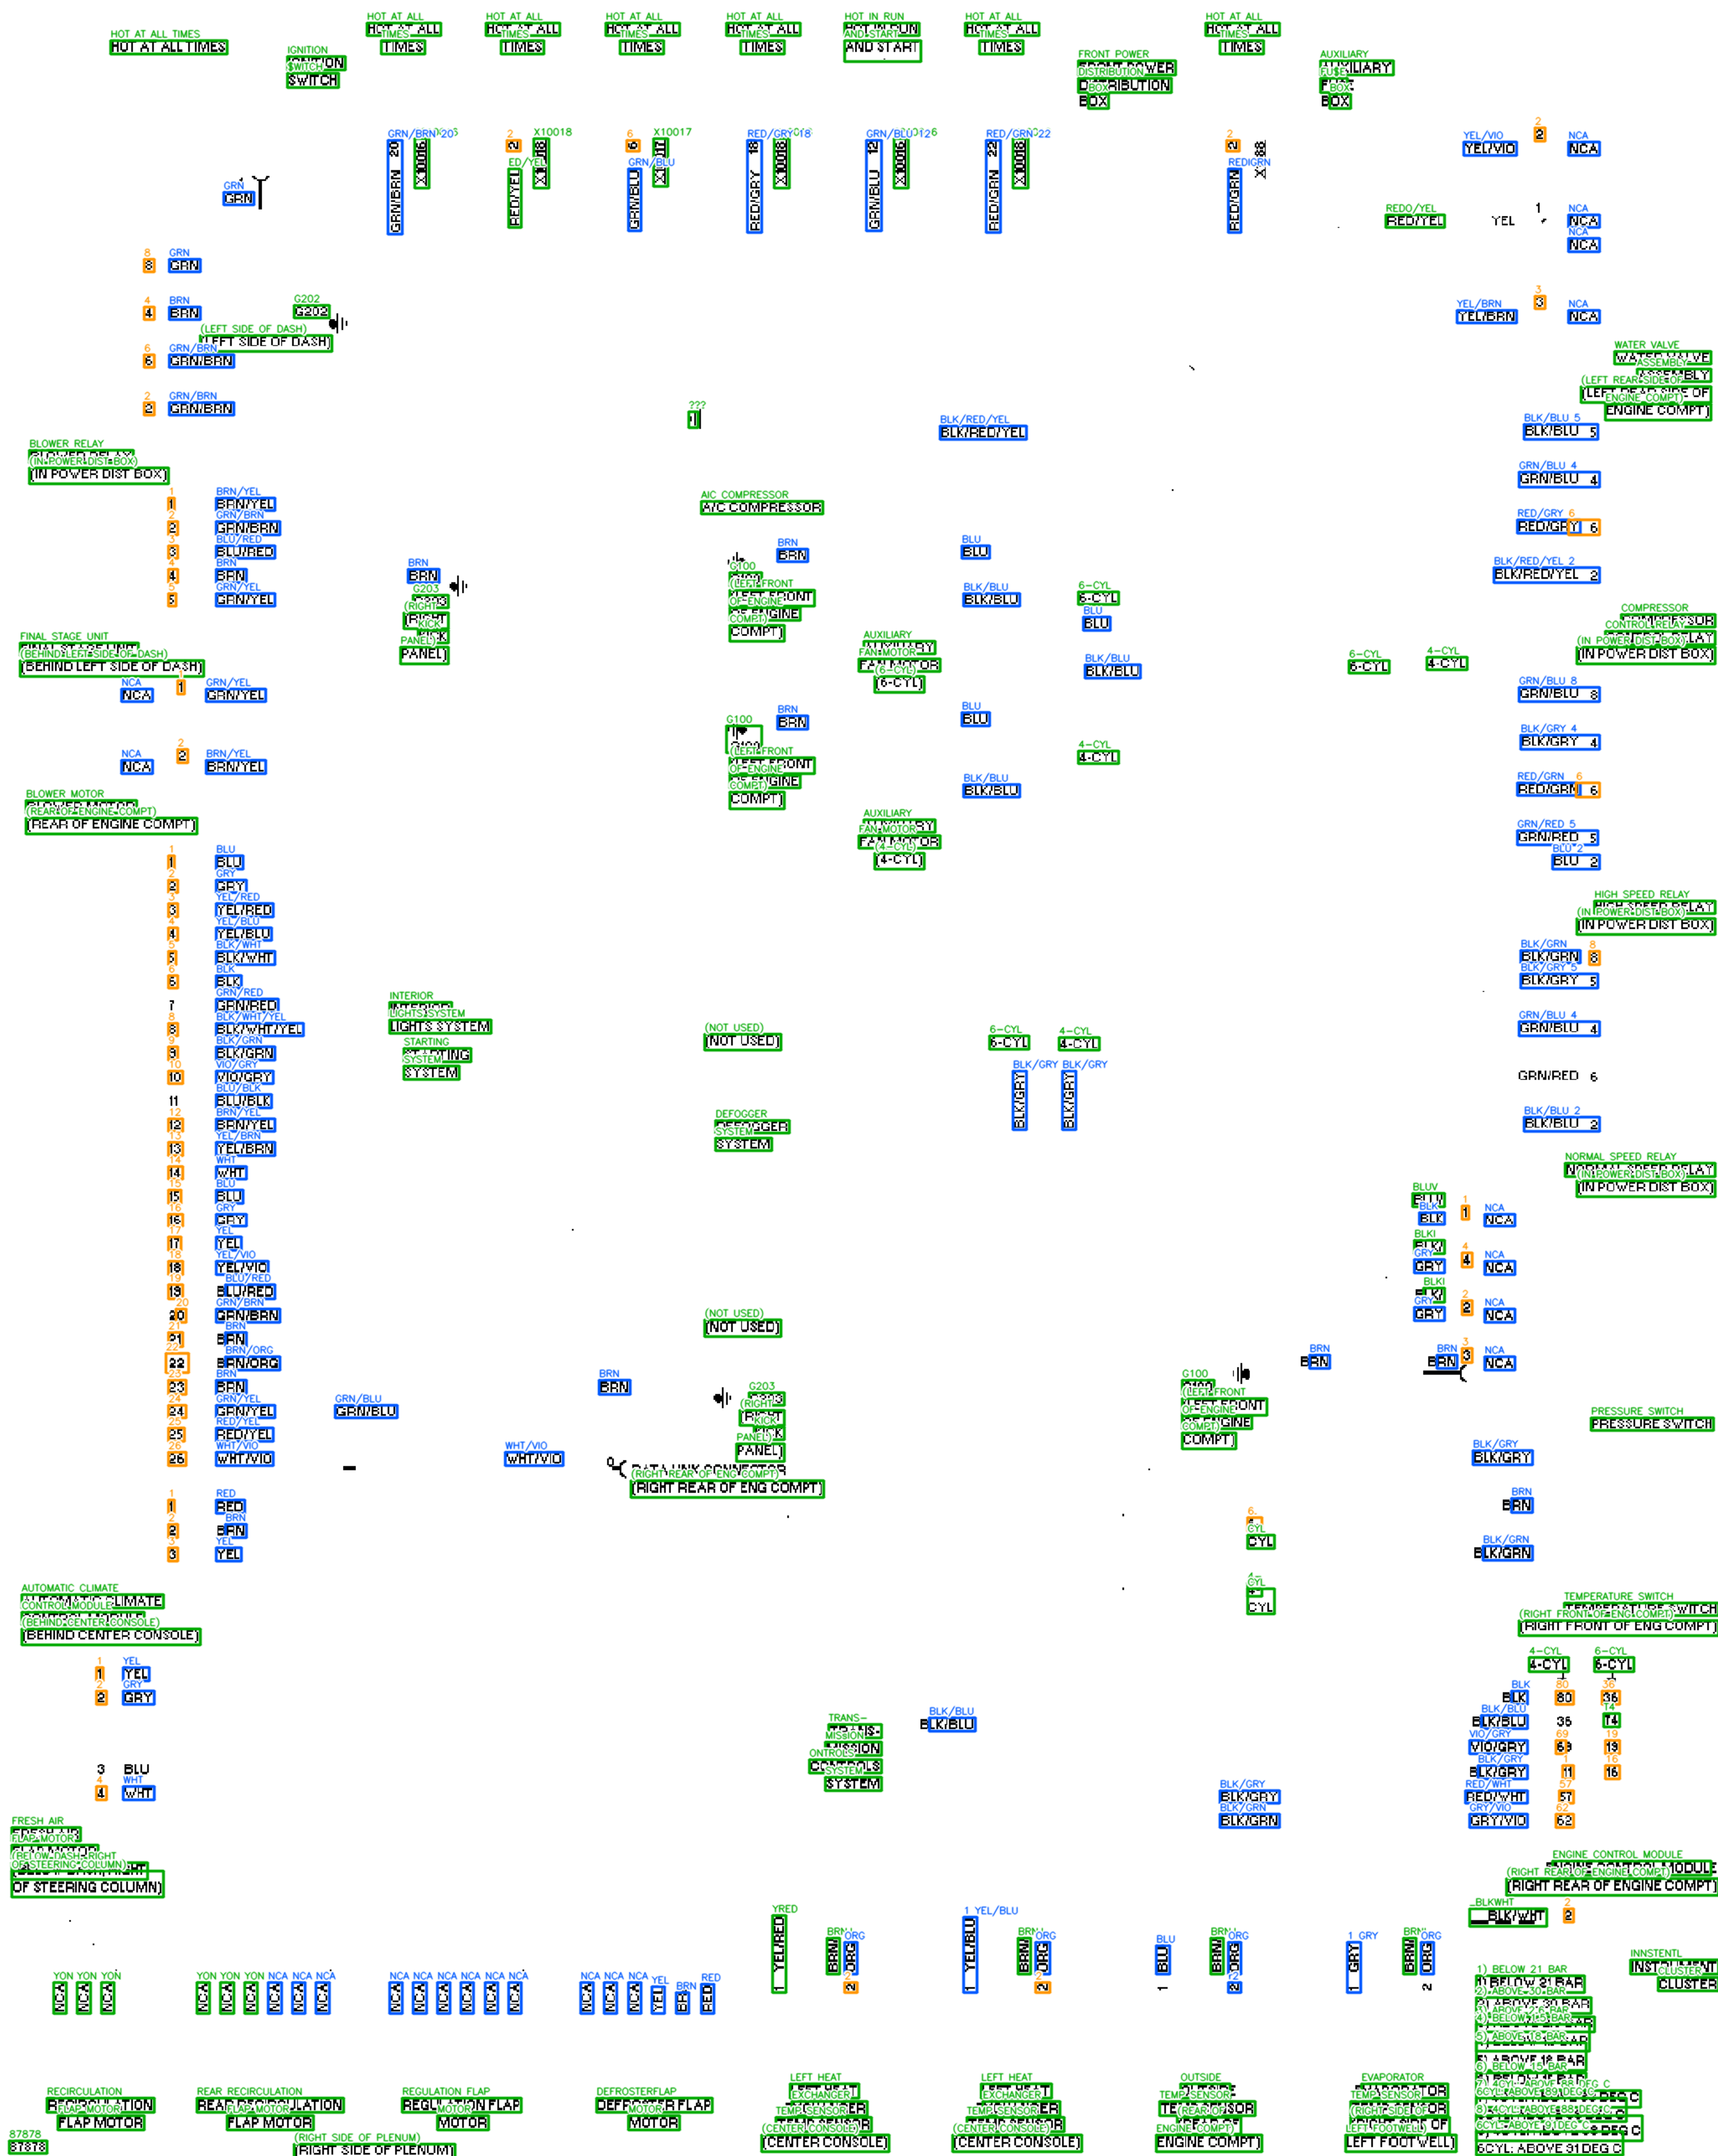

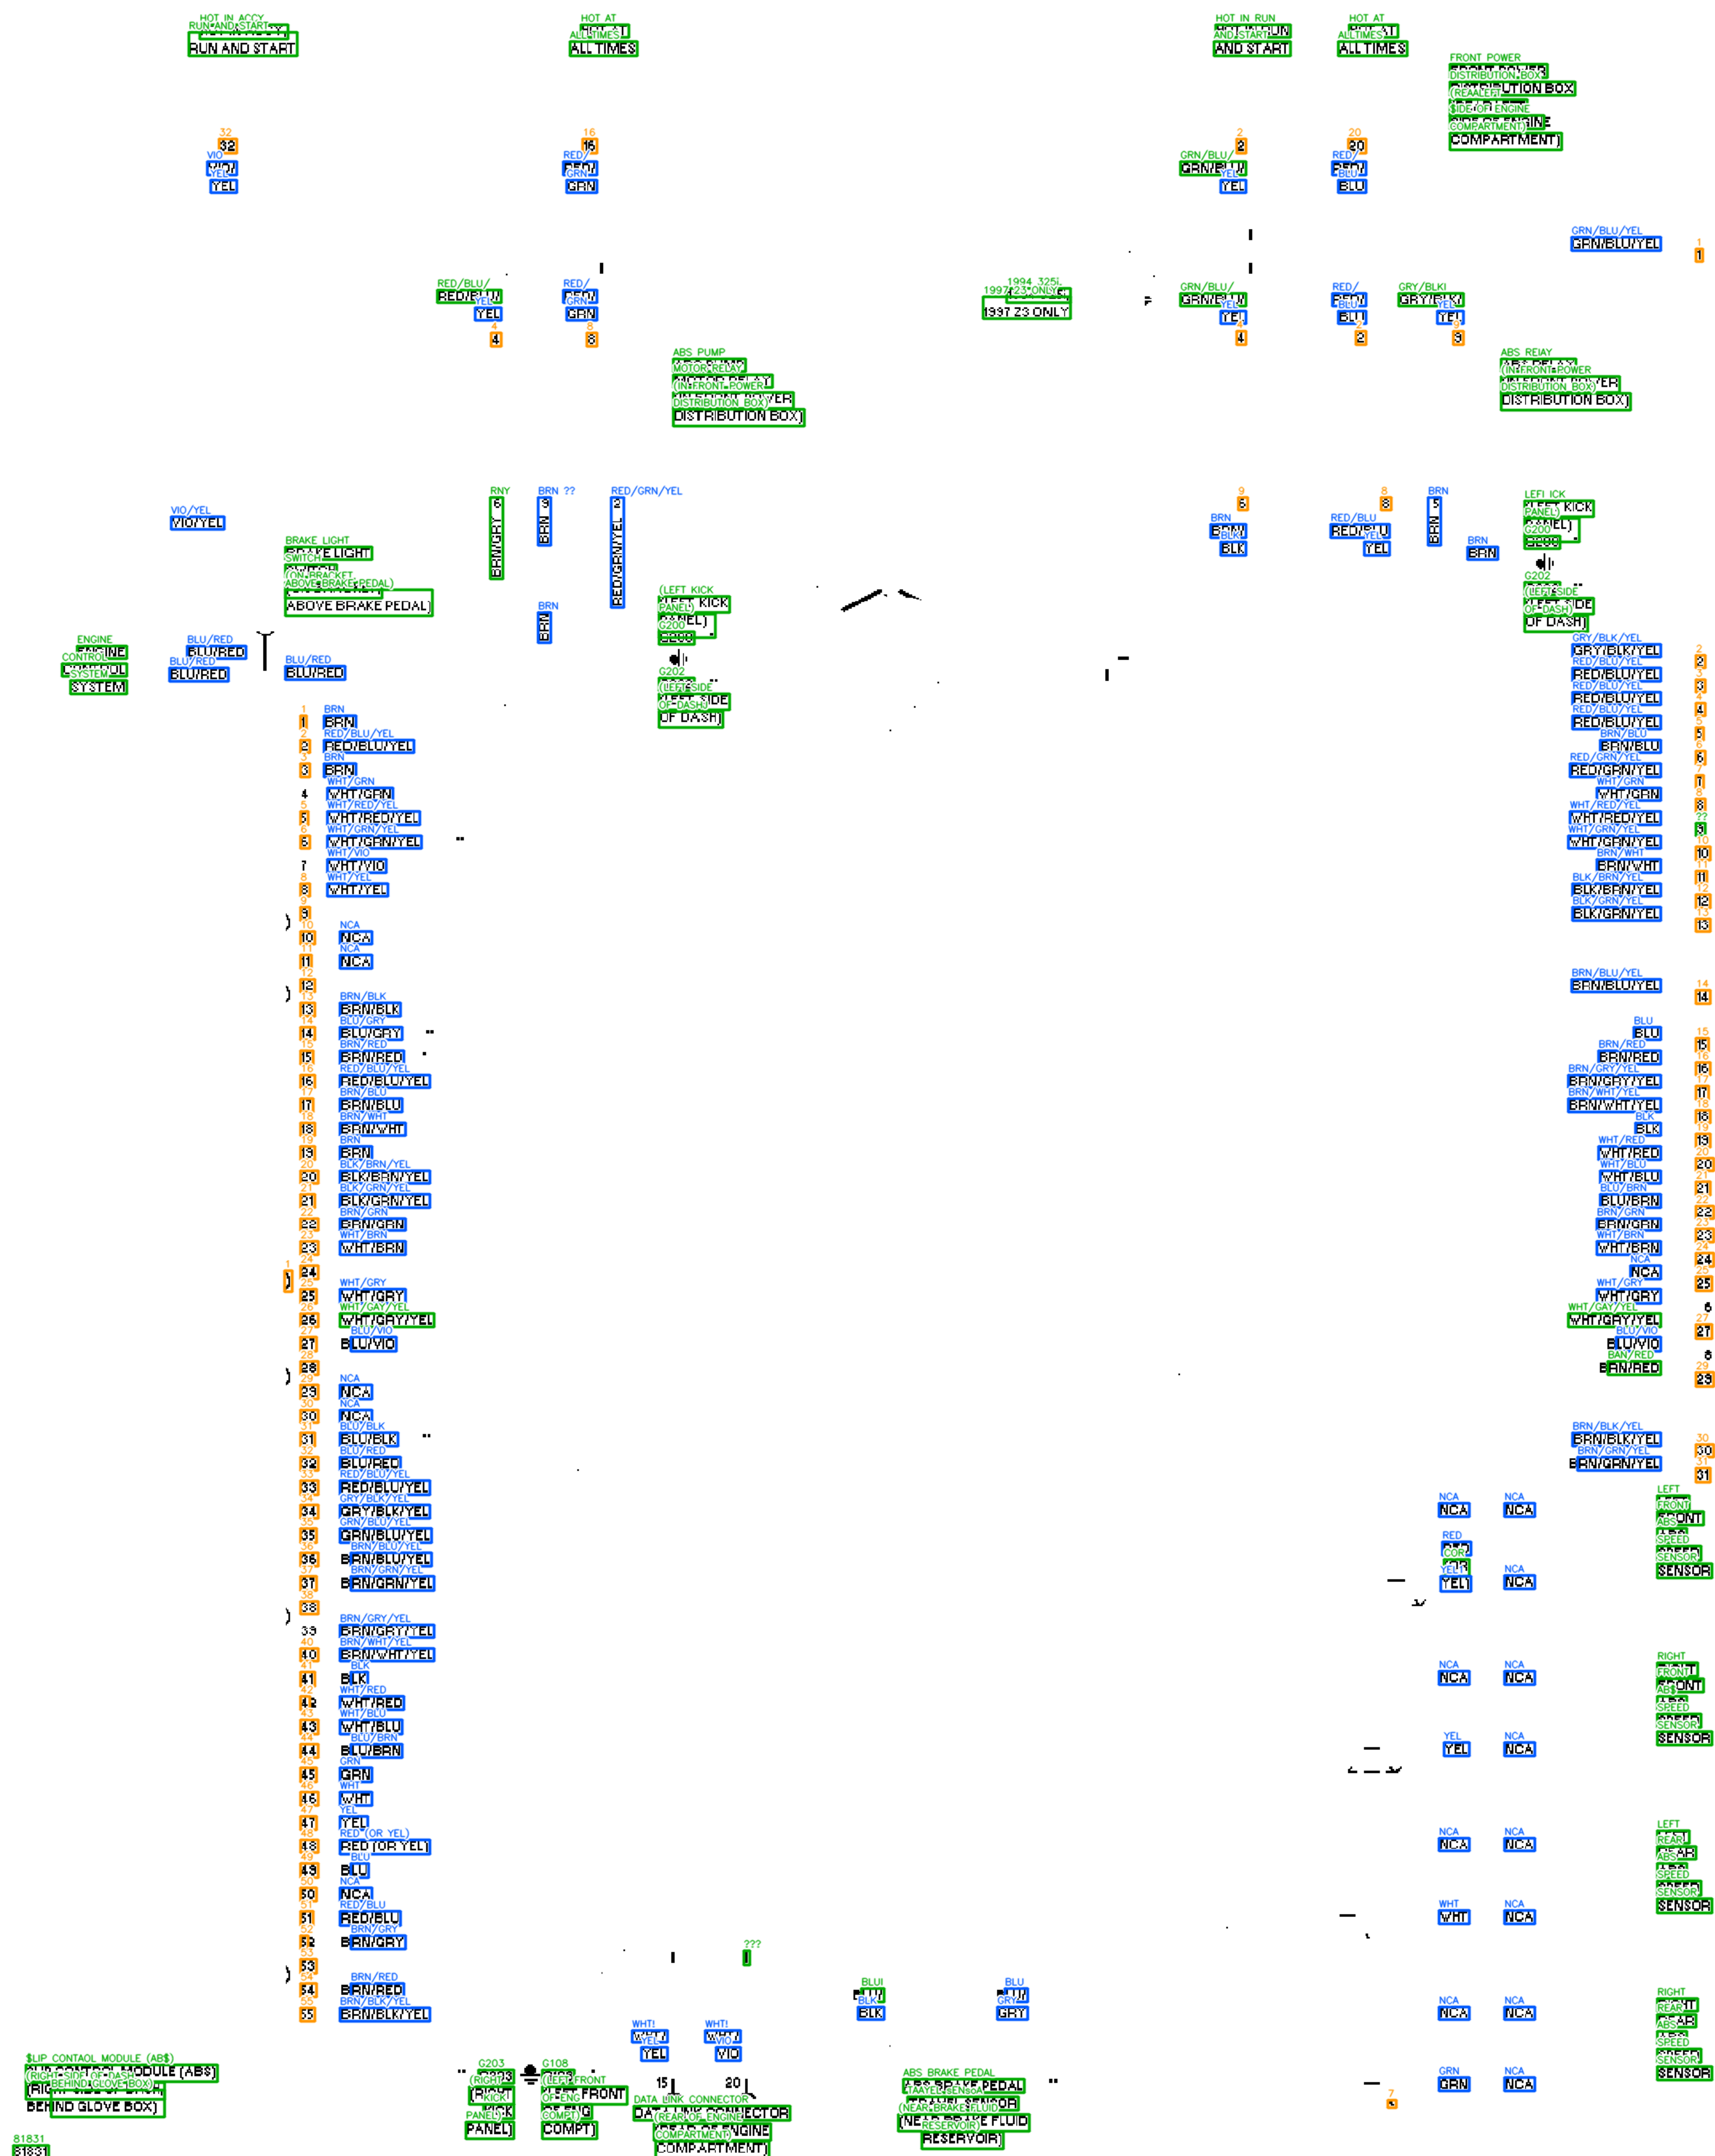

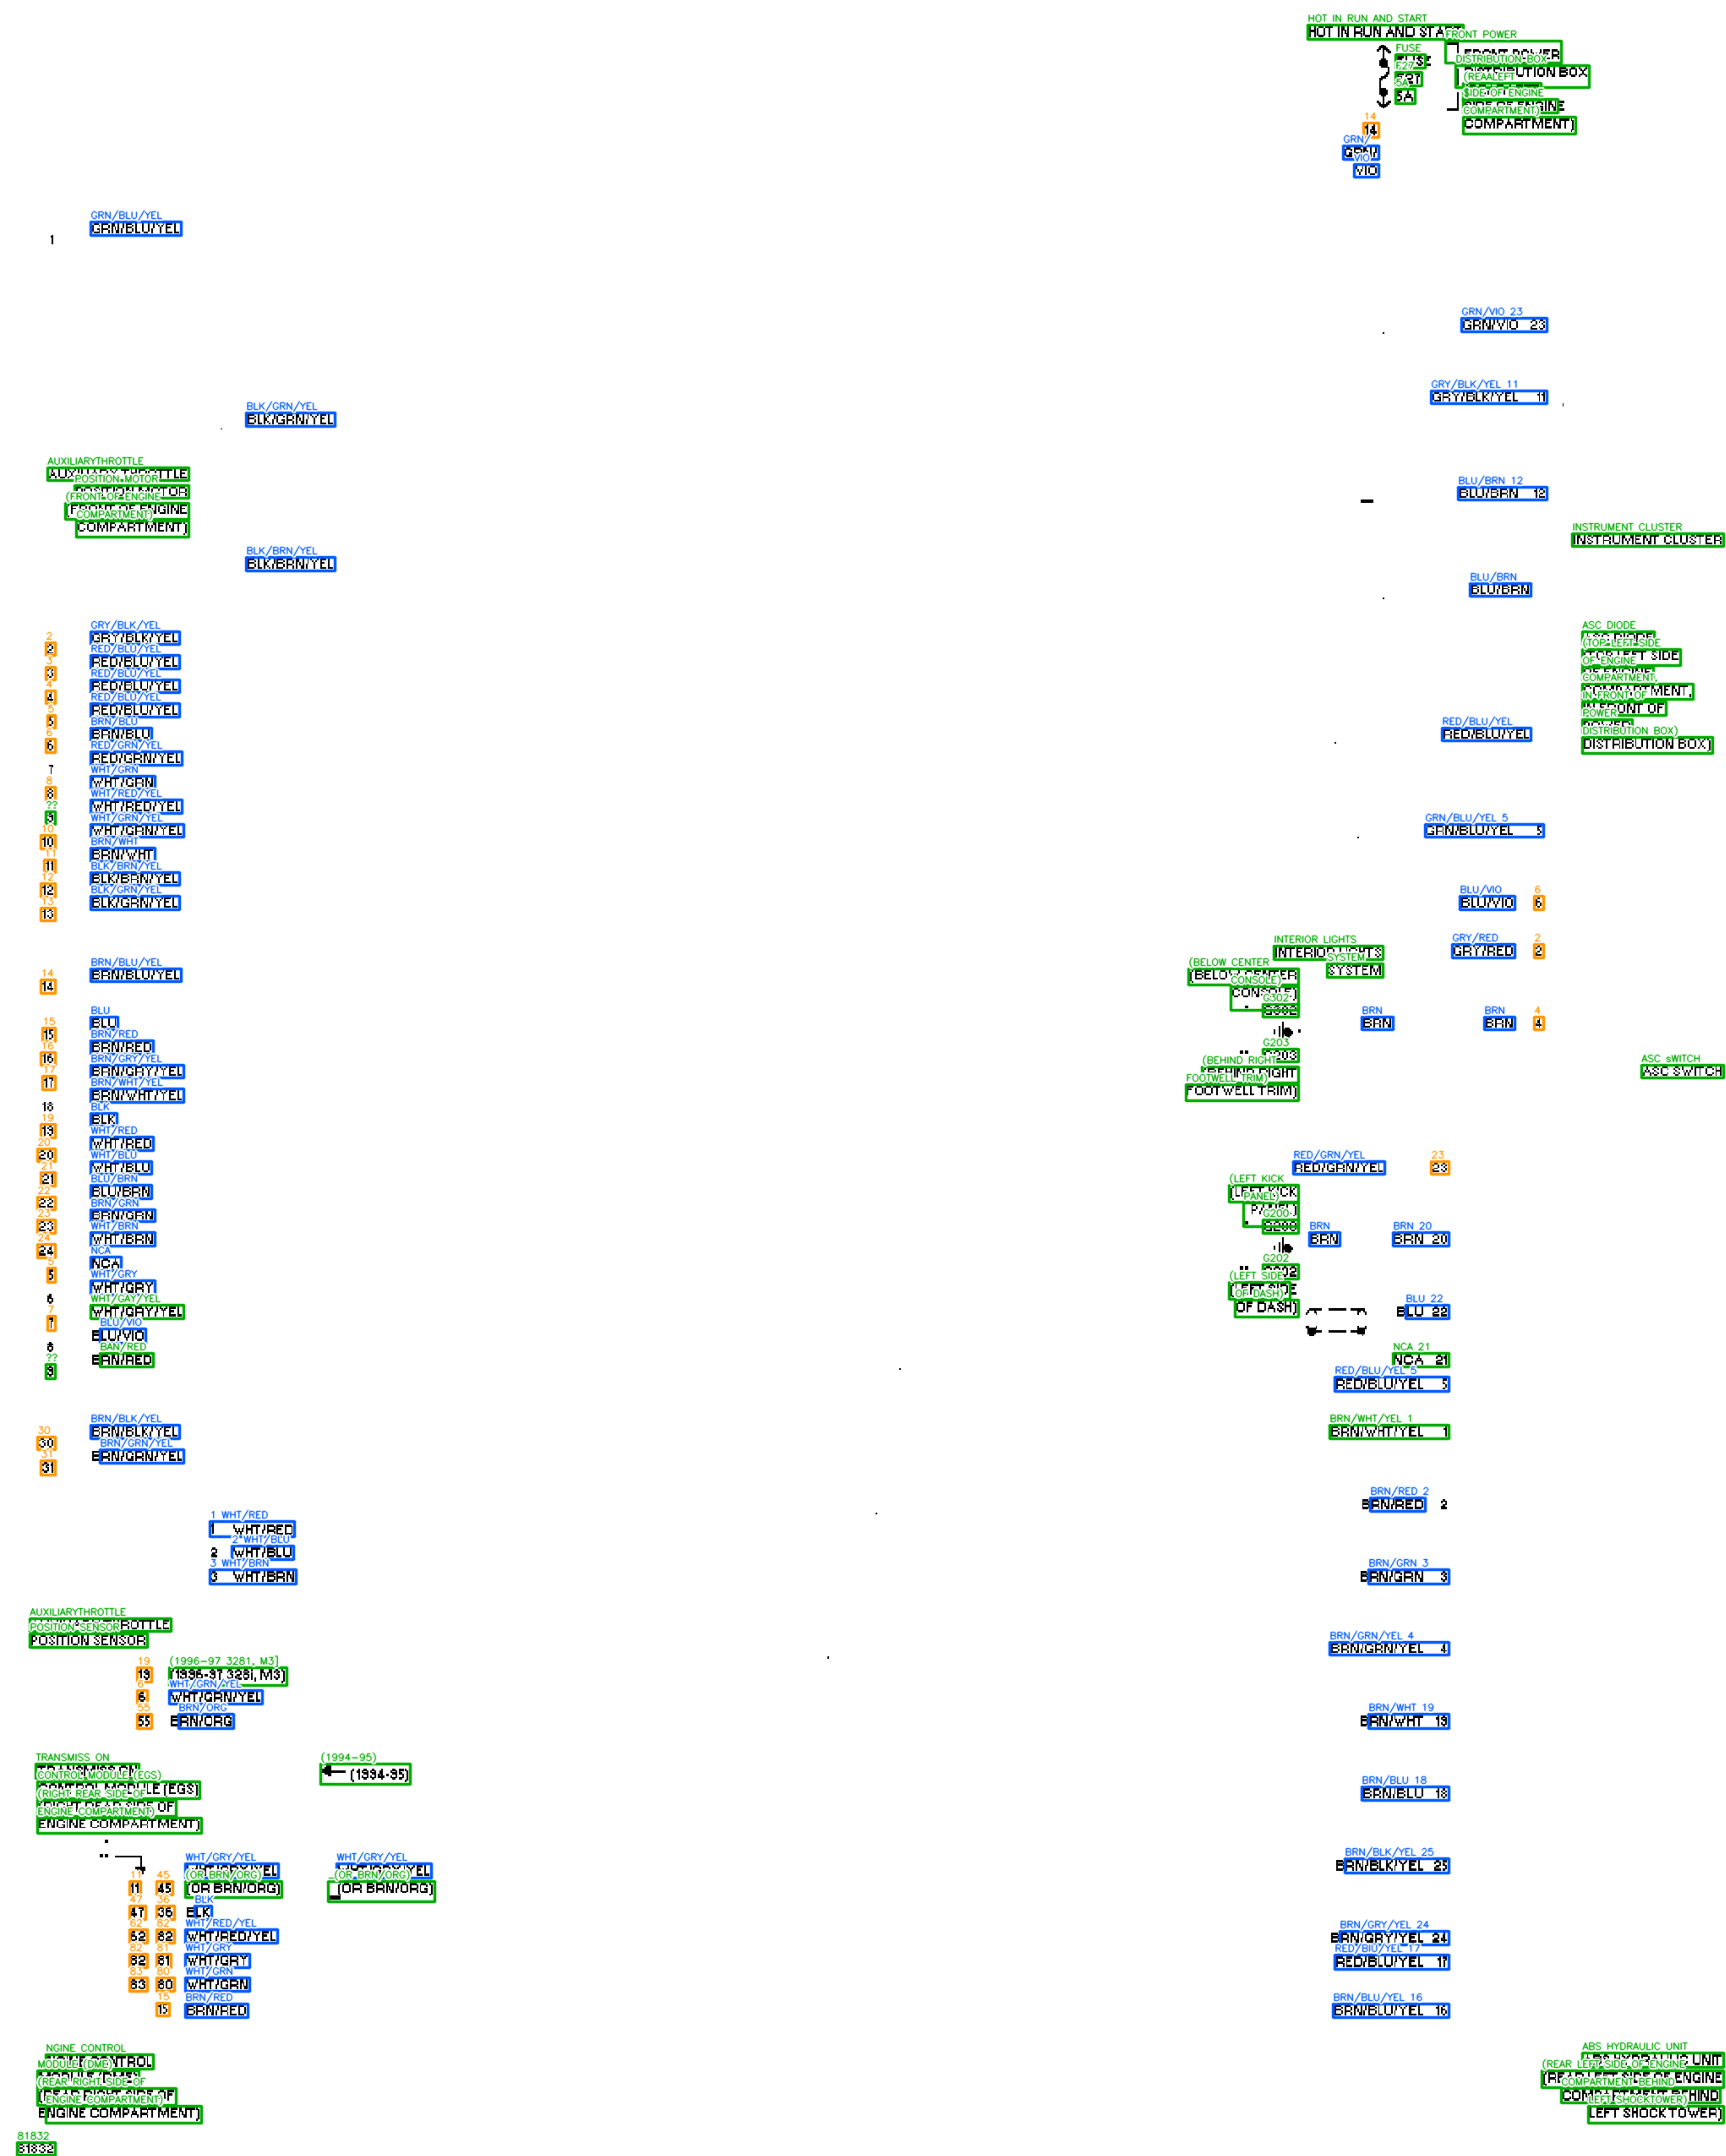

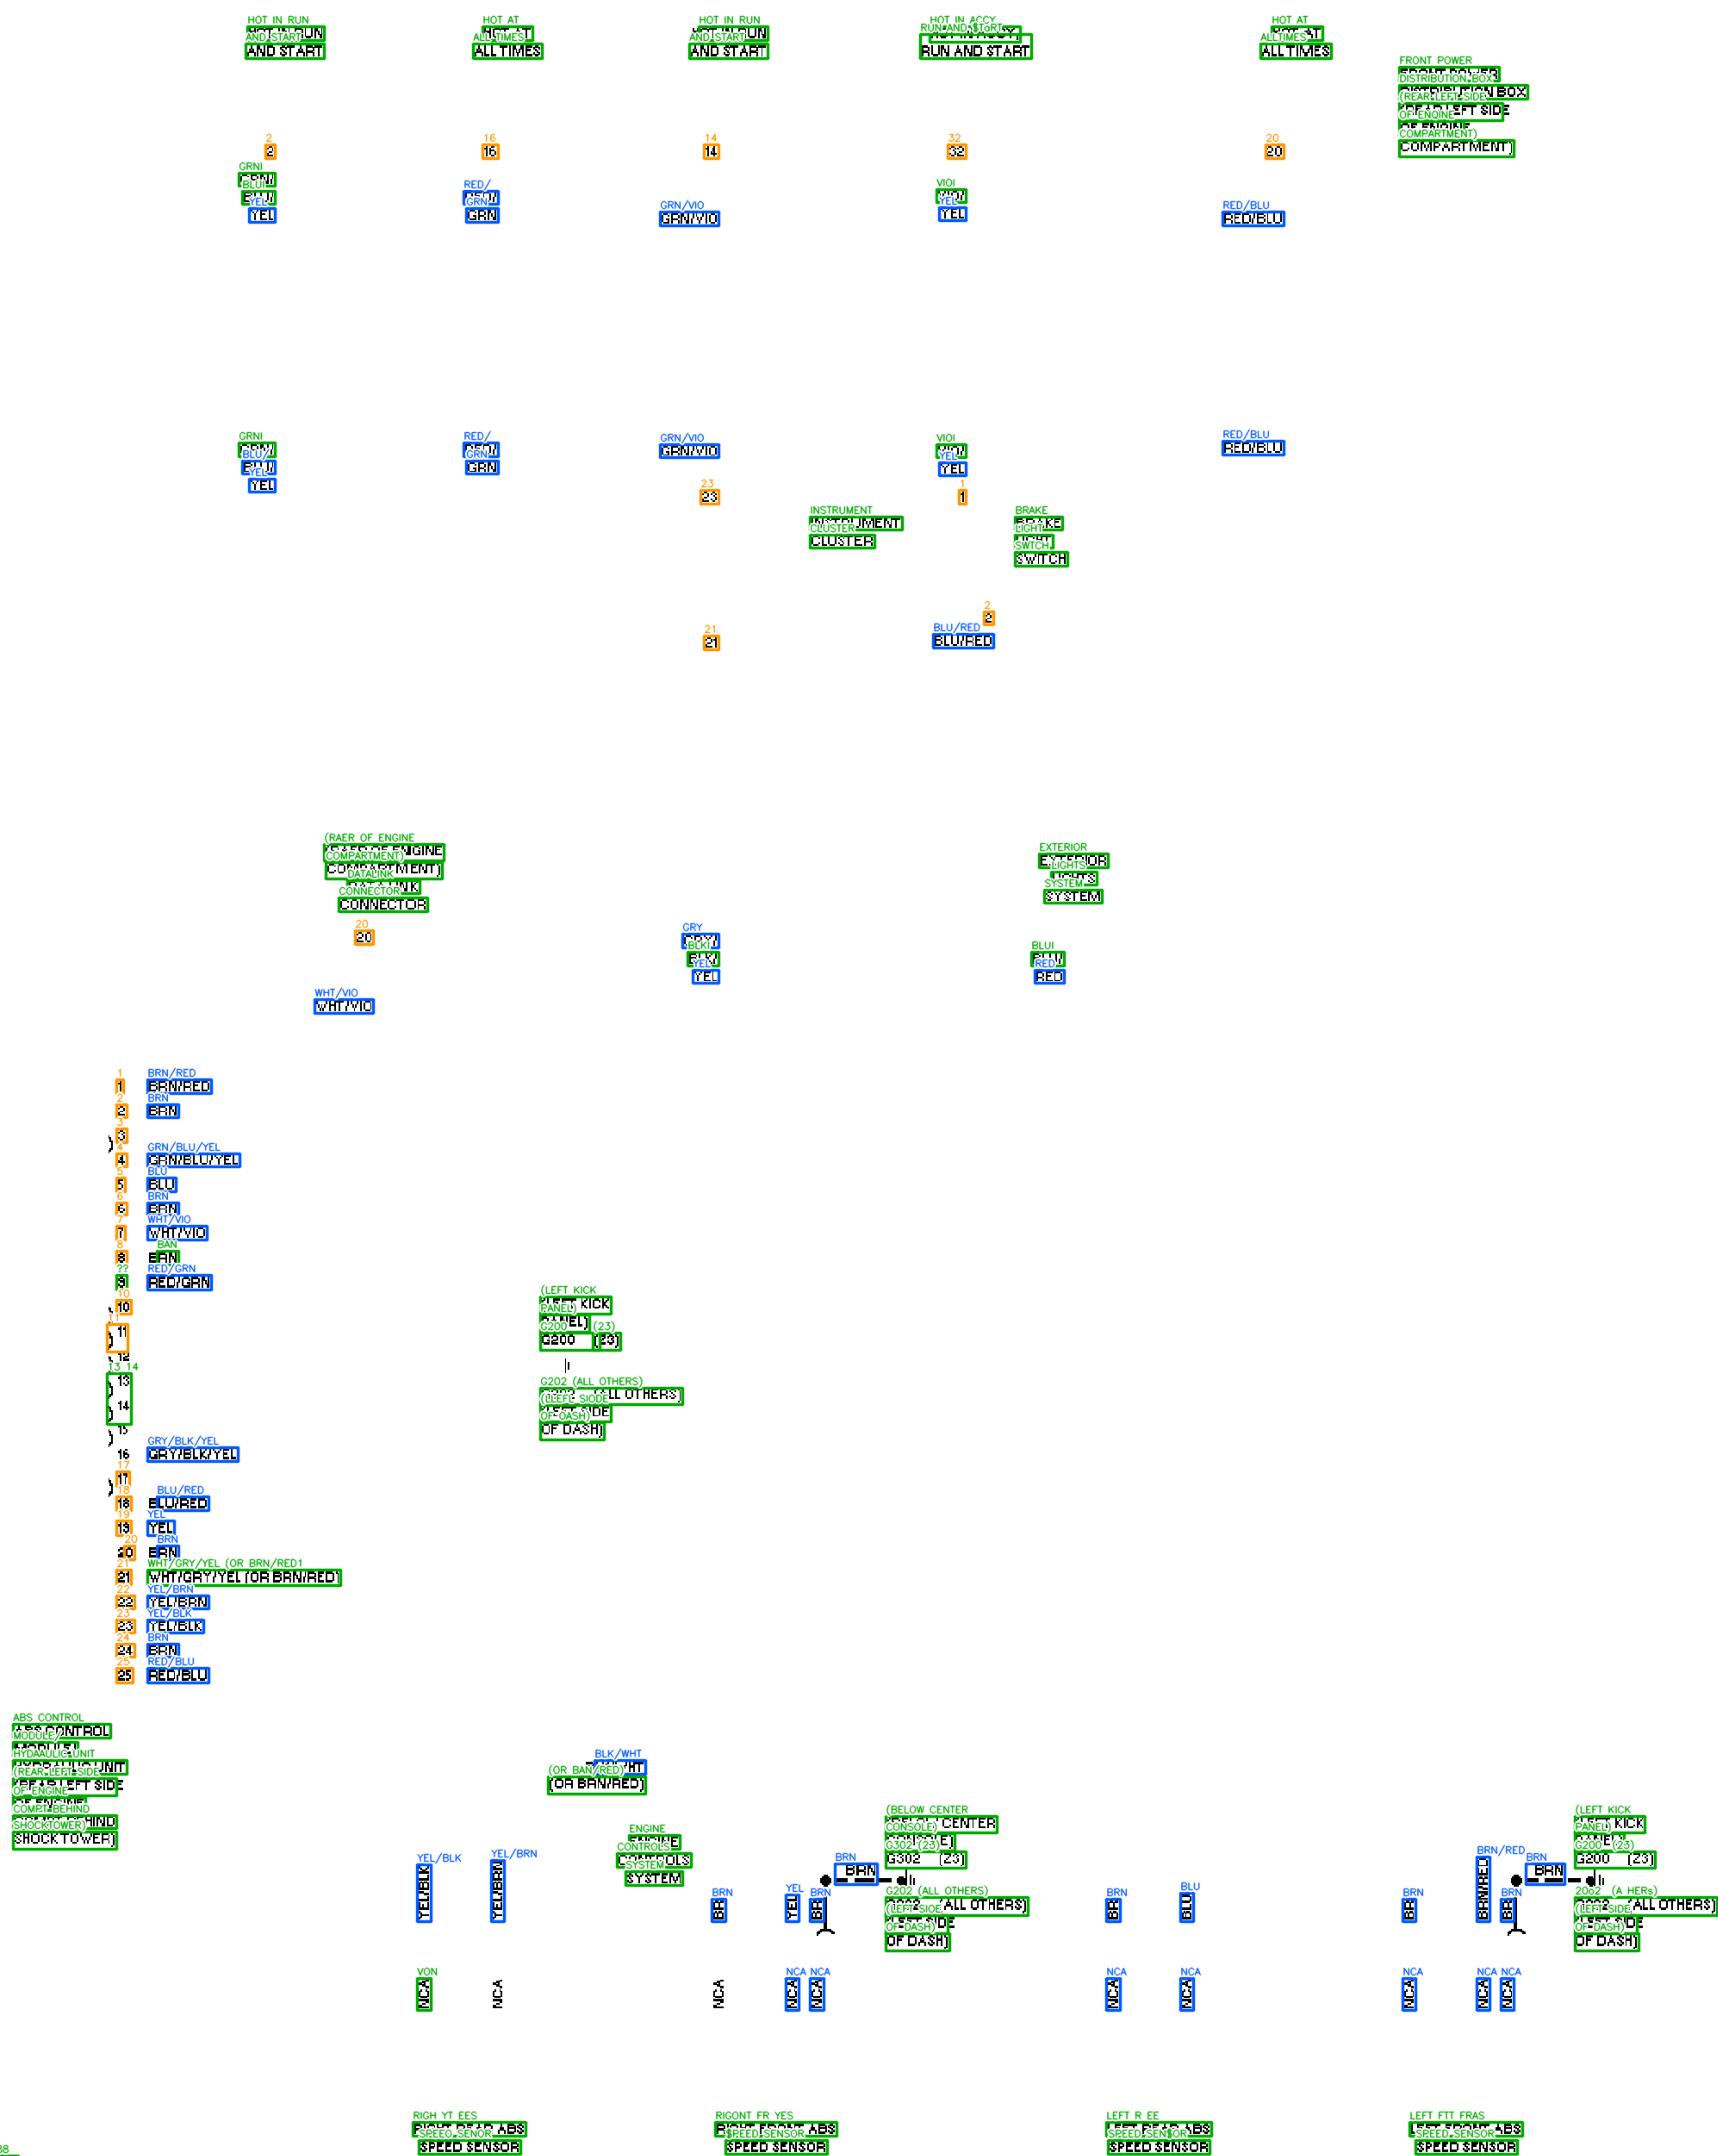

HOT AT
HOT AT
ALLTIMES
ALLTIMES

HOT IN RUN
HOT IN RUN
ALL START
ALL START

HOT IN ACCY.
HOT IN ACCY.
RUN AND START
RUN AND START

FRONT POWER
DISTRIBUTION
BOX
(LEFT REAR
CORNER OF
ENGINE COMP.)

4
4

BLK/YEL
BLK/YEL

RED/GRN
RED/GRN

16
16
GRNJGRY
GRNJGRY
(M/T) 3
[M/T] 3
(A/T)*5
[A/T] 5

AT 



NCA

NCA

IGNITION
IGNITION
SWITCH
SWITCH

GRN/BLK
GRN/BLK

AUTOMATIC
TRANSMISSION
RANGE SWITCH
(A/T)
STARTER
IMMOBILIZATION
SWITCH
(M/T)

(A/T) 7
(A/T) 7
(M/T)*2
(M/T) 2



DATA LINK
CONNECTOR

STARTING
STARTING
SYSTEM
SYSTEM

BRN/ORG
BRN/ORG

BRN/ORG

- 3
- 2
- 1

TRANSMITTER
MODULE (EW'S II)
(LEFT SIDE OF DASH,
AT STEERING COLUMN)

Diagram showing the location of the Kick Panel and Glove Box. The Kick Panel is located behind the right side of the vehicle, and the Glove Box is located on the right side of the vehicle. The diagram includes labels for the Kick Panel, Glove Box, and the location of the Kick Panel and Glove Box.



TRANSMISSIONS
TRANSMISSIONS
SYSTEM
SYSTEM
(AT ONLY)
(AT ONLY)

(BELOW
LEFT SIDE
OF DASH)
G 202

ANTI-THEFT
ANTI-THEFT
CONTROL
MODULE
MODULE
(ALPINE)
(ALPINE)
(BEHIND G BOX)
(BEHIND GLOVE BOX)

- 1 BLK/YEL **BLK/YEL**
- 2 WHT/YIO **WHT/YIO**
- 3 GRN/BLK **GRN/BLK**
- 4 GRN **GRN**
- 5 RED/GRN **RED/GRN**
- 6
- 7 BRN **BRN**
- 8 BLK/GRN **BLK/GRN**
- 9 BRN/BLK **BRN/BLK**
- 10
- 11
- 12 BLK **BLK**
- 13 BLU **BLU**
- 14 BLU/RED/YEL **BLU/RED/YEL**
- 15 BLK/GRN **BLK/GRN**

BRN
BRNBLK/GRN
BLK/GRN

BLU/GRN 10

BLU/RED/YEL
BLU/RED/YEL

10182

13253
13253

EXCEPT
EXCEPT
318ti
318ti

BOEILCOS
BODY ELECTRONICS
CONTROL MODULE (ZKE IV)
CONTROL MODULE (ZKE IV)
(BEHIND GLOVE BOX)
(BEHIND GLOVE BOX)

BLK/GRN
BLK/GRN

ON-BOARD COMPUTER
ON-BOARD COMPUTER
(CENTER CONSOLE)
(CENTER CONSOLE)

ELECTRONIC
IMMOBILIZER
CONTROL
MODULE
(BEHIND GLOVE BOX)

BLK
80
36

GRN (OR
BLK/VIO)

10 4??2318, 318ti
10 4??2323, 328, M3
18 4??2323, 328, M3

ENGINE CONTROL
MODULE (DME)
(RIGHT+REAR+CORNER)
(RIGHT REAR CORNER
OF ENGINE COMPT)