

Industrial PC

# Android OS on AM335X User Manual

For AM335X Products

Content can change at anytime, check our website for latest information of this product. **www.chipsee.com** 

# **Contents**

Android OS	3
1. Preparation	5
1.1. Hardware Requirements	5
1.2. Software Requirements	5
2. Getting Started and Tests	6
2.1. DIP Switch Configuration	6
2.2. Downloading Images	6
2.3. Prebuilt Files Package	6
2.4. How to make a bootable SD card	8
2.5. How flash Android to NAND	10
2.6. Start Android OS	12
2.7. Tests	13
2.7.1. Touch screen test	13
2.7.2. Buzzer test	15
2.7.3. Gravity sensor test	15
2.7.4. Audio IO test	16
2.7.5. Serial test	17
2.7.6. USB device test	19
2.8. Modify OS Start up Logo	20
2.9. IP settings	24
3. Android system debug in Windows	25
3.1. View Android system via the serial port	25
3.2. Adb connect via USB OTG	26
3.3. Adb connect via internet	30
4. Android App Development	32
4.1. Preparation	32
4.2. Example — Develop a HelloWorld Program	35
5. Disclaimer	39
6. Technical Support	39

# **Android OS**

#### **Android OS User Manual**



This manual is used to provide users with a fast guide of Chipsee Industrial Computers (Abbreviated as IPC) about Android OS development. Through this manual, users can quickly understand the hardware resources; users can build a complete compilation of Android development environment; users can debug Android OS via serial, USB OTG and Internet.

Revision	Date	Author	Description
V1.0	2021-12-09	Randy	Initial Version

#### **SUPPORTED BOARDS:**

CS80480T050 CS80600T080 CS10600T070 CS80480T070 CS10768T097

#### **PREBUILT FILES PACKAGE:**

Prebuilt files for the various industrial PCs can be found in the OS Downloads. Below are the links to the prebuilt files for each industrial PC model.

- CS80480T050
- CS80600T080
- CS10600T070
- CS80480T070
- CS10768T097

System Features

Feature	Comment
System	Android 4.1

# **Preparation**

You will need to prepare the following items before you can start using the Prebuilt Files Package to re-flash the system.

Power Supply Unit (PSU) with the appropriate voltages, as follows:

- Products with 5" display panel require 6V to 36V PSU
- Products with 7" to 10.1" display panel and larger require 6V to 42V PSU
- USB to serial cable for debugging Chipsee Industrial Embedded Computers (Chipsee IPC)
- TF Card to create a bootable storage for re-flashing the system. Use the prebuilt files link above to re-flash the system.

## **Hardware Requirements**

- Chipsee Industrial PC
- PSU according to the instructions above
- USB-to-serial or other serial cable for debugging
- TF Card (at least 4GB) and card reader
- USB A-A cable (used only if the hardware configured as OTG)
- Windows 7 PC

## **Software Requirements**

- Android OS Prebuilt Files Package (from the link above)
- ADT for Windows
- Android USB driver (for Windows)

# **Getting Started and Tests**

## **DIP Switch Configuration**

Set the boot DIP switch, as shown on the figure below, to boot the system from the external SD Card.

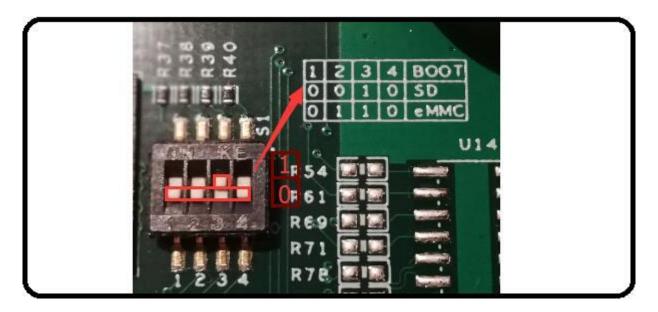


Figure 751: Boot Mode Setup

## **Downloading Images**

Chipsee IPC supports booting from an integrated eMMC or an external TF Card (also known as the micro SD card). Booting from the external TF Card allows flashing the system OS.



The operator should use the prebuilt file we provided in the CD to test the hardware before re-flashing the system.

# **Prebuilt Files Package**

You can get the Prebuilt Files Package for each model from links mentioned at the beginning of this documentation. You can also get the Prebuilt Files Package from the DVD in /Android/Prebuilds folder. However, it may be outdated so always compare the versions (the last number in the filename is the release date).

The prebuilt package has the following content:

Contents	Comment
boot/imx6ulipc.dtb	TF Card boot dtb file

Contents	Comment
boot/u-boot.imx	TF Card boot bootloader
boot/zImage	TF Card boot kernel file
filesystem/rootfs-emmc-flasher.tar.bz2	TF Card boot rootFS
mksdcard.sh	Shell tools to make bootable TF Card
README	Simple guidelines
S1.jpg	Boot Switch Config Figure
emmc-flash/emmc/rootfs.tar.gz	RootFS in target eMMC
emmc-flash/emmc/u-boot.imx	Bootloader in target eMMC
emmc-flash/emmc/zlmage	Kernel file in target eMMC
emmc-flash/emmc/imx6ul-eisd.dtb	dtb file in target eMMC
emmc-flash/mkemmc.sh	Shell tools to download images

Table 229 Prebuilt Files Package



The default zImage and imx6q-sabresd.dtb files support 'keep the logo from uboot to kernel' but do not support framebuffer. Chipsee provides  $zImage\_framebuffer$  and  $imx6q-eisd.dtb\_framebuffer$  file versions that support the framebuffer function but do not support the 'keep the logo from uboot kernel' feature. If you need the framebufer, just rename these two files to  $zImage\_and\_imx6q-eisd.dtb$ .

#### How to make a bootable SD card

The Prebuilt Files Package has a shell tool that can help create a bootable SD card using a Linux platform (such as desktop PC or Virtual Machine running Ubuntu 14.04 distribution). Use the SD Card to download the bootable system image onto the Linux platform and follow the steps below to create a bootable SD card:

- 1. Copy the Prebuilt Files Package to a Linux environment (such as Ubuntu 14.04).
- 2. Insert the SD card into your computer. If you are using virtual machines, please ensure the SD card is mounted to the Linux operating system.
- 3. Confirm the SD card mount point, /dev/sdX (e.g., /dev/sdc or /dev/sdb, be sure to use the right one). In a Linux system, you can use the command below to find out what X is.

```
$ sudo fdisk —l
```

- 4. Copy the prebuilt-jb-hmi-XXXX.tar.gz to somewhere(such as \$HOME).
- 5. **Extract the** prebuilt-jb-hmi-XXXX.tar.gz

```
$ tar -xzvf prebuilt-jb-hmi-XXXX.tar.gz
```

6. Go to the folder

```
$ cd ~/Prebuilt-cs-androidXXXXX/prebuilt-sd/
```

7. Use the following command to flash the Android OS to the SD card

```
$ sudo ./mkmmc-android.sh --device /dev/sd<?>
```



- $\bullet \ \, \text{sd} < ?> \ \, \text{means the SD card mount point, (e.g., \ \, /dev/sdc \ \, \text{or } \ \, /dev/sdb \ \, ) in Ubuntu system. }$
- The recommended SD card should be Sandisk Class4 level SD card or above.
- 8. The bootable SD Card is now ready. Power OFF the industrial PC and insert the SD Card.
- 9. Set the DIP switch to uSD BOOT mode. (refer to DIP Switch Configuration above)
- 10. Connect the industrial PC to PC via COM1. Power ON the IPC.

- 11. After 20 minutes, if the LED on industrial PC stays lit, flashing is completed. Using COM1, you can also find this message >>>>> **eMMC Flashing Completed** <<<<< which indicates that the system image was downloaded correctly to the eMMC.
- 12. Power OFF the IPC and set the DIP switch to eMMC BOOT mode. (refer to DIP Switch Configuration above)

#### **How flash Android to NAND**

The Prebuilt Files Package has a shell tool that can help create a bootable NAND card using a Linux platform (such as desktop PC or Virtual Machine running Ubuntu 14.04 distribution).

Follow the steps below to create a bootable NAND card:

- 1. Copy the Prebuilt Files Package to a Linux environment (such as Ubuntu 14.04).
- 2. Insert the SD card into your computer. If you are using virtual machines, please ensure the SD card is mounted to the Linux operating system.
- 3. Confirm the SD card mount point, <code>/dev/sdX</code> (e.g., <code>/dev/sdc</code> or <code>/dev/sdb</code> , be sure to use the right one). In a Linux system, you can use the command below to find out what <code>X</code> is.

```
$ sudo fdisk —l
```

- 4. Copy the prebuilt file prebuilt-jb-hmi-XXXX.tar.gz to somewhere(such as \$HOME).
- 5. **Extract the prebuilt file** prebuilt-jb-hmi-XXXX.tar.gz

```
$ tar -xzvf prebuilt-jb-hmi-XXXX.tar.gz
```

6. **Go to the folder** prebuilt-jb-hmi-XXXX/prebuilt-nand/

```
$ cd ~/prebuilt-jb-hmi-XXXX/prebuilt-nand/
```

7. Use the following command to flash the Android OS to the NAND card

```
$ sudo ./mkmmc-android-nand.sh --device /dev/sd<?>
```



- $\bullet \ \, \text{sd} < ?> \ \, \text{means the SD card mount point, (e.g., \ \, /dev/sdc \ \, \text{or } \ \, /dev/sdb \ \, ) in Ubuntu system. }$
- The recommended SD card should be Sandisk Class4 level SD card or above.
- 8. The bootable NAND Card is now ready. Power OFF the industrial PC and insert the NAND Card.
- 9. Set the DIP switch to NAND BOOT mode. (refer to DIP Switch Configuration above)
- 10. Connect the industrial PC to PC via COM1. Power ON the IPC.

- 11. After 20 minutes, if the LED on industrial PC stays lit, flashing is completed. Using COM1, you can also find this message >>>>> **eMMC Flashing Completed** <<<<< which indicates that the system image was downloaded correctly to the eMMC.
- 12. Power OFF the IPC and set the DIP switch to eMMC BOOT mode. (refer to DIP Switch Configuration above)

### **Start Android OS**

The first time you start Android OS on the industrial PC will take a little time. But after the first time, Android OS will start quickly. When the Android OS starts up, you will see the Chipsee Logo on the LCD screen. It is a successful start if you see the Android OS desktop such as the one shown in the figure below:



Figure 752: Android OS start-up screen

#### **Tests**

#### **Touch screen test**

Run **MultiTouch** Tester App.

The screen will show the number and position of the touch point when touching the screen.



Resistive screen expansion board only supports single-touch, and capacitive screen expansion board supports five-point touch as described in the figure below.

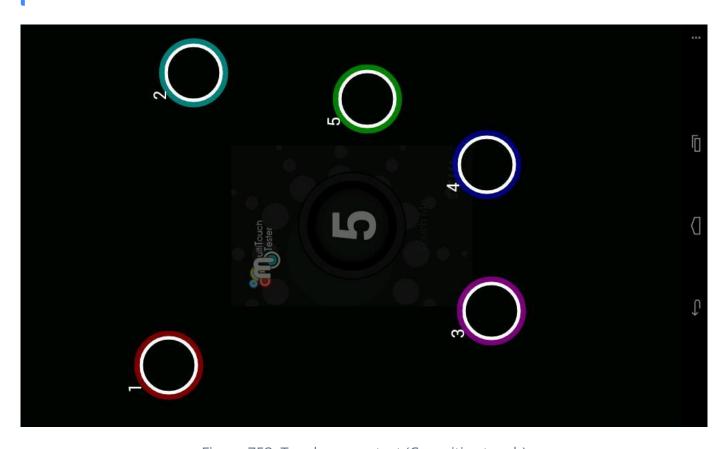


Figure 753: Touch screen test (Capacitive touch)

After working for some time, the resistive touch screen may not be accurate. The user must run a touch screen calibration test.

Run **Chipsee TouchCal** App as described in the figure below.

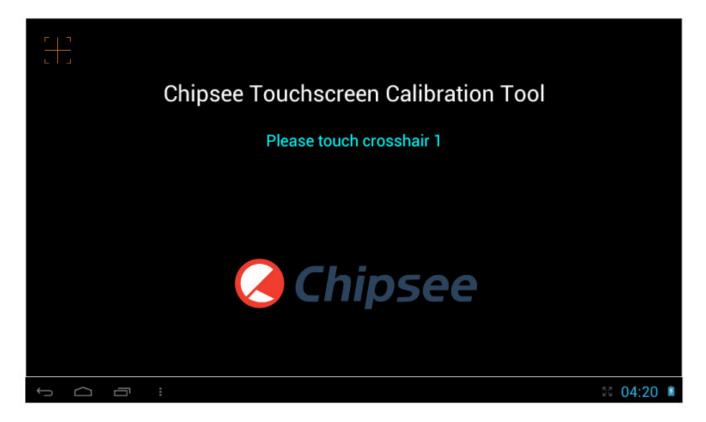


Figure 754: Touch screen calibration test (Resistive touch)

#### **Buzzer test**

#### Run Chipsee Buzzer App.

Push the "OpenBuzzer" button to start the buzzer sound.

Push the "CloseBuzzer" button to stop the sound.

#### **Gravity sensor test**

You can test the gravity sensor by whirling the screen.

- Run SensorList App.
- In the "Analog Device 3 axis accelerometer" option, you can see real-time changes of the three-axis acceleration value curve, as shown on the figure below.

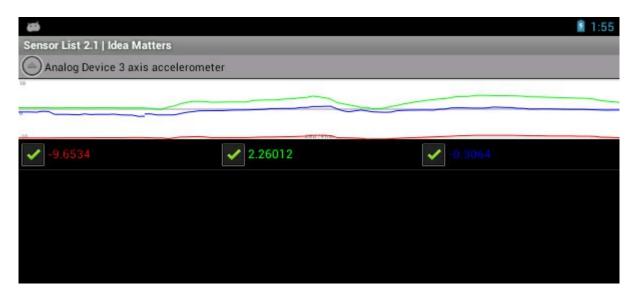


Figure 755: Real-time acceleration curve

• You can also test gravity using a gravity sensing game, such as "NFS shift" or "Tilt 3D laby". If you use "NFS shift", please run the **ChipseeSensorTool** app to adjust the direction of the axis by selecting "Invert X-axis" and "Swap X/Y axes". If you use other games, please adjust the settings as default.

#### **Audio IO test**

Insert the microphone and earphones into the Audio IO interface (Audio IN coloured pink, Audio OUT coloured light blue).

Start **Talking Tom** App (Tom Cat).

Speak into the microphone, Tom the cat will repeat spoken content.

#### **Serial test**

There are four serial ports on the Chipsee IPC: 2 X RS232 and 2 X RS485. Refer to the table below for the available serial device nodes.

Ports	Device Node
COM1(RS232, Debug)	/dev/ttyO0
COM2(RS232)	/dev/ttyO1
COM3(RS485)	/dev/ttyO2
COM4(RS485)	/dev/ttyO4

Table 230 Serial Ports Nodes on the System

You can install the **SecureCRT** or **Putty** software on a Windows 7 PC to test the serial ports by following these steps:

- Connect COM1 on industrial PC board to Windows 7 PC.
- Run **Serial Port API** App to communicate with Windows 7 PC, as shown on the figure below.



Figure 756: Serial settings

• Push the button with the label "Send 01010101", you will see something on the Windows 7 PC that looks similar to the figure below.

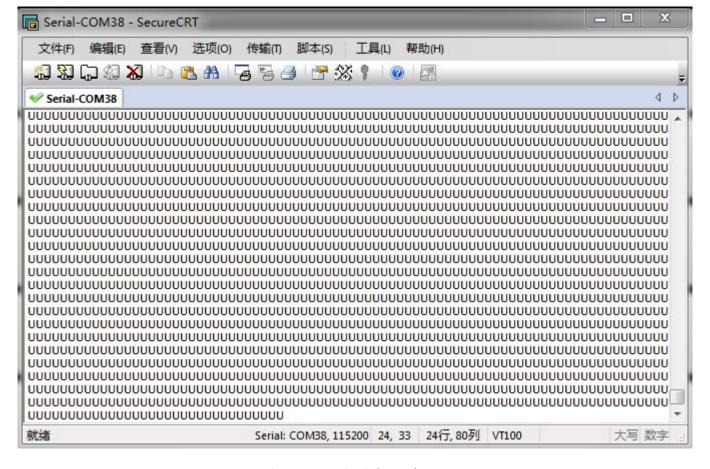


Figure 757: Serial send test

 Push the button with the label "Console", to send whatever you like as shown on the figure below.



Figure 758: Serial receive test

#### **USB** device test

#### **USB-WiFi**

The Android OS supports USB-WiFi (RTL8188). You can find the device in settings, as shown on the figure below.

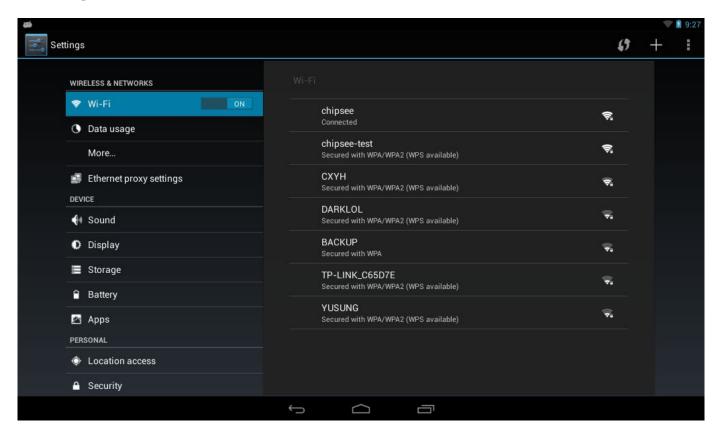


Figure 759: USB-WiFi

#### **USB-Camera**

The Android OS supports USB-Camera. You can find the device in settings, as shown on the figure below.

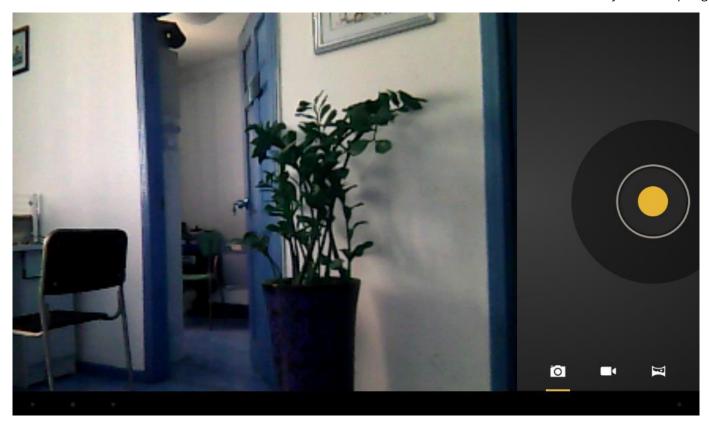


Figure 760: USB-Camera

# **Modify OS Start up Logo**

Chipsee<sup>®</sup> provides a software to change the OS boot up logo. The software ChipSee\_LOGO\_MOD\_EN.exe is provided on the CD for a product. To change the logo, follow these steps:

1. Open the software: Chipsee\_LOGO\_MOD\_EN.exe in Windows



Figure 761: Chipsee OS Boot-up Logo Modify Software

2. Click the first Browse button. Select the picture file you want to use as the logo.

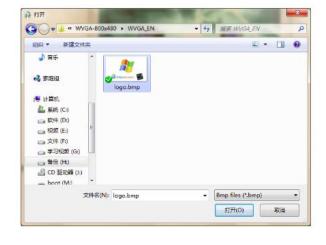




Figure 762: Choose the Logo you want

3. Click the second Browse button. Select the u-boot.img file you want to use.





Figure 763: Choose the u-boot.img file

4. Choose the correct resolution for your product, then click Execute.



Figure 764: Change the Logo successful

5. Insert the SD card into the IPC. Power ON the IPC and the Logo will be replaced.

## **IP settings**

To make changes to the IP address, follow these steps:

- Search the **boot partition** for the uEnv.txt file.
- Open and edit the file uEnv.txt with any text editor.

bootargs=console=tty00,115200n8 androidboot.console=tty00 mem=512M root=/dev/mmcblk0p2 rw rootfstype=ext4 rootwait init=/init ip=off

• Edit the part with ip=value, where value = off OR <iPv4 address>:::<Subnet mask>

For example: .. code:

bootargs=console=tty00,115200n8 androidboot.console=tty00 mem=512M root=/dev/mmcblk0p2 rw rootfstype=ext4 rootwait init=/init ip=192.168.1.111::: 255.255.0.0



Inputting wrong details could harm the industrial PC and because of that you should backup the file before making any changes. This can help you reverse changes easily if an error occurs.

# **Android system debug in Windows**

In this section, we will discover how to view the Android system via the serial port and debug the system via USB OTG.

Also, we will discover how to install and uninstall applications via USB OTG.

The following operation is under the Windows 7 x64 environment, similar to other Windows platforms.

## View Android system via the serial port

Install the **SecureCRT** or **Putty** software on a Windows 7 PC to view the Android system via the serial ports.

Follow these steps to view Android system via the serial port:

- Connect COM1 on the industrial PC board to Windows 7 PC.
- Open the **SecureCRT** or **Putty** software on the Windows 7 PC.
- Power ON the industrial PC. You will see the serial output information as shown on the figure below.

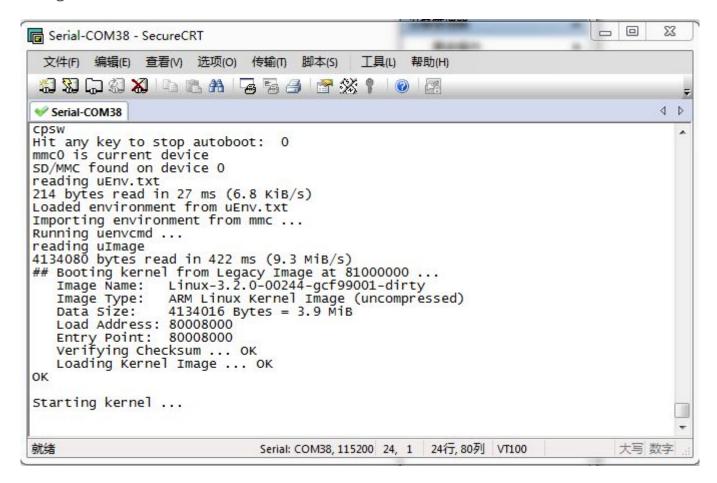


Figure 765: Serial output information

#### Adb connect via USB OTG

- 1. Download Oracle JDK 6 and Android Studio SDK for Windows. We suggest you download JDK-6u45.
- 2. Install Oracle JDK 6 and Android Studio SDK for Windows.
- 3. Extract the file somewhere (the name for the extracted folder is ADT).
- 4. The ADB command is in the <ADT>\sdk\platform-tools folder.
- 5. Optionally, you can add the location of the SDK's primary tools directory to your system PATH by following these steps:
  - Right-click on My Computer, and select Properties.
  - Under the Advanced tab, hit the Environment Variables button.
  - In the dialogue that comes up, double-click on Path (under System Variables).
  - Add the full path to the toolsdirectory to the path.

#### 6. Install Android USB driver on Windows:

- Copy the usb\_driver folder on the CD to a folder on the Windows 7 PC.
- Boot the board as normal and wait until shell prompt is available (disconnect the micro-B USB cable).
- Connect a micro-B USB cable between the board and Windows 7 PC.
- If it is proceeding as planned, Windows will recognise the new hardware and ask you to install drivers for it.
- Right click on the hardware. Click on install driver.
- Choose the answer **No, not this time** to the question about running Windows Update to search for software.
- Choose **Install the hardware that I manually select from a list (Advanced)** this is the 2nd option, then click **Next**.
- Browse to your driver folder (\usb driver). and look for a \.inf file.
- Select android\_winusb.inf and click **Open** then **OK**. It's the only file in the folder, so you shouldn't go wrong.
- Select **Android ADB Interface** then click the **Next** button.
- A warning will appear, answer **Yes** but read the warning, anyway.
- When the wizard finishes, click the **Close** button .

 Now you can see it installed the driver successfully, as shown on the figure below.



Figure 766: ADB Driver

## 7. Test ADB by following these steps:

- Press the **Win+r** key combination to open the *Run Command* dialogue box.
- Type **cmd** and press enter.
- Execute the commands below in the command prompt.

```
> cd <ADT>\sdk\platform-tools\
> adb kill-server
> adb start-server
> adb devices
> adb shell
```

• If the # prompt appears at the beginning of the command line, it means we connected the industrial PC with the Windows 7 PC successfully as shown on the figure below.

```
G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools\adb kill-server

* server not running *

G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools\adb start-serve

G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools\adb devices

List of devices attached

0123456789ABCDEF device

G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools\adb shell

root@android\dt-bundle-windows-x86_64-20130917\sdk\platform-tools\adb shell

root@android:/# ___
```

Figure 767: ADB Command

• Now you can use Linux commands like ls, cd and so on. Press **Ctrl + C** to exit the shell and return to the Windows system.

8. Use the adb command to install an Android App: for example SogouInput.apk. If there is a SUCCESS message, as shown on the figure below, then the app installation was successful.

Figure 768: Install App

9. Use adb command to uninstall an Android app: for example SogouInput.apk. Follow these commands to uninstall an app.

```
> adb shell pm list packages
> adb uninstall com.sohu.inputmethod.sogou
```

• The pm list command gets the full name of the app, as shown on the figure below.

```
G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools\adb install Sog ouInput.apk
2972 KB/s (11137726 bytes in 3.659s)
    pkg: /data/local/tmp/SogouInput.apk
Success
G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools\_
```

Figure 769: Command pm list to get app's name

- The uninstall command uninstalls the app from the Android system.
- Delete the apk file for the app by using these commands:

```
> adb shell
# cd /system/app/
# ls
# rm Browser.apk
```

- 10. Use adb command to transport files between the industrial PC and Windows 7 PC.
  - Transfer file from the industrial PC to Windows 7 PC using adb pull command.

- > adb pull <pathTo\_file\_on\_board> <pathTo\_store\_file\_on\_PC>
  - Transfer file from the Windows 7 PC to the industrial PC using adb push command.
- > adb push <pathTo\_file\_on\_PC> <pathTo\_store\_file\_on\_board>

#### Adb connect via internet

1. The Ethernet port on the industrial PC and the host machine (Windows 7 PC) should connect to the network. Check Ethernet configuration for the industrial PC using the command below.

```
# netcfg
lo UP 127.0.0.1 255.0.0.0 0x00000049
eth0 UP 192.168.1.117/24 255.255.252.0 0x00001043
```

2. If the industrial PC's Ethernet is not configured, configure the Ethernet using the ifconfig / netcfg command as shown below.

```
# netcfg eth0 dhcp
```

3. Configure the ADB Daemon to use an Ethernet connection using the setprop command, as shown below.

```
# setprop service.adb.tcp.port 5555
```

4. If the network is configured successfully using the steps above, then Restart service adbd on the Windows 7 PC.

```
# stop adbd
# start adbd
```

5. On the host machine (Windows 7 PC) use the following commands to establish the adb connection.

```
$ adb kill-server
$ adb start-server
$ adb connect :5555
```

6. Verify the device connectivity, by executing the following commands. If connected, find the device name listed as `IPADDRESS:PORT``.

```
$ adb devices
List of devices attached
emulator-5554 device
192.168.1.117:5555 device
```

- 7. An example of using the adb command to install software for Android. Make sure the "\*\*".apk file is at the current folder, and export the adb path.
  - Use the argument —s to assign the device to use over the internet.

```
$ adb —s 192.168.1.117:5555 install "**".apk
```

# **Android App Development**

In this section, we will introduce the development of an Android app with Eclipse on Windows. We assume that the USB is OTG model and the driver is already installed. (See Adb connect via USB OTG)

## **Preparation**

- 1. Download and install Eclipse IDE.
- 2. Go to the /eclipse folder, start eclipse.exe.

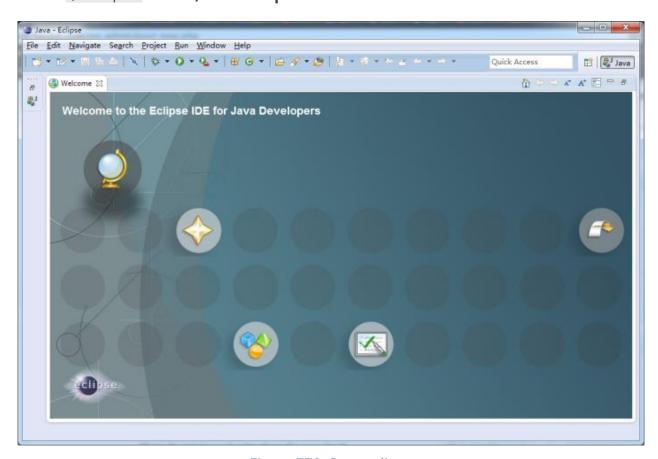


Figure 770: Start eclipse

3. Click Windows->Android SDK Manager to open SDK Manager.

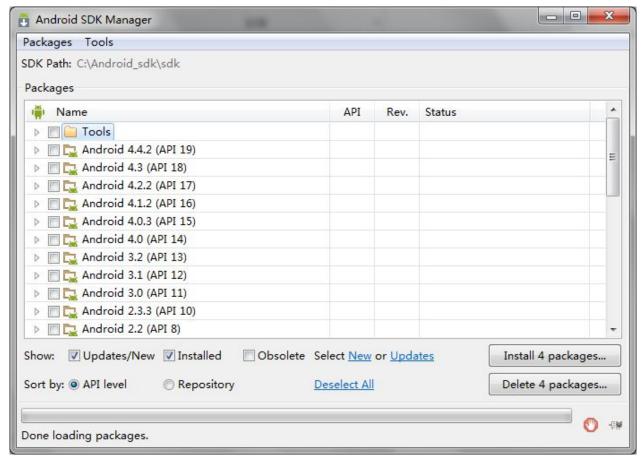


Figure 771: Android SDK Manager

#### 4. Click Tools->Options, check the Force box and click close.

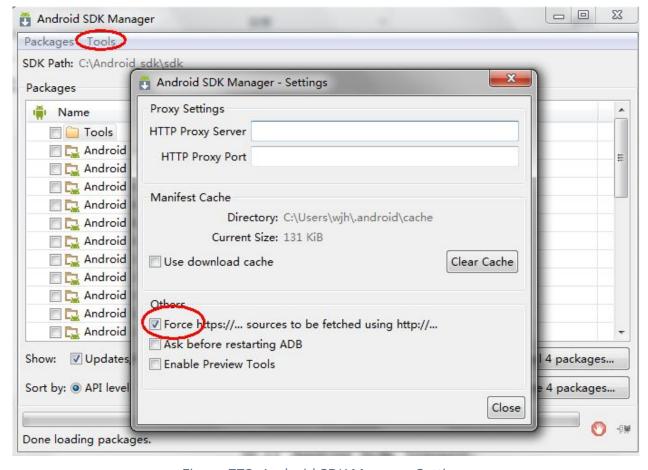


Figure 772: Android SDK Manager Settings

5. Choose the API, such as Android4.2.2(API 17), then click the Install packages button to start the download and installation of API packages.

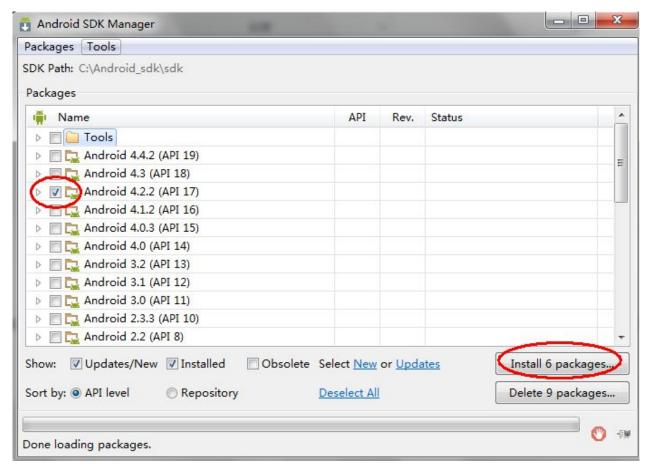


Figure 773: Install API packages

6. Downloading and installing the packages will take some time. When the process completes, close the Android SDK Manager.

#### Example — Develop a Helloworld Program

1. Click File->New->Android Application Project

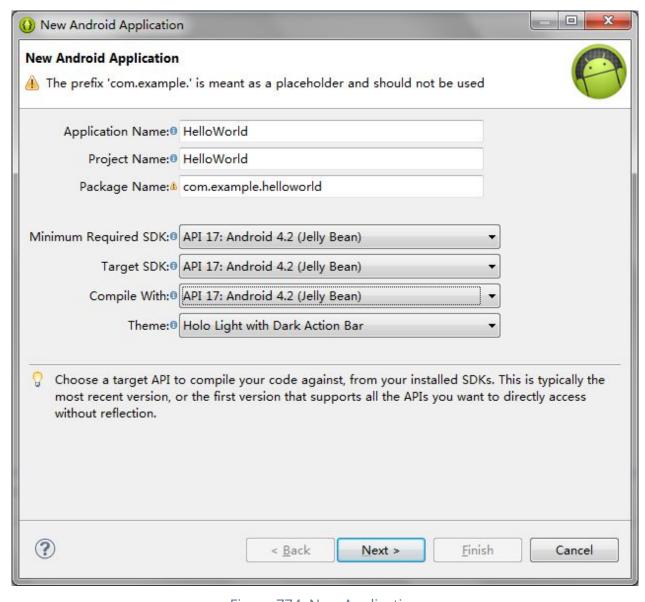


Figure 774: New Application

 Click on the Next button until the app project is created. Connect the industrial PC to Windows 7 PC via the USB cable (A-A). If the connection is successful, you will see the device in the DDMS window (Windows->Open Perspective->Other->DDMS)

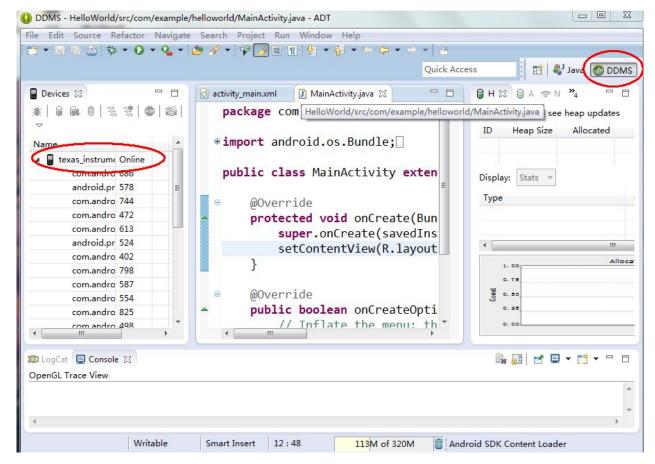


Figure 775: DDMS

#### 3. You can capture the desktop of Android



Figure 776: Capture Android Desktop

#### 4. Click run, and choose the device

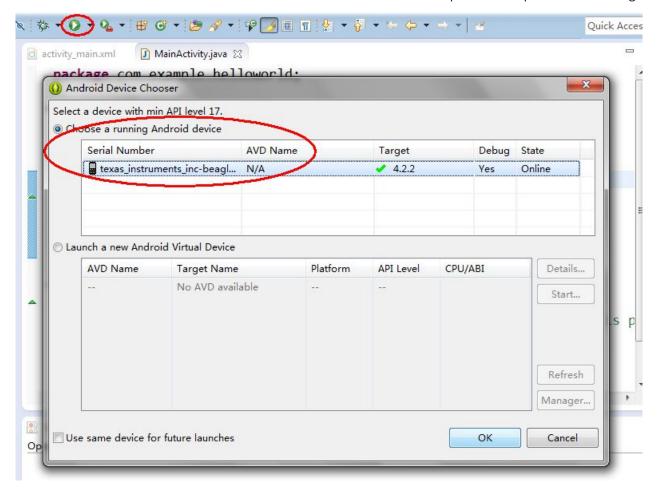


Figure 777: Run HelloWorld Program

#### 5. Result



Figure 778: HelloWorld Program



If the USB is not configured as an OTG model, you can copy and install the file <code>HelloWorld.apk</code> from the project folder <code>HelloWorld/bin/</code>, or install the <code>HelloWorld.apk</code> via the internet (See Adb connect via internet).

Disclaimer

# **Disclaimer**

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

# **Technical Support**

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.