

**Industrial PC** 

# AIO-CM4-156




PN: CS19108RA4156A

Content can change at anytime, check documentation website for latest information. www.chipsee.com

## Contents

I. AIO-CM4-156	3
1.1. Product Overview	4
1.2. Ordering Options	5
1.2.1. Pi <sup>®</sup> CM4 Module	5
1.2.2. Operating System	5
1.2.3. Optional Features	5
1.3. Hardware Features	5
1.4. Power Input	7
1.5. Buttons and Status LED	7
1.5.1. Status LED	7
1.5.2. Buttons	7
1.6. Connectivity	9
1.6.1. USB HOST and Type C	9
1.6.2. LAN Connectors	9
1.6.3. TF Card Slot	10
1.6.4. Audio Out Connector	10
1.6.5. HDMI	10
1.6.6. 40-Pin Expansion Connector	10
1.6.7. Raspberry Pi Hat adapter	11
1.6.8. Camera	12
1.7. Mounting Procedure	12
1.8. Mechanical Specifications	14
1.9. 3D Model	15
1.10. Disclaimer	16
1.11. Technical Support	16


# AIO-CM4-156

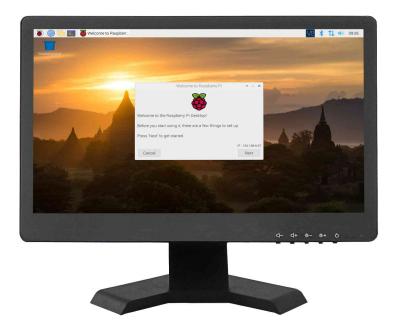


Front View



Rear View

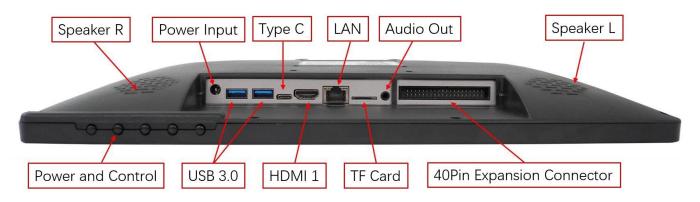

#### Front View (Embedded Variant)

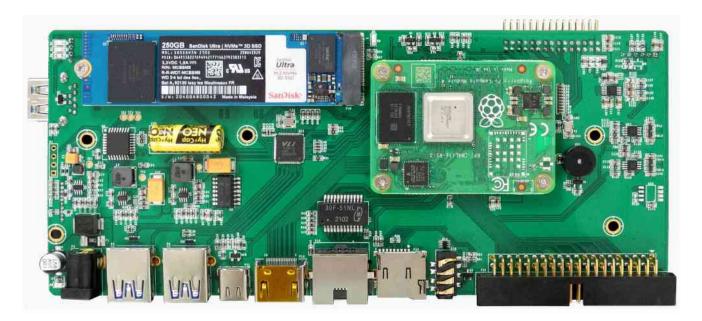

**Embedded PCB** 

### **Product Overview**

The AIO-CM4-156 industrial Pi PC (PN: CS19108RA4156A) is an all-in-one desktop computer based on Raspberry Pi<sup>®</sup> CM4. It features a 15.6" IPS display with a maximum brightness of 350 cd/m<sup>2</sup>.

The product is easy to use, perfect for developers and makers accustomed to the Raspberry Pi and is looking for a computer they can use daily. It is fully compatible with the Raspberry Pi 4 Linux distribution.

#### **Key Applications**

- Human Machine Interface HMI
- Process Control
- Process Monitoring
- HMI
- IIoT node
- Environmental Monitoring
- PLC
- Automotive applications
- ATM...

AIO-CM4-156 **Ordering Options** 

### **Ordering Options**

Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the Hardware Features section provides information about the default options bundled with the product.



Note

You can order AIO-CM4-156 from the official **Chipsee Store** or from your nearest distributor.

### Pi® CM4 Module

The Pi<sup>®</sup> Compute Module 4 appears in different versions depending on the size of the DDR4 and eMMC.

The AIO-CM4-156 industrial Pi PC does not include the CM4 Raspberry Pi<sup>®</sup> module by default. If you would like to purchase it with a CM4, you can select it at the Chipsee store during the ordering process.

#### Operating System

This product comes with a pre-installed Debian OS or Ubuntu OS. Chipsee software engineers have created all the drivers, so every hardware feature is readily available for any standard development tool.

If your project requires a different OS, please Contact us, and we'll make a customized version that suits your needs.

### **Optional Features**

The AIO-CM4-156 industrial Pi PC does not include the 4G/LTE modules by default. These modules are optional and can be selected at the Chipsee store during the ordering process.



#### Warning

Installation, repair, and maintenance tasks should be performed by trained personnel only. Chipsee does not bear any responsibility for damage caused by inadequate handling of the product.

### Hardware Features

The AIO-CM4-156 industrial Pi PC offers a board range of performance and connectivity options for scalable integration, providing expandability according to future needs. Some of the key features are listed in the table below.

AIO-CM4-156 Hardware Features

AIO-CM4-156				
СРИ	Raspberry Pi <sup>®</sup> CM4, CM4 Lite; Quad Cortex-A72 at 1.5GHz			
Storage	1 x TF card slot for boot. Optional, Internal M.2 NVMe connector for SSD card			
RAM	2GB DDR1			
еММС	16GB			
Display	15.6" IPS LCD, 1920 x 1080 resolution px, brightness 350 cd/m <sup>2</sup>			
Touch	Optional, 10-point capacitive touch with 1.1mm Armored Glass			
USB	2 x USB 3.0 Host, 1 x Type-C USB (Slave)			
LAN	1 x Channel Giga LAN			
Audio	2W internal stereo speaker, 3.5mm audio Out connector			
Buzzer	Internal Buzzer			
RTC	Yes, High accuracy internal RTC (keep track of time one week after power off)			
RS232	N/A			
RS485	N/A			
Relay	N/A			
GPIO/Wiegand	40-pin GPIO connector			
WiFi/BT	WiFi/BT module comes with the CM4			
HAT Connector	Standard Raspberry Pi 40-way HAT connector			
Micro SD card socket	For use only with CM4 Lite modules			
ZIGBEE	N/A			
HDMI	HDMI 2.0 connectors, slave HDMI port for CM4			
4G/LTE	TE N/A			
Power Input	12V			
Current at 12V	700mA Max			
Power Consumption	10W Typical			
Working Temperature	From 0°C to +50°C			
OS	Debian, Ubuntu			
Dimensions	374 x 238 x 33mm			
Weight	1600g			
Plastic Case Color	Black			
Certification	CE, ROHS			

Table 289 Key Features

AIO-CM4-156 Power Input

RAM can be 1/2/4/8GB based on CM4 Lite onboard.

### Power Input

The AIO-CM4-156 industrial Pi PC can be powered by an input voltage: 12V DC. The total power consumption is typically about 8.4W. The power input connector is a 2.1mm I.D x 5.5mm O.D x 9.5mm DC connector. For a proper DC power adapter, refer to the figure below.

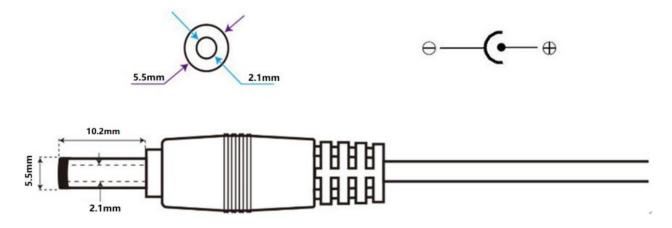


Figure 971: Power Adapter

#### **Buttons and Status LED**

#### Status LED

This product has a status LED on the front panel. The LED turns RED after power on and GREEN when the system is booted. It can be controlled by software to flash YELLOW when the CPU is working.



Figure 972: Status LED

#### **Buttons**

There are five (5) buttons on the front panel: Brightness +, Brightness -, Volume +, Volume -, and Power, as the figure below shows.

AIO-CM4-156 Buttons



Figure 973: Buttons

The AIO-CM4-156 industrial Pi PC supports two (2) boot modes, the auto-boot and manual boot modes. The default boot mode is the auto-boot mode. You can change the boot mode by using Software or by pushing **Volume +** and **Volume -** buttons at the same time before power on and releasing it 3 seconds after power on to toggle, as the table below shows.

Boot mode	Behaviors	Default Configuration	How to toggle
Auto	Auto boot after power on	√	Software control or Push Volume+ and
Manual	Boot after pushing the Power button and releasing it 3 seconds after power on		Volume- buttons at the same time before power on, and release it 3 seconds after power on.

Table 290 Boot mode

- The AIO-CM4-156 industrial Pi PC boots from the internal eMMC by default. If you want it to boot from the Type-C connector, press and hold the Volume + button before power ON, and release it 3 seconds after power ON.
- You can use Brightness + / Brightness buttons to control the backlight of the LCD.
- You can also use Volume + / Volume buttons to control the System Volume.

For a detailed explanation of button functions, check the table below.

Buttons	Functions before the system boot	Functions after the system boot
Power	Push after power on and release after 3 seconds will boot the system	Push after the system booted and release after 3 seconds will close the system.
Brightness +	NULL	Increase the brightness of LCD
Brightness -	NULL	Reduce the brightness of LCD
Push before power on and release it after 3  Volume + seconds, the system will boot from the Type- C port		Increase the volume of the system
Volume -	NULL	Reduce the volume of the system
	Toggle the boot mode	NULL

AIO-CM4-156 Connectivity

Buttons	Functions before the system boot	Functions after the system boot
Volume + and		
Volume -		

Table 291 Boot mode

### Connectivity

There are many connectivity options available on the AIO-CM4-156 industrial Pi PC. It has 2 x USB 3.0 Host, 1 x Type-C USB (Slave), 1 x Channel Giga LAN (RJ45) Ethernet connector supporting up to 1 Gbps, and RS232+RS485+Relay connector.

#### USB HOST and Type C

There are 2 x 3.0 **USB HOST connectors** and 1 x **Type-C Connector** onboard, as shown on the figures below.



Figure 974: USB3.0 HOST and Type-C Connectors



- External USB peripherals like a USB disk or USB mouse or keyboard can connect to the USB3.0 HOST.
- You can download software to the Raspberry Pi CM4 eMMC using the Type-C.
- When you connect the Type-C to a device, it will disable the USB HOST.

#### LAN Connectors

**LAN (RJ45) connector** provides Ethernet connectivity over standardized Ethernet cables as shown the figure below. The integrated Ethernet interface supports up to 1 Gbps data throughput. These Giga LAN signals come from the CM4 module directly.



Figure 975: RJ45 LAN Connectors



Use CAT5 or better cables to achieve full data throughput over maximum distance defined by the 1000BASE-T standard (100m).

AIO-CM4-156 TF Card Slot

#### TF Card Slot.

The AIO-CM4-156 industrial Pi PC features 1 x **TF Card (micro SD) slot** that can only be used with CM4 Lite modules, as shown on the figure below.



Figure 976: TF Card Slot



1. The product does not come shipped with the TF Card by default.

#### **Audio Out Connector**

The product features audio Out connector as shown on the figure below.



Figure 977: Audio Out Connector

#### **HDMI**

The CM4 supports dual HDMI 2.0 connectors. The product uses the master HDMI for the LCD so, customers can use the slave HDMI port, as the figure below shows.



Figure 978: HDMI Connector (slave)

### 40-Pin Expansion Connector

The AIO-CM4-156 industrial Pi PC has a standard Raspberry Pi 40 way HAT connector, as the figure below shows. You also can check Pinout for more details.





Figure 979: 40-pin Expansion Connector

### Raspberry Pi Hat adapter

The product also has an available I/O connector that is 100% compatible with any Raspberry Pi cape or extensions, making the AIO-CM4-156 a perfect fit with your existing tools.

The product also comes with an adapter with a standard Raspberry Pi HAT pin-out to add more flexibility to your project. It offers a convenient way to develop and test your hardware with all the connectors at hand. You can learn more about it in the product manual.

AIO-CM4-156 Camera



Figure 980: Raspberry Pi Hat adapter

#### Camera

The AIO-CM4-156 industrial Pi PC has a camera on the front panel but is not mounted by default.

### Mounting Procedure

You can mount AIO-CM4-156 with the Vesa (75  $\times$  75mm) and Stand mounting methods, as shown in the figures below.

AIO-CM4-156 Mounting Procedure



Figure 981: VESA mounting



Figure 982: Stand mounting

AIO-CM4-156 Mechanical Specifications

A

Attention

Please make sure the display is not exposed to high pressure when mounting into an enclosure.

You can find detailed information about mounting in the Mount IPC Guide.

### Mechanical Specifications

The outer mechanical dimensions of AIO-CM4-156 are  $374 \times 238 \times 33$ mm (W x L x H). Please refer to the technical drawing in the figures below for details related to the specific product measurements.

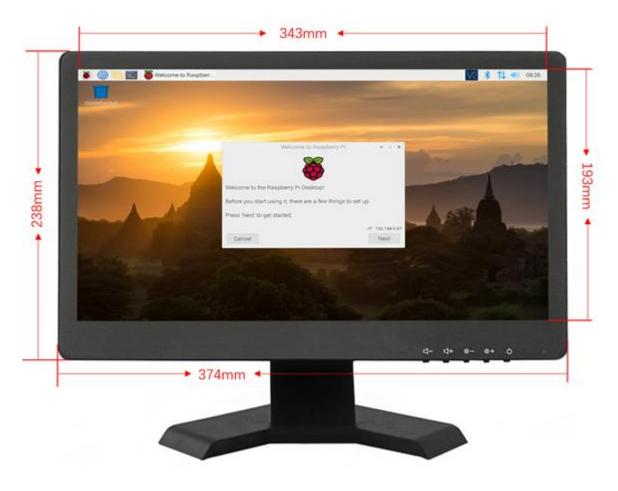


Figure 983: Front Panel Dimension Technical Drawing

AIO-CM4-156 3D Model



Figure 984: Backside Dimension Technical Drawing



Figure 985: Side Dimension Technical Drawing

### 3D Model

AIO-CM4-156 3D model can be viewed in the online doc in a web browser, if you are reading from the **PDF** version, please visit the online doc.

AIO-CM4-156 Disclaimer

#### Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

### **Technical Support**

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.