Chipsee

Industrial HMI Display

AIO-ESP32P4-101



* For illustration purposes only. The user interface shown is a visual mockup and is not pre-installed or included with the product. Actual software and interface may vary.

PN: CS12800-ESP32P4-101A

Content can change at anytime, check our website for latest information of this product.
www.chipsee.com

Contents

1 Product Overview 3

2 Ordering Options 4

3 Hardware Features 4

3.1 Optional Features 5

4 Power Input 6

5 Connectivity 6

5.1 RS232/RS485/CAN 7

5.2 USB 8

5.3 LAN 8

5.4 Wi-Fi and Bluetooth 9

5.5 4G/LTE 10

5.6 MicroSD Card 10

5.7 Audio 11

5.7.1 3.5 mm Audio Output 11

5.7.2 Internal Speaker 12

5.7.3 Buzzer 12

5.7.4 Microphone 12

6 Buttons and Status LED 12

6.1 Status LED 12

6.2 Buttons 12

7 Mounting Procedure 13

8 Mechanical Specifications 13

9 Disclaimer 14

10 Technical Support 15

AIO-ESP32P4-101



* For illustration purposes only. The user interface shown is a visual mockup and is not pre-installed or included with the product. Actual software and interface may vary.

Front View



Rear View



* For illustration purposes only. The user interface shown is a visual mockup and is not pre-installed or included with the product. Actual software and interface may vary.

Side View 1



* For illustration purposes only. The user interface shown is a visual mockup and is not pre-installed or included with the product. Actual software and interface may vary.

Side View 2

1 Product Overview

The AIO-ESP32P4-101 HMI Display (PN: CS12800-ESP32P4-101A) is an all-in-one programmable capacitive touch HMI display featuring an ESP32 P4 processor. The product features a lightweight plastic enclosure available in black or white. It can be used as a portable device or mounted in a fixed location.

It features a 10.1" IPS LCD with a maximum brightness of 400 cd/m^2. The touch screen is a responsive capacitive screen and supports multi-touch.

The product is powered by an ESP32-P4 processor, making it suitable for applications such as:

- Smart Home
- Industrial Automation
- Healthcare
- Consumer Electronics
- Smart Agriculture
- Retail Self-Service Terminals (POS, Vending Machines)
- Service Robots

- Multimedia Player
- High-Speed USB Host and Device
- Smart Voice Interaction Terminal
- Edge Vision AI Processor
- HMI Control Panel

The product can be programmed with ESP-IDF, ESPHome and other ESP32 ecosystem tools and frameworks that support the ESP32-P4.

2 Ordering Options

Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the Hardware Features section provides information about the default options bundled with the product.

> **Note**
>
> You can order AIO-ESP32P4-101 from the official Chipsee Store or from your nearest distributor.

3 Hardware Features

The AIO-ESP32P4-101 HMI Display offers a broad range of performance and connectivity features for flexible integration. Some of the key features are listed below.

Key Features

AIO-ESP32P4-101	
CPU	Dual-core 32-bit RISC-V, up to 400 MHz; single-core 32-bit LP RISC-V, up to 40 MHz
Storage	32MB external SPI Flash
RAM	768 KB HP L2MEM + 32 KB LP SRAM + 8 KB SPM; 32MB in-package PSRAM
FRAM	Optional, not mounted by default
Gyroscope	Optional, not mounted by default
Display Size	10.1”
Display Type	IPS LCD
Display Resolution	1280 x 800
Brightness	400 cd/m^2
Touch Technology	Capacitive
Touch Point	10
Glass	1.0mm Armored Glass
LAN	1 x 100Mbps LAN
WiFi/BT	WiFi 6, Bluetooth LE 5 **(optional, ESP32-C6 is not mounted by default)**
4G/LTE	Internal Cat 1 4G/LTE module, not mounted by default

AIO-ESP32P4-101	
Audio	3.5mm headset jack (audio out + headset microphone in); internal dual-channel speaker; front microphone
Buzzer	Onboard buzzer, driven by GPIO
GPIO	0 x GPIO **(default)**, 8 x GPIO **(optional, by configuring 2 x RS232, 1 x RS485 and 1 x CAN to 8 x GPIO)**
Relay	0 x relay **(default)**, 1 x relay with "Normally Closed" and "Normally Open" output **(optional)**, relay NC and NO can be configured from 1 x CAN
RS232	2 x RS232 **(default)**; RS232_2 can be configured to RS485 **(optional)**; 2 x RS232 can be configured to 4 x GPIO **(optional)**
RS485	1 x RS485 **(default)**; up to 2 x RS485 **(optional, by configuring RS232_2 to RS485)**; 1 x RS485 can be configured to 2 x GPIO **(optional)**, 120Ohm terminal resistor is not mounted by default, if you need it, please note us
CAN	1 x CAN **(default)**, CAN 2.0 (classic CAN, no CAN FD), up to 1Mbps, 120Ohm terminal resistor is not mounted by default, if you need it, please note us; 1 x CAN can by configured to 1 x relay **(optional)**
USB	2 x USB 2.0 Type-A high-speed host ports; 1 x USB 1.1 Type-C port for firmware flashing and debugging; the type-C port supports powering the device while programming
Micro SD card socket	1 x TF (micro SD) card slot
RTC	High-accuracy RTC with supercapacitor, can work 1 week after power off **(default)**. High accuracy RTC with lithium coin battery, can work 3 years after power off **(optional)**.
Power Input	9V to 32V DC
Current	260mA max at 15V, 200mA typical at 15V
Power Consumption	4W max, 3W typical
Operating Temp.	From -20°C to +70°C
Dimensions	260.54 x 178.54 x 26.9mm
Weight	620g
Mounting	VESA, Stand
Plastic Case Color	Black / White
Certification	CE, RoHS

3.1 Optional Features

- WiFi/Bluetooth: If Wi-Fi/Bluetooth connectivity is required, an ESP32-C6 module can be installed at the factory. The ESP32-C6 is not populated by default.
- 4G/LTE: 4G/LTE (Cat 1) module is supported on this product, it's not mounted by default, if you need the interface or the 4G/LTE module you can contact us when you place an order.
- Gyroscope is supported but not mounted by default, if you need gyroscope, contact us before placing an order.
- FRAM (Ferroelectric Random Access Memory) is supported but not mounted by default, if you need FRAM, contact us before placing an order.
- 15 pin CSI camera interface is customizable, if you want to use a camera (like Raspberry Pi camera V1.3 OV5647) on the product, contact us.


> **Warning**
>
> Installation, repair, and maintenance tasks should be performed by trained personnel only. Chipsee does not bear any responsibility for damage caused by inadequate handling of the product.

4 Power Input


The AIO-ESP32P4-101 HMI Display can be powered by an input voltage of 9V to 32V DC.

The total power consumption is about 4W max, 3W typical, depending on the load and brightness.

The power input uses a DC connector with dimensions of 3.4 mm O.D. x 1.7 mm I.D. x 9.5 mm. The product also includes a 3.4 x 1.7 mm to 5.5 x 2.1 mm adapter, allowing either connector size to be used with a suitable DC power supply.

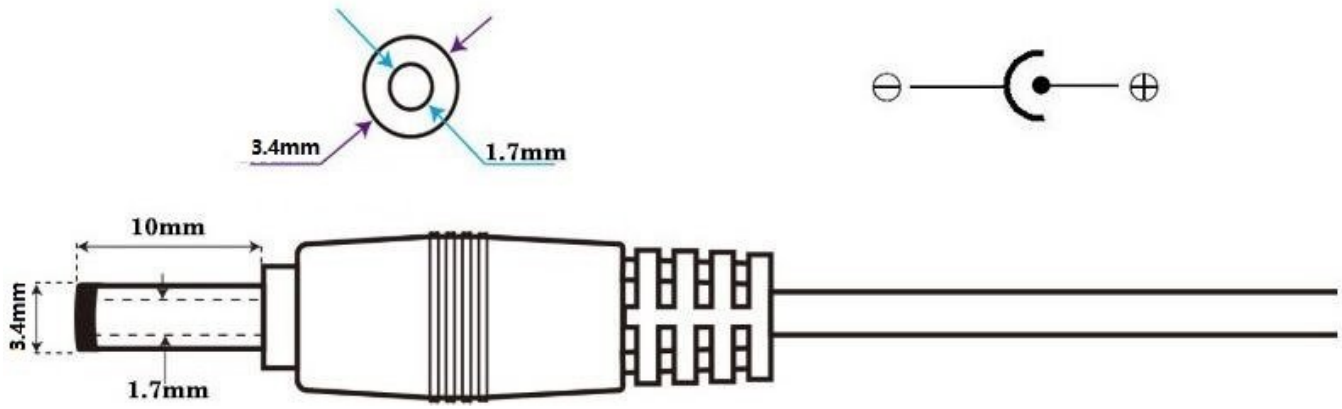

Power Connector

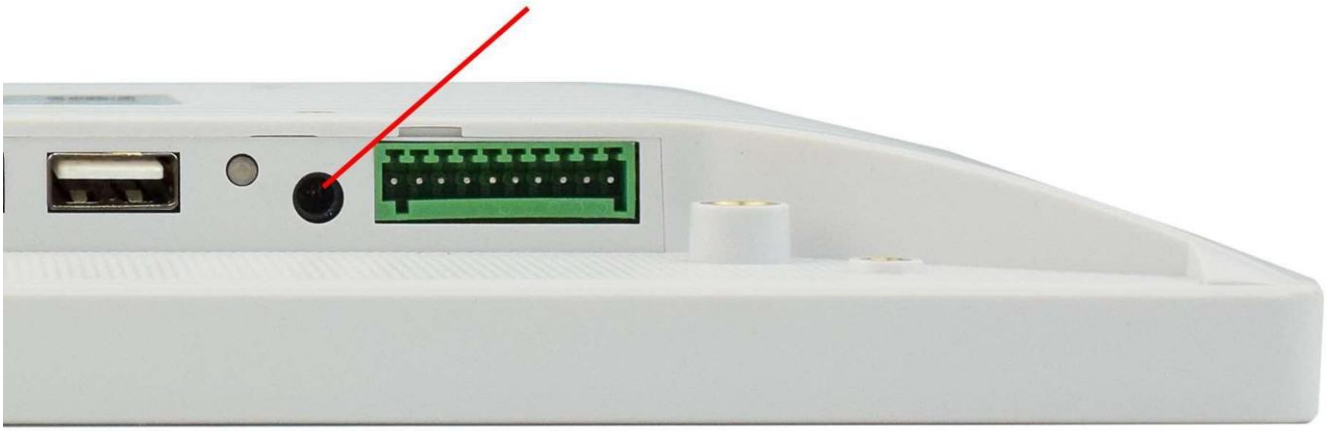


Power Input

5 Connectivity

There are many connectivity options available on the AIO-ESP32P4-101.

5.1 RS232/RS485/CAN

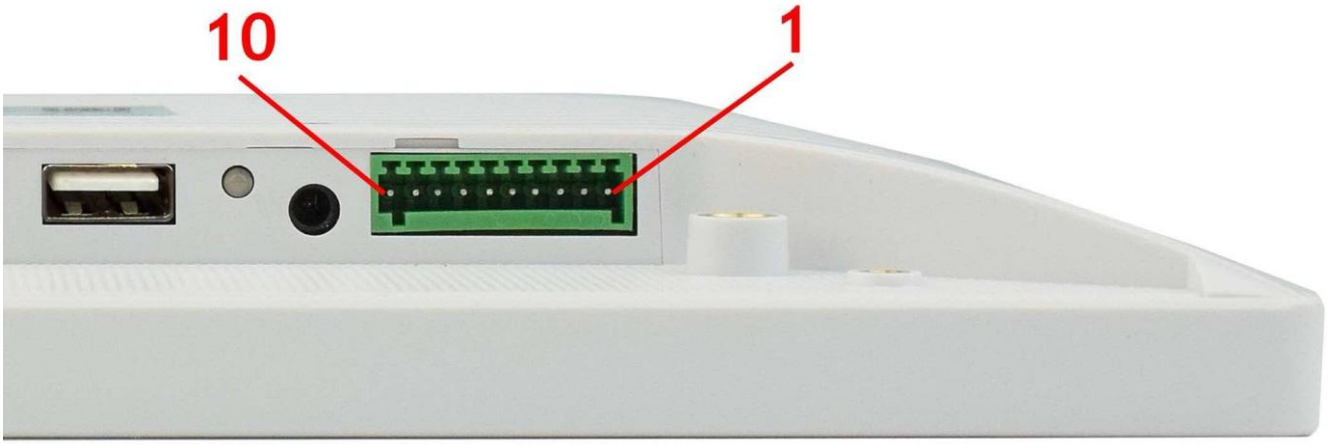

RS232/RS485/CAN Connector

The table below provides a detailed description of each pin and its function.

RS232/RS485/CAN Connector

RS232 / RS485 / CAN Pin Definition:			
Pin Number	**Definition**	**Description**	**ESP32 P4 Pin**
Pin 1	GND	System Ground	GND
Pin 2	RS232_0_RXD	RS232 RXD signal	GPIO38
Pin 3	RS232_0_TXD	RS232 TXD signal	GPIO37
Pin 4	RS232_2_RXD	RS232 RXD signal Can be set as RS485_2+(A)	GPIO2
Pin 5	RS232_2_TXD	RS232 TXD signal Can be set as RS485_2-(B)	GPIO3
Pin 6	RS485_3+	RS485 +(A) signal	GPIO4
Pin 7	RS485_3-	RS485 –(B) signal	GPIO5
Pin 8	NC	Not Connected Can be set as Relay Normally Open	
Pin 9	CAN0 H	CAN H Can be set as Relay COM	GPIO22
Pin 10	CAN0 L	CAN L Can be set as Relay Normally Closed	GPIO21


The relay is driven by GPIO20: high = energized (COM connected to NO), low = released (COM connected to NC).

Attention

1. The RS232_2 can be set as the RS485 signal (1 x RS232 + 2 x RS485 + 1 x CAN). If you need it to work as RS485, please **Contact us** before shipping.
2. The CAN can be set as the Relay (2 x RS232 + 1 x RS485 + 0 x CAN + 1 x Relay). If you need it to work as Relay, please **Contact us** before shipping.
3. RS485_3 automatically controls input/output direction. It does not need software control.
4. The 120 Ω termination resistor for the RS485/CAN is **not mounted** by default.
5. The relay's maximum switching voltage is 125 VAC or 60 VDC. The maximum switching current is 1 A. Rated load is 0.3A at 125VAC and 1A at 30VDC.
6. The RS232, RS485, and CAN interfaces can optionally be configured as GPIOs, providing 0, 2, 4, 6, or 8 GPIOs depending on the configuration.

5.2 USB

There are 2 x **USB2.0 Type-A HOST connectors** and 1 x **Type-C connector** onboard, as shown in the image below.

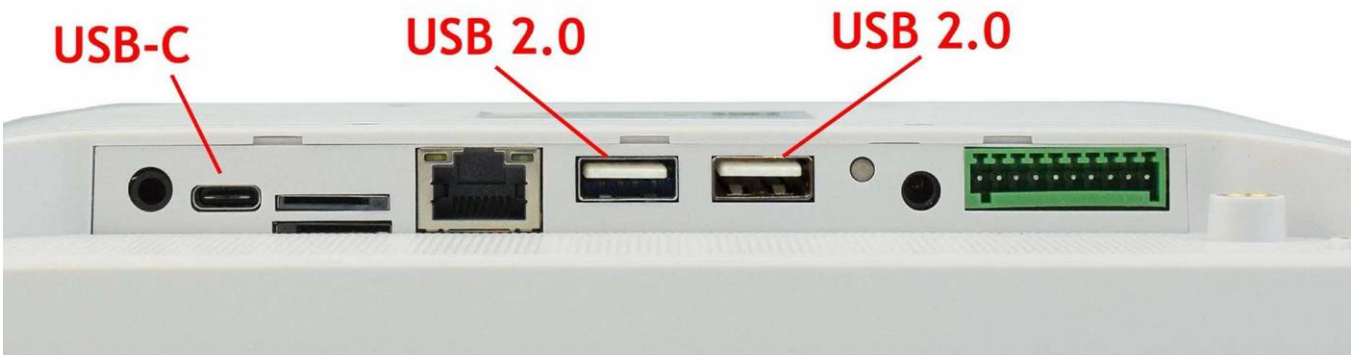

USB2.0 Host and Type-C Ports

Note

- USB peripherals such as high-speed flash drives can be connected to the USB 2.0 host ports.
- Full/Low speed USB devices such as mice and keyboards **cannot** connect due to **the limitation of USB Hub Host software stack**, Espressif managed software stack doesn't support Transaction Translator layer yet.
- The USB Type-C port is used for debugging and firmware flashing and supports powering the product.

5.3 LAN

LAN (RJ45) connector provides Ethernet connectivity over standardized Ethernet cable. The integrated Ethernet interface supports up to 100 Mbps data throughput.

The product doesn't support PoE (Power over Ethernet).



RJ45 LAN Connector

5.4 Wi-Fi and Bluetooth


When the optional Wi-Fi/Bluetooth configuration is selected, an ESP32-C6 module provides Wi-Fi and Bluetooth connectivity to the ESP32-P4 through SDIO.

The ESP32-C6 operates as a coprocessor.

Espressif's official ESP-Hosted Wi-Fi and Bluetooth firmware will be flashed at the factory before shipping.

ESP32-C6 Programming Connector Pin Definition

Pin Number	Definition	Description
Pin 1	C6_CHIP_PU	ESP32-C6 chip enable/reset signal
Pin 2	X	
Pin 3	C6_U0TXD	ESP32-C6 UART0 transmit signal
Pin 4	GND	System ground
Pin 5	C6_U0RXD	ESP32-C6 UART0 receive signal
Pin 6	C6_IO9	ESP32-C6 boot mode selection signal

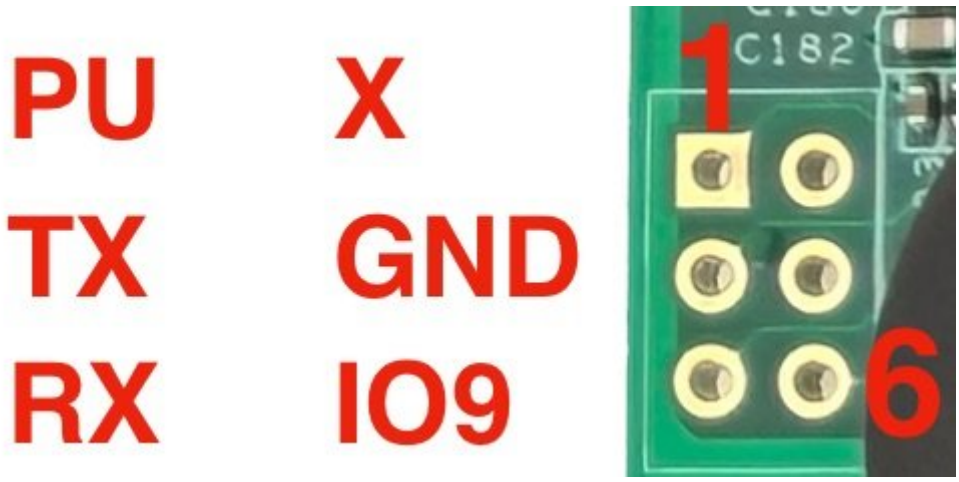

ESP32-C6 Pin Definition

You can flash the C6 firmware by yourself too. The process is the same as the official Espressif ESP32C6 firmware flashing guide.

The ESP32-C6 firmware can be updated using either of the following methods:

- **UART flashing:**
  1. Prepare a USB-UART (TTL level) cable, to connect the pins and your computer.
  2. Connect GND (Pin 4) to your UART cable's GND, connect GND to C6_IO9 (Pin 6) to let C6 enter flash mode.
  3. Connect C6_U0TXD (Pin 3) to your cable's RX pin.
  4. Connect C6_U0RXD (Pin 5) to your cable's TX pin.
  5. Reset the product/C6 to enter download mode, you can unplug all power sources first and then connect USB-C to your power adapter as a reset.
  6. Remove the C6_IO9 (Pin 6) short to leave flash mode in the next reset.
  7. Reset the product/C6 after flashing to boot normally.
- **Updates through the ESP32-P4:** The ESP32-P4 can flash new firmware to the ESP32-C6 through SDIO using a firmware image if C6 already has a firmware (OTA). This is usually done with a MicroSD card.

5.5 4G/LTE

4G/LTE Cat 1 module is **optional**. If you place an order with 4G module included, we will also add a SIM card holder and a 4G/LTE antenna to enable 4G/LTE connectivity.

The SIM card slot does **NOT** support hot-swapping. **Power off** the device before inserting or removing the SIM card.

The Cat 1 module doesn't support GPS.



SIM Card Direction

> **Attention**
>
> The product does not come shipped with the 4G/LTE module by default. If you need to use 4G/LTE, you can contact us when placing an order. We can install the necessary hardware for you.

5.6 MicroSD Card

The AIO-ESP32P4-101 HMI Display features 1 x **TF Card (micro SD) slot** (note the direction of the micro SD card). The product does not come shipped with the micro SD card by default.



Micro SD Card Slot

5.7 Audio

5.7.1 3.5 mm Audio Output

The product features a 3.5mm audio connector as shown in the image below.



Audio Connector

This connector supports both earphone output and microphone input (MIC2).

After inserting a 3.5mm device, the on board speaker will be muted.

5.7.2 Internal Speaker

The product also has an internal dual channel 2W speaker, meaning you can play music without an earphone, the sound can be played from the product directly.

5.7.3 Buzzer

The product has an internal buzzer, suitable for playing beep sounds for alarms.


5.7.4 Microphone

The product has a front microphone for audio input (MIC1).

6 Buttons and Status LED

6.1 Status LED


This product has a bi-color status LED. It is green whenever the product is powered on. The application can switch it to red through GPIO32 (low = red), for example to signal an alarm or to blink as a heartbeat.

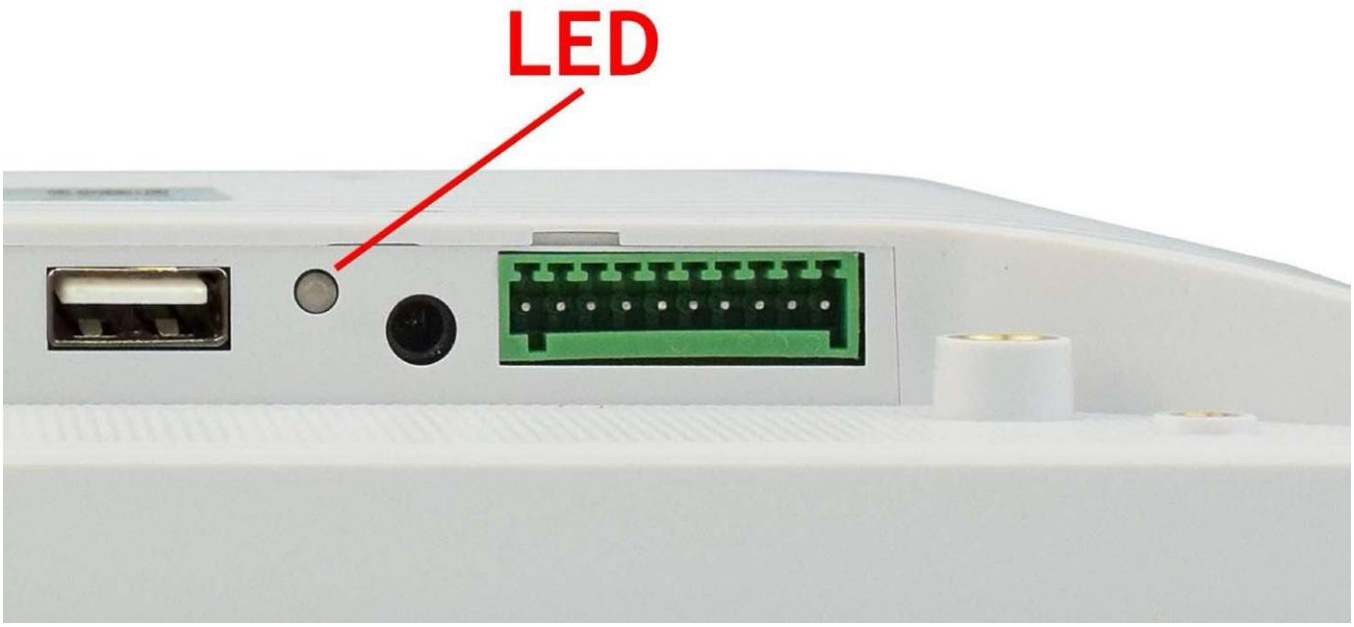

Status LED

6.2 Buttons

There are 3 buttons on the back side: Power on/off, BOOT and RESET.

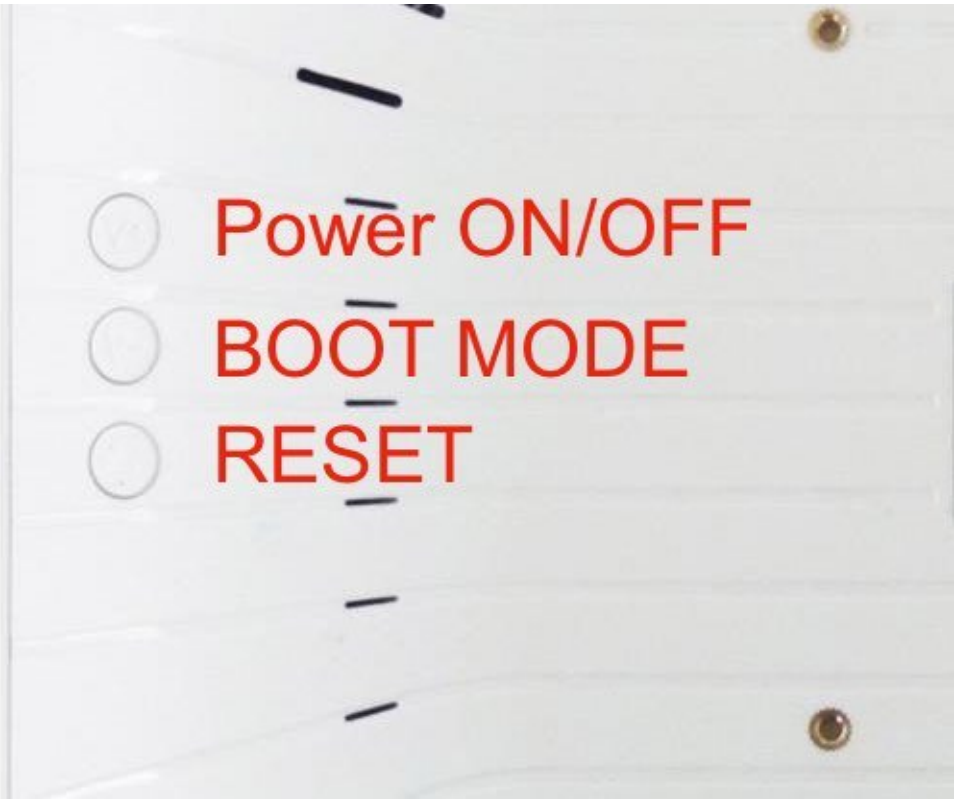

Buttons

What every button does:

- PWR:
  1. Before powering on: press to power on.
  2. After powering on: hold 5 seconds to force power off.
- BOOT: hold it while powering on (or while pressing RESET) to enter firmware download mode
- RESET: Reboots the device.

7 Mounting Procedure


You can mount AIO-ESP32P4-101 with VESA mounting (guide): **75 x 75** mm, 4 x **M4** (6mm) screws.

The AIO-ESP32P4-101 can also be mounted on the supplied desktop stand. A base stand is included by default. If you do not require the stand, please specify this when placing your order.

> **Attention**
>
> Do not apply excessive mechanical pressure to the display when mounting it in an enclosure.

8 Mechanical Specifications

The outer mechanical dimensions of AIO-ESP32P4-101 are 260.54 x 178.54 x 26.9mm (W x H x D). Please refer to the technical drawing in the figures below for details related to the specific product measurements.

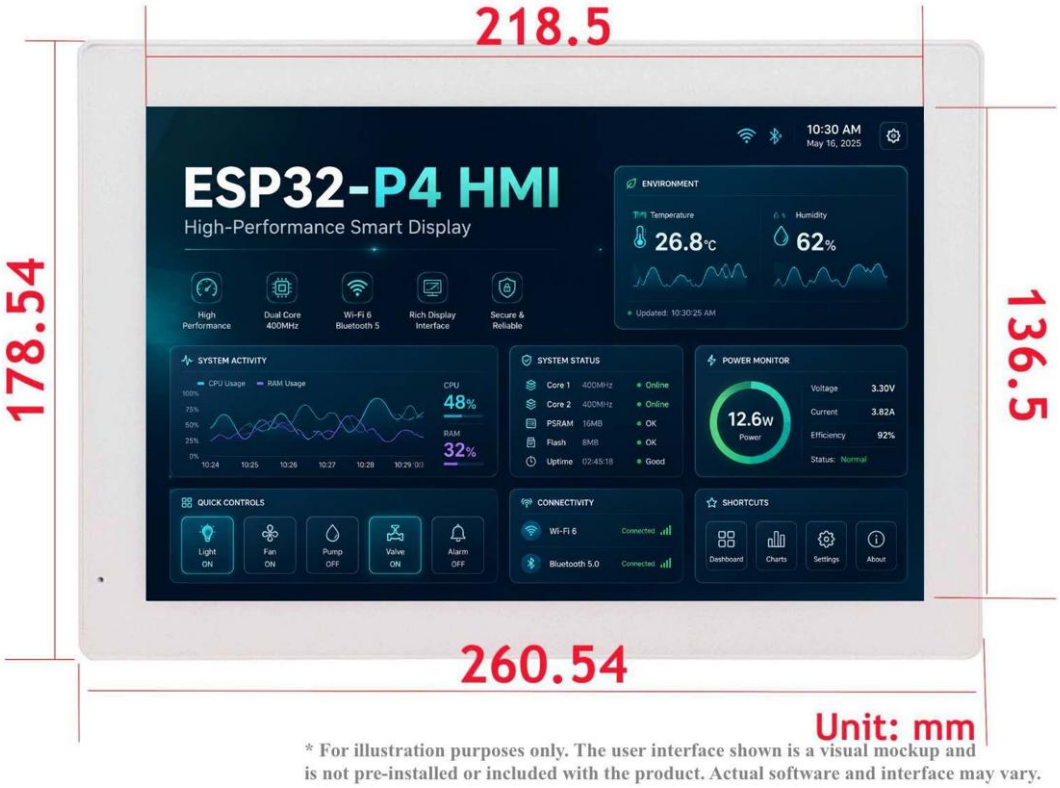

Front-View Mechanical Drawing



Side-View Mechanical Drawing

9 Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

10 Technical Support

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.