Chipsee

Industrial HMI Display

EPC-ESP32P4-050



PN: CS12720-ESP32P4-050E

Content can change at anytime, check our website for latest information of this product.
www.chipsee.com

Contents

EPC-ESP32P4-050 3

1. Product Overview 7

2. Ordering Options 8

3. Hardware Features 9

3.1. Optional Features 11

4. Power Input 12

5. Connectivity 15

5.1. RS232/RS485/CAN 15

5.2. I2C 18

5.3. USB 19

5.4. LAN 20

5.5. Wi-Fi and Bluetooth 21

5.6. 4G/LTE 24

5.7. Camera 26

5.8. MicroSD Card 28

5.9. Audio 29

5.9.1. 3.5 mm Audio In/Out 29

5.9.2. Internal Speaker 29

5.9.3. Buzzer 29

6. Button and Status LED 30

6.1. Status LED 30

6.2. Button 31

7. Mounting Procedure 32

8. Mechanical Specifications 33

9. Disclaimer 33


10. Technical Support 33

EPC-ESP32P4-050


Front View




Rear View

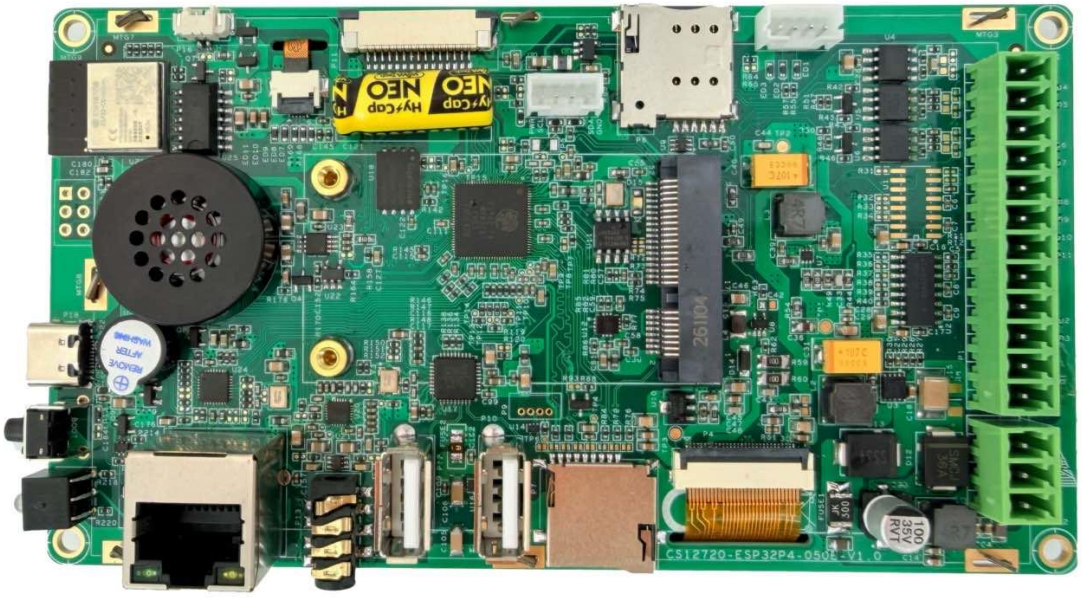

Side View 1

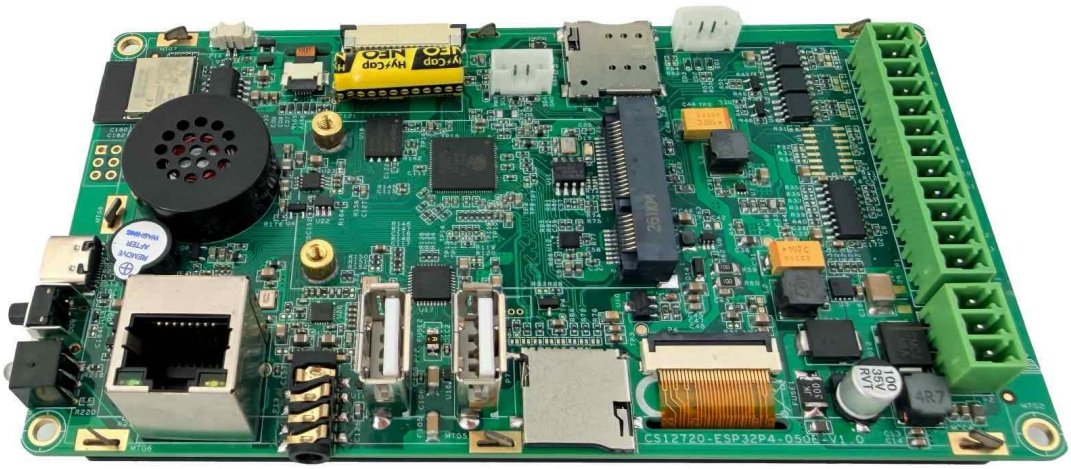

Side View 2

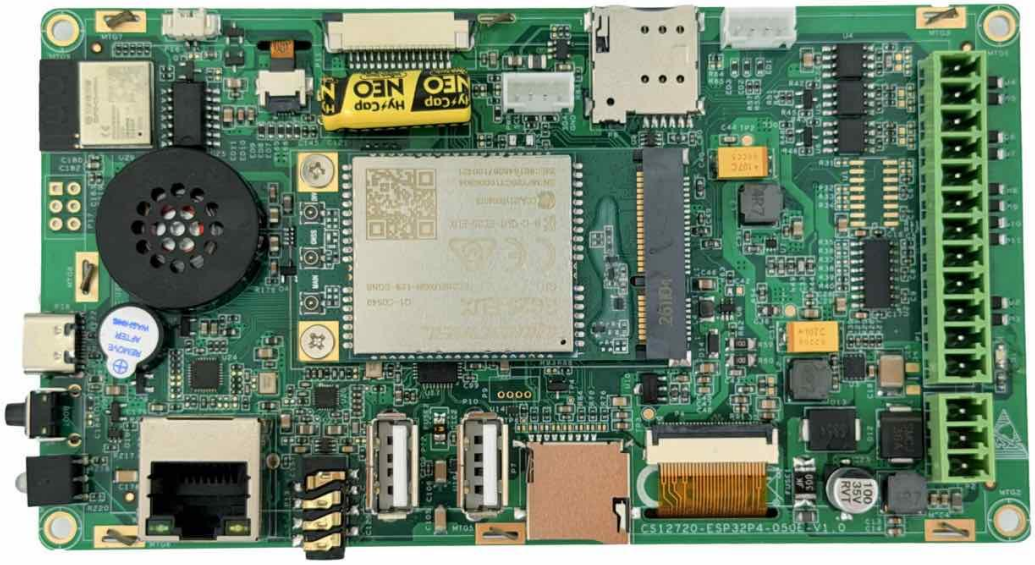

Product Overview

The EPC-ESP32P4-050 Embedded HMI Display (PN: CS12720-ESP32P4-050E) is an embedded programmable capacitive touch HMI display featuring an ESP32 P4 processor. The product features an embedded mounting design, making it suitable for integration into existing equipment.

It features a 5” IPS display with a maximum brightness of 400 cd/m^2. The touch screen is a responsive capacitive screen and supports multi-touch.

The product is powered by an ESP32-P4 processor, making it suitable for applications such as:

- Smart Home
- Industrial Automation
- Healthcare
- Consumer Electronics
- Smart Agriculture
- Retail Self-Service Terminals (POS, Vending Machines)
- Service Robots
- Multimedia Player
- High-Speed USB Host and Device
- Smart Voice Interaction Terminal
- Edge Vision AI Processor
- HMI Control Panel

The product can be programmed with ESP-IDF, ESPHome and other ESP32 ecosystem tools and frameworks that support the ESP32-P4.

Ordering Options

Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the Hardware Features section provides information about the default options bundled with the product.

> **Note**
>
> You can order EPC-ESP32P4-050 from the official Chipsee Store or from your nearest distributor.

Hardware Features

The EPC-ESP32P4-050 Embedded HMI Display offers a broad range of performance and connectivity features for flexible integration. Some of the key features are listed below.

CPU	Dual-core 32-bit RISC-V, up to 400 MHz; single-core 32-bit LP RISC-V, up to 40 MHz
Storage	32MB external SPI Flash
RAM	768 KB HP L2MEM + 32 KB LP SRAM + 8 KB SPM; 32MB in-package PSRAM
FRAM	Optional, not mounted by default
Gyroscope	Optional, not mounted by default
Display	5” IPS LCD, 1280 x 720 px, brightness 400 cd/m^2
Touch	5-point capacitive touch with 1.0mm tempered glass
LAN	1 x 100Mbps LAN
PoE	N/A
WiFi/BT	WiFi 6, Bluetooth LE 5 **(optional, ESP32-C6 is not mounted by default)**
4G/LTE	Internal Cat 1 4G/LTE module, **not mounted by default**
Audio	3.5mm audio in/out interface; 2W internal speaker
Buzzer	Onboard buzzer, driven by GPIO
Camera	1 x MIPI-CSI (2-lane) interface for connecting a MIPI-CSI (2-lane) 15-pin 1.0mm camera such as a Raspberry Pi (OV5647) Camera V1.3 (optional, not mounted by default)
GPIO	N/A
RS232	2 x RS232 **(default)**; up to 4 x RS232 (**optional**, by configuring RS485 to RS232)
RS485	2 x RS485 **(default)**; 2 x RS485 can be configured to 2 x RS232 **(optional)**
CAN	1 x CAN **(default)**
USB	2 x USB 2.0 Type-A high-speed host ports; 1 x USB 1.1 Type-C port for firmware flashing and debugging; the type-C port supports powering the device while programming
I2C	1 x I2C (4 pin header)
Micro SD card socket	1 x TF (micro SD) card slot
RTC	High-accuracy RTC with supercapacitor, can work 1 week after power off **(default)**. High accuracy RTC with lithium coin battery, can work 3 years after power off **(optional, conflict with speaker)**.
Power Input	9V to 32V DC
Current	200mA max at 15V, 133mA typical at 15V

Power Consumption	3W max, 2W typical
Operating Temp.	From -20°C to +60°C
Dimensions	141.2 x 77.6 x 25.8mm
Weight	200g
Mounting	Embedded
Certification	CE, RoHS

Table 503 Key Features

Optional Features

- WiFi/Bluetooth: If Wi-Fi/Bluetooth connectivity is required, an ESP32-C6 module can be installed at the factory. The ESP32-C6 is not populated by default.
- 4G/LTE: 4G/LTE (Cat 1) module is supported on this product, it's not mounted by default, if you need the interface or the 4G/LTE module you can contact us when you place an order.
- Gyroscope is supported but not mounted by default, if you need gyroscope, contact us before placing an order.
- FRAM (Ferroelectric Random Access Memory) is supported but not mounted by default, if you need FRAM, contact us before placing an order.
- 15 pin CSI camera interface is customizable, if you want to use a camera (like Raspberry Pi camera V1.3 OV5647) on the product, contact us.


Warning

Installation, repair, and maintenance tasks should be performed by trained personnel only. Chipsee does not bear any responsibility for damage caused by inadequate handling of the product.


Power Input

The EPC-ESP32P4-050 Embedded HMI Display can be powered by an input voltage of 9V to 32V DC.

The power input is **3-pin 3.81mm screw terminal**, you can also use the USB-C port to power the product while programming.

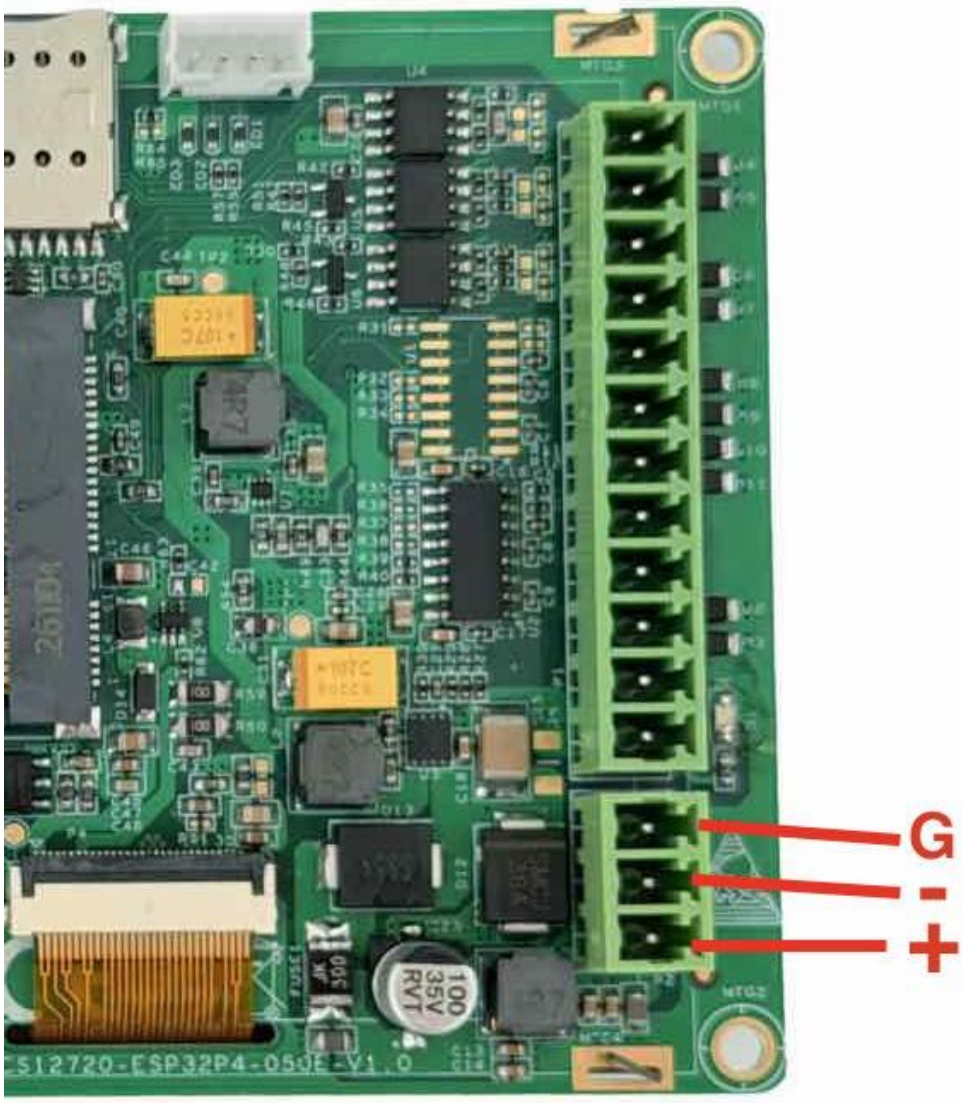

Power Connector

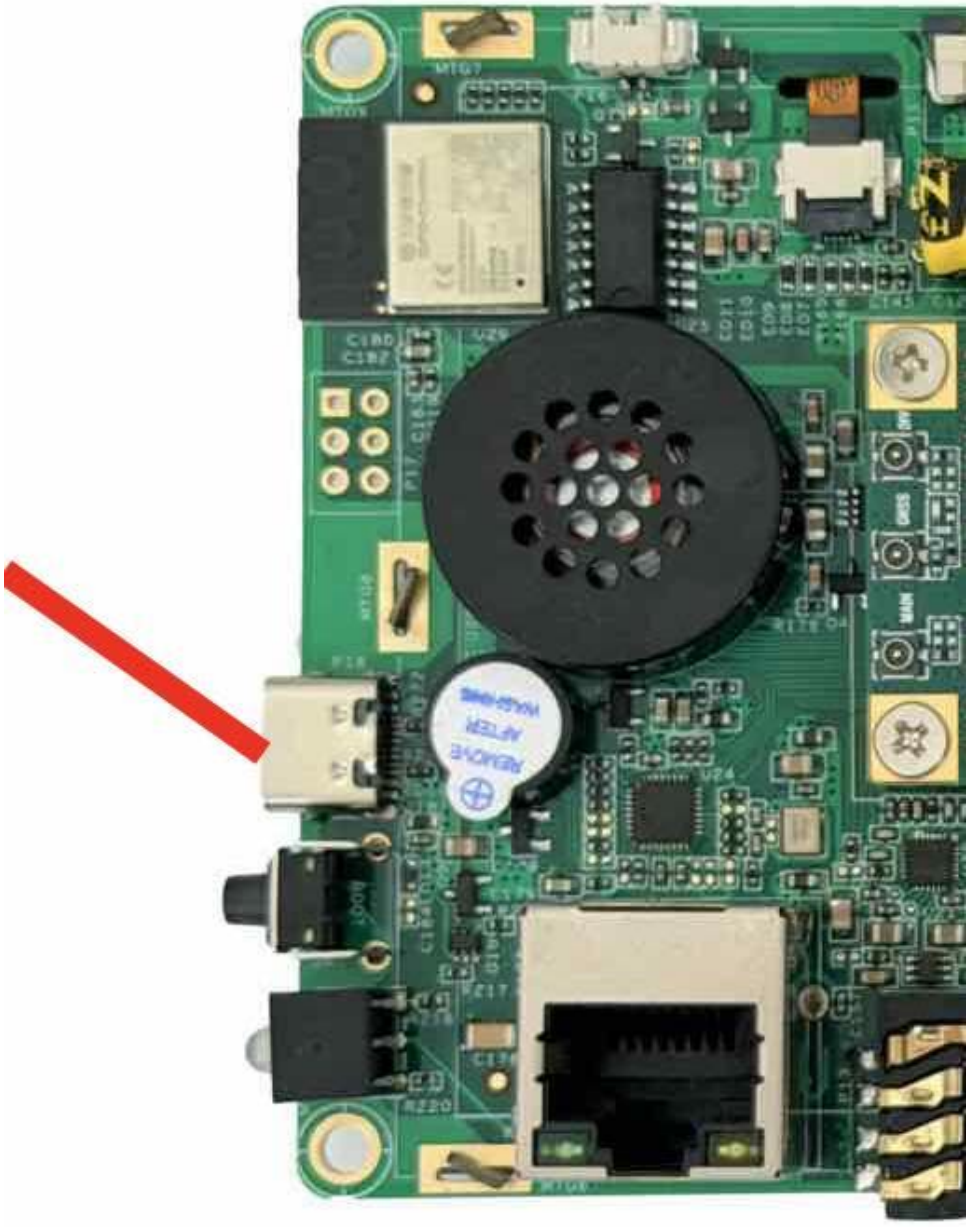

USB Power Input

Note that the "**+**" sign represents the positive power input, the "**-**" terminal is shorted to the ground.

Pin Number	Definition	Description
Pin 1	Positive Input	DC Power **Positive Terminal**
Pin 2	Negative Input	DC Power **Negative Terminal**
Pin 3	Ground	**Power System Ground**

Table 504 Power Connector

Note

The system ground "**G**" is connected to power negative "**-**" on board.

The product doesn't support PoE (Power over Ethernet).

Connectivity

There are many connectivity options available on the EPC-ESP32P4-050.


RS232/RS485/CAN

The product provides the following serial and CAN interfaces through a 12-pin connector:

- 2 x RS232 **(default)**; up to 4 x RS232 (**optional**, by configuring RS485 to RS232)
- 2 x RS485 **(default)**; 2 x RS485 can be configured to 2 x RS232 **(optional)**
- 1 x CAN **(default)**

Pin Number	Definition	Description	ESP32 P4 Pin
Pin 12	CAN_H	CAN high signal	GPIO22
Pin 11	CAN_L	CAN low signal	GPIO21
Pin 10	RS485_4-	RS485 –(B) signal	GPIO47
Pin 9	RS485_4+	RS485 +(A) signal	GPIO48
Pin 8	RS485_3-	RS485 –(B) signal	GPIO4
Pin 7	RS485_3+	RS485 +(A) signal	GPIO5
Pin 6	RS232_2_RXD	RS232 RXD signal	GPIO2
Pin 5	RS232_2_TXD	RS232 TXD signal	GPIO3
Pin 4	RS232_0_RXD	RS232 RXD signal	GPIO38
Pin 3	RS232_0_TXD	RS232 TXD signal	GPIO37
Pin 2	GND	System ground	GND
Pin 1	3.3V/5V	Power output	3.3V/5V

Table 505 RS232/RS485/CAN Connector Pin Definition

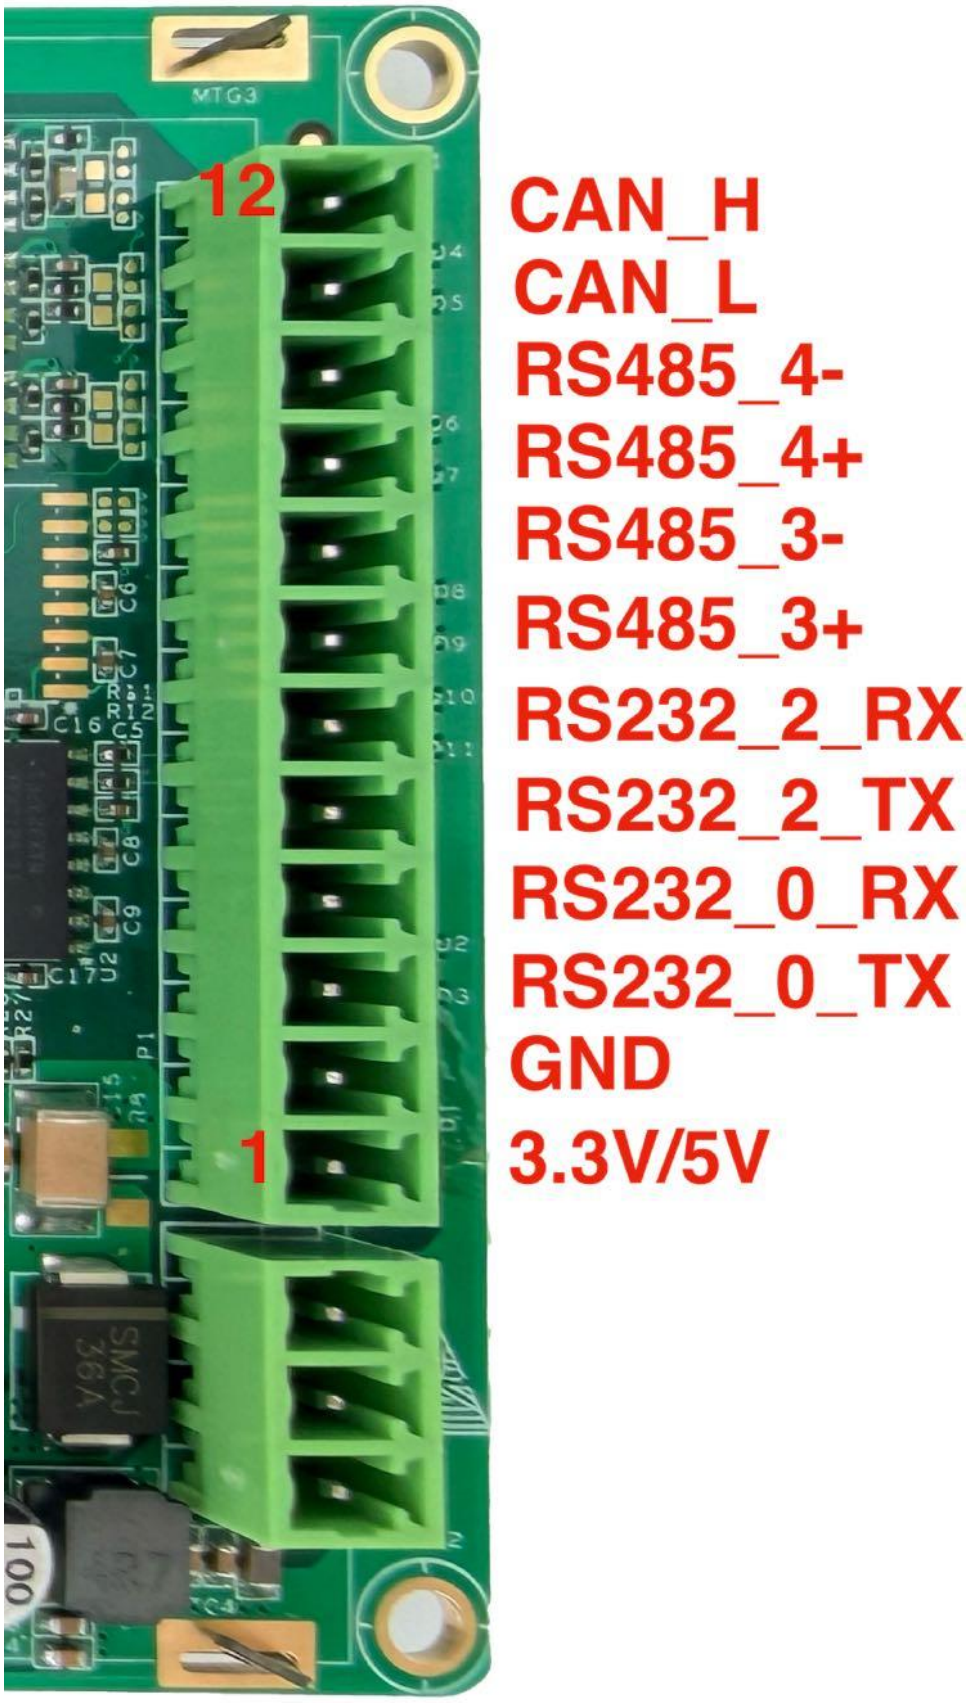

RS232/RS485/CAN Connector

Attention

1. Pin 1 is 5V by default, if you need 3.3V, you can **Contact us** before shipping.
2. RS485_3, RS485_4 automatically control input/output direction. They do not require software control.


3. The 120 Ω termination resistor for the RS485 is **not mounted** by default.
4. If you need a different configuration, you can **Contact us** before shipping, we can make a customized version of these pins for you.

I2C

Pin Number	Definition	Description	P4
Pin 1	3.3V/5V	Power output: 3.3V by default; 5V available as a factory customization	
Pin 2	SCL	I2C clock signal	GPIO8
Pin 3	SDA	I2C data signal	GPIO7
Pin 4	GND	System ground	

Table 506 I2C Connector — 4-pin 2.0mm Pitch Header


I2C is shared with other I2C devices on board like RTC/touch/audio IC etc. Try to avoid: 0x10 (audio), 0x14/0x5D (touch), 0x32 (RTC), 0x36 (camera, if fitted), 0x50 (FRAM, optional), 0x6A/0x6B (gyroscope, optional)

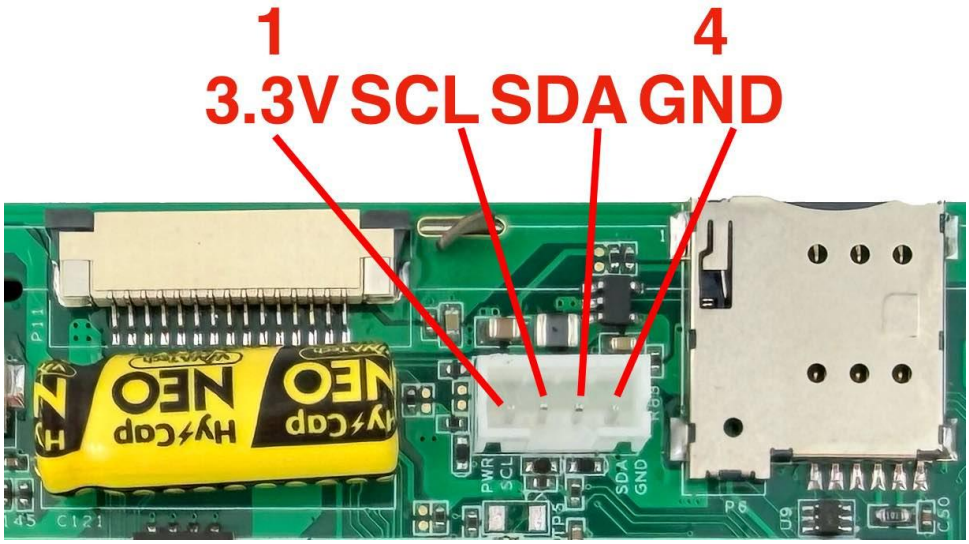

I2C

USB

There are 2 x **USB2.0 Type-A HOST connectors** and 1 x **Type-C connector** onboard, as shown in the image below.

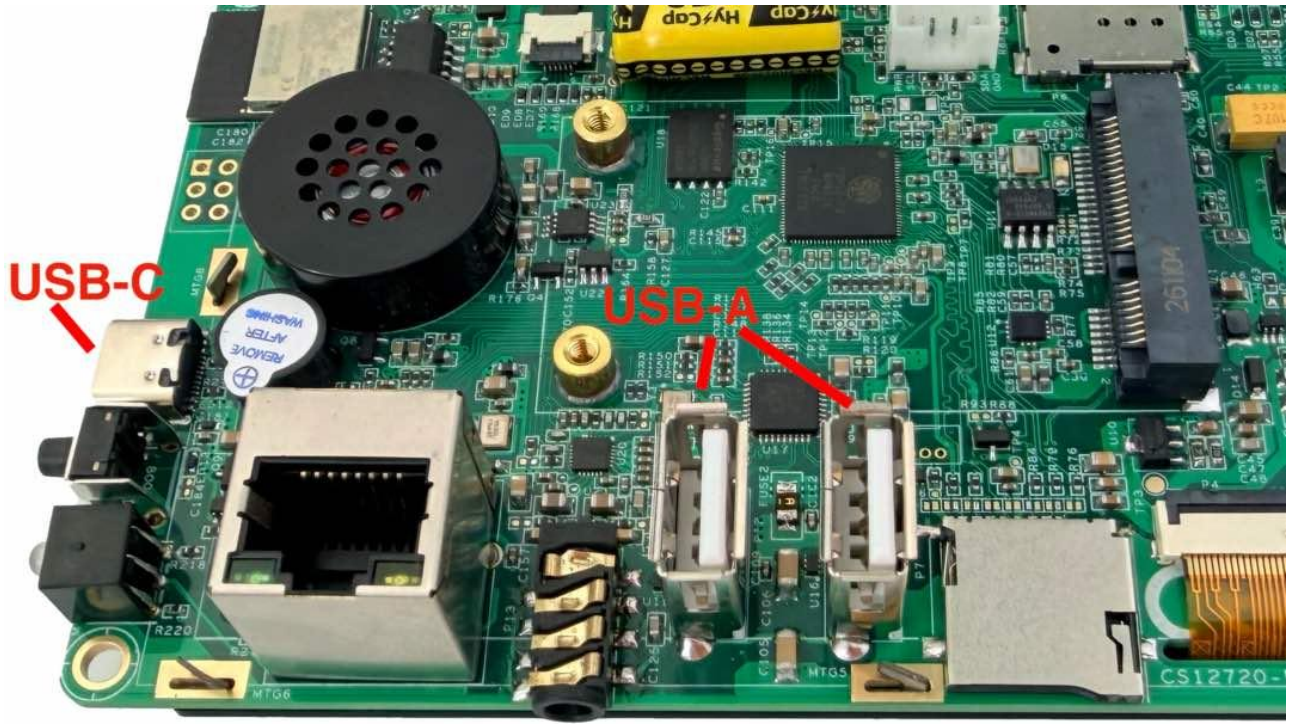

USB2.0 Host and Type-C Ports


Note

- USB peripherals such as high-speed flash drives can be connected to the USB 2.0 host ports.
- Full/Low speed USB devices such as mice and keyboards **cannot** connect due to **the limitation of USB Hub Host software stack**, Espressif managed software stack doesn't support Transaction Translator layer yet.
- The USB Type-C port is used for debugging and firmware flashing and supports powering the product.

LAN

LAN (RJ45) connector provides Ethernet connectivity over standardized Ethernet cable. The integrated Ethernet interface supports up to 100 Mbps data throughput.

The product doesn't support PoE (Power over Ethernet).

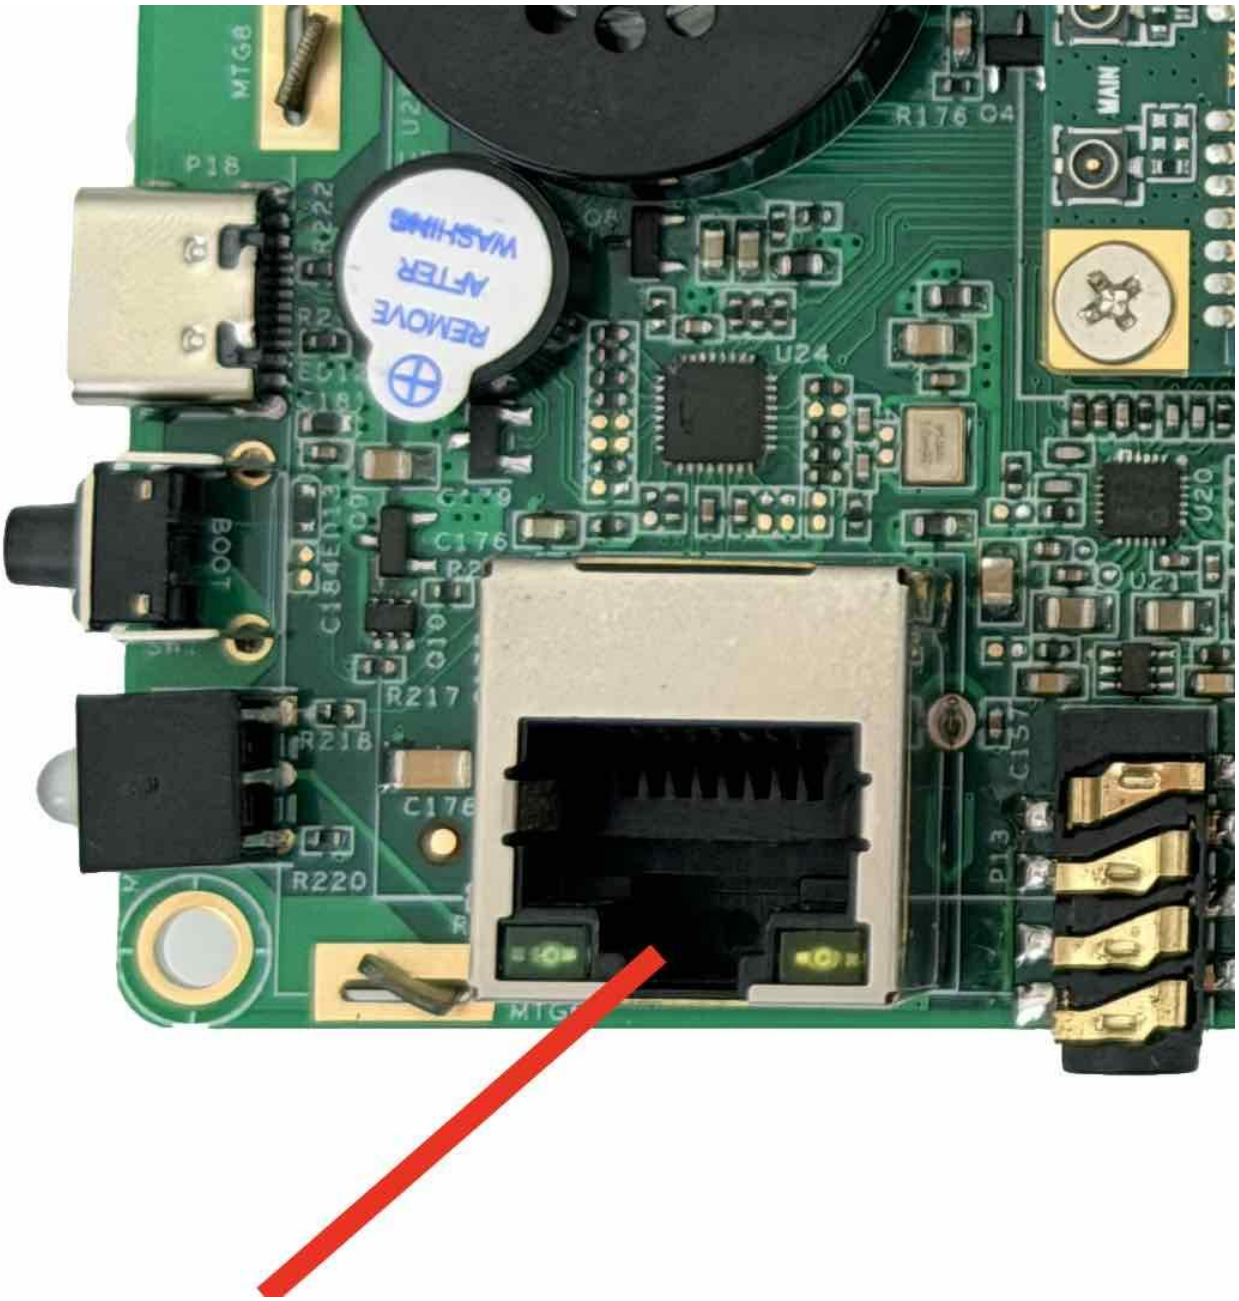

RJ45 LAN Connector

Wi-Fi and Bluetooth


When the optional Wi-Fi/Bluetooth configuration is selected, an ESP32-C6 module provides Wi-Fi and Bluetooth connectivity to the ESP32-P4 through SDIO.

The ESP32-C6 operates as a coprocessor.

Espressif's official ESP-Hosted Wi-Fi and Bluetooth firmware will be flashed at the factory before shipping.

Pin Number	Definition	Description
Pin 1	C6_CHIP_PU	ESP32-C6 chip enable/reset signal
Pin 2	X	
Pin 3	C6_U0TXD	ESP32-C6 UART0 transmit signal
Pin 4	GND	System ground
Pin 5	C6_U0RXD	ESP32-C6 UART0 receive signal
Pin 6	C6_IO9	ESP32-C6 boot mode selection signal

Table 507 ESP32-C6 Programming Connector Pin Definition

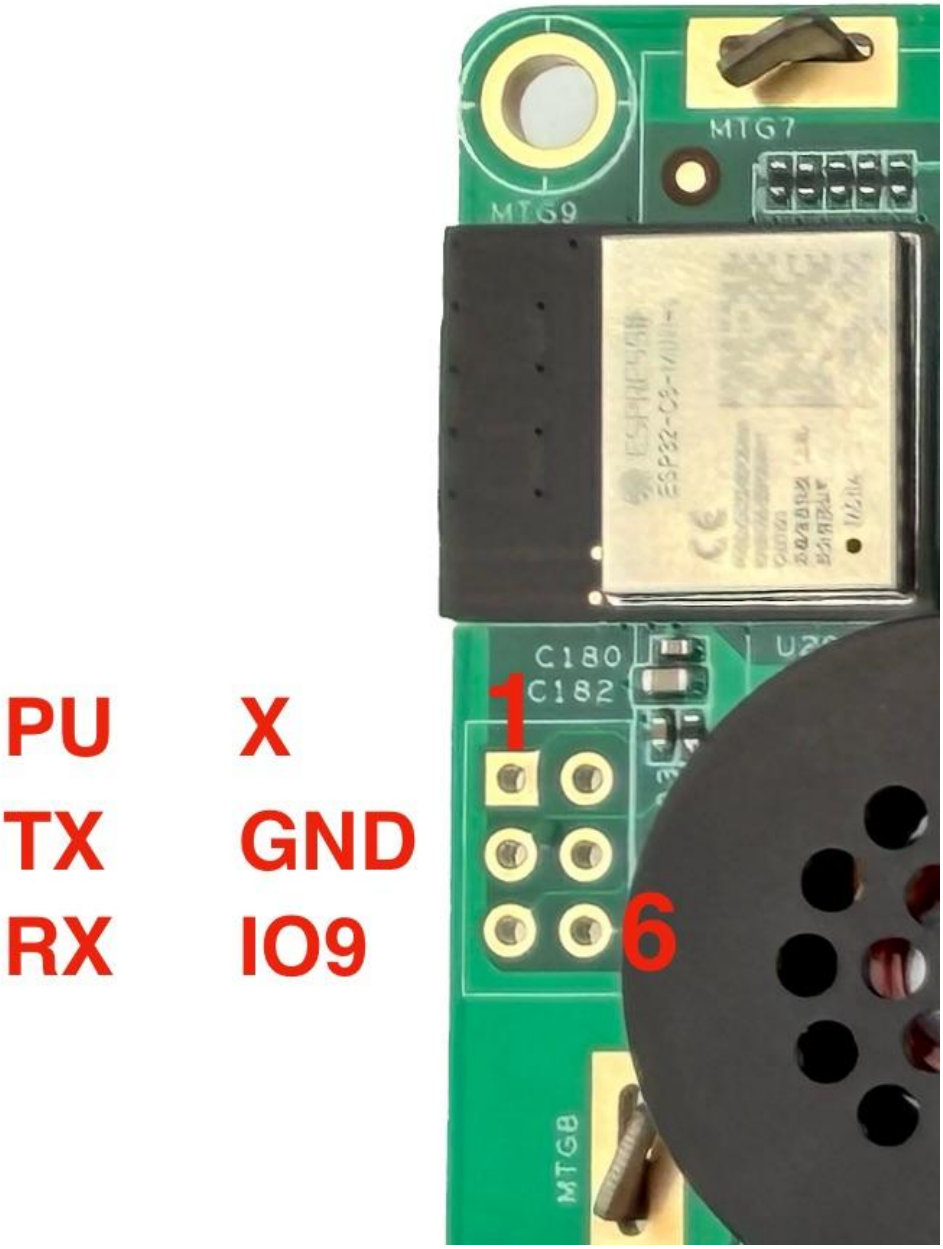

ESP32-C6 Pin Definition

You can flash the C6 firmware by yourself too. The process is the same as the official Espressif ESP32C6 firmware flashing guide.

The ESP32-C6 firmware can be updated using either of the following methods:

- **UART flashing:**
  a. Prepare a USB-UART (TTL level) cable, to connect the pins and your computer.
  b. Connect GND (Pin 4) to your UART cable's GND, connect GND to C6_IO9 (Pin 6) to let C6 enter flash mode.
  c. Connect C6_U0TXD (Pin 3) to your cable's RX pin.
  d. Connect C6_U0RXD (Pin 5) to your cable's TX pin.
  e. Reset the product/C6 to enter download mode, you can unplug all power sources first and then connect USB-C to your power adapter as a reset.

f. Remove the C6_IO9 (Pin 6) short to leave flash mode in the next reset.

g. Reset the product/C6 after flashing to boot normally.


- **Updates through the ESP32-P4:** The ESP32-P4 can flash new firmware to the ESP32-C6 through SDIO using a firmware image if C6 already has a firmware (OTA). This is usually done with a MicroSD card.

4G/LTE

4G/LTE Cat 1 module is **optional**. If you place an order with 4G module included, we will also add a SIM card holder and a 4G/LTE antenna to enable 4G/LTE connectivity.

The SIM card slot does **NOT** support hot-swapping. **Power off** the device before inserting or removing the SIM card.

The Cat 1 module doesn't support GPS.

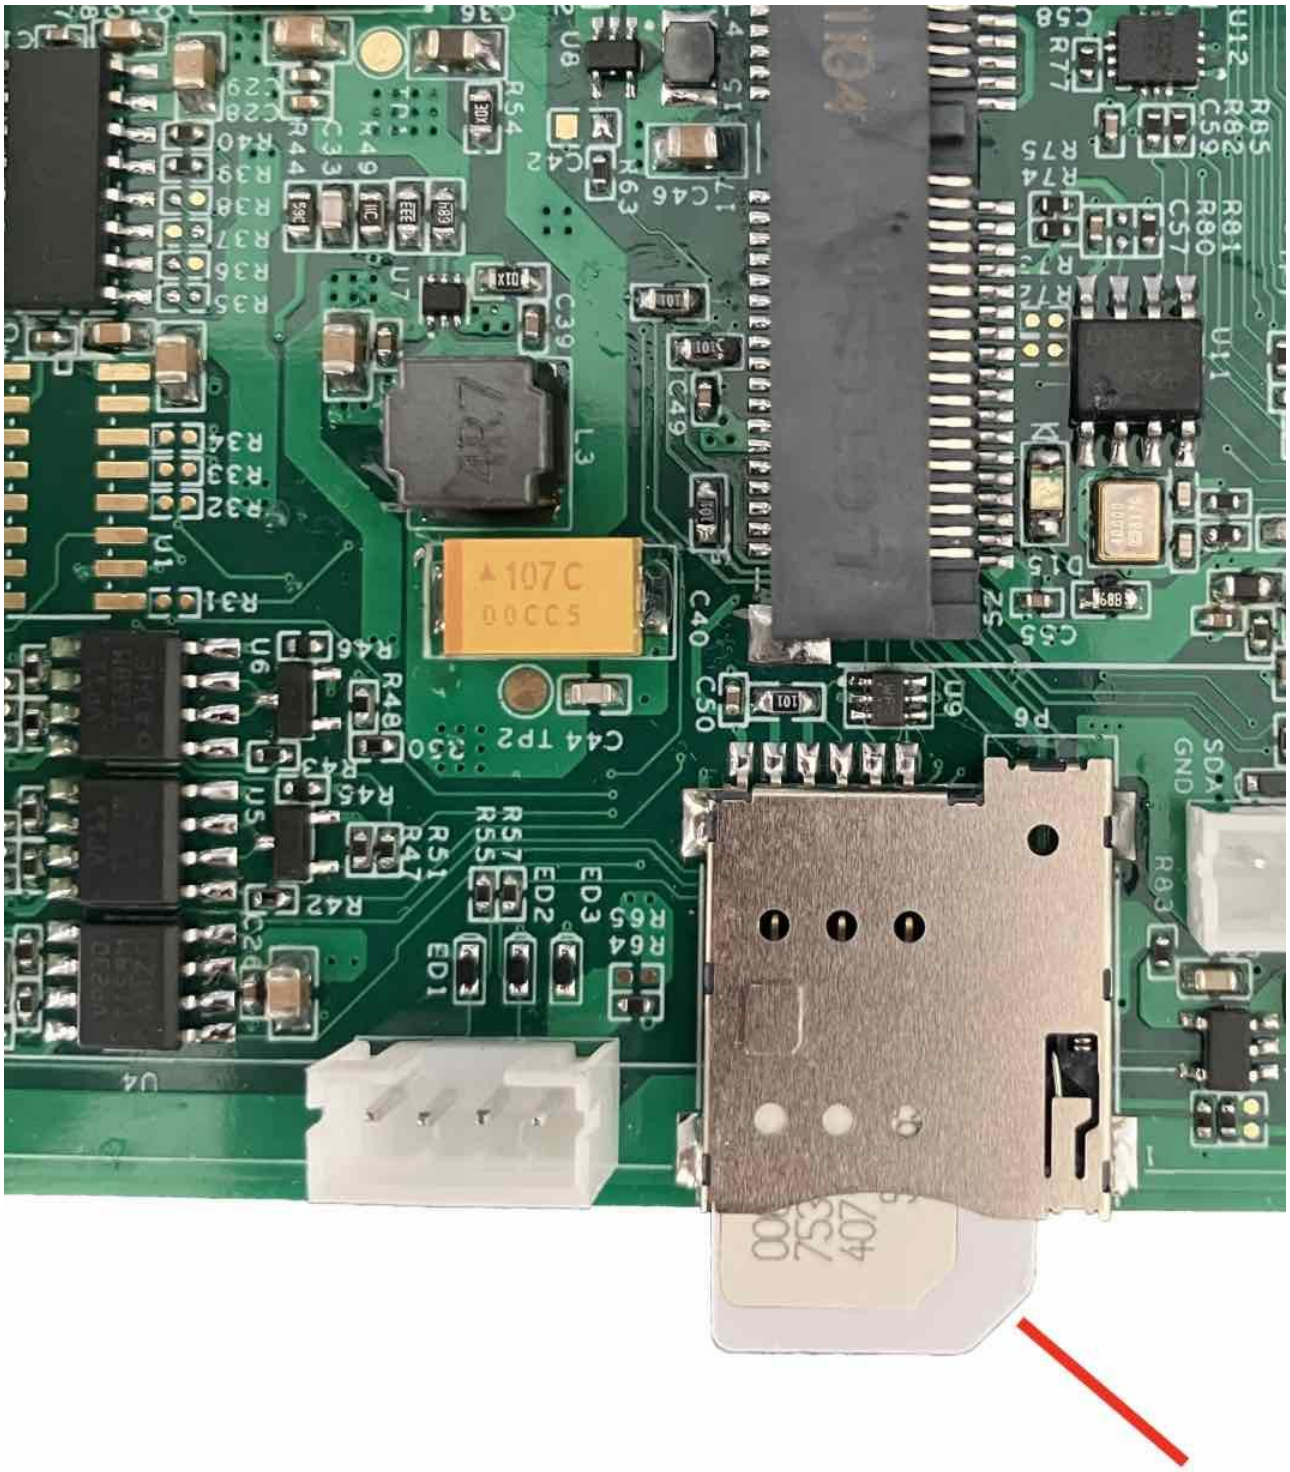

SIM Card Direction

Attention


The product does not come shipped with the 4G/LTE module by default. If you need to use 4G/LTE, you can contact us when placing an order. We can install the necessary hardware for you.

Camera

The product has 1 x MIPI-CSI (2-lane) interface for connecting a MIPI-CSI (2-lane) 15-pin 1.0mm camera such as a Raspberry Pi (OV5647) Camera V1.3 (optional, not mounted by default).

Note: I2C address 0x10 is occupied by audio IC, which conflicts with Raspberry Pi Camera V2/V2.1 (Sony IMX219) module. When you select a camera, please choose carefully because not all electrically compatible camera modules have mature software support for the ESP32-P4.

OV5647 uses I2C address 0x36.

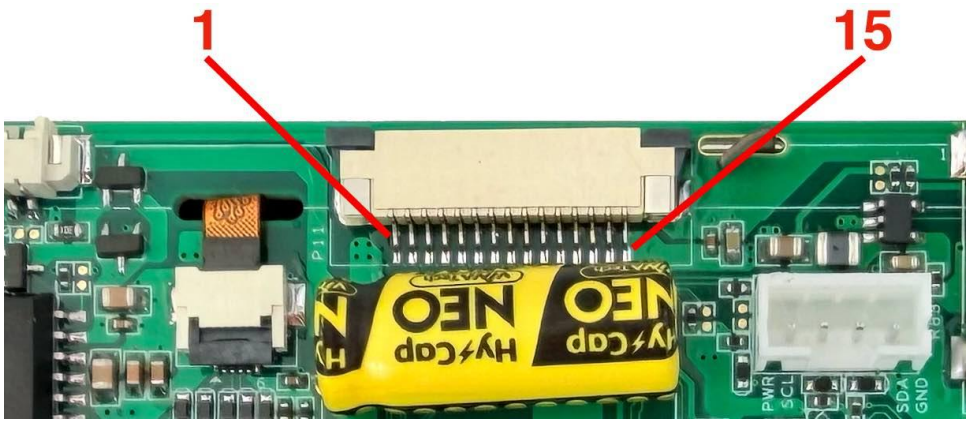

15 pin 1.0mm MIPI-CSI (2-lane) interface

Camera Connector Pin Definition:		
Pin Number	**Definition**	**Description**
Pin 1	GND	Power Ground
Pin 2	CAM1_DN0	CAM1_DN0
Pin 3	CAM1_DP0	CAM1_DP0
Pin 4	GND	Power Ground
Pin 5	CAM1_DN1	CAM1_DN1
Pin 6	CAM1_DP1	CAM1_DP1
Pin 7	GND	Power Ground
Pin 8	CAM1_CN	CAM1 Clock signal Negative
Pin 9	CAM1_CP	CAM1 Clock signal Positive
Pin 10	GND	Power Ground
Pin 11	CAM GPIO	Camera enable, pulled up to 3.3V (camera always enabled)
Pin 12	NC	Not connected

Camera Connector Pin Definition:		
Pin 13	SCL0	I2C SCL (GPIO8), shared with on-board I2C devices
Pin 14	SDA0	I2C SDA (GPIO7), shared with on-board I2C devices
Pin 15	+3.3V	System +3.3V Power Output, No more than 500mA Current output


Table 508 Camera Connector Pin-out

Attention

1. The camera interface is not mounted by default.
2. Check the orientation of the ribbon cable (pin 1 / pin 15) carefully, and power off before connecting or removing the camera.

MicroSD Card

The EPC-ESP32P4-050 Embedded HMI Display features 1 x **TF Card (micro SD) slot** (note the direction of the micro SD card). The product does not come shipped with the micro SD card by default.

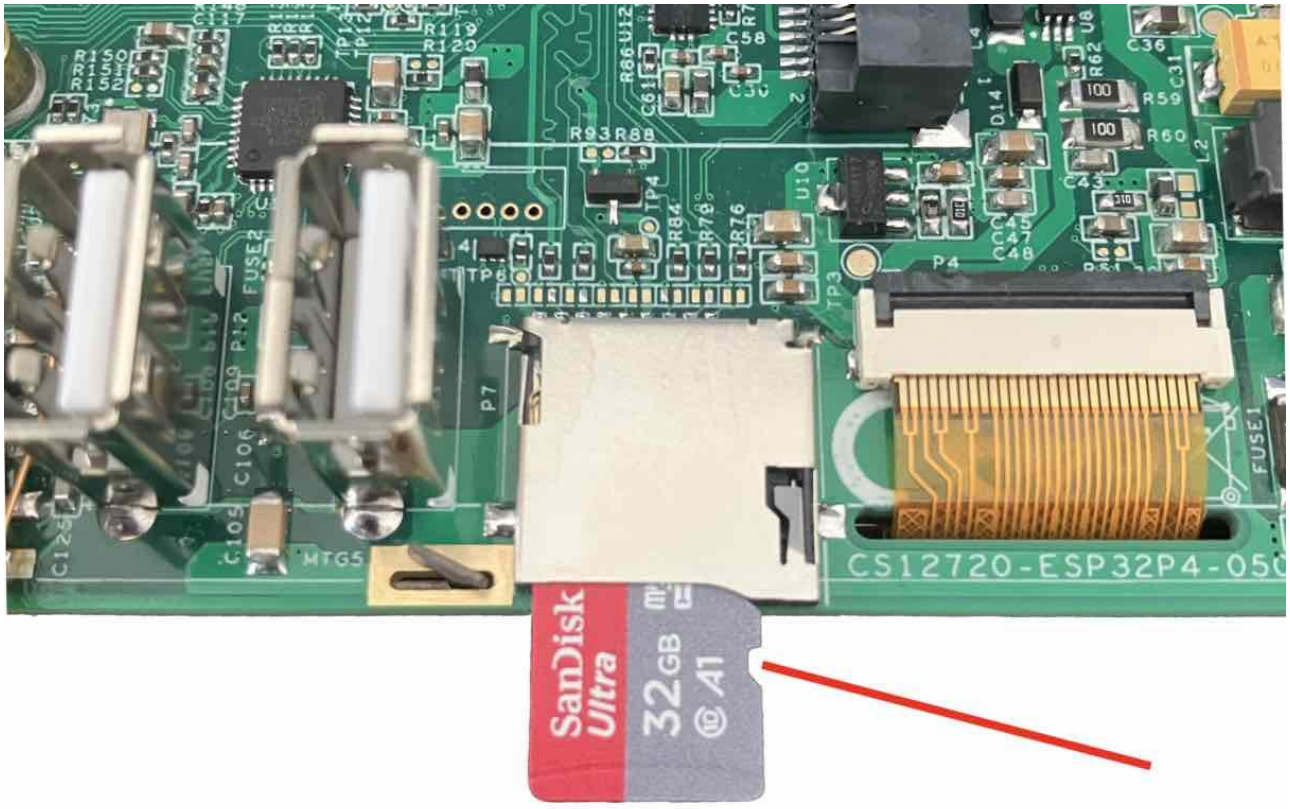


Micro SD Card Slot

Audio

3.5 mm Audio In/Out

The product features a 3.5mm audio connector as shown in the image below.

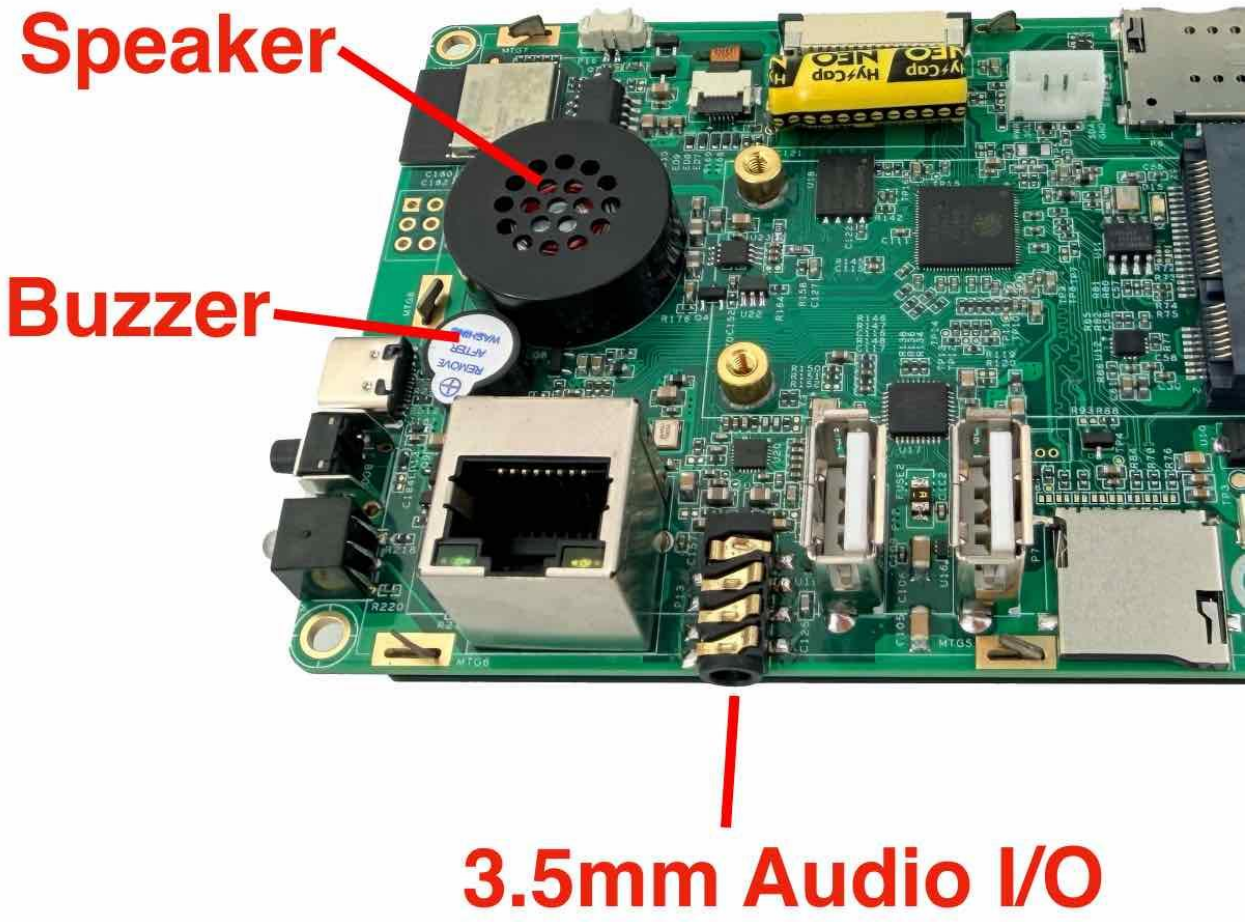

Audio Connector

This connector supports both earphone output and microphone input.

There is no on board microphone for this product.

After inserting a 3.5mm device, the on board speaker will be muted.

Internal Speaker

The product also has an internal 2W speaker, meaning you can play music without an earphone, the sound can be played from the product directly.


Buzzer

The product has an internal buzzer, suitable for playing beep sounds for alarms.

Button and Status LED

Status LED

This product has a bi-color status LED. It is green whenever the product is powered on. The application can switch it to red through GPIO32 (low = red), for example to signal an alarm or to blink as a heartbeat.

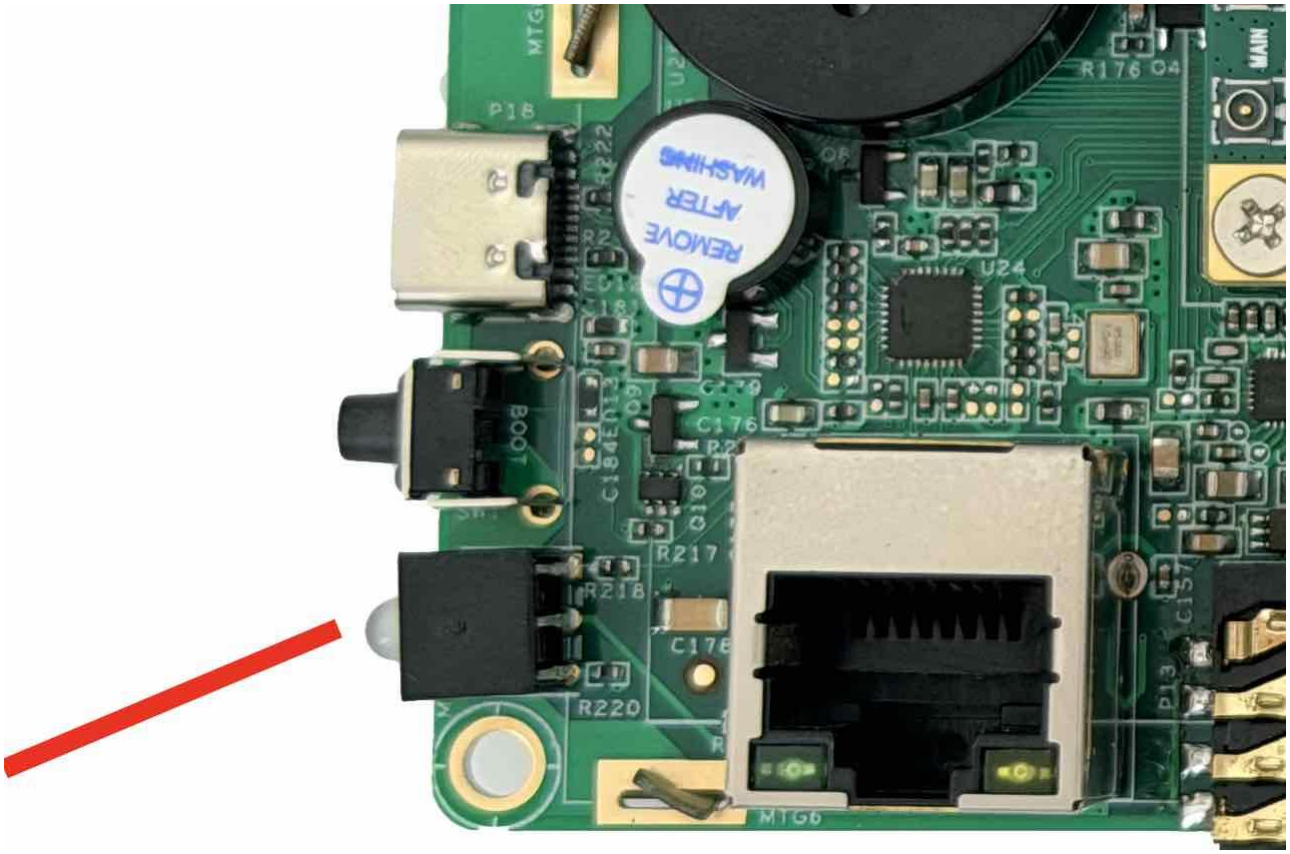


Status LED

Button

There is a PROG button for flashing firmware. Normally when programming with ESP-IDF, the idf software can automatically let the product enter firmware flashing mode.

But if you need to avoid the P4 entering normal mode, you can press and hold the PROG button while powering on or resetting the product. This is helpful when you want to update the C6 firmware and prevent the P4 from communicating with the C6 (WiFi/Bluetooth).

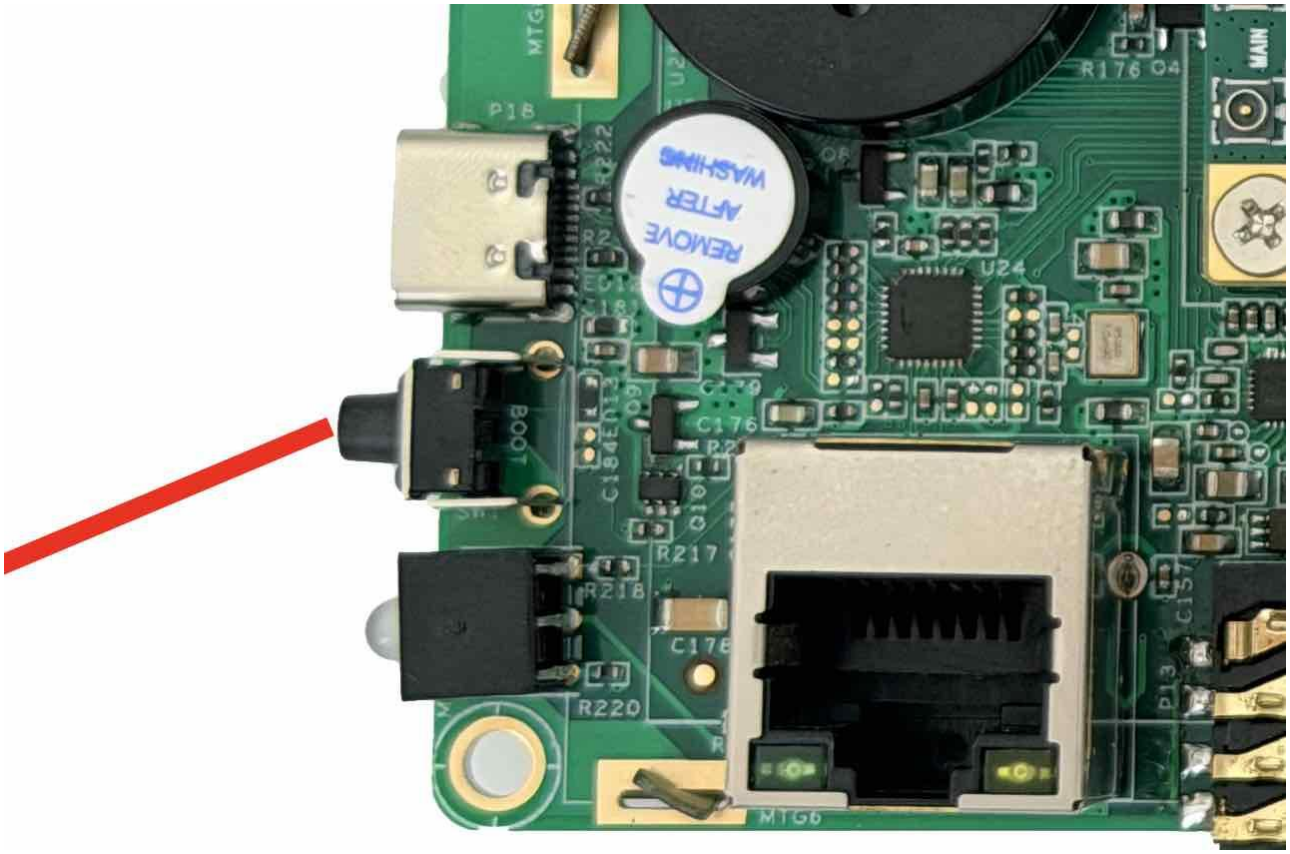

Button

Mounting Procedure

The EPC-ESP32P4-050 can be installed in an embedded enclosure (guide).

> **Attention**
>
> Do not apply excessive mechanical pressure to the display when mounting it in an enclosure.

Mechanical Specifications

The outer mechanical dimensions of EPC-ESP32P4-050 are 141.2 x 77.6 x 25.8mm (W x H x D).

Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

Technical Support

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.