
## **Exor Corporation Limited**



# Network Manager System Admin v4.5

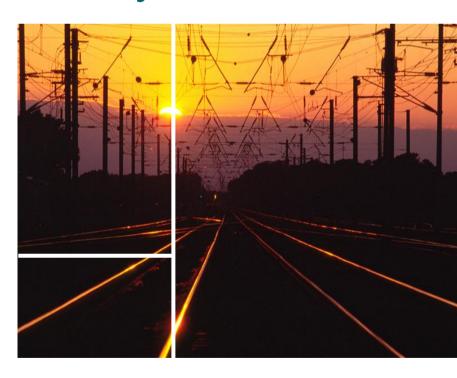

The Global Leader in Infrastructure Asset Management





This page intentionally blank



## **Quality Assurance Statement**

Document Details		
File:	Prepared by:	
Network Manager Admin v4.5.doc	T.C. Stewart	
Manual Name:	Reviewed by:	
Network Manager System Admin Guide		
Version:	Approved for issue by:	
1.0		
Date of Issue:	Product Manager:	
Feb 2007	T.C. Stewart	
File Name:		
Document Centre/Exor/Product Manuals/4.5	5.0.0 Product Manuals/4.5.0.0 completed	
documentation/Network	Manager Admin v4.5.docx	

Document Version Control				
Revision	Date	Ву	Chapter / Page	Description
1	Nov 2010	IS	All	Reviewed for 4.3
2	May 2011	IS	None	No Changes for v4.4
3	Nov 2011	IS	Various	Minor changes for v4.5



## Contents

Quality Assurance Statement	
Process Flow	
Product Options	
Node Types - NM0001	
Node Types	
Network Types - NM0002	
Network Types	14
Type Columns - Flexible Network Attributes	
Type Subclass	
Type Inclusion	
Type Specific Module	
Validate Network Types	
Creating a Foreign Table Inventory Type for Datum Network Types	33
Create Datum View	
Group Types - NM0004	
Sector 1	
Sector 2	38
Sector 3	38
Group Types	39
Group Type Properties	
Network Type Groupings	
Group Relations	
Additional Data Types – NM0700	<b>4</b> 4
Network Cross Reference Rules - NM0005	48



**CHAPTER** 

1

## Introduction

This Guide is designed to aid in the setting up and maintenance of network meta-data. Careful consideration should be given to the contents of this guide when networks and network structures are being designed. Network Manager provides a very powerful and flexible network modelling package and therefore it is important that the user has a good understanding of the options available.

This Guide deals with the concepts of Administration Units, which are used to organise the networks, especially from a user security standpoint, as well as covering the actual physical network components themselves. The Guide finishes with explanations on the use of network component organisation.

This Guide will be useful to System Administrators and Experienced Users with responsibility for Network Maintenance.



This page intentionally blank




#### **CHAPTER**

2

## **Network Reference Data**

Figure 1 Network Reference Menu

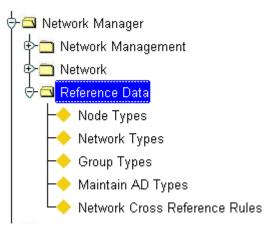

This chapter describes the forms and processes that are used for defining and managing the metadata required for use with Network Manager. The forms covered in this chapter are the following:

- Product Options for Network Manager
- Node Types NM0001
- Network Types NM0002
- Group Types NM0004
- Additional Data Types NM0700
- Network Cross Reference Rules NM0005

The form descriptions provide you with detailed information about reference data in *Network Manager by Exor*, including:


- an overall description of the form.
- a detailed explanation of each field, including available features (such as List of Values, default values and other characteristics).
- helpful information for using the form



#### **Process Flow**


Figure 3 indicates the order in which certain processes should be carried out when creating the Network Reference data for a typical Network, e.g. a Road or Rail Network. It is based on a single Datum Network Type, e.g. Classified Roads, which are grouped together to form 'Routes', e.g. M001. These Routes are grouped to form another group of all Routes maintained by an Organisation. Figure 2 provides a diagrammatic representation of this scenario.

Figure 2 Create Network Reference Data

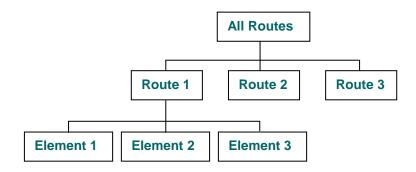

Setting up this Network will involve the following procedures:


Figure 3 Create Network Reference Data Process flow

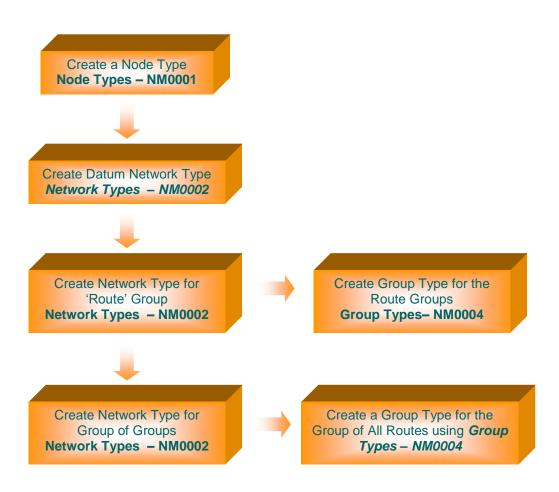



## **Product Options**

Figure 4 Product Option Menu

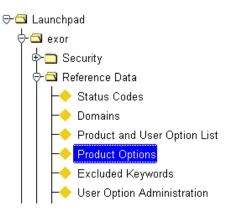

Product Options allow 'switches' or default values to be set, which defines how certain functionality operates within the *Exor* suite of Products. The following *Network Manager* related Product Options should be set to suit your Organisational requirements. Product Options are set using *HIG9130* – *Product Options*.

Several Product Options may have a User Option of the same name. The Product Option will act as the default settings. The system will check for the existence of a User Option value that will take precedence over the Product Option value. If no User Option value has been defined for the User the Product Option value will be used. Product Options, which also have an accompanying User Option, are marked with an Asterisk (\*) below.

Option Id	Option Name	Sample Value	Remarks
AOREXTDINV	AoR do not truncate inventory	Y	If this is 'Y', then when running Assets on a Route on a part of a linear route any continuous inventory which was truncated by virtue of the beginning or end of the specified extent will be returned with the location of that item extended beyond the selected extent
AORSTRMAP	AoR strip map by default	N	If Set to Y the Assets on Route strip Map will be displayed by default on entry into the AOR Results window. If the <b>User Option</b> of the same in present it will take precedence over the Product Option for the User
ATTRLSTSEP	Inv Attribute List Separator	,	This is the character used to separate Inv attribute values when viewed in a concatenated String.
AUTOZOOM*	Map Synchronization	N	If this is set to 'Y' the Exor Web Map will automatically zoom to each record within the locator grid when the User selects a record on the Results Grid



Option Id	Option Name	Sample Value	Remarks
CHECKROUTE	Use Route Checks	N	Check network connectivity when
			new elements are created. Note that
			this should be set to N for most
			implementations unless directed
			otherwise by Exor Support Staff.
DCDEXPATH	DCD download directory	E:\UTL_FILE\	Directory where DCD downloads are
			created
DEFAORDPI	Default AOR Dist Point Int	100	Default Assets on a Route Distance
			Point Interval
DEFASSTYPE*	Default Asset Search	ADDR	This is the default Asset Type used in
	Туре		the Locator Module search module.
DEFITEMTYP*	Default Reference Item	REFF	This is the Default Asset Item Type
	Туре		used on the Assets on a Route
			Module. If the User Option of the
			same in present it will take
			precedence over the Product Option
			for the User
DISAMBIGSC	Display Ambig Sub Class	N	Should Ambig sub class be displayed
DISPWDVIS	Discoverer Password	Υ	If this is set to 'Y', then when Oracle
	Visible		Discoverer for the Web is called the
			Username and password must be
			entered. If set to 'N' these details are
			passed from the current session
			details
EDSNULLEXC	Eng Dyn Seg - use of	Υ	When Y raise exceptions on use of
	NULL		Nulls in eng dyn seg otherwise ignore
		_	NULL values
EXTRTEDATE	Element Start Date on	3	Default Start Date when extending a
	extend route		route. 1 - Leave as Null, 2 - Inherit
			from previous Element, 3 - Effective
			Date, 4 - Previous Element
CAZ DCT*	Defectly Constituting Creeks	OFFN	membership
GAZ_RGT*	Default Gazetteer Group	OFFIN	This option is to set the preferred
	Type		Network or Group Type for the Standard Gazetteer Mode
GAZMODE*	Gazetteer Starting Mode	NORMAL	This value is used to define which
GAZIVIODE	Gazetteel Starting Mode	INOINIME	mode the gazetteer should open in,
			Standard or Advanced
GISGRPTYPE	GIS Road Group Type		This is for Backward Compatibility
SIOGNETTE	Cio Road Cioup Type		and is not used in Exor V3
GRPXCLOVWR	Exclusive Group type	N	When value is set to 'Y' this will allow
SITI AGEOVIA	Override		user to override the Exclusive Group
	CVOITIGO		Type.
HISTINVLOC	Enable Historic Asset	N	Set to Y to enable historic loation of
	Location		assets when the network has been
			edited.
INH_PAR_AU	Inherit AU in reclassify	Υ	If this is set to Y then upon
	one / to in roomoonly		reclassification of a route, the admin
			unit of the datum elements in that
			route inherit the AU of the parent
		l	Toda inition the Ao of the parent



Option Id	Option Name	Sample Value	Remarks
INVAPIPACK	Create API pack. for inv	N	If this is "Y", then when the inventory
	type		views are recreated for a particular
	7.		inventory type, then there will be a
			package called nm3api_inv_xxxx
			created which will have API calls in
			as wrappers to the nm3api_inv
			procedures, e.g. fro an Item Type of
			'BS' a package called nm3api_inv_bs
			will be created.
INVROUTEVW	Create inv on route views	Υ	If this is "Y", then when the inventory
			views are recreated for a particular
			inventory type, then there will be a
			view created called
			v_nm_xxxx_on_route. These views are used when an Exor theme is
			added against a 'Route Theme
			shape file in SDM.
INVRTETAB*	Default Route Tab in Inv	Υ	If set to Y the default tab in the
MANIETAD	Form	'	Inventory form will be Route. If the
	. 5		User Option of the same in present it
			will take precedence over the
			Product Option for the User
INVVIEWSLK	Show Offset On Inventory	N	If set to 'Y the Route and Route
	Views		Offset details for the 'Parent' Linear
			Network Type defined within Network
			Types - NM0002 will be included in
			the Inventory View
			Note that this Product Option should
			be set to 'N' under the following
			circumstance:
			Maria III Santa
			Multiple Linear Parent Type     Including a visit
			Inclusions exist
MAPCAPTURE	Is ManCantura Haad	N	No Linear Type Inclusions exist     Set this option to "V" if the system
WATCAPTURE	Is MapCapture Used	N	Set this option to "Y" if the system uses MapCapture. This will enable
			the inventory views required for
			MapCapture to be generated
			whenever the normal inventory views
			are created
MRGAUTYPE	AU Type for Merge	TNC	This is the AU Type which is used for
	Security		Merge Results Security. See the
	,		Asset Manager System Admin Guide
			for more details.
MRGPOE	Split Merge Results at	Υ	A value of "Y" means that merge
	POE		query results will be split at any
			discontinuities (POEs) on the route"
MRGROUTE	Split Merge Results by	Υ	A value of "Y" means that merge
	route		query results will be split at any
			change of route". Note that this
			should be set to N for
			implementations, which do not have
MDO)//EMTS::	Maria No.	NI.	a Linear Auto inclusion.
MRGVIEWTRU	Merge Views Include True	N	If this is set to "Y" then the TRUE
			distance along the OFFSET_NE_ID
			for the start and end of each merge
			chunk will be included on the merge
			viewss0



Option Id	Option Name	Sample Value	Remarks
MULTINVRTE	Multiple Inventory on	Y	Used for placing Inventory using a
	Network		Network Extent. If set to Y allow
	T TO THE TOTAL OF		multiple routes, N - Single Route.
			Note that this must be set to Y if
			Inventory is to be located across
			more than 1 Datum Element and
			auto-inclusion into a Linear Route is
			not be used.
NETOPENSEC	View open/end dated	Υ	Y = Open sections only, N =
Nation and a	sections	'	Open/End dated sections
NETREASON	Record Reason for	Υ	On making network edits the user will
METRE/100H	Change	'	be asked to record the reason for this
	Griango		amendment in a popup window
PBIPOE	Split PBI Results at POE	Υ	A value of "Y" means that PBI query
I Bii OL	Opin 1 Di results at 1 OE	'	results will be split at any
			discontinuities (POEs) on the route"
PREFLRM*	Preferred LRM	(Group Name)	This is the group type of the system
FIXEI LIXIVI	Fielefied Lixivi	(Group Ivaille)	default preferred linear referencing
			method; this only takes effect if you
			have more than one LRM. User may
			define their own preferred LRM using
			the User Preferences window (see
			the General User Guide)
REVLEGNO	Reverse Leg Nos on	N	Reverse Leg Nos on node usage
REVLEGIO	Route Rev	IN	records when reversing a route
	Roule Rev		
			Reverse Leg Nos on node usage
			records when reversing a route. "Y"
			means that the Leg Number is
SAV FORMAT*	Default Export Format	CSV or XMI	reversed, otherwise it will be left as is
SAV_FURIVIAT	Default Export Format	CSV OI XIVII	This is the default export format of data within the Locator Results Grid.
SDEBATDIR	Directory for SDE Batch	This is the direct	tory as seen by the server that the
SDEBAIDIK	files	SDE loadevents batch file will be created in, e.g.	
	illes	D:\nm3\sdm\loadevents	
SDERUNLE	Run Loadevents from	Y Y	If this is 'Y', then when the
SDERUNLE	server.	T T	create_sde_inv_shape_table and the
	Server.		process_membership_changes
			(nm3inv_sde) procedures are
			executed the SDE loadevents
			program will be run from the server.
			No batch files will be executed.
SDOBATSIZE	Batch Size	100	Batch Size
SHOWINVPK*		Y	If set to Y the primary key will always
SHOWINVPA	Show Primary Key in Inv Form	I	
	1 OIIII		be visible on the Inventory form, if N then the PK will only be visible if it is
			a flexible attribute or when the form is
			in query mode. If the User Option of the same in present it will take
			precedence over the Product Option for the User
SHOWRTEDIR	Show Route Direction	N	Determines whether route direction is
SHOWKIEDIK	Show Route Direction	IN	
			displayed. Note that this is used for
			specific Implementations of the
			Network Walker module and should
			normally be set to 'N' unless directed
l	11.0	NI NI	otherwise by Exor Support Staff.
HOEODDOEO			
USEGRPSEC	Use Group Admin Unit	N	Setting this option to 'N' will ignore
USEGRPSEC	Security	N	the group members admin unit security.




Option Id	Option Name	Sample Value	Remarks
USEINVXSP	Use Inventory XSP		This is for Backward Compatibility and is not used in Exor V3
USEORIGHU	Use original homo update	Υ	Used in the historic asset loader, if set to Y this reverts to the original homo update code completely
UTLFILEDIR	UTL File Directory	D:\NM3	Directory where PL/SQL will read/write flat files
XMLCRENODE	Create node from XML Datum's	Y	Should the system automatically created nodes when Datum's are loaded via the XML Datum's loader.



## Node Types - NM0001


Figure 5 Node Types Menu

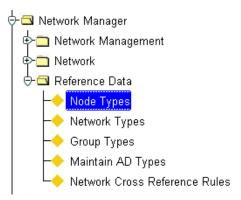

*Exor* has the ability to handle different types and numbers of networks. This could include, for example, Road, Rail, Ferries, Drainage, Rights of Way, Pipelines and Utility Networks. To cater for the variety of possible Network Types, different Node Types may be created. When a Network Type is defined, it will be associated with a Node Type created using this form.

A Node Type may be used for several different Network Types. For example, many Road Transportation Agencies may use one Network Type for Primary or Classified roads and another for Secondary or Local Roads. Since these 2 Network Types may 'intersect' and share Node positions the same Node Type may be used for both Network Types.

Figure 6 Node Types

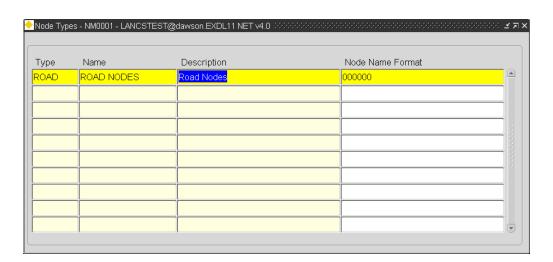

### **Node Types**

When you enter this form the cursor sits in the 'Type' field waiting for a new Node Type to be entered or existing Types to be queried back. To query back an existing Node Type press the **[Enter Query]** button on the menu toolbar (or press F7), enter some selection criteria, then press the **[Execute Query]** button (or press F8).



Type (Required)

Enter a unique code for the Node Type. A maximum of 4 characters is allowed.

Name (Required)

Enter a Name for the Node Type. A maximum of 30 characters is allowed.

## Description (Required)

Enter a description for the Node Type. A maximum of 80 characters is allowed.

## Node Name Format (Optional)

When Nodes of this type are created (using **Nodes - NM0101** or via the Spatial Manager) they must have a Unique Name within the Node Type. Node Names may be automatically generated from a sequence, thus ensuring Uniqueness, by entering a format of 000000. This will generate a Node name 6 digits in length with leading zero's, e.g. 012345. If no Node Name Format is supplied an assumption is made that the Node Names will be freehand text entries.

Formats are only applicable when the Node Name is Numeric, e.g. 123456. Non numeric Node Name formats are not allowed. If a non Numeric format is added an Error message will be displayed as shown in Figure 7 will be displayed.


Figure 7





## Network Types – NM0002

Figure 8 Network Types Menu

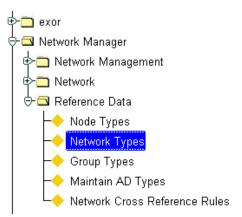

**Exor** has the ability to handle different types and numbers of Networks, or Linear Referencing Systems. This could include, for example, Road, Rail, Ferries, Drainage, Rights of Way, Pipelines, and Utility Networks. Many Road Transportation agencies may use one Network type for Primary and one Network type for secondary roads. Such users are then free to expand the system and use Network Manager to maintain other networks they require such as Rail, Drainage and electrical.

The 'Basic' Network Type will be flagged as being a 'Datum'. Network Elements of this type must have a Start Node and End Node and a Length associated with them. Datum Network types will also be flagged as being 'Linear'. This Linear Datum concept underpins the Linear Referencing System and allows for Multiple Linear Referencing methods. This datum will provide direction and connectivity to enable Network Manager to derive each of the linear referencing methods required. The user can then assign Linear Referencing Methods as views or layers on this datum. In North America, for example, this will allow a LRS to be developed that conforms to the NCHRP 20-27 model. In the UK, this allows for the storage and manipulation of National Street Gazetteer (NSG) data.

Using the flexible attribution available within the 'Type Columns' window can cater for different naming conventions for different Network Types. These Network Type names may be free text entries or may be derived, based on, for example, ownership and route membership or from other Network Attributes using standard Oracle formatting function calls. Unique values for Element Attributes (Data Type Number) may also be generated automatically from internal system 'sequences'.

Each Network Type may have a property of Inclusion. This is the Inheritance of Group membership based on the association of a member with the 'parent' group via a common network Attribute, Unique Name, Admin Unit etc.

Multiple Type Inclusions are also permitted whereby a Network Element, or Group may be automatically included in more than one 'parent' Group.

When a Network Type Inclusion is applied to a Datum Network Type, any Network Elements of the Network Type will be automatically included as members of its parent group(s). If the 'parent' group is a Linear Group,



connectivity rules will be used to derive the Elemental offsets along the Route.

Note that the 'parent' Network Type specified in a Type Inclusion for a Datum Network Type may be the Network Type associated with a Linear or Non Linear Group.

Network Type Inclusions may also be defined for Network Types associated with Network Groups, whereby a Group is automatically added as a member of another Network Group, thus forming a Group of Groups.

If when creating a new Network Element or Group that has a 'parent' Type Inclusion defined, the 'parent' group does not already exist, it may be created automatically by the system if the 'Auto-Create' checkbox on the 'Type Inclusion' panel is selected for the appropriate Network Type inclusion. For more information on the 'Auto-Create' function see page 28.

The parent network type and 'parent/foreign' keys used to establish the network association are defined using the '*Type Inclusion*' window.

Note that if the specified 'Child Column' in a Type Inclusion is not flagged as mandatory, i.e. optional, the Element (Datum or Group) will only be autoincluded as a member of the parent Group if a value is added.


Each Network Type may be sub-defined by adding a Network Type Subclass. These Subclasses may be used as part of the Network Type naming convention and in establishing the connectivity along the 'parent' route group. For example, a Road Network Type of 'Classified Roads' may have Network Type Subclasses of 'Single', 'Left' and 'Right'. This would define whether a Network Element of this type was a Single carriageway, the Left side of a dual carriageway or the Right side of a dual carriageway. Network Type Subclasses are set up using the '*Type Subclass*' window.

Network Types may be added for use when creating new Network Element Group Types which have differing naming conventions, Units of measurement or in the case of non-linear groups, have no unit of measurement e.g. a group based on a geographical region.

Network Types associated with Group Types may have a Node Type associated with them. This allows for the Start and End Nodes of a Route to be added which could later be used for schematic plans etc. If a Group Type Network Type has an associated Network Type, the Group must be created via the *Elements - NM0105* module. If new Datum Elements are added or existing Datum Elements end-dated and this affects either the Start or End point of the Route, the new Start or End node should be associated with the Group using the *Elements - NM0105* module.



#### Figure 9 Network Types

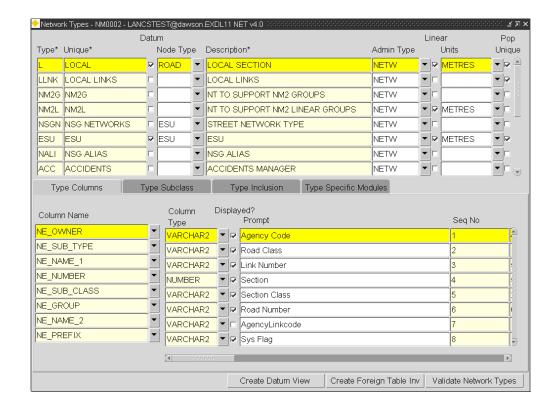

## **Network Types**

When you enter this form the cursor sits in the 'Type' field waiting for a new Network Type to be entered or existing Types to be queried back. To query back an existing Network Type press the [*Enter Query*] button on the menu toolbar (or press **F7**), enter some selection criteria, then press the [*Execute Query*] button (or press **F8**).

### Type (Required)

Enter a unique code for the Network Type. This code will be displayed along with the 'Description' in subsequent LOV's in other forms within *Exor*. A maximum of 4 characters is allowed.

#### Unique (Required)

Enter a Unique name for the Network Type. This name may be used in establishing a relationship with a 'Parent' Network Type using '*Type Inclusions*' ( Page 26). A maximum of 30 characters is allowed.

#### Datum (Checkbox)

Check this box if the Network Type is to be used as the 'under-pinning' type for the network. This type of network is generally used for creating Network Elements and will have a Start Node and End Node and an associated length. Network Elements of a type flagged as 'Datum' are the smallest network component within the system.



Node Type (Optional) (List)

If required, enter the type of Node to be used to define the Start and End positions of a Datum Network Element or Group of this type. Node Types are defined using **Node Types – NM0001**.

#### Description (Required)

Enter a description for the Network Type. A maximum of 80 characters is allowed.

## Admin Type (Required) (List)

Enter the Admin Type associated with the Network Type. This is a means of applying security to Network Types. When Network Elements or Groups associated with this Network Type are created, they must have an associated Admin Unit. The only allowable Admin Units for this Network Type, will be those Admin Units of the Admin Type entered in this field.


A User must then be granted access to the appropriate Admin Unit in order to view any Network Elements associated with the Admin Unit.

### Consider an example.

The system contains 2 Admin Types, namely **ROAD** and **PIPE**, each containing the Admin Units as set out in the hierarchy below.



A Road network and a Pipeline network exist as shown below, each element being assigned to a particular Admin Unit of the appropriate Admin Type

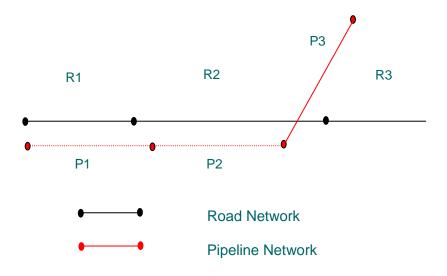



Network Elements and associated Admin Units.

Road Element	Admin Unit
R1	Road 2
R2	Road 2
R3	Road 3

Pipe Element	Admin Unit
P1	Pipe 2
P2	Pipe 3
P3	Pipe 3

Two Users have been set up and have been granted access to Admin Units as shown in the table below

User	Admin Units
User 1	ROAD 2
User 2	PIPE 3
	ROAD 3

From this arrangement of Admin Types and Admin Units the following securities will be invoked:

- User 1 can access Road Elements R1 and R2 but cannot access any Pipeline Elements.
- User 2 can access Pipeline Elements P2 and P3 and also Road Element R3.

The mode of access (i.e. either Normal or Read Only) may also be defined within the 'Admin Units' window of the Users form.

Admin Types and Units are defined using **Admin Units - HIG1860**. Admin Units are granted to Users using **Users - HIG1832**.

#### Linear (Checkbox)

Check this box if the Network Type comprises a set of connected Network Elements or is itself a 'Datum' Network. Linear Network Types must have an associated unit of measurement.

#### Units (Optional)


Enter the Unit of length used for this Network Type. The list of values is formed from the Unit Domains set up in *Units and Conversions - HIG1820*. This is only needed for Linear Network Types.

#### Pop Unique (Checkbox)

Check this box if the Unique reference of the Datum Network Type or Group associated with the Network Type is to be automatically populated by derivation of flexible attributes entered in the 'Type Columns' window when a new Network Element or Group of this type is created. If this box is unchecked a Unique reference must be manually entered.



Figure 10 Network Type Columns

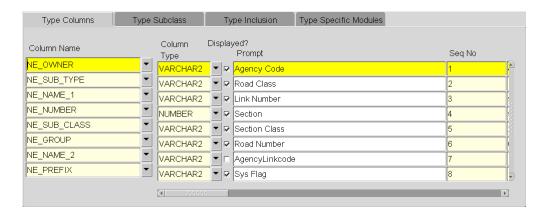

## **Type Columns - Flexible Network Attributes**

A Network Type may have a set of 'flexible' attributes associated with it, as is the fundamental concept of all products within the *Exor* set. These attributes may be used to derive different naming conventions on different Network Types or to hold 'static' information relating to a Network Element or Network Group.

The values for these 'flexible' attributes may be entered as free hand text, selected from a pre-defined set of system Domain values, generated from an internal database sequence or selected from a list of values dynamically generated from a select statement held within the 'Query' field.

Values for Network Attributes may also be derived from other Network Attributes using standard Oracle formatting function calls such as SUBSTR (Substring) or CONCAT (concatenate). This feature is available by entering the appropriate statement within the 'Default' field (see page 21). Derived values may be used within the Unique of a Network Element or within a Network Type Inclusion.

Note that it is recommended that Derived Network Attributes are not displayed as accidental population of the field will negate the derived default value.

Network Attributes are displayed on *Elements - NM0105* when an Element or Group of the appropriate Network Type is queried back.

The available Columns that may be used for flexible attribution are:

Column Name	Length
NE_OWNER	4
NE_NAME_1	80
NE_NAME_2	80
NE_PREFIX	4
NE_NUMBER	8
NE_SUB_TYPE	2
NE_GROUP	30
NE_SUB_CLASS	4
NE_NSG_REF	240
NE_VERSION_NO	240



If more Network Attributes are required, a 'Primary' Additional Data type may be created as described on page 43. This will allow an unlimited number of attributes to be defined for the Network Type.

Column Name (Required) (List)

Enter the Table Column name to be used to hold the Network Element Attribute Value.

Column Type (Required, Default) (List)

Enter the required format for the Data to be stored in this column. The valid entries, are VARCHAR2, NUMBER OR DATE. The default value is VARCHAR2.

Note: If an Attribute is validated against a Domain the 'Column Type' for the Attribute must be VARCHAR2

## Column Displayed? (Checkbox)

Check this box if this attribute is to be displayed on the **Network Elements** - **NM0105** form.

## Prompt (Optional)

Enter the text that the User will see when using this network attribute. A maximum of 80 characters is allowed.

Note: A maximum of 12 Characters will be displayed on the Network Elements – NM0105 form.

If a foreign table asset is to be created using this form the prompt field should not exceed 30 characters or an ORA-06502 error will be displayed.

#### Seq No (Required)

Enter the sequence number in which you wish this attribute to be displayed in relation to other attributes entered for the selected Network Type.

### Str Length (Required)

Enter the maximum number of characters allowed for the attribute value.

Note If the attribute value is to selected from a Domain List or generated from an internal database sequence, the allowable string length must be sufficiently long to cater for the resulting value.

#### Mandatory (Checkbox)

Check this box if a value must be entered for this attribute.

Note that if the 'Displayed' checkbox is unchecked, the 'Mandatory' checkbox should also be unchecked.

#### Domain (Optional) List

If the value for this network attribute is to be validated against a System Domain, enter the Domain Name. For example, Sub Class values of 'Left', 'Right' and 'Single' may be held in a system Domain. This will mean that a List of Values containing only those three entries will be available for the User to select from.



System Domains are managed using Domains - HIG9120.

Note: If an Attribute is validated against a Domain the 'Column Type' for the Attribute must be VARCHAR2

## Query (Optional)

A sql\*plus select statement may be used to define a query to dynamically build a List of Values from which to select or validate data entry. The query statement will determine the information that is displayed to the User within the List of Values and also the data which is 'returned' to the calling form as the Attribute value. If required, the select statement may include reference to a single bind variable (a previously entered Attribute value).

When defining a query for use in this manner strict rules apply to the structure of the select statement.

- The Query must return 3 columns.
- The first and second columns returned are the Code and Meaning displayed within the extended LOV respectively.
- The third column returned is not displayed but is the value passed back into the calling form as the Attribute Value (if the third column is the same as the first add an Alias to the first column within the query string).
- The second column returned within the query will be displayed as the Attribute meaning within the form.
- All column names returned by the query must be unique.
- The third column must not have an alias

The example below shows a query string that dynamically builds a List of Values for the Network Type Subclass for a Network Type of 'CSD'.




SELECT
NSC\_SUB\_CLASS NSC\_CODE, NSC\_DESCR NSC\_MEANING,
NSC\_SUB\_CLASS
FROM NM\_TYPE\_SUBCLASS
WHERE NSC\_NW\_TYPE = 'CSD'

In this example the NSC\_SUB\_CLASS column has been returned twice, i.e. as the 'Code' value and as the actual values returned to the calling form. The column used for the 'Code' within the LOV has been aliased to ensure it is Unique.

This guery string returns an LOV as shown below

Figure 11 Network Type Column LOV

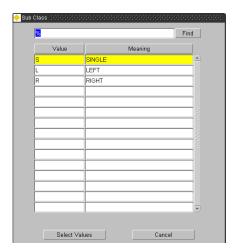


The query may be restricted using a single bind variable that is a value of a previously specified Network attribute. These attributes may include any flexible Network Attributes or fixed columns such as Admin Unit held within the NM\_ELEMENTS\_ALL table. The bind variable may only be referenced once within the query string. The example below shows a query string which uses a bind variable (ne\_admin\_unit) to restrict the List of Values. The query is used for an Attribute named 'Sub Area' where the Sub Area value is a Child of the Admin Unit selected for the Network Element.

SELECT NAU\_UNIT\_CODE CODE,NAU\_NAME,NAU\_UNIT\_CODE FROM NM\_ADMIN\_GROUPS,NM\_ADMIN\_UNITS WHERE NAG\_PARENT\_ADMIN\_UNIT = :NE\_ADMIN\_UNIT AND NAG\_CHILD\_ADMIN\_UNIT=NAU\_ADMIN\_UNIT AND NAG\_DIRECT\_LINK='Y' ORDER BY NAU\_UNIT\_CODE



#### This query string returns an LOV as shown below

Figure 12 Network Column LOV

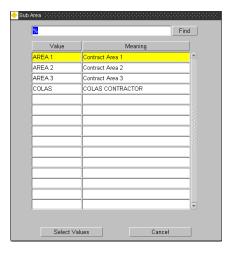

#### Seq Name (Optional)

If the value for this attribute is to be generated from an internal database sequence, enter the sequence name.

## Format (Optional)

If required enter a format mask for the Column. For example, defining a format of '000000' would ensure that the value added for the attribute would be padded out with leading zero's.

Note that the format mask applies to NUMBER and DATE datatypes or Varchar2 datatypes where the value entered is numeric.

#### Default (Optional)

A default value may be defined for a Network Attribute which may be a literal value such as 'G' or '@' a numeric value such as 1 or 2 or may be a standard Oracle formatting function call such as SUBSTR (substring) or CONCAT (concatenate) used to derive the Attribute Value from other Network Attributes. When defining a literal value, e.g. a character or string of characters, as a default it should be enclosed in single quotes. If no User value is added for the Network Attribute the default value will be populated.

When using an oracle function call to derive the Attribute Value, the Attribute must be sequenced after all other Attributes, which it references. It is recommended that Derived Network Attributes are not displayed, i.e. the 'Displayed' check box is not selected, as accidental population of the field will negate the derived default value.

Several examples of using function calls to derive Attribute Values are given below.



Default Value	Outcome
SUBSTR(:NE_NAME_1,1,3)	The first 3 characters of the value entered into the attribute using NE_NAME_1 would be returned
CONCAT(:NE_NAME_1,:NE_GROUP)	The values entered into the NE_NAME_1 and NE_GROUP columns will be concatenated

## String Start (Optional)

If only 'part' of the Value entered for this attribute is to be used in the naming convention for the Network Element, enter the String start position. For example, if the attribute value was 'ABCDEFG' and only the 'CDE' part of the String was required, the Start String position would be entered as '3'.

## String End (Optional)

If only 'part' of the Value entered for this attribute is to be used in the naming convention for the Network Element, enter the String End position. For example, if the attribute value was 'ABCDEFG' and only the 'CDE' part of the String was required, the End String position would be entered as '5'.

## Separator (Optional)

If this attribute is to be used as a component part of the Unique Element Reference, a digit may be used to separate the component parts of the Unique reference. For example, if the Unique Reference was composed of columns NE\_GROUP, NE\_NUMBER AND NE\_SUB\_CLASS and separators were specified as 'I' for column NE\_GROUP and '-' for NE\_NUMBER, the resulting Unique Reference may look like **H001/1-S**.

## Unique Sequence (Optional)

If this attribute is to be used as a component part of the Unique Element Reference, enter the sequence number that this attribute will assume in the Unique naming convention.

#### Unique Format (Optional)

Attributes used as a component part of the Unique Element Reference may have their values formatted when used within the Unique using standard Oracle formatting function calls. This allows features such as right padding with spaces to be incorporated within the Unique of a Network Element. For example, an Attribute is validated against a System Domain with allowable values of 'l' – Interstate and 'CN' – County. This attribute (ne\_sub\_type) is used in the derivation of the Unique. In order to have a Unique with a constant length the Attribute value within the Unique must always be 2 characters in length. However, if a value of 'l' – Interstate is selected this must be padded with a space character. Defining the following statement for the attribute will allow for this

RPAD(:NE\_SUB\_TYPE,2)

## Inherit (Checkbox)

Check this box if a new Network Element of the Network Type selected, created as a result of a Network Operation e.g. Split, will 'Inherit' the properties of the selected Column. For example, columns NE\_GROUP, NE\_SUBCLASS and NE\_OWNER may be used in the naming convention of



a Network Type and each is flagged as 'Inheritable'. If a Network Element of this Network Type was 'Split', the resulting Network Elements would 'Inherit' their values for columns NE\_GROUP, NE\_SUBCLASS and NE\_OWNER from the 'original' Network Element.

#### **Notes**

If a Datum Network Type is not using a Network Type Subclass as a carriageway identifier (see page 24) the NE\_SUB\_CLASS attribute MUST still be defined as a Flexible Attribute. The 'Display' and 'Mandatory' flags may be left unchecked to make the attribute 'transparent' to the User. A default value of 'S' should be defined in the 'Default' field and the 'Inherit' flag MUST be selected.

A Type Subclass of 'S' must also be defined in the Type Subclass panel. No description is needed.

If a Network Type column is used as 'Child Auto-Inclusion' the column value is non updateable in the Elements - NM0105 module.



Figure 13 Type Subclass

Type Colum	ns i	Type Subclass Type Inclusion
	Sub Class	Description
1	S	SINGLE
2	L	LEFT
3	R	RIGHT
		<u></u>

## **Type Subclass**

This window is used to define Network Type Subclass's for the selected Network Type. Network Type Subclass's are commonly used as Indicators to denote the 'type' of a Network Element e.g. Left, Right or Single. The Network Type Subclass may also be incorporated as part of the Element reference number to ensure uniqueness.

The Network Type Subclass may be an important indicator when establishing and using a Route and Offset linear referencing method. When calculating the length of a linear Route, and hence Offsets along the Route, the system must be able to identify the appropriate Elements to base it's calculations on. For example, the length of a Road Network Type Route may be based on the total length of the Single Carriageway Elements plus the total of the Left Carriageway Elements where a Dual Carriageway or Divided highway exists. The Network Type Subclass would allow this distinction to be made.

When referencing events by a Route and Offset method, the position referenced may be ambiguous. For example, an Offset of 2.3 Kilometres on Route S234 may be ambiguous if this reference is locating a point on a Dual Carriageway or Divided Highway. By using Network Type Subclass's it is possible to Uniquely identify the reference, i.e. either the Left side or the Right side.

Each Network Type and Network Type Subclass combination may have a unique set of XSP values. These are defined using **XSP and Reversal Rules-NM0305**.

When you enter this window any Type Subclass's already entered for the selected Network Type will be displayed. To add another Network Type Subclass press the [*Create Record*] button on the menu toolbar (or press F6).

#### Seq (Required)

Enter a sequence number to order the display of the Network Type Subclasses within the selected Network Type.

The Sequence number is also used to define the precedence of how the Route Offset or SLK/Offset is calculated. Consider the example in Figure 14



Figure 14 Subclass precedence

Sequence	Subclass	Description
1	S	Single
2	L	Left
3	R	Right

The table in Figure 14 displays the Network Type Subclass's for a Road Network Type. Figure 15 shows the preferential order taken to calculate the Route Offset or SLK when a new Network Element is added to a route.

When an Element whose type is given along the top row of the table is appended to an Element of the type given in the left column of the table, the resultant O will allow the calculation of the SLK. The X indicates that although the SLK will be derived a warning message will be displayed.

Figure 15 Subclass precedence

	Single	Left	Right
Single	0	0	0
Left	0	0	0
Right	X	X	0

## Subclass (Required)

Enter a code for the Network Type Subclass. A maximum of 4 characters is allowed.

## Description (Required)

Enter a description for the Network Type Subclass. A maximum of 80 characters is allowed.


#### **Note on Sub Class**

If a Datum Network Type is not using a Network Type Subclass as a carriageway identifier (see page 24) the NE\_SUB\_CLASS attribute MUST still be defined as a Flexible Attribute. The 'Display' and 'Mandatory' flags may be left unchecked to make the attribute 'transparent' to the User. A default value of 'S' should be defined in the 'Default' field and the 'Inherit' flag MUST be selected.

A Type Subclass of 'S' must also be defined in the Type Subclass panel. No description is needed.



Figure 16
Type Inclusion

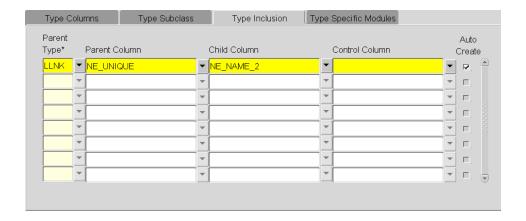

## **Type Inclusion**

Each Network Type may have a property of Inclusion. This is the Inheritance of Group membership based on the association of a member with the 'parent' group via a common network Attribute, Unique Name, Admin Unit etc.

Multiple Type Inclusions are also permitted whereby a Network Element, or Group may be automatically included in more than one 'parent' Group.

When a Network Type Inclusion is applied to a Datum Network Type, any Network Elements of the Network Type will be automatically included as members of its parent group(s). If the 'parent' group is a Linear Group, connectivity rules will be used to derive the Elemental offsets or displacements along the Route. Note that the 'parent' Network Type specified in a Type Inclusion for a Datum Network Type may be the Network Type associated with a NON-Linear group.

Network Type Inclusions may also be defined for Network Types associated with Network Groups, whereby a Group is automatically added as a member of another Network Group, thus forming a Group of Groups.

If when creating a new Network Element or Group which has a 'parent' Type Inclusion defined, the 'parent' group does not already exist, it may be created automatically by the system if the 'Auto-Create' checkbox is selected for the appropriate Network Type inclusion.

The Control Column field is used to ensure the uniqueness of the Network Element reference within the group.

Consider 2 examples.

#### Example 1

A Datum Network Type of '**DOT**' has a prescribed naming convention, which uses the following network type columns:

Table Column	<b>Attribute Name</b>	Example value
NE_GROUP	Group	H001
NE_NUMBER	Number	1
NE_SUBCLASS	Subclass	S



A Network Element of this type may have the Unique Reference **H001/1-S**. These '**DOT**' Network Elements have an automatic inclusion into their 'parent' Route group.

The Datum Network Type has the following Type inclusion defined.

Parent Type	Parent Column	Child Column	Control Column
CRT	NE_UNIQUE	NE_GROUP	NE_NUMBER

The parent Route is created using Network Type 'CRT' and the unique Route reference is held in table column **NE\_UNIQUE**, e.g. **H001**.

When a new Datum Network Element of type 'DOT' is created, the NE\_GROUP attribute will be entered by the User. The NE\_GROUP of a Network Element of type 'DOT' equates to the Unique reference (NE\_UNIQUE) of it's parent route (Network Type 'CRT'). Defining the NE\_UNIQUE and NE\_GROUP columns in the 'Parent Column' and 'Child Column' fields respectively for Network Type 'DOT' will result in the Network Element being auto included as a member of it's parent Route group.

The Control Column (**NE\_NUMBER**) will ensure that the number attribute is unique and will start at '1' for each new Group.

## Example 2

An Organisation is sub-divided into 6 Regions, each with a different Admin Unit. When a Network Element is created it is given the Admin Unit of the Region it is within. A Network Group exists for each of the Regions, each with it's given Admin Unit.

The Datum Network Type has the following Type inclusion defined.

Parent Type	Parent Column	Child Column	Control Column
REGO	NE_ADMIN_UNIT	NE_ADMIN_UNIT	

When a new Element is created it will automatically be included as a member of the appropriate Regional Group by virtue of it's Admin Unit number.

Parent Type (Required) List

Enter the Parent Network Type for the Selected Type of Network.

#### Parent Column (Required)

Enter the table column used to store the Unique Reference of the parent Group, e.g. NE\_UNIQUE.

Table 1 displays the available Columns.

#### Child Column (Required)

Enter the table column used to store the 'foreign' key of the child network type, e.g. NE\_GROUP.

Table 1 displays the available Columns.



#### Table 1

Column	Description	
NE_ID	The unique Internal Id of the Element/Group	
NE_UNIQUE	The User defined Unique of the Element/Group	
NE_TYPE	The Type of Network Element	
	(G=Group,S=Element)	
NE_NT_TYPE	The Network Type Code	
NE_DESCR	The Element/Group description	
NE_LENGTH	The Length of the Datum Element	
NE_ADMIN_UNIT	The Admin Unit of the Group/Element	
NE_DATE_CREATED	The date on which the Group/Element was	
	created	
NE_DATE_MODIFIED	The date on which the Group/Element was	
	modified by a User	
NE_MODIFIED_BY	The Username of the User who modified the	
	Group/Element	
NE_CREATED_BY	The Username of the User who created the	
	Group/Element	
NE_START_DATE	The User defined start date for the	
	Group/Element.	
NE_END_DATE	The End Date of the Group/Element if it has	
	been closed.	
NE_GTY_GROUP_TYPE	The Group Type code if the NE_TYPE is 'G'	
NE_OWNER	User definable Flexible Attribute	
NE_NAME_1	User definable Flexible Attribute	
NE_NAME_2	User definable Flexible Attribute	
NE_PREFIX	User definable Flexible Attribute	
NE_NUMBER User definable Flexible Attribute		
NE_SUB_TYPE	User definable Flexible Attribute	
NE_GROUP	User definable Flexible Attribute	
NE_NO_START Start Node of the Datum Element		
NE_NO_END		
NE_SUB_CLASS	The Subclass of a Datum Element **	
NE_NSG_REF	User definable Flexible Attribute	
NE_VERSION_NO	User definable Flexible Attribute	

<sup>\*\*</sup> see note on page 25.

#### Control Column (Optional)

Enter the table column used to ensure uniqueness of the group membership reference numbers, e.g. NE\_NUMBER. If a table column is added for this field, the Number generated will be sequenced relative to its 'parent', i.e. for each new 'parent' Group the count will start at '1'.

#### Auto Create (Optional)

If the 'parent' group does not already exist, it may be created automatically by the system if the 'Auto-Create' checkbox is selected.

Note that if the Parent Network Type is not flagged as Pop-Unique the Parent Column must be specified as NE\_UNIQUE.




When creating an Element of this Network Type via the *Elements – NM0105* module a List of Values will be provided for the Attribute that has been defined as the Child Column in the Network Type Inclusion. If the parent Group does not yet exist the List of Values may be cancelled and the appropriate value added for the Attribute. The value entered will follow and formatting rules specified in the 'Format' field of the Type Columns panel. When the Element is saved the Parent Group will be created with the Group Unique being derived from the value entered for the 'Child' Attribute.

If the Network Type associated with the 'parent' Group type has a Node Type associated with it, the Group Type cannot be flagged as 'Auto-Create'. The 'Validate Network Type' button (see page 28) should be used to detect any invalid Network Metadata.

Note that if the specified 'Child Column' in a Type Inclusion is not flagged as mandatory, i.e. optional, the Element (Datum or Group) will only be autoincluded as a member of the parent Group if a value is added.



Figure 17

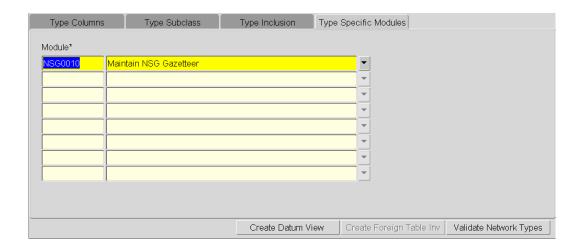

## **Type Specific Module**


The 'Type Specific Modules Tab' is used to define which Network modules, Elements of the selected Network Type may be viewed within. If a module is defined for a Network Type, Elements of that Type cannot be viewed with the following Forms:

- NM0105 Elements
- NM0110 Groups of Sections
- NM0115 Groups of Groups

This feature is currently used within Street Gazetteer Manager to prevent Streets (Network Type NSGN) being maintained within the modules mentioned above by defining the NSG0010 module as the specific module used to manage these Network Types.

Note that NSG0010 must not be removed as a Type Specific Module for Network Type NSGN.



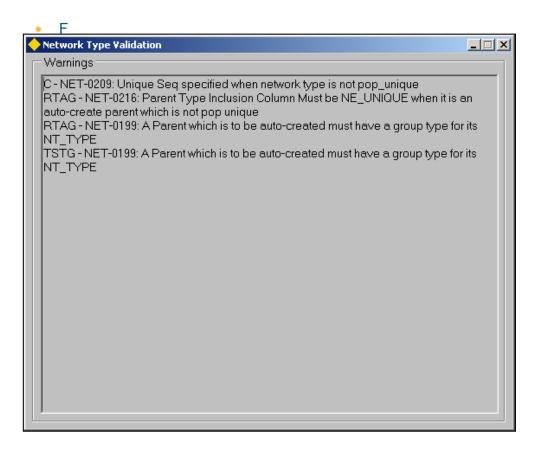

## **Validate Network Types**

Figure 19

Validate Network Types

The metadata defined for Network Types may be checked by pressing the **[Validate Network Type]** button on the form. This will check the Columns specified for attributes are valid, Unique Seq values are valid, Type Inclusion Properties are valid etc.

If any errors are detected these must be corrected before data is entered using any invalid Network Types. The Error number is preceded with the 'Invalid' Network Type, e.g. 'RTAG - NET 199 A Parent which is to be autocreated must have a group type for its NT\_TYPE' where RTAG is the invalid Network Type.

Table 2 displays a full list of Network Type Validation error Messages.



#### Table 2

Faran Oada	Manadan	
Error Code	Meaning	
NET 198	Sub Class not valid on Network Type	
NET 199	A Parent which is to be auto-created must have a group type	
	for its NT_TYPE	
NET 200	A Parent which is to be auto-created may only have a single	
	group type for its NT_TYPE	
NET 201	Invalid ne_type supplied	
NET 202	Network Type not supplied	
NET 203	Invalid Network Type supplied	
NET 204	Element Description not supplied	
NET 205	Admin Unit must be supplied	
NET 206	Start Date must be supplied	
NET 207	Datum Network Types must have a node type associated	
NET 208	Unique Seq used more than once	
NET 209	Unique Seq specified when network type is not pop_unique	
NET 210	No Unique Seq specified when network type is pop_unique	
NET 211	Column is not a valid NM_ELEMENTS_ALL column	
NET 212	Column is defined as a child type-inclusion column more than	
	once	
NET 213	Column is defined as a code control both as a child inclusion	
	and as a parent inclusion	
NET 214	Column is defined as a parent type-inclusion column more	
	than once	
NET 215	Column is defined as a code control column more than once	
NET 216	Parent Type Inclusion Column Must be NE_UNIQUE when it is	
	an auto-create parent which is not pop unique	
NET 217	Column cannot be mandatory when an auto-create type	
	inclusion parent	
NET 218	Column forms part of unique sequence, but is not parent type	
	inclusion column	
NET 257	Cannot auto-create parent where parent type has an	
	associated Node Type	



# **Creating a Foreign Table Inventory Type for Datum Network Types**

Figure 20

Inventory Types may be defined to represent Datum Network Elements using the Foreign Table functionality available via module **NM0410 – Inventory Metamodel**.

Create Foreign Table Inv

This allows flexible attributes and other 'fixed' information relating to Datum Network Elements to be used when defining queries such as Parameter Based Inquiries (*NM7040*) and Merge Queries (*NM7050*).

Figure 21

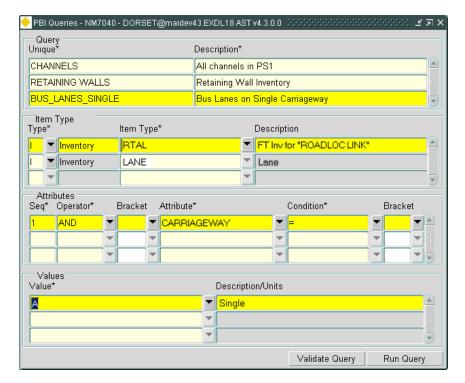


Figure 21 shows an example of a PBI query definition where the Foreign Table Inventory type for a Datum Network Type is being used to restrict the query to only those parts of the selected Region of Interest where the Carriageway Type is 'A' – single (CARRIAGEWAY is an attribute of the Datum Network Type).

Foreign Table Inventory definitions for any Datum Network Types defined in *NM0002 – Network Types* may be created by pressing the [Create Foreign Table Inv] button on in *Network Types - NM0002* (Network Manager Admin Guide).

This will create a 'Continuous' Inventory Type for the selected Datum Network Type of category 'X' - Generated Exclusive Inventory Type. The Inventory Type Name will be defaulted to the Network Type but this may be amended using the 'Inventory Type' field in the 'Create Foreign Table Inv' (Figure 22) dialogue. The Inventory Type description will be in the format of: FT Inv for "Datum Network Type Description" e.g. FT Inv for "Classified Roads". This Inventory Type description may be amended if required.



A foreign table join will be created to a database view. The naming convention of the View name is as follows:

V NM < Item code>

for example V\_NM\_CLAS

where 'CLAS' is the Inventory Type code for the Datum Network Inventory Type.

The remainder of the Foreign Table join definition is as follows:

Primary Key Column NE\_FT\_PK\_COL

LR NE Column Name NE ID

LR Start Chain NE\_BEGIN\_MP
LR End Chain NE\_LENGTH

An Inventory Attribute will be created for each of the flexible network attributes defined in the '*Type Columns*' field for the Datum Network Type in *NM0002 – Network Types*, as well as Attributes for 'fixed' attributes such as Length, Admin Unit and Description. Any unwanted Inventory Attributes may be 'End Dated' by selecting the required Attribute and pressing the [**Delete**] button on the menu toolbar.

Table 3 displays the Inventory Attributes that will be created:

#### Table 3

Attribute Name	Screen Text	View Column Name
NE_ID	Id	NE_ID
NE_FT_PK_COL	Ft Pk Col	NE_FT_PK_COL
NE_UNIQUE	Unique	NE_UNIQUE
NE_BEGIN_MP	Begin Mp	NE_BEGIN_MP
NE_LENGTH	Length	NE_LENGTH
START_NODE_ID	Start Node Id	START_NODE_ID
END_NODE_ID	End Node Id	END_NODE_ID
NE_DESCR	Descr	NE_DESCR
NE_START_DATE	Start Date	NE_START_DATE
NE_ADMIN_UNIT	Admin Unit	NE_ADMIN_UNIT
ADMIN_UNIT_CODE	Admin Unit Code	ADMIN_UNIT_CODE
Attribute 1	Attribute 1	Attribute 1
Attribute 2	Attribute 2	Attribute 2
etc		

If any of the Network Attributes defined in the 'Type Columns' field for the Datum Network Type in NM0002 – Network Types are validated against a System Domain (maintained using HIG9120 – Domains) an Inventory Domain will be created and the Domain associated with the appropriate Attribute allowing a List of Allowable value to be displayed for the Attribute when defining a query such as PBI or Merge.

The Inventory Domain created will derive its name from the name of the System Domain. If an Inventory Domain of this name already exists the



Inventory Domain Title will checked against the System Domain Title. If the Domain Titles are also the same a new Inventory Domain will not be created and the existing Inventory Domain will be associated with the Inventory Attribute.

If however, the Inventory Domain and System Domain names are the same but the Inventory and System Domain Titles are different a new Inventory Domain will be created using the following naming convention:

<Datum Network Type Name\_HIG\_DOMAIN Name>

for example CLAS\_CARRIAGEWAY\_TYPE

where 'CLAS' is the Datum Network Type and 'CARRIAGEWAY\_TYPE' is the System Domain Name.

Note that if additional lookup values are added to the System Domain these must also be added to the corresponding Inventory Domain.

An appropriate User Role must be defined in Order for an Exor User to have access to the Inventory Type.

When the button is pressed a dialogue will be displayed as in Figure 22.

#### Figure 22



Inventory Type (Required) (List)

The Inventory Type Code will default to the Network Type Code. This may be changed if required. **A maximum of 4 characters is allowed.** 

#### Delete Inv Type if exists (Checkbox)

If this flag is selected and an Inventory Item type of the Code entered in the 'Inventory Type' field already exists and also of Category 'X' - Generated Exclusive Inventory Type, the existing Inventory Type will be deleted.

To create the Foreign Table Inventory Type press the [Proceed] button or [Cancel] to close the dialogue. If the [Proceed] button is pressed a message will be displayed informing the User that the Foreign Table Inventory Type will be created. To carry out the operation press the [OK] button.



# **Create Datum View**

#### Figure 23


Create Datum View

If a 'Primary' Additional Data Item Type (see page 43) has been Linked to a Datum Network Type a 'Datum View' should be created by pressing the [Create Datum View] button on the Form. The resultant view will join the Network Attributes and the Additional Data Attributes together and may be used as the basis of a GIS Theme.



# Group Types - NM0004

Figure 24 Group Types Menu

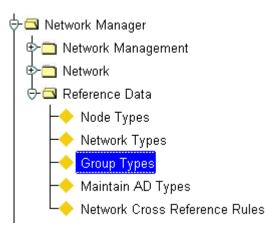

The Group Types Form is used to define the Network Groups Types and Group Relationships used within your Organisation. Network Groups allow a collection of Network Elements to be grouped together or 'categorized', allowing different parts of the Network to be viewed and analysed for different functional reasons.

For example, a Group Type would be created to represent Network Routes. These Route Groups would comprise of all the Network Elements which when 'chained' together would form the Network Route. Group types such as 'Route' groups would be flagged as being 'Linear'. A linear group uses the connectivity of its member Elements (i.e. the End Node of one Element is the Start Node of the adjoining Element) to derive Offsets or SLK values along the Route.

Points of physical discontinuity along a Route, for example, at a staggered junction or Intersection, may be overcome to allow 'logical' connectivity along the Route by the addition of Distance Breaks

The system will also cater for discontinuities caused by irregular measured distances of member Network Elements by created a Point of Equation at the discontinuous Node Point. A Point of Equation may be either a Gap or an overlap. For more information on Points of Equation (POE) refer to the Network Manager User Guide.

Group Types may also be non-linear, such as Groups representing a geographical region or area of interest based on Inventory Items with similar attribution.

Group Type may also be defined as allowing portions of Network Elements to be included. These group types are known as partial groups. Partial Groups may be created as a result of a query of Inventory Items with similar attribution.


Careful planning of Group Types and Group Type hierarchies will allow reporting on a Network at any Level, from District or County level right through the hierarchy, down to individual Routes or parts of Routes between Intersections or Junctions for example.




Figure 25 shows an example of the various levels within a group hierarchy. Examples of the Group Type Names are displayed in Brackets.

Figure 25
Group Type Hierarchies

#### **Example of Gazetteer Group Hierarchy**

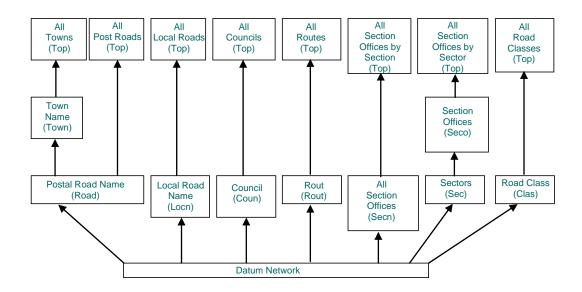

From this example the structure of the 'All Section Offices by Sector' hierarchy may be depicted as shown in Figure 26.

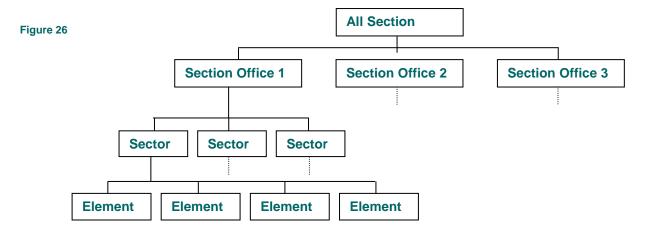


This hierarchy of Network Groupings would allow reporting on the Entire Network (All Section Offices), Individual Section Office Area (Section Office 1 etc.), Individual Sectors within a Section Office Area (Sector 1,2 etc.) or the Individual Network Elements, which are members of the Sector Grouping.

Associating a Network Element to the first level of groups is carried out using Groups of Elements ( Network Manager User Guide), or through the Group Creation function in Create Network Extent ( Network Manager User Guide).



Additional Attributes may be defined for a Group Type using the *NM0700* – *Additional Data Types* module (page 43). There are two distinct types of Additional Data. 'Primary' Additional Data is treated as extra User defined Attributes of the Group whereas non-primary AD may be used to hold information that relates to the Group, such as Traffic Sensitivity or Reinstatement Designations.

Figure 27 Group Types

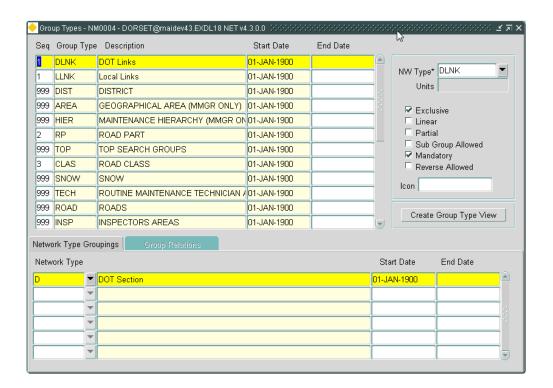

#### **Group Types**

When you enter this window the cursor sits in the 'Seq' field waiting for a new Group Type to be entered or existing Group Types to be queried back. To query back an existing Network Type press the [*Enter Query*] button on the menu toolbar (or press **F7**), enter some selection criteria, then press the [*Execute Query*] button (or press **F8**).

#### Seq (Required)

Enter a Sequence Number to order the Group Type relative to other Types.

#### Group Type (Required)

Enter a Code for the Group Type. A maximum of 4 characters is allowed.

#### Description (Optional)

Enter a description of the Group Type you have just entered. This description will be used in the Gazetteer. A maximum of 40 characters is allowed.

#### Start Date (Required)

Enter the date from which Groups of this Type may be created.

#### End Date (Optional)

Enter the date to which Groups of this Type may be created.



## **Group Type Properties**

#### NW Type (Required) List

Enter the Network Type from which Groups of this type will derive their characteristics. This will affect such properties as the Group naming convention and units of measurement used for the Group. For more information on Network Types refer to page 12.

# Units (Display Only)

The unit of measurement defined for the selected Network Type will be displayed.

#### Exclusive (Checkbox)

Check this box if a Network Element, or any part of the Element, may only be a member of one Group of the selected Type. For example, if a Network Element, or any part of it, may only be a member of one Route Group the exclusivity flag should be checked.

## Linear (Checkbox)

Check this box if Groups of this type are linear, i.e. the member Elements are connected at Node Points or by using Distance Breaks. Route Offsets or SLK values will be derived for Groups of this type. If a Group Type is flagged as 'Linear', the Group must be at the 'first level' in the hierarchy, i.e. it is a Group of Elements and cannot have Sub Groups as members.

#### Partial (Checkbox)

Check this box if Groups of this type may contain 'Partial' Network Elements, i.e. the entire measured length of an Element is not included in the Group membership. This may be typical of Groups created as a result of a PBI query (Asset Manager User Guide) or a Partial Network Extent. If a Group Type is flagged as 'Partial', the Group must be at the 'first level' in the hierarchy, i.e. it is a Group of Elements and cannot have Sub Groups as members.

#### Sub Group Allowed (Checkbox)

Check this box if Groups of this type may have other groups as members, i.e. the Group is a Group of Groups. An example can be seen in Figure 25, where the 'Section Office' group type SECN, has sub groups of type SECR as it's members. The Group Types which may be Sub Groups of the selected Group Type are defined in the Group Relations window of this form .


### Mandatory (Checkbox)

Check this box if a Network Element of the Network Type specified in the Network Type Groupings window must belong to a Group of this Type. For example, if Elements of a Datum Network Type of 'Classified Roads' must belong to their 'parent' Route Group, the Route Group Type would be flagged as Mandatory.



## Reverse Allowed (Checkbox)

Check this box if a Group of this type may have member Elements which do not share the same cardinality. This may occur for example, on a Route used for Inspection Purposes. Consider the example below where the 2 Elements shown are both members of the same Inspection Route.

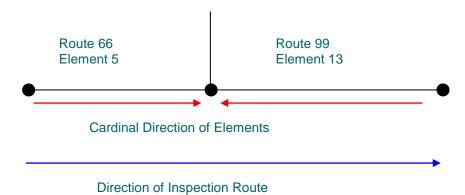

Icon (Optional) (Browse)

An icon file may be associated to represent this Group Type and will be displayed in the 'Hierarchy' area of the Gazetteer/Navigator Form. To browse the system for the appropriate icon file press the 'Open Folder' button adjacent to the field. This will call a Standard Windows 'Open' dialog box as shown in Figure 28

Figure 28 'Open' dialog box





Figure 29 **Network Type Groupings** 

Network Type Groupings Group Relations		
Network Type	Start Date	End Date
L LOCAL Section	01-JAN-1900	<u> </u>

# **Network Type Groupings**

This window is used to specify the Network Types, which may be members of the selected Group Type. This window is only available for Groups that have not had the 'Sub Group Allowed' flag checked.

Network Type (Required) (List)

Enter the Network Type that may be a member of the selected Group Type.

Start Date (Required)

Enter the date from which Elements of this Network Type may be added as members of the selected Group Type.

End Date (Optional)

Enter the date to which Elements of this Network Type may be added as members of the selected Group Type.



Figure 30 Group Relations



# **Group Relations**

This window is used to define the Subgroups that a Group of the selected type may have as members. This window will only be available for those Group Types that have the 'Sub Group Allowed' flag checked. Only Group Types entered here will be displayed in the List of Value for Sub Groups when a Group hierarchy is being built in *Groups of Groups - NM0115* for the selected Group Type.

Child Group (Required) List

Enter the Group Type, selectable as a Sub Group of the selected Group Type.

Start Date (Required)

Enter the date from which Groups of this Type may be added as members of Groups of the 'Parent' type selected.

End Date (Optional)


Enter the date to which Groups of this Type may be added as members of Groups of the 'Parent' type selected.

A pictorial representation of the Group Hierarchy will be displayed in the adjacent window. To expand the hierarchy one level, click the + symbol adjacent to the Group Type required. To collapse the hierarchy click the – symbol.



# Additional Data Types – NM0700

Figure 31 Additional Data Types Menu

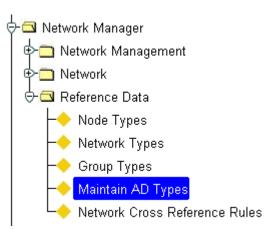


Base Datum Network Types or Group Types may have Additional Data associated with them in order to provide extra Network Attributes and/or to 'tag' relevant data to a Group or Base Datum. This mechanism is used to provide the additional attributes required on RMMS Maintenance Sections within the UK and Associated Street Data (ASD), e.g. Reinstatement Category or Traffic Sensitivity on Level 1 Streets within the National Street Gazetteer. Additional Data is held internally as Asset Data and therefore an appropriate Asset Type must be defined with the relevant attributes using the *Inventory Metamodel – NM0410* module (refer to the Asset Manager System Admin Guide for details). When defining the Associated Data Asset Type(s) the following rules must be observed

- The Asset Type Category must be 'G' Additional Data
- The Admin Type of the Asset Type must be the same as the Admin Type of the Network Type / Group Type to which it will be associated
- A User must have NORMAL Role based and Admin Unit based access to the Asset Type in order to create a Network Element with Associated Data

Additional Data falls into 1 of 2 categories, namely '*Primary*' and '*Non-Primary*'. Primary AD is treated as additional attributes of the Network or Group to which it is associated and is maintained along with the actual Network Attributes on the 'Attributes' Tab of the relevant Form. Only a single Primary AD Item, i.e. one set of attributes, will be created for a Group or Network Type. This will be created automatically be the system when a new Group or Network Element of the type associated with the AD Type is created. An example is shown below.



Figure 32

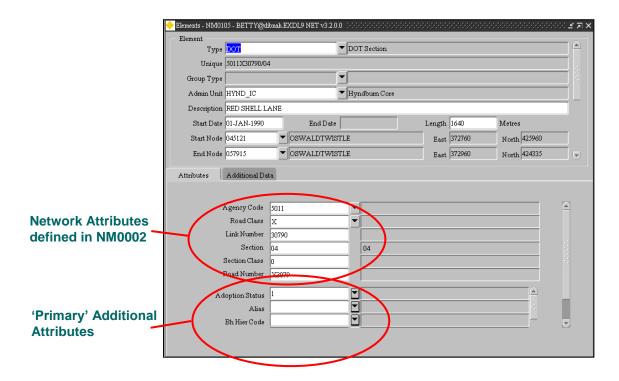

Non Primary Additional Data may be used to associated 'events' or other information with a Network Element or Group. For example a 'Street' may have many associated 'Reinstatement' or 'Special' Designations. Each of these 'event' Types would be held internally as a different Asset Type and associated with the appropriate Network Type and or Group Type combination. If a Network Type or Group Type is only permitted a single record of a particular Associated Data Type, this may be enforced by checking the 'Single Row' check box.


Non-Primary AD is maintained using the 'Additional Attributes' Tab on the appropriate Form. An example is shown in Figure 33

Figure 33

	SG NETWORKS		STREET NETW						
				OIG	KITFE				-1
Unique 35	21237								
Group Type O	OFFN		▼ Official Name						
Admin Unit R	ROSS_IC		Rossendale Core						
Description H	OLLIN WAY DOWNHA	AM AVENUE							
Start Date 19	-MAY-2004	End Date			Length		Metres		
Start Node 57	72188 Crea	ted for NSG in	mport		East	381258	North	423893	
End Node 56	59244 ▼ Crea	ted for NSG in	mport		East	381353	North	423936	
	Sequence No								
	Reinstatement Type			_	Carriageway Ty	rpe 1 - 10 to	30 MSA		
	Whole Road	_		_	Yes				
	Location Text								
				▼   ▼					
H				▼   ▼					
		L							⊌
								X	



Figure 34 Maintain Additional Data

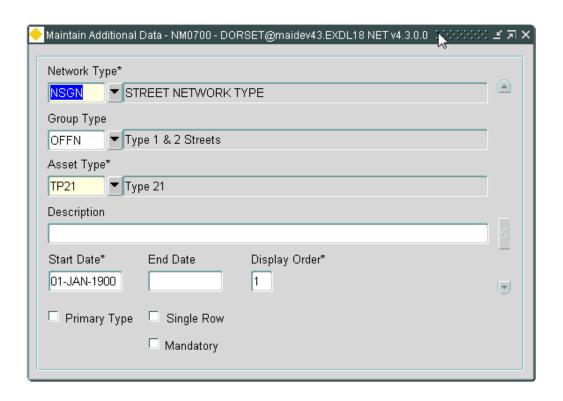

### Network Type (Required) List

Select the Network Type for which to associate the Additional Data Asset Type

# Group Type (Optional) List

Select the Group Type for which to associate the Additional Data Asset Type

# Asset Type (Required) List

Select the Asset Type used to 'hold' the Associated Data. The list of allowable values will be restricted to those Asset Types of Category '*G* – *Associated Data*'

#### Description (Required, Default)

A default Description for the Network/Group Type Asset Type Link will be created. This may be amended as required

#### Start Date (Required)

Enter a Start date for the Asset Type / Network Type Link. AD Items may not be created before this date

## **End Date**

To end date the Link between the Asset Type and the Network/Group Type enter the End Date. No further AD Items of this type may be associated with the Network/Group Type after this date.

#### Display Order (Required)

If more than one Non-Primary AD Type exists, the display order of Item Types may be determined by entering the appropriate display sequence.



# Primary (Checkbox)

If this is the 'Primary' AD Type check this box. The 'Single Row' and 'Mandatory' checkboxes will also be checked by the system and made non – updateable.

#### Single Row (Checkbox)

This checkbox should be selected if only a single AD Item of this type is allowed. If this is unchecked there is no limit to the number of Items of this type that may be created.

#### Note that Primary AD Types will always have this option checked.

# Mandatory (Checkbox)

This checkbox should be selected if all Network Elements associated with this AD Type must have at least AD item of this type.


Note that Primary AD Types will always have this option checked.

Note: If a 'Primary' Additional Data Item Type has been Linked to a Datum Network Type a 'Datum View' should be created by pressing the [Create Datum View] button in the Network Types – NM0002 module. The resultant view will join the Network Attributes and the Additional Data Attributes together and may be used as the basis of a GIS Theme.




# Network Cross Reference Rules – NM0005

Figure 35 Network Cross Reference Rules Menu

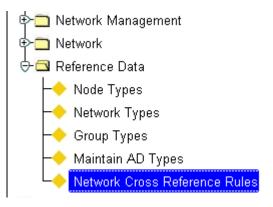

This form shows the valid relationship between the different 'Types' of street within the NSG.

Figure 36 Network Cross Reference Rules

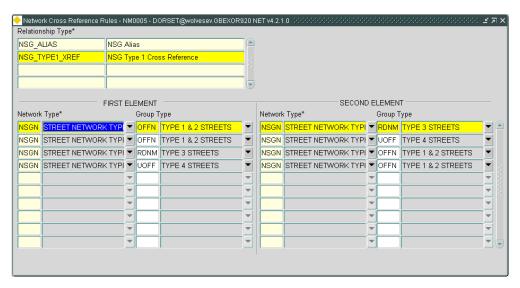

These rules are where an implicit relationship between streets are not used because of the lack of 'ESUs'.

Where streets have been defined at 'Level 1' (i.e. with no 'ESUs'), 'Type' 3 and 4 streets have to be cross referenced explicitly to 'Type' 1 or 2 streets.

These cross references are contained in the 'Type 12' records in the NSG files.

The 'USRN' field in the 'Type 12' record would normally have the 'Type' 1 or 2 street and the 'XREF\_ID' field on the 'Type 12' record would have the 'Type' 3 or 4 street.

As the data within the NSG files has proven to be a little inconsistent the 'Network Cross Reference Rules' allows for the 'Types' 1 and 2 streets to be in the 'XREF\_ID' field and the 'Types' 3 and 4 streets to be in the 'USRN' field (As shown in 'FIRST ELEMENT' and 'SECOND ELEMENT').

This module is used and maintained by exor staff and should not be updated without first contacting the exor support staff.



Additional Data Types	39	Group relations	43
Asset Type	46	Group Type	39
Description	46	Group Types Properties	40
Display Order	46	Network Type Groupings	42
End Date	46	Seq	39
Group Type	46	Start Date	39
Mandatory	47	<b>Group Types Properties</b>	
Network Type	46	Exclusive	40
Primary	47	Icon	41
Single Row	47	Linear	40
Start date	46	Mandatory	40
Admin Type	15	NW Type	40
Autoinclusion		Partial	40
Auto Create	28	Reverse Allowed	41
Child Column	27	Sub Group Allowed	40
Control Column	28	Units	40
Parent Column	27	National Street Gazetteer	12, 44
Parent Type	27	NCHRP	12
Datum 4, 8, 12, 13, 14, 15, 16, 23, 25	, 26, 27, 28, 29, 32,	Network Reference data	
33, 34, 35, 36, 40, 44, 47		Flexible Network Attributes	17
Elements - NM0105	13, 17, 23	Network Reference Data	3
Flexible Network Attributes		Additional Data Types	44, 48
Column Displayed	18	Group Types	37
Column Name	18	Network Type	12
Column Type	18	Node Types	10
Default	21	Process Flow	4
Domain	18	Network Type	
Format	21	Autoinclusion	26
Inherit	22	Subclass	24
Mandatory	18	Network Type Groupings	
Prompt	18	End Date	42
Query	19	Network Types	42
Seperator	22	Start Date	42
Seq Name	21	Network Types	
Seq No	18	Admin Type	15
Str Length	18	Datum	14
String End	22	Description	15
String Start	22	Linear	16
Unique Format	22	Network Type	14
Unique Sequeb	22	Node Type	15
Unique Sequence	22	Pop Unique	16
Group Relations		Unique	14
Child Group	43	Unit	16
End Date	43	Product Options	5
Start date	43	Type Specific Module	30
Group Types		Type Subclass	
Description	39	Seq	24
End Date	39	Subclass	25
Example Group Hierarchy	38		