

ADVANCED BATTERY CHECK VD

USER MANUAL

Version 1.0 standalone

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

TABLE OF CONTENT

1. PREFACE ... 3
1.1 Legal notice ... 3
1.2 Terms and conditions ... 3
1.3 Disclaimer ... 3
2. INTRODUCTION ... 4
2.1 Prerequisites ... 4
2.2 Features ... 4
3. INSTALLATION AND SETUP ... 5
3.1 STEP 1 – Translating ABC VD to preferred language ... 7
3.2 STEP 2 – Setting up ABC VD icons ... 8
3.3 STEP 3 – Setting up ABC VD time format ... 10
3.4 STEP 4 – Setting up ABC VD mobile devices for notifications ... 11
3.5 STEP 5 – Setting up ABC VD users to receive e-mail notifications ... 13
3.6 STEP 6 – Setting up ABC VD currency ... 15
4. USING ABC VD ... 16
4.1 - ABC VD battery devices list section and update button ... 17
4.2 – ABC VD quick setup section ... 19
4.3 – ABC VD excluded devices section ... 20
4.4 – ABC VD product info section ... 21
4.5 – ABC VD selected device product battery setup section ... 22
4.6 – ABC VD global variables ... 23
5. APPENDIX 1 ... 25
6. APPENDIX 2 ... 26

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

1. PREFACE

1.1 LEGAL NOTICE

Fibaro and **Home Center 2 (HC2)** are registered trademarks of **Fibar Group S.A.** registered in Poland and other countries.

1.2 TERMS AND CONDITIONS

Permission to use, copy, modify, and distribute this software and its documentation for educational, research, personal use and non-profit purposes, without fee and without a signed licensing agreement, is hereby granted, provided that the above copyright notice, with "Terms and Conditions" and "Disclaimer" appear in all copies, modifications, and distributions.

It is strictly forbidden to sell, rent, lease and/or lend this software for profit without prior consent from the Author. Please contact the Author by e-mail:

z.sankovic@gmail.com for commercial licensing opportunities.

1.3 DISCLAIMER

This software is provided by copyright owner "as is" and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall the author and distributor be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

Fibar Group S.A. and their employees **are not** responsible for support of the ABC VD. Please contact the author, on the Fibaro Forum, for any questions or support required.

The Author however, wishes to acknowledge the help received from the Fibar Group S.A. in that they have kindly supplied the use of a HC2 for development purposes, free of charge.

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

2. INTRODUCTION

Advanced Battery Check VD (further in text ABC VD) scans for all included battery devices and adds them to the list sorted by either battery level, device ID or room ID depending on user settings. Also it can send list of all devices or just devices that needs battery to be replaced to e-mail and/or popup. Can also send push notification with the worst battery status.

2.1 PREREQUISITES

- Fibaro Home Center 2 with firmware 4.160 or greater


2.2 FEATURES

- Scans for all battery powered devices adds them to the list and shows their battery level status.
- It is possible to scroll through the list of battery devices and see battery level, type, amount of battery needed for selected device and price of the battery (if entered by user).
- Easy adding or removing battery devices to be ignored
- Included 30 types of battery devices (products) in ABC VD version 1.0 for the list please check APPENDIX 2
- Automatic recognition and adding of not included types of devices (products) for which user can setup battery type, amount needed and price
- Predefined types of battery types including Unknown and Rechargeable
- Sends list of all battery devices found or only dead devices and devices with battery level bellow 35% to e-mail and popup notification depending on user selection.
- Calculates total price for devices that need battery replacement on the bottom of the list sent to e-mail (user need to setup currency and price for batteries)
- Sends push notification for device with lowest battery level found or dead device
- It can automatically remember date when battery is replaced on device after updating the list. This is done by comparing previous measured battery level with the current one.
- VD has built in multi-language support with 28 languages included (see APPENDIX 1 for the list). VD can use HC selected language or user can select any other available language. VD will be automatically translated to selected language (visible after refreshing page on browser or refreshing network data on Fibaro mobile application)
- Easy setup for VD icons (on UHAS™ compatible version is this even easier)
- Global variables are automatically added, monitored and repaired and does not require user intervention

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

3. INSTALLATION AND SETUP

ABC VD can be imported into HC2 by choosing "Add or remove device" on the devices page by choosing the option to import a Virtual Device:

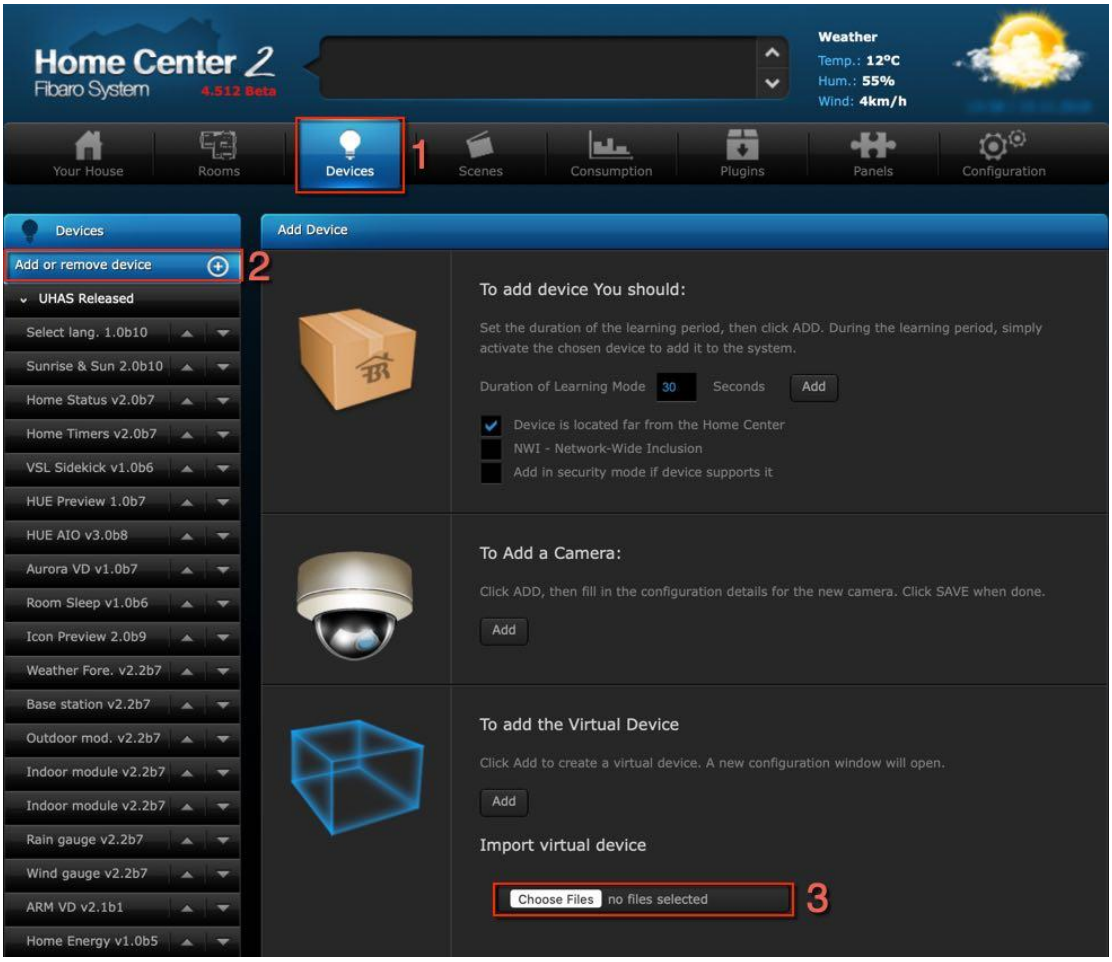


After importing VD click on Advanced tab, scroll all the way down to main loop code window and click on Debug button. Debug window will open and this debugging messages will be shown:

```
[DEBUG] 20:32:03: Standalone Advanced Battery Check VD version 1.0 - (c) 2018 Sankotronic
[DEBUG] 20:32:03: No language selected. Will use HC default language.
[DEBUG] 20:32:03: Global variable 'ProductTable' already exist
[DEBUG] 20:32:03: Global variable 'BatteryTable' already exist
[DEBUG] 20:32:03: Global variable 'BatteryLang' already exist
[DEBUG] 20:32:03: Global variable 'BatteryMain' already exist
[DEBUG] 20:32:04: Global variable 'BatteryStatus' already exist
[DEBUG] 20:32:04: Checking VD icons
[DEBUG] 20:32:04: VD updated
[DEBUG] 20:32:14: VD updated
```

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

As soon as VD is imported it will add necessary global variables and then update battery status of all battery operated devices found on system.

You can also check debug window of the Update  button that should show following debugging messages:

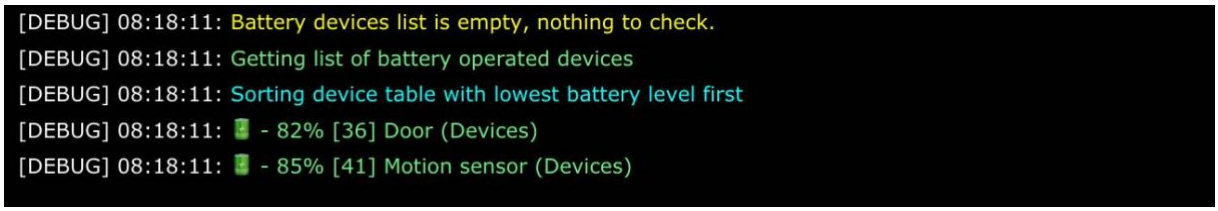

Note that number and type of devices found and listed in debug window will differ from above picture.

Even ABC VD starts working immediately after it is imported to HC2 there are several settings the user can do as explained bellow.


IMPORTANT NOTE

Only one instance of ABC VD should be imported to HC2. If user imported more than one instance then can delete all but the first one imported and delete global variables added by ABC VD so that can be recreated.

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

3.1 STEP 1 – TRANSLATING ABC VD TO PREFERRED LANGUAGE

When first time imported, ABC VD will check default language that is selected on Home Center 2 and will translate to that language. The user can choose a different language, by opening the ABC VD for editing and scrolling down to VD main loop code window. Scroll code until this part is shown:

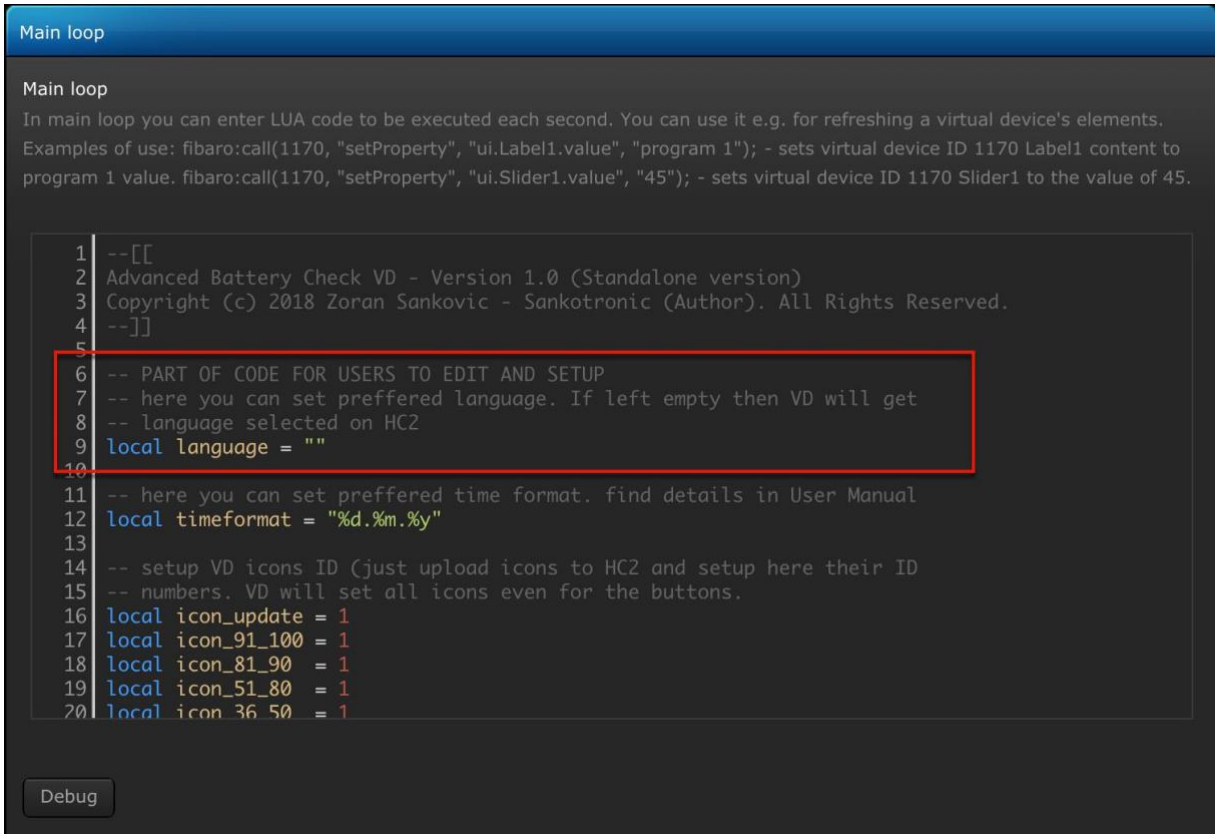


Between quotation marks enter two letter code for desired language for ABC VD. Two letter language codes user can find in this manual APPENDIX 1.


Save VD and then refresh page in browser or refresh network data on Fibaro mobile application to see the chosen translation.

3.2 STEP 2 – SETTING UP ABC VD ICONS

First import icons to Fibaro Home Center 2. To do that open ABC VD for editing and then click on Change Icon button located bellow main icon frame:

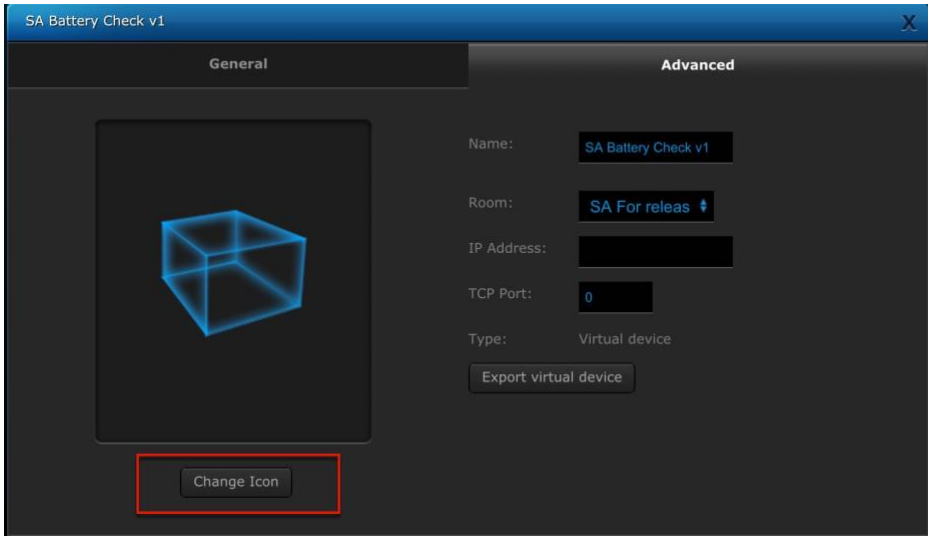

New window will open:

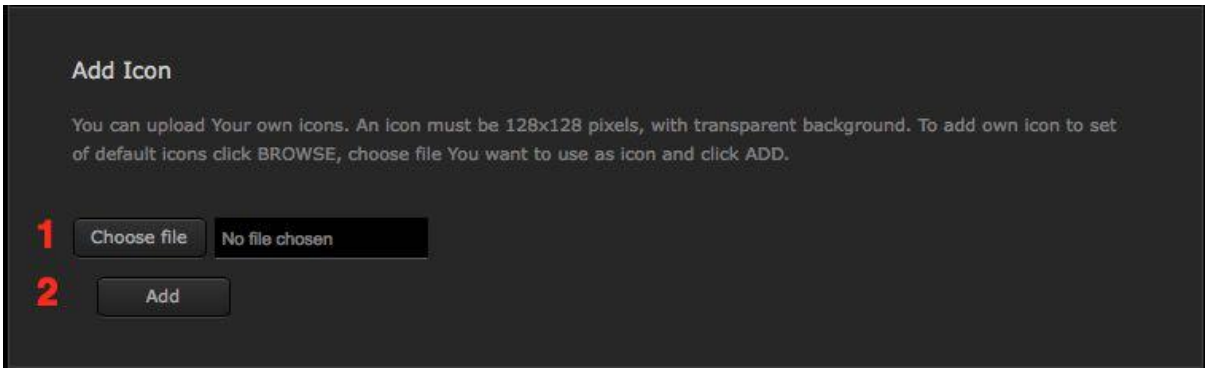

First click on **Choose file** button. In new opened window browse to the folder where you extracted files from Advanced Battery Check VD zip file. Select first icon named ***01 Battery_Update.png*** and then click on **Add** button.

Repeat adding icons in the following order:

02 Battery_91-100.png
03 Battery_81-91.png
04 Battery_51-80.png
05 Battery_36-50.png
06 Battery_26-35.png
07 Battery_16-25.png
08 Battery_1-15.png

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

09 Battery_0.png
10 Battery_Dead.png
11 Battery_Error.png

This order is important because after importing the user have to find out only icon ID number for the first icon imported and the rest will be increased by one.


When all icons are imported then right click on the first one "***01 Battery_Update***" and from menu select option **Open Image in new Tab** in Safari and Chrome, **View Image** in Firefox, and **Inspect element** in MS Edge.

In new opened tab or inspection window the name of the icon which contains ID number is shown. Remember that number. Do not select icon to close add icons window but exit by clicking Devices on main menu.

NOTE

If the main icon for ABC VD is selected, then button icon will not be set automatically. If the main VD icon is still selected, then click again on **Change Icon** button and select blue box icon.

Open ABC VD for editing and scroll down on advanced tab to VD main loop code window and scroll code until you see this settings:

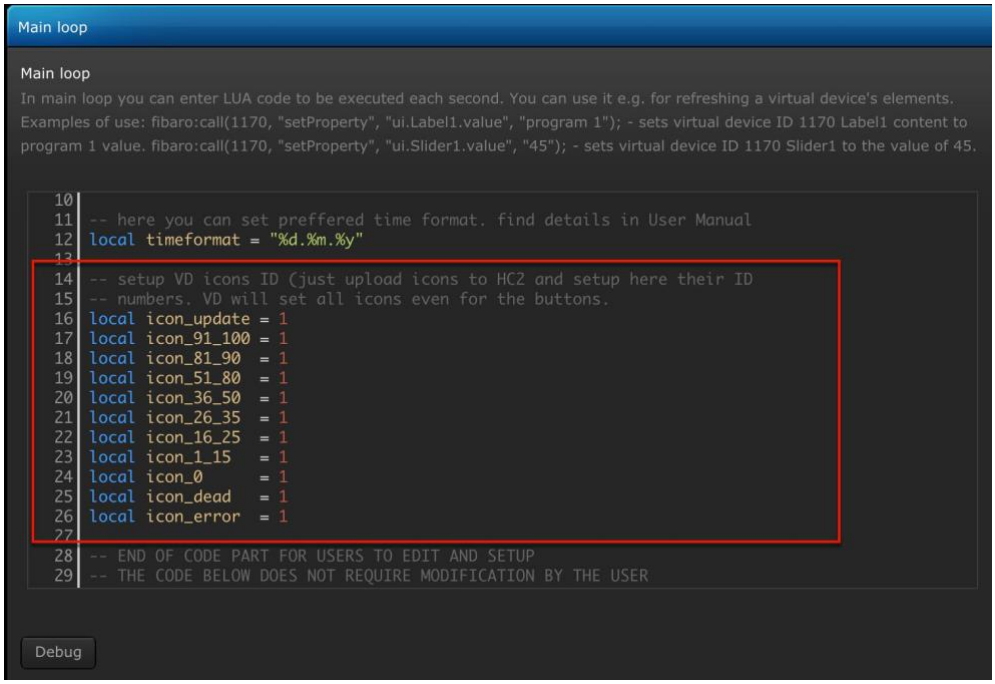


Replace number 1 with icon ID's that are imported. If the icons are imported by the order suggested, then it will be easy to enter them in this settings.

After saving VD, refresh page and all VD button will have icon set too.

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

3.3 STEP 3 – SETTING UP ABC VD TIME FORMAT

Go to VD main loop code and scroll code until this settings are shown:

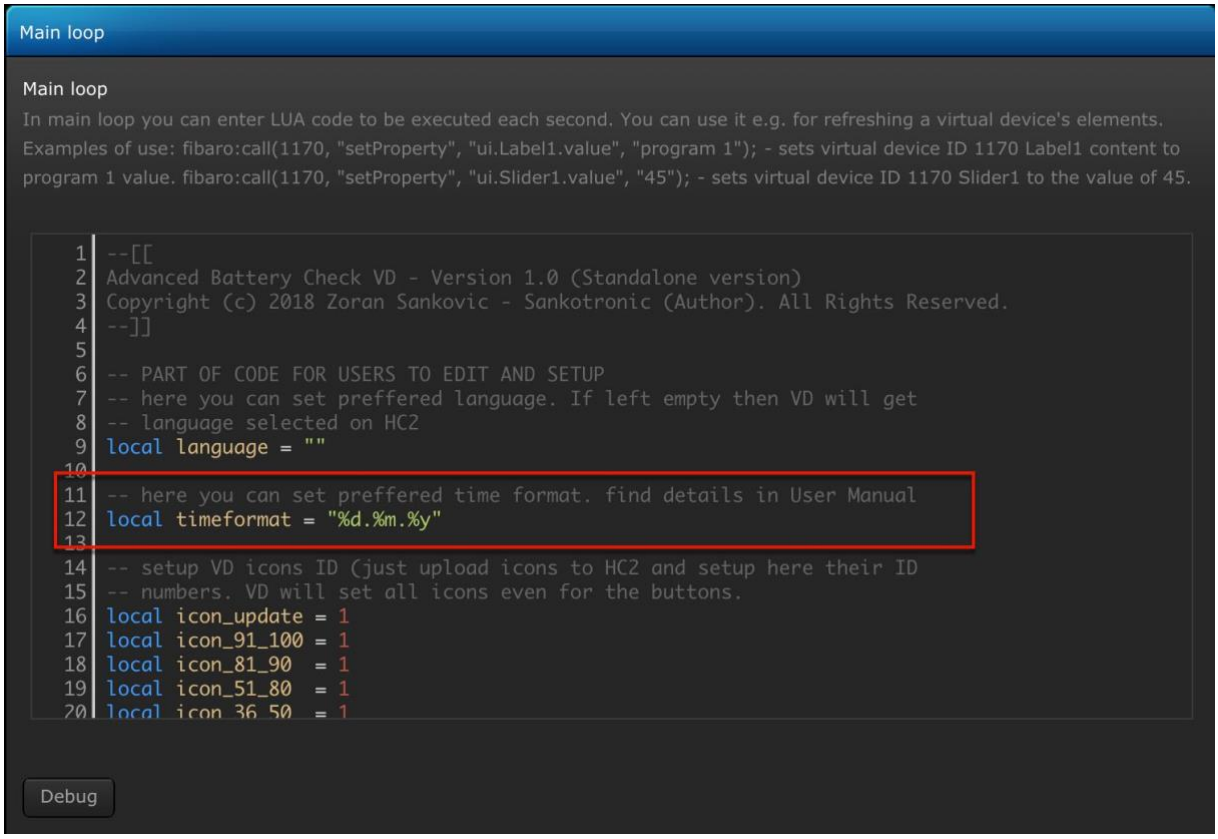


Here you can define how time and date will be shown on ABC VD. You can use following table to format time and date:


```
%a - abbreviated weekday name (e.g., Wed)
%A - full weekday name (e.g., Wednesday)
%b - abbreviated month name (e.g., Sep)
%B - full month name (e.g., September)
%c - date and time (e.g., 09/16/98 23:48:10)
%d - day of the month (16) [01-31]
%H - hour, using a 24-hour clock (23) [00-23]
%I - hour, using a 12-hour clock (11) [01-12]
%j - day of the year (259) [001-366]
%M - minute (48) [00-59]
%m - month (09) [01-12]
%p - either “am” or “pm” (pm)
%S - second (10) [00-60]
%w - weekday (3) [0-6 = Sunday-Saturday]
%x - date (e.g., 09/16/98)
%X - time (e.g., 23:48:10)
%y - two-digit year (98) [00-99]
%Y - full year (1998)
%% - the character ‘%’
```

3.4 STEP 4 – SETTING UP ABC VD MOBILE DEVICES FOR NOTIFICATIONS


Please open ABC VD for editing and scroll down to the Update button code:

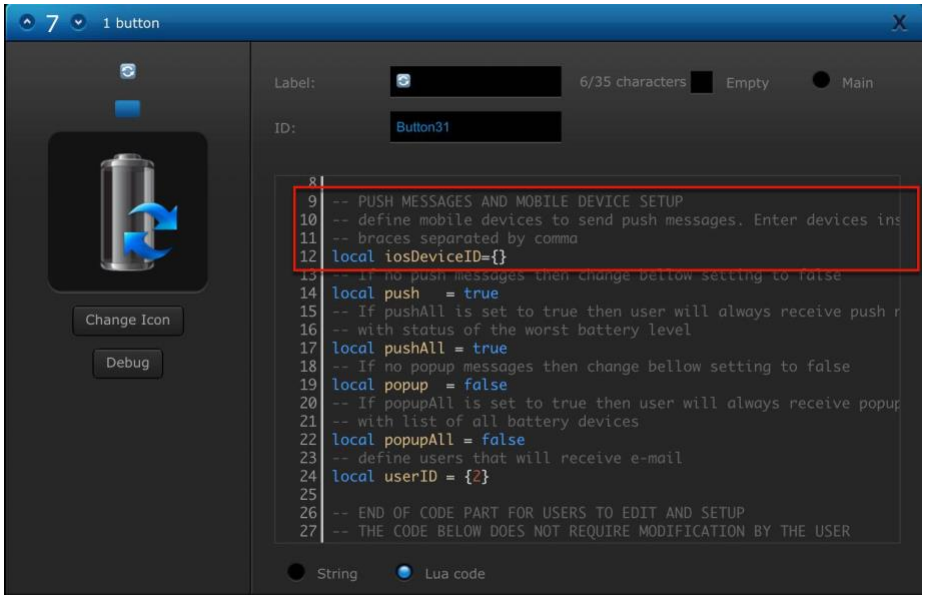


Mobile devices IDs can be found by entering this link in web browser *http://<YOUR_HC_IP>/docs/* and then clicking on **iosDevices**. User will see this after clicking on button TRY IT!:

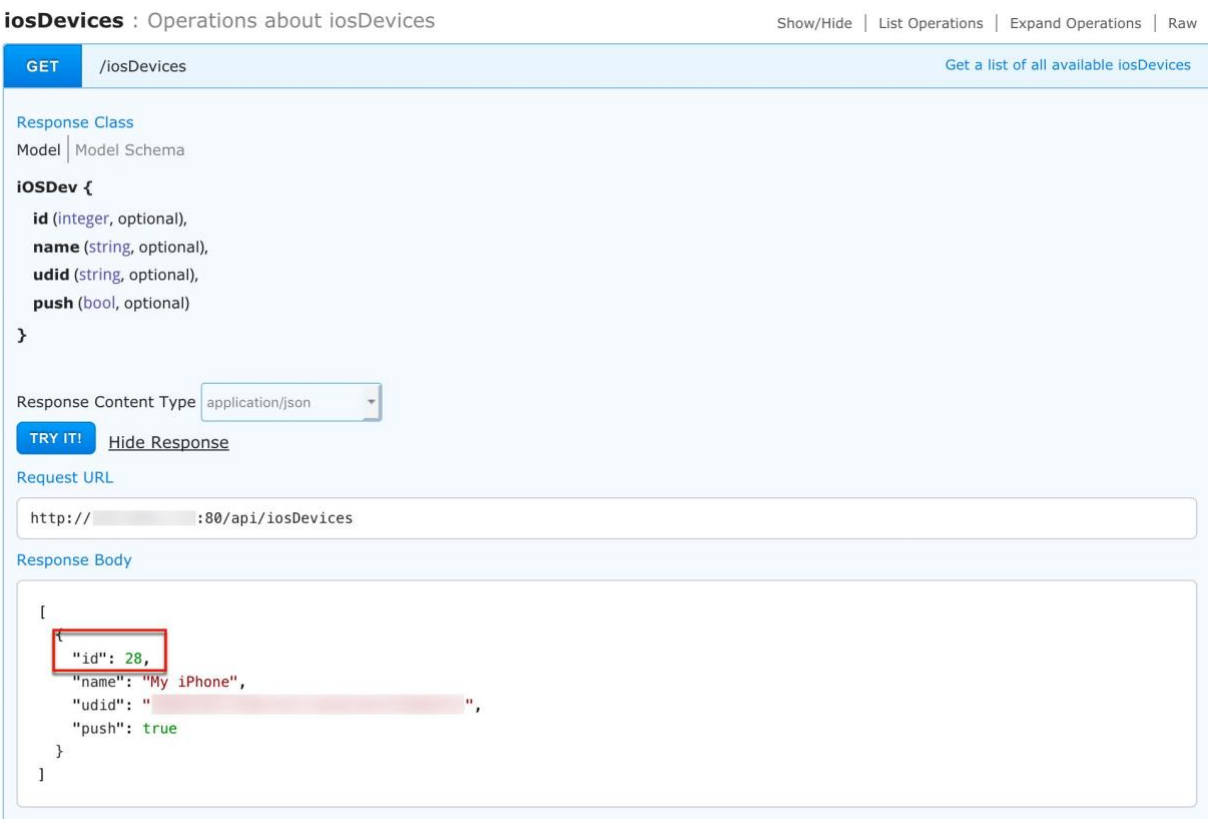

User need to enter mobile device ID that are found between curled brackets in code and if more than one then separate them with comma as in an example bellow:

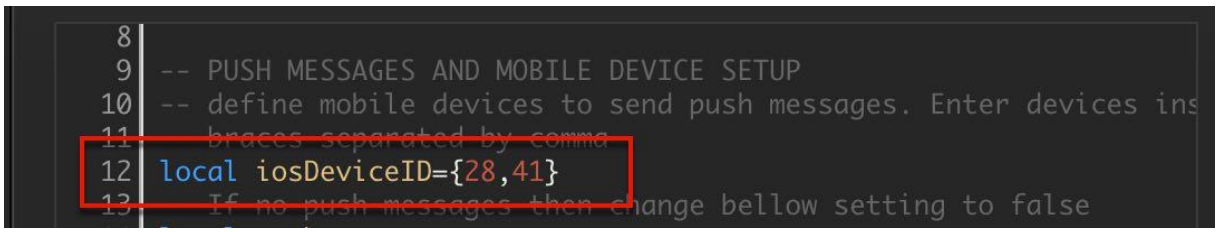

Next step is to setup push and popup notifications:

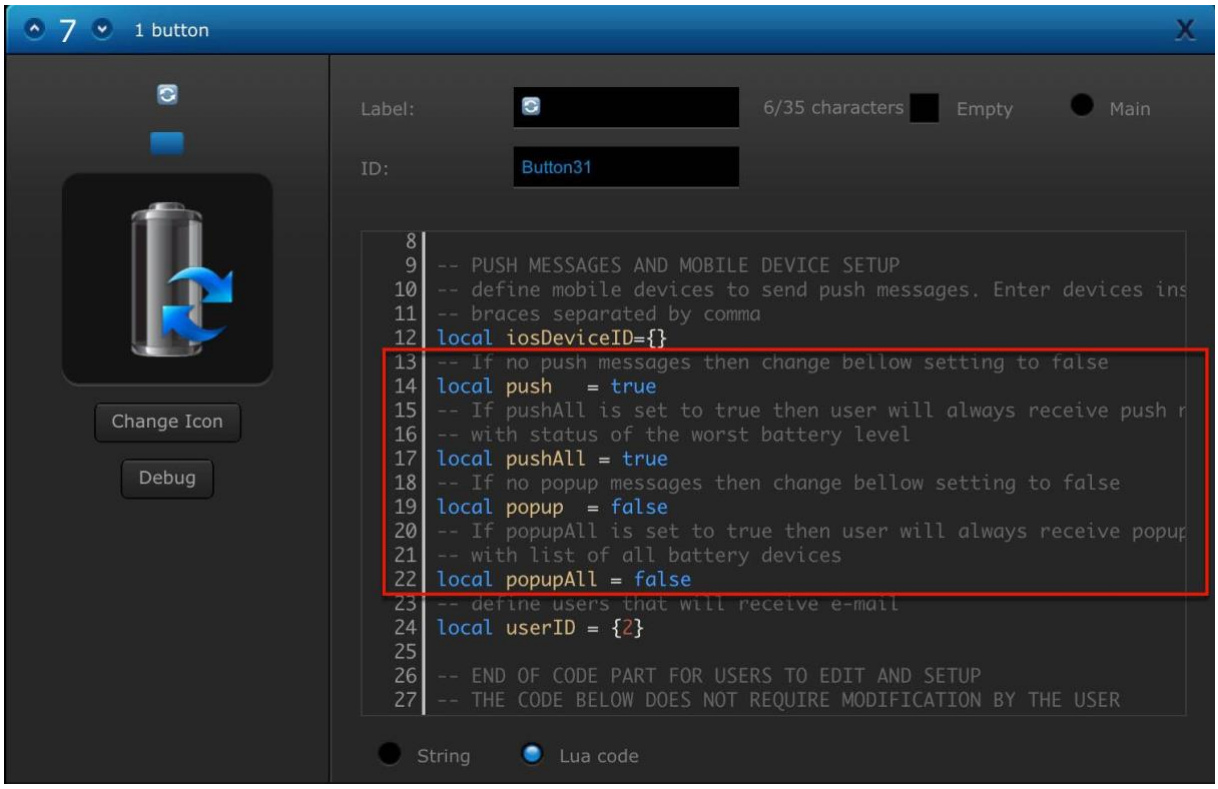


If user want to receive push notifications then setup **push** to **true** otherwise replace word **true** with **false**. If **push** is set to **true** and user want to receive push notifications every time when devices battery status is updated then setup **pushAll** to **true** otherwise if set to **false** then push notification will be sent only if there is device that battery level is bellow 35% or found dead device.

Same settings are for popup notifications. If user want to receive popup notifications then setup **popup** to **true** otherwise replace word **true** with **false**. If **popup** is set to **true** and user want to receive popup notifications every time when devices battery status is updated then setup **popupAll** to **true** otherwise if set to **false** then popup notification will be sent only if there is device that battery level is bellow 35% or found dead device.


© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

3.5 STEP 5 – SETTING UP ABC VD USERS TO RECEIVE E-MAIL NOTIFICATIONS

Please open ABC VD for editing and scroll down to the Update button code:

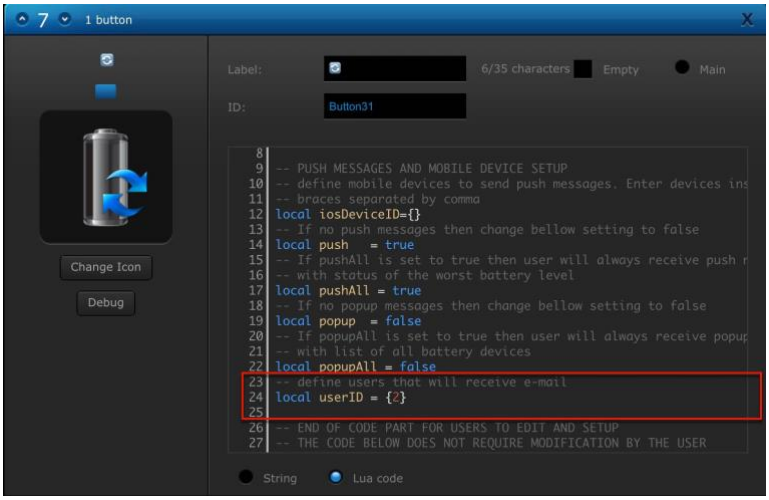

User IDs can be found by entering this link in web browser *http://<YOUR_HC_IP>/docs/* and then clicking on **users**. User will see this after clicking on button TRY IT!:

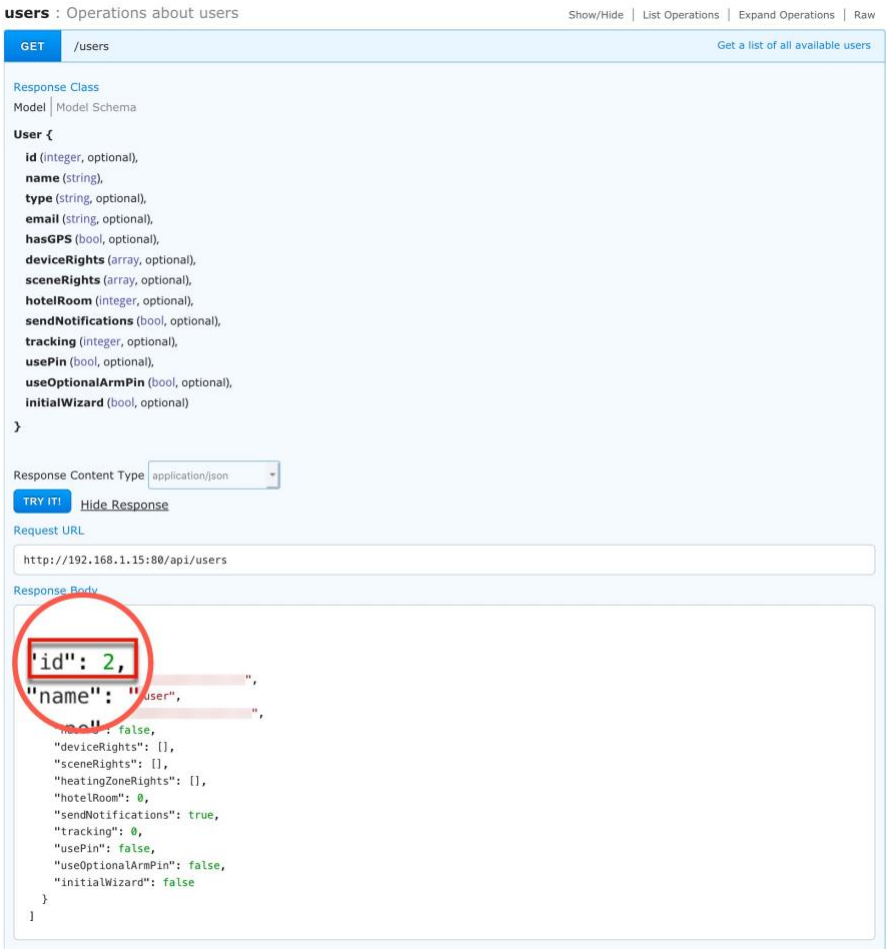

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

User need to enter user ID that are found between curled brackets in code and if more than one user is setup then separate them with comma as in an example bellow:

```
23 -- define users that will receive e-mail
24 local userID = {2,56}
25
26 -- END OF CODE PART FOR USERS TO EDIT AND SETUP
```

User with ID number 2 is superuser and it is setup by default. To setup e-mail notifications user can use these buttons on ABC VD:


-  – VD will send e-mail after update button is pressed only if found dead devices and/or devices with battery level bellow 35%
-  – VD will send e-mail every time after update button is pressed with list of all battery operated devices found
-  – VD will not send e-mail, push and popup notifications after update button is pressed regardless of devices battery status.

More about ABC VD usage user can find in next chapter.

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

3.6 STEP 6 – SETTING UP ABC VD CURRENCY

Please open ABC VD for editing and enter preferred currency symbol into IP address field:

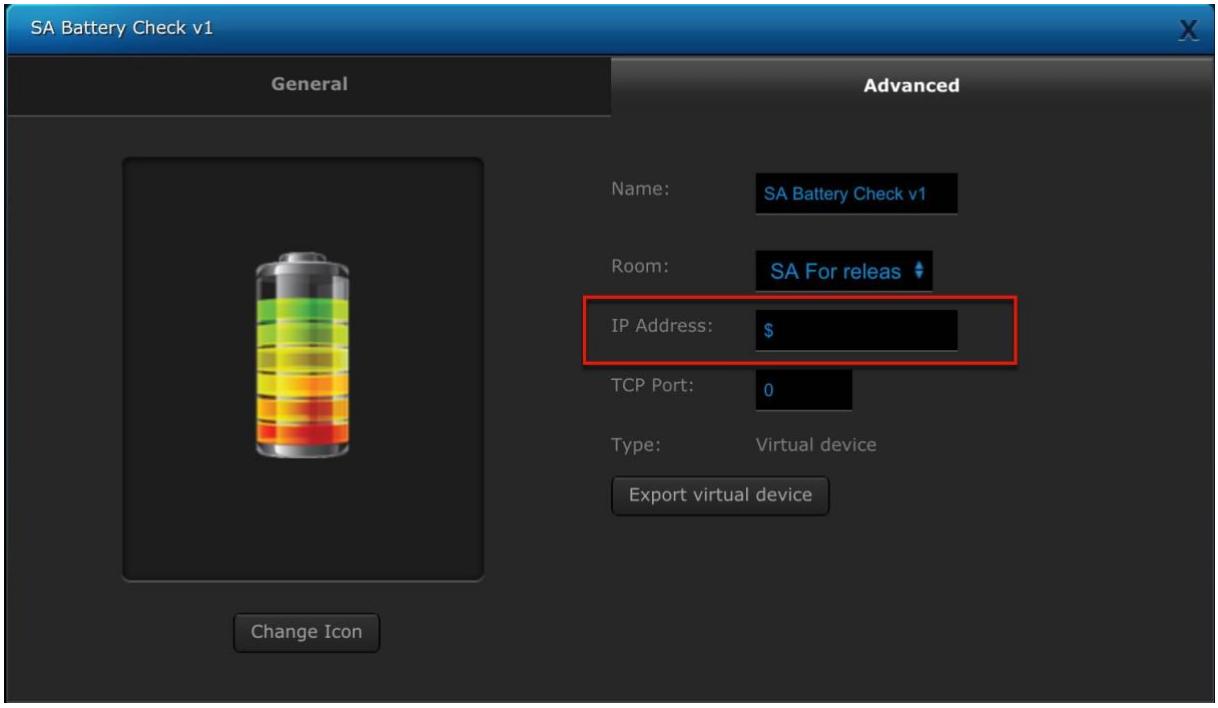


Default currency used is EUR (€) if IP address field is left empty. If user will not use battery prices feature then just click on the IP Address field and press once space bar key on keyboard to enter one space and save VD. Currency symbol in that case will not show on VD anymore.

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

4. USING ABC VD


And here is short explanation of the ABC VD layout:

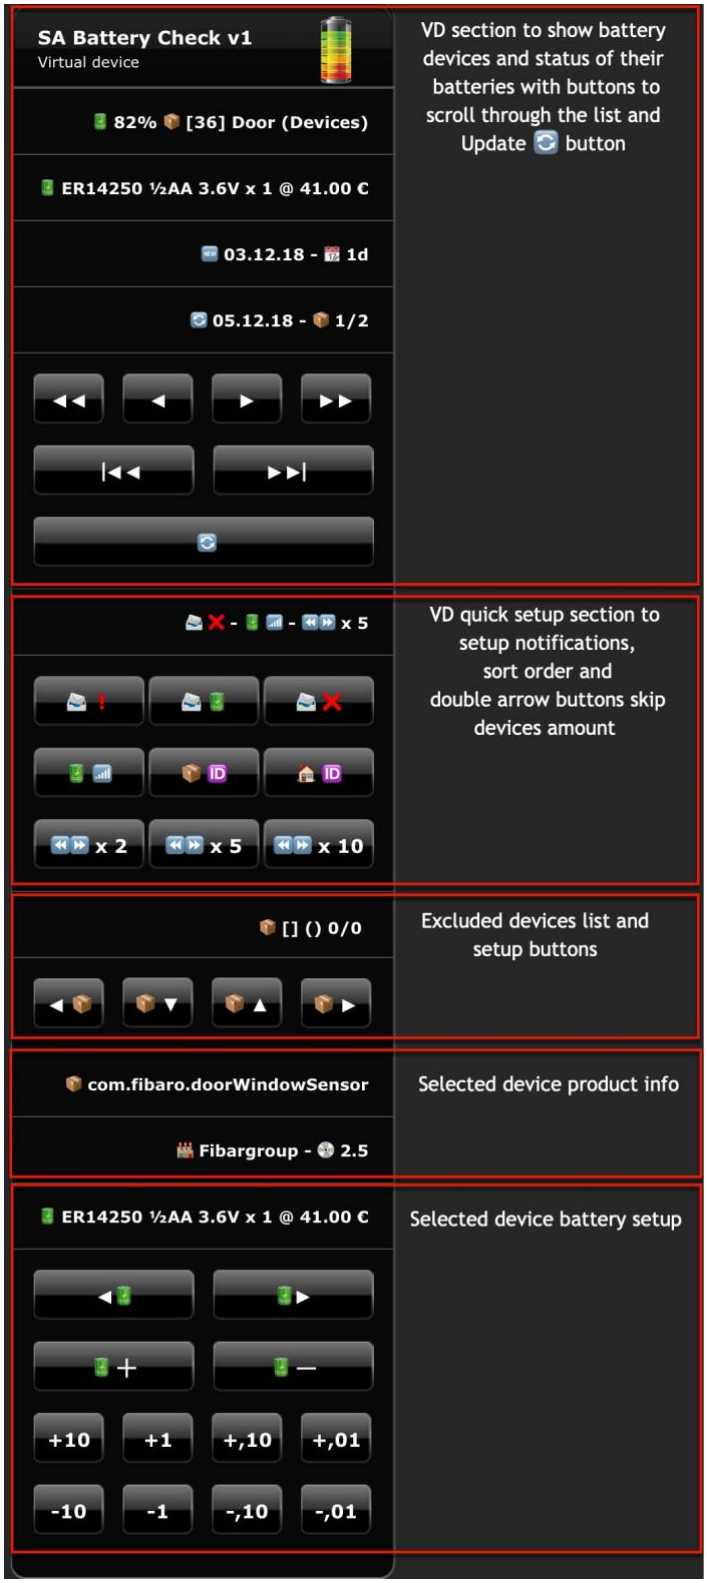

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

4.1 - ABC VD BATTERY DEVICES LIST SECTION AND UPDATE BUTTON

Here is short explanation of VD main section layout and buttons:

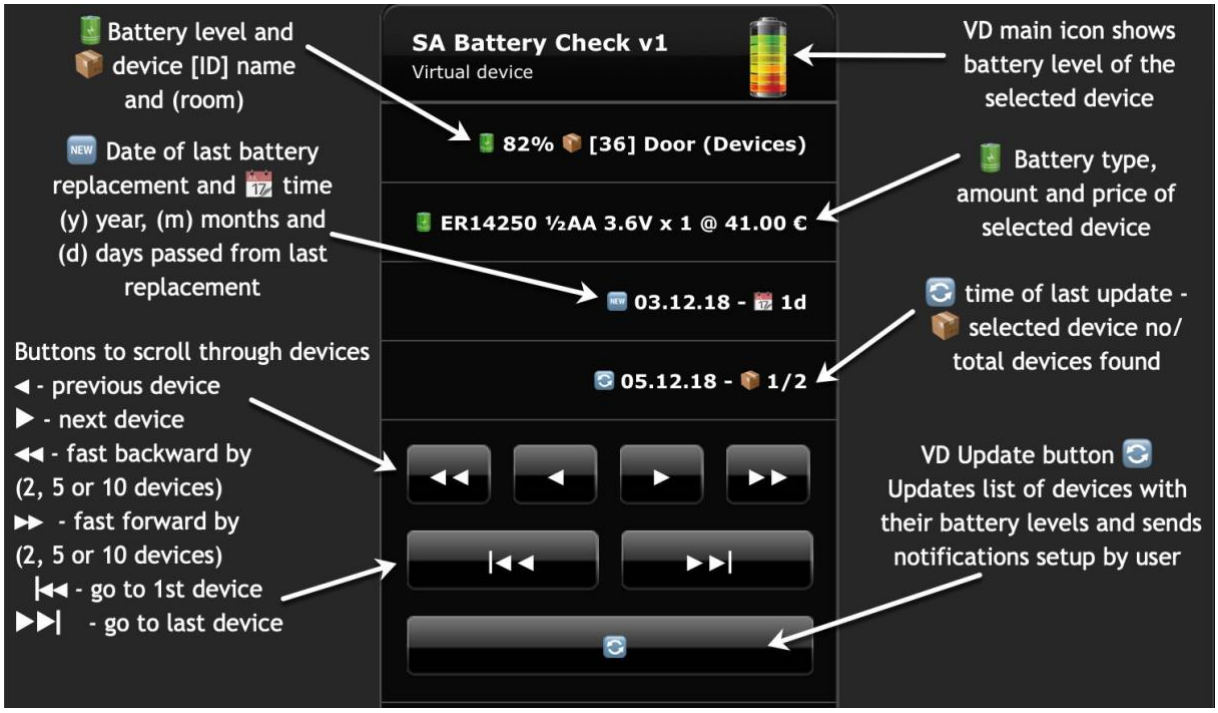

VD main icon explanation:

 - this icon is shown when VD is updating devices or any button is pressed.


 - shows battery level of the selected device if it is 1 to 100%

 - shows when battery level is 0%. This level reported by HC2 is 255 and device window has red border with flashing red battery icon and if not disabled HC2 is sending warning e-mails to users to replace battery every 1 hour.

 - During checking device is found reported as “dead”. Such devices are always added to the notification report even their reported battery level might be above 35% when not marked as dead

 - If no battery devices is found on system then this icon is shown to inform user that there was problem with updating.

Here is explanation of emoji icons that are shown on first or top VD label depending on device battery level found or if it is reported as dead:

-  - If no battery devices are found
-  - if device is reported as “dead” it will have exclamation mark ❗ and ❌ instead of battery level in percentage.
-  - if device battery level is 0 to 15% red exclamation mark icon ❗ is used to warn user that battery needs immediate replacement
-  - if device battery level is 16 to 25% then red flag icon 🚩 is used to warn user that device battery replacement will be needed very soon
-  - if device battery level is 26 to 35% then memo icon 📝 is used to inform user that it is time to order new batteries if have no spare.
-  - if device battery level is 36 to 100% then green battery 🔋 is shown with current battery level in percentage.
-  - if device battery type is not setup then it will have first icon representing last battery level as explained above with question mark ❓ warning user that new device product is found and battery type must be defined.
-  - if device has rechargeable battery with level 21 to 100% then plug 🔌 icon will be shown with battery level in percentage.
-  - if device has rechargeable battery with level 0 to 20% then exclamation mark ❗ and plug 🔌 will be shown with battery level percentage to warn user that battery needs to be recharged.


Second label shows battery type, amount needed and price if set by user:

-  - If new device product is found then battery type will be shown as ❓ and that tells user that battery type for this device needs to be setup.
-  - if selected device product battery type is set then will be represented with green battery 🔋 together with battery type, amount of batteries needed and price in selected currency
-  - Device is using rechargeable batteries

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

4.2 – ABC VD QUICK SETUP SECTION

Here is short explanation of VD quick setup section layout:

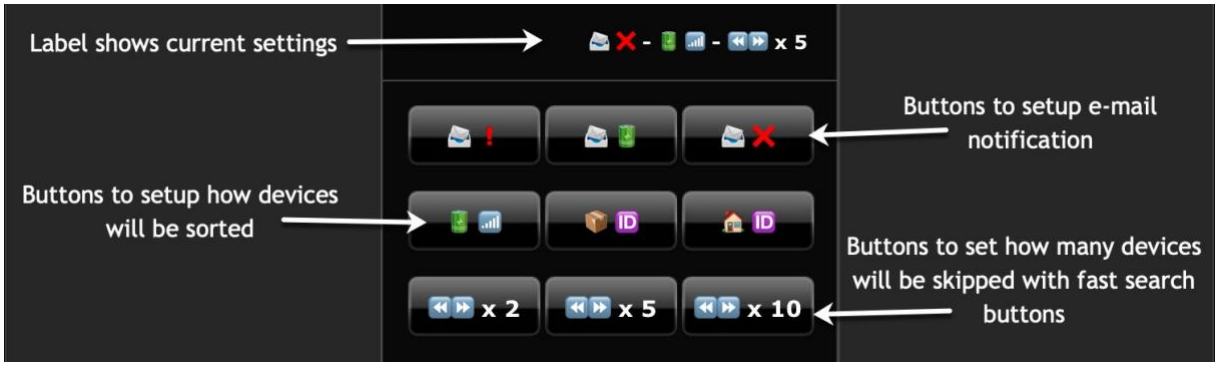

Buttons to setup e-mail notifications:

-  – when pressed will activate sending e-mail with list of devices that are reported dead, devices that battery type is not defined and devices which battery level is bellow 36%
-  – when pressed will activate sending e-mail with all battery devices regardless of their battery status. This version is able to send up to 4 e-mails with 60 battery devices in total
-  – when pressed will completely disable sending all types of notifications that user setup including popup and push notifications

Buttons to setup how devices will be sorted:

-  – when pressed will set devices to be sorted by battery level in ascending order which means that devices with lowest battery levels will be first. Also on top of the list will be devices reported as dead.
-  – when pressed will set devices to be sorted by their ID number in ascending order.
-  – when pressed will set devices to be sorted by room ID in ascending order.

Buttons to set how many devices will be skipped with fast search buttons  and  :

-  - when pressed will set skipping for two devices backward or forward
-  - when pressed will set skipping for five devices backward or forward
-  - when pressed will set skipping for ten devices backward or forward


© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

4.3 – ABC VD EXCLUDED DEVICES SECTION

Here is short explanation of VD excluded devices section layout:



To add device to excluded devices list first select device in VD devices list section. For example user want to exclude device [36] Door (Devices), first select it on the list:

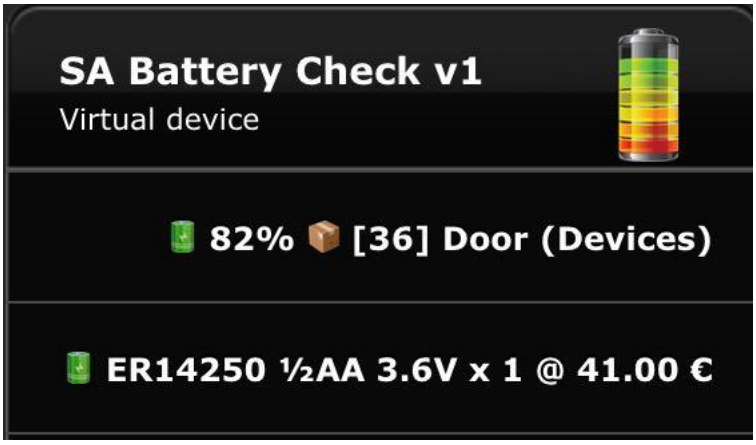

Then scroll down to excluded devices VD section and use  button to move device to excluded devices.

Buttons in this sections are used as follows:

-  - if there is more than one excluded device then with this button select previous excluded device
-  - device that is selected on the main list will be moved to excluded devices list
-  - device that is selected on excluded devices list will be removed from that list and put back to main devices list
-  - If there is more than one excluded device then with this button select next excluded device

If there is no excluded devices then label will show:



© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

4.4 – ABC VD PRODUCT INFO SECTION

Here is short explanation of VD product info section layout:



In this section of ABC VD you can see selected device product info like type of the device, manufacturer name and device product z-wave version. Why distinguish device and product? While user can have dozen of same door/window sensors they can still be different in their product info number e.g. ("1,15,8,1,16,1,3,2" that is not shown on VD) and also different z-wave version, but still same type of device. Since different products that are of same device type can use different battery types it was important to check product info for all battery devices and distinguish them from each other to have correct information for battery type needed.


On the other hand battery info is connected to product info so for devices that are same as product it is sufficient to setup battery type, amount needed and price only once as it will be explained in next section of user manual.

For example Fibar Group S.A. has four different products which are all used as door/window sensors. They all use same battery type so it seems that there is no need for distinguish them with product info. On the other hand other manufacturers door/window sensors will be all recognized as com.fibaro.doorWindowSensor but can use different types of batteries.

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

4.5 – ABC VD SELECTED DEVICE PRODUCT BATTERY SETUP SECTION

Here is short explanation of VD selected device product battery setup section layout:

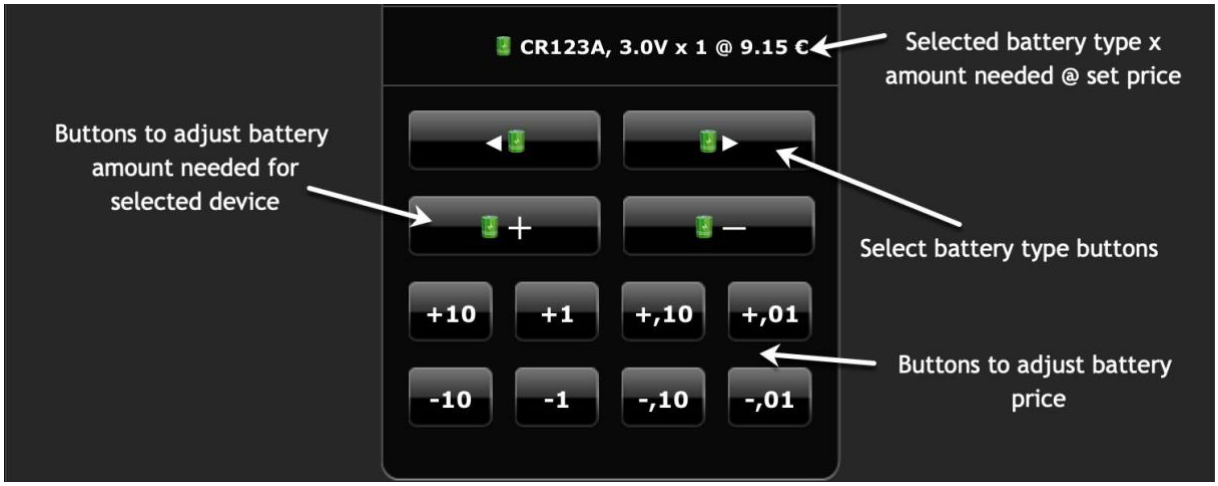

If for selected device this battery info is shown on battery label then user need to setup selected device product battery type, amount needed and battery price:



That can be done using following buttons:

- Use buttons  and  to set proper type of battery for selected device product
- Use buttons  and  to adjust number of batteries needed for selected device product
- Use buttons with numbers to adjust battery price

As long as device product battery type is not defined all devices of that same product will be added to the list marked as missing battery info and will be part of the e-mail and popup notification even battery level might be OK.

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

4.6 – ABC VD GLOBAL VARIABLES

All global variables are automatically added when ABC VD is imported to HC2. Here is short description:

- ***BatteryMain*** - added automatically to the system by imported ABC VD. All main settings are stored in this global variable.
- ***BatteryTable*** – Keeps information about battery types and prices.
- ***BatteryStatus*** – Keeps information about battery devices found on HC2 with their battery levels, product info, date of last battery replacement etc. It also keeps information about excluded devices
- ***ProductTable*** – Keeps device product info, manufacturer, type of battery and type of device.
- ***BatteryLang*** – Keeps VD translations to 28 different languages

NOTE

Global variables added by ABC VD contain data structured in tables. If **Save** button is used in **Home Center 2 global variable panel** all data in this variables will be destroyed. ABC VD checks integrity of global variables and can rebuild them automatically without user intervention and will continue to work properly. Still, it is recommended not to use Save button in HC2 global variable panel. Properly programmed HA system on HC2 does not require user to manually change global variables values in panel using Save button. Such system is UHAS™ (Universal Home Automation System). More information about UHAS™ you can find on Fibaro International forum: https://forum.fibaro.com/topic/25468-sankotronic-lab-universal-home-automation-system-uhas%E2%84%A2/ and soon also on this link: http://www.uhas.eu Also if global variables content is destroyed then after rebuilding date of last battery replacement will be lost same as all device product that are added by user.

BatteryMain global variable contains main settings of ABC VD that is imported to HC2. To control it from your code first you need to read that global variable with this command:

```
local bM = json.decode(fibaro:getGlobalValue("BatteryMain")
local batID = "XX"
```

In above code you also need to set ABC VD ID number in string format so must be with quotation marks. Just replace XX with ABC ID number. In case that the HomeTable is used, then conversion of ID numbers to string is needed with this code:

```
local jT = json.decode(fibaro:getGlobalValue("HomeTable")
local bM = json.decode(fibaro:getGlobalValue("BatteryMain")
local batID = tostring(jT.livingroom.abcvd)
```

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

With following command user can then press Update button on ABC VD within his code:

```
--- press update button
      fibaro:call(batID, “pressButton”, bM[batID].updButton)
```

If user have installed Main scene FTBE v1.2.4 or above on HC2 then here is how to setup main scene to update ABC VD every day at 10:00 o’clock:

```
-- SCHEDULED VD SETUP
local runVDSchedID          = {46}
local runVDSchedButton      = {{“11”}}
local runVDSchedHour        = {{“10:00”}}
local runVDSchedWeek        = {{1, 1, 1, 1, 1, 1, 1}}
local runVDSchedPushFlag    = {0}
local runVDSchedPushMessage = {“”}
```

For UHAS™ compatible ABC VD there is no need for schedule setup since VD adds it’s schedule automatically to schedule global variable and user can just change time when VD is to be updated.

Thank you for using ABC VD and I hope that it will bring many nice moments with your home automation.

Author

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

5. APPENDIX 1

Here is the list of supported languages and their two letter abbreviations to be used in VD main loop language settings:

Languages supported by HC2:

English	=	en	**Polski**	=	pl
Deutch	=	de	**Svenska**	=	sv
Portugues	=	pt	**Italiano**	=	it
Francais	=	fr	**Nederlands**	=	nl
Română	=	ro	**Portugues do Brasil**	=	br
Eesti keel	=	et	**Latvių**	=	lv
中文	=	cn	**Русский**	=	ru
Dansk	=	dk	**Suomalainen**	=	fi
Česky	=	cz	**US English**	=	us
Español	=	es	**Norsk**	=	no

Additional languages supported by this version of ABC VD:

български	=	bg	**Hrvatski**	=	hr
Slovenčina	=	sk	**Magyar**	=	hu
Bosanski	=	ba	**Srpski**	=	rs
Slovenščina	=	si	**Українська**	=	ua

NOTE

Some translations may be incorrect. You can find all translations in VD main loop and you are welcomed to correct them. After correction and saving VD global variable will be automatically updated. Please send me corrections to my e-mail address: zsankovic@gmail.com or private message to Sankotronic on Fibaro International forum: https://forum.fibaro.com

Thank you

© 2018 ZORAN SANKOVIĆ - SANKOTRONIC

6. APPENDIX 2

Here is the list of included battery device products with ABC VD v1.0:

```
"1,15,15,1,16,0,3,2"  ={dev_type="com.fibaro.FGPB101",dev_name="The Button",zversion="3.2",company="Fibargroup"
"1,15,18,1,16,0,3,2"  ={dev_type="com.fibaro.FGCD001",dev_name="CO Sensor",zversion="3.2",company="Fibargroup"
"1,15,7,0,16,0,2,1"   ={dev_type="com.fibaro.doorWindowSensor",dev_name="Door/Window Sensor",zversion="2.1",company="Fibargroup"
"1,15,7,0,16,0,2,5"   ={dev_type="com.fibaro.doorWindowSensor",dev_name="Door/Window Sensor",zversion="2.5",company="Fibargroup"
"1,15,7,2,16,0,3,2"   ={dev_type="com.fibaro.doorWindowSensor",dev_name="Door/Window Sensor",zversion="3.2",company="Fibargroup"
"1,15,7,1,16,1,3,2"   ={dev_type="com.fibaro.doorWindowSensor",dev_name="Door/Window Sensor",zversion="3.2",company="Fibargroup"
"1,15,11,0,16,1,23,23"={dev_type="com.fibaro.FGFS101",dev_name="Flood Sensor",zversion="23.23",company="Fibargroup"
"1,15,11,0,16,1,25,25"={dev_type="com.fibaro.FGFS101",dev_name="Flood Sensor",zversion="25.25",company="Fibargroup"
"1,15,11,1,16,2,3,2"  ={dev_type="com.fibaro.FGFS101",dev_name="Flood Sensor",zversion="3.2",company="Fibargroup"
"1,15,16,1,16,0,3,2"  ={dev_type="com.fibaro.FGKF601",dev_name="KeyFob",zversion="3.2",company="Fibargroup"
"1,15,8,0,16,1,2,8"   ={dev_type="com.fibaro.FGMS001",dev_name="Motion Sensor",zversion="2.8",company="Fibargroup"
"1,15,8,1,16,1,3,2"   ={dev_type="com.fibaro.FGMS001v2",dev_name="Motion Sensor",zversion="3.2",company="Fibargroup"
"0,134,0,2,0,100,1,7" ={dev_type="com.fibaro.motionSensor",dev_name="MS6",zversion="1.7",company="AEON Labs"
"1,15,12,0,16,0,2,5"  ={dev_type="com.fibaro.FGSS001",dev_name="Smoke Sensor",zversion="2.5",company="Fibargroup"
"1,15,19,1,16,0,4,4"  ={dev_type="com.fibaro.FGT001",dev_name="Heat controller",zversion="4.4",company="Fibargroup"
"1,15,12,2,16,2,3,3"  ={dev_type="com.fibaro.FGSS001",dev_name="Smoke Sensor",zversion="3.3",company="Fibargroup"
"82,84,0,1,133,16,1,1"={dev_type="com.fibaro.remoteController",dev_name="Remote controller",zversion="1.1",company="Remotec"
"82,84,0,1,133,16,1,2"={dev_type="com.fibaro.remoteController",dev_name="Remote controller",zversion="1.2",company="Remotec"
"1,9,32,5,5,8,15,3"   ={dev_type="com.fibaro.binarySwitch",dev_name="Siren",zversion="15.3",company="Vision Security"
"0,134,0,2,0,130,1,8" ={dev_type="com.fibaro.remoteController",dev_name="WallMote",zversion="1.8",company="AEON Labs"
"1,21,1,0,1,1,1,1"    ={dev_type="com.fibaro.remoteController",dev_name="WallSwitch",zversion="1.1",company="Z-Wave.Me"
"1,60,0,2,0,32,1,14"  ={dev_type="com.fibaro.temperatureSensor",dev_name="Temp. Sensor",zversion="1.14",company="Philio Technology C."
"2,96,128,7,16,0,2,0" ={dev_type="com.fibaro.humiditySensor",dev_name="Humidity Sensor",zversion="2.0",company="Haozee"
"0,96,1,1,0,1,1,0"    ={dev_type="com.fibaro.motionSensor",dev_name="Motion Sensor",zversion="1.0",company="Everspring"
"1,14,0,8,0,2,1,2"    ={dev_type="com.fibaro.gerda",dev_name="Door Lock",zversion="1.2",company="Poly-control",
"0,134,0,2,0,5,1,18"  ={dev_type="com.fibaro.motionSensor",dev_name="Motion Sensor",zversion="1.18",company="AEON Labs"
"0,96,0,11,0,1,1,3"   ={dev_type="com.fibaro.floodSensor",dev_name="Flood Sensor",zversion="1.3",company="Everspring"
"0,96,0,13,0,1,1,5"   ={dev_type="com.fibaro.smokeSensor",dev_name="Smoke Sensor",zversion="1.5",company="Everspring"
"0,89,0,15,0,1,1,0"   ={dev_type="com.fibaro.multilevelSensor",dev_name="Water Meter",zversion="1.0",company="Horstmann Controls Ltd"
"0,96,0,6,0,1,1,6"    ={dev_type="com.fibaro.temperatureSensor",dev_name="Temp. Sensor",zversion="1.6",company="Everspring"
```