


Product Use


User Manual

Main Menu

Click on the "**Firmware Version Area**" in the bottom left corner (as indicated by the arrow on the main interface in the following figure) to switch to the "**Administrator Verification**" interface. Verify according to the administrator's registration way (face/palm vein/fingerprint/Mifare card/password) to enter the facial terminal management menu. (Password registration way, you need to click on the middle of keyboard icon, switch to the "**Administrator Verification**" interface, enter the administrator ID and password, and finally click "**Yes**") to enter the facial terminal management menu. (If no password or administrator is set, the system will not require to input it)

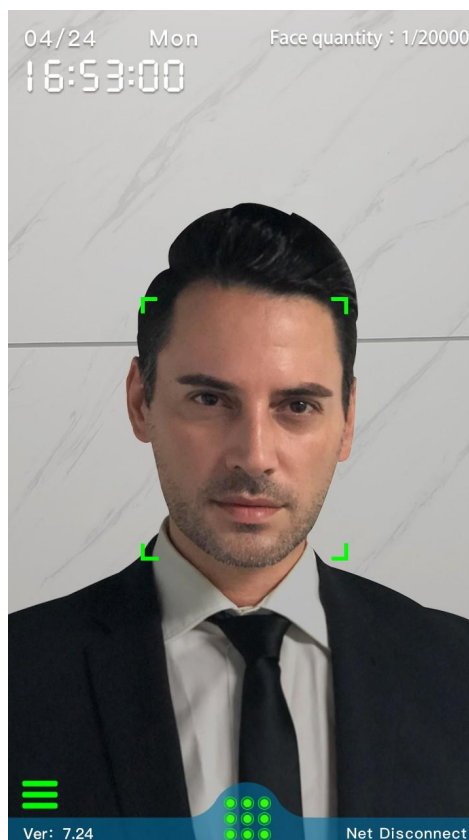


Main Interface

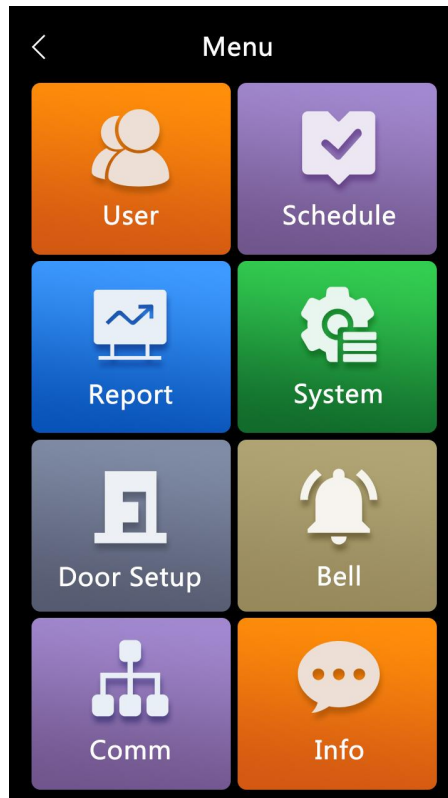

Menu Interface

User Management


Click on "**User Management**" under the menu to enter the menu status. Under this menu, you can perform operations such as "**Register User**", "**User Browse**", "**Department Settings**", "**Backup User Information**", and "**Restore User Information**".

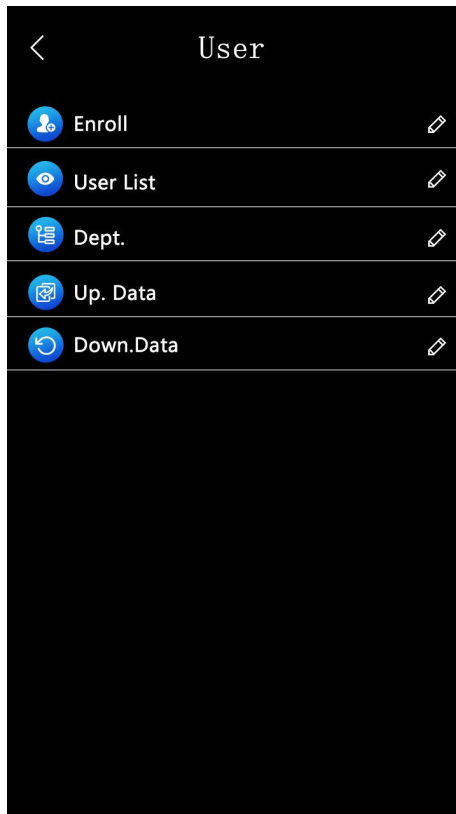

User Management Interface


Register User

Click on "**Register User**" to start registering a new user, enter the number and name, and then click on the "**Register User**" button to select the registration type: Register Face, Register Palm Vein, Register Fingerprint, Register Card, and Register Password.

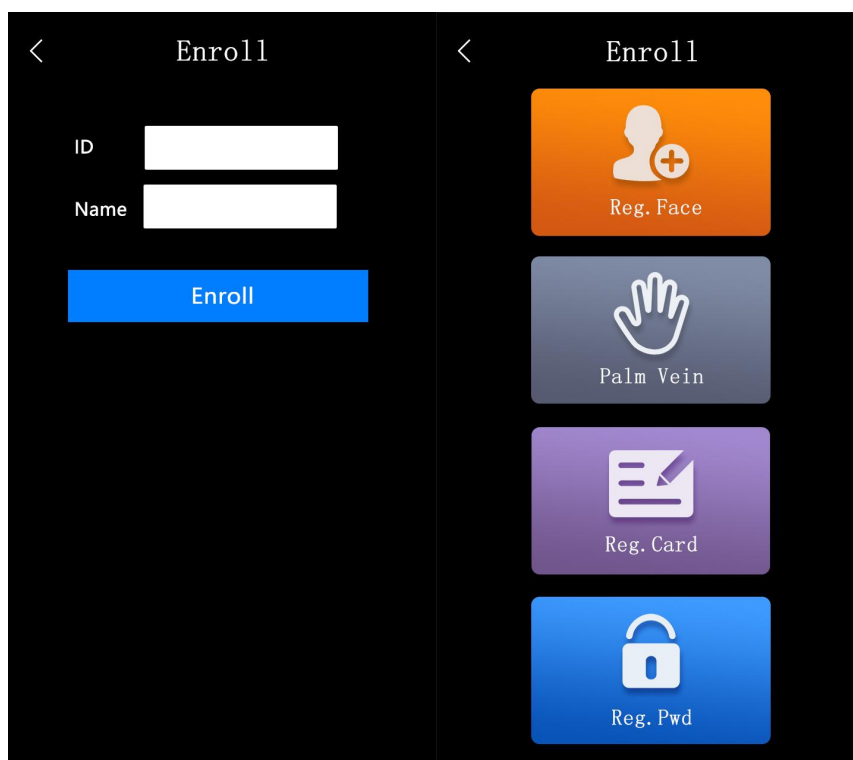

Register User Interface

Select the "Register Face" button and follow the facial machine prompts to look at the camera to register a face, as shown in the following figure:

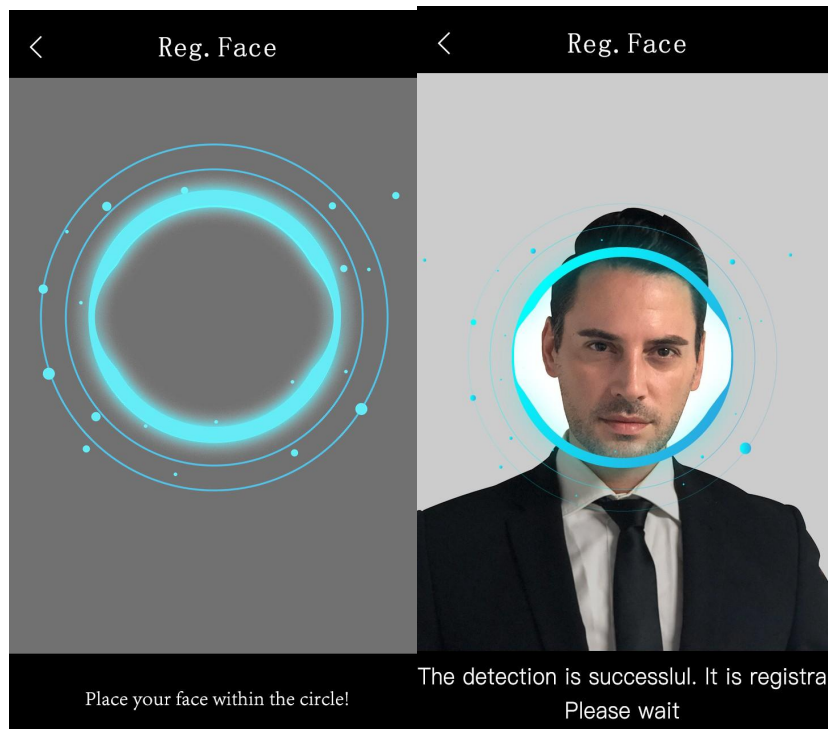


Register Face Interface

When registering a face, it is necessary to pay attention to the screen. To ensure the quality and accuracy of facial parameter input, maintain a natural expression during the input process. Do not wear hats, glasses, or other accessories that affect facial feature collection. Do not let bangs block facial features or wear heavy makeup.


After register the face and successfully registering, you can continue to choose other registration methods for the device.

Select to register the palm vein, turn your palm towards the camera, move it to the palm vein extraction box on the screen, wait for the palm vein input to be completed, and the device will prompt registration successfully. Click "Yes" to continue registering the palm vein of the other hand, or click "No" to complete the palm vein input. As shown in the following figure:

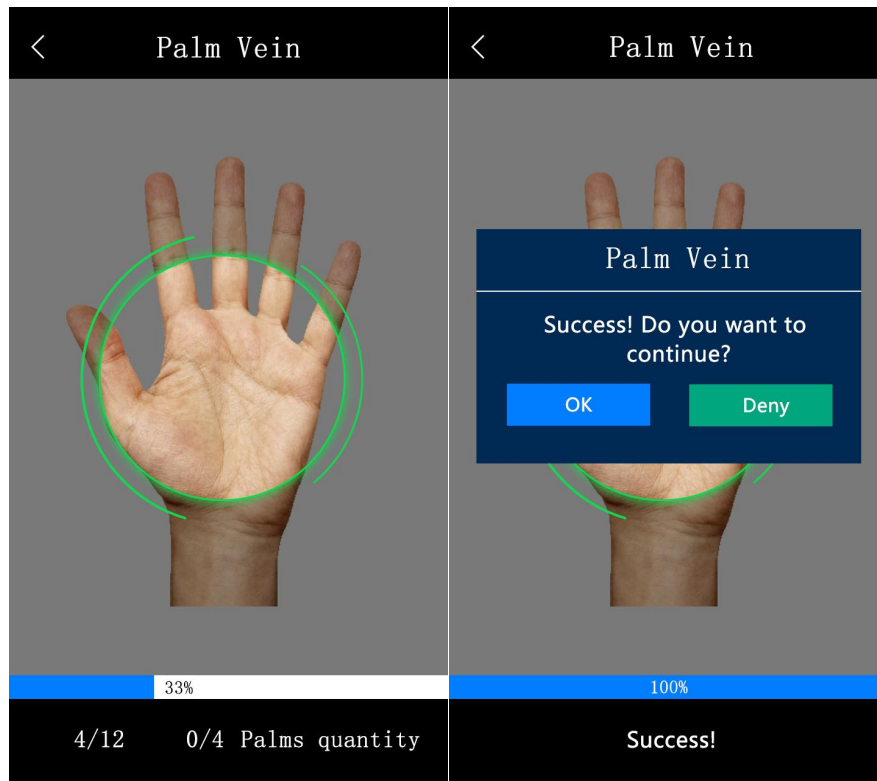

Register Palm Vein Interface

Select and click the fingerprint registration button to enter the fingerprint registration interface, enter the fingerprint according to the prompt, press the same finger repeatedly until the progress bar displays 100%, then, the fingerprint registration is successful, the interface is shown in the following figure:

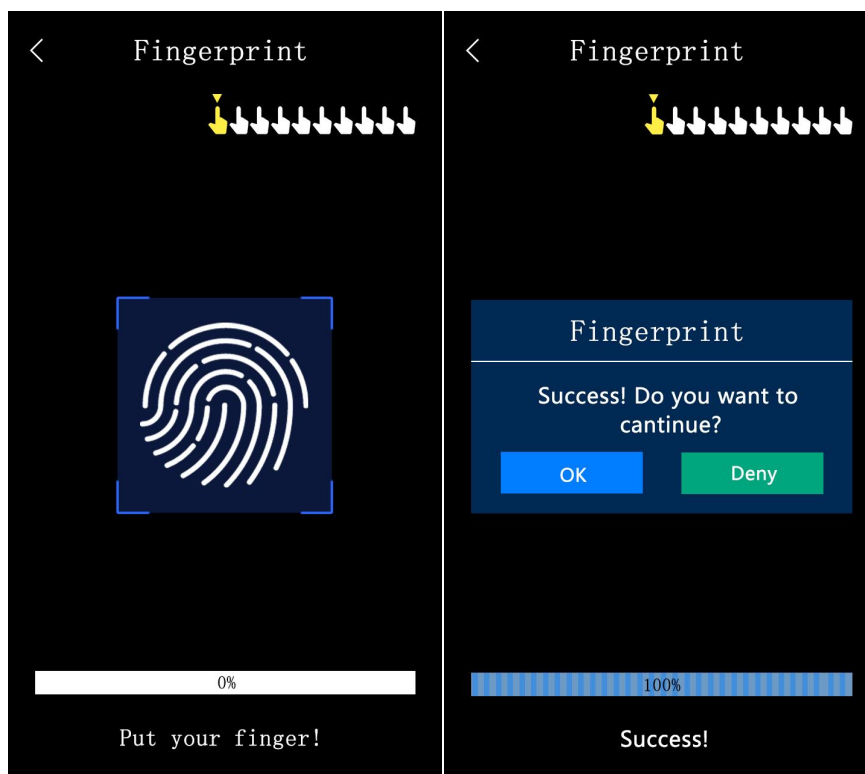


Registration Fingerprint Interface

Select the registration card, and the device will prompt you to read the card. At this time, please swipe the card in the card swiping area of the device.


The facial recognition terminal will recognize the card number, as shown in the following figure.

Click "Yes" to complete the registration of the card.

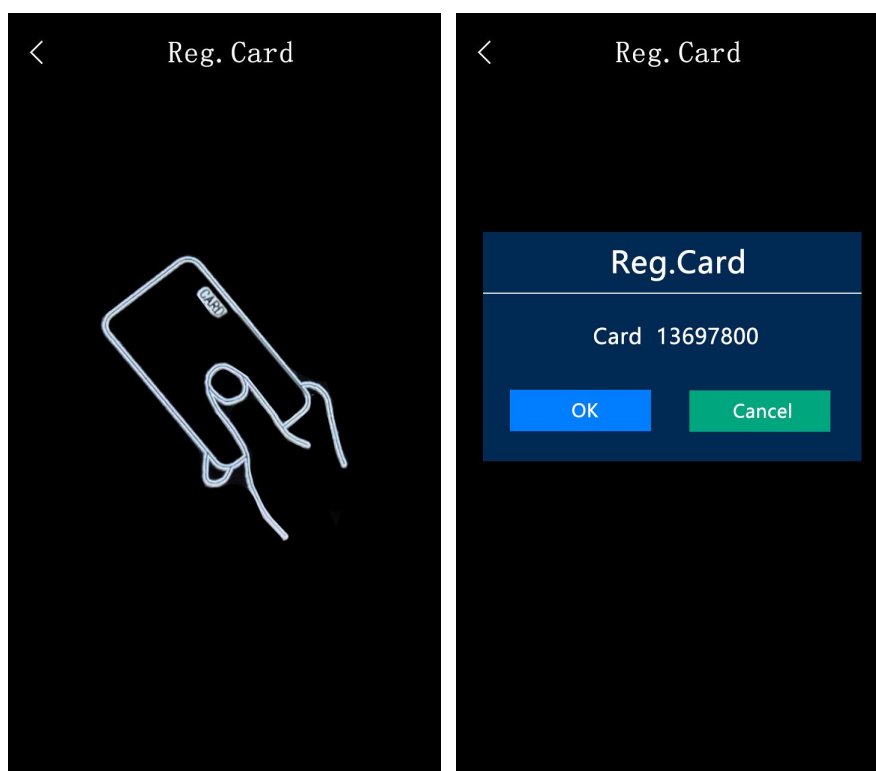

Register Card


Select the registration password, pop up the password input box and numeric keypad, enter the password (password length within 1-8 digits), click "OK", enter it again, confirm the password, click "Yes" to complete password registration, as shown in the following figure:

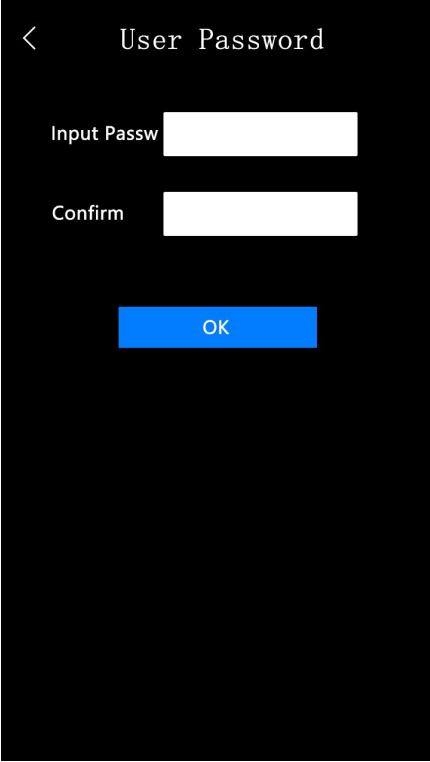A screenshot of a mobile application interface for registering a password. The interface has a black background. At the top, there is a back arrow icon on the left and the text "User Password" in the center. Below this, there are two white input fields. The first field is labeled "Input Passw" and the second is labeled "Confirm". Below the input fields, there is a blue button with the text "OK" in white.

Register Password Interface

User Browsing

Click "**User Browse**" to check the registered users, which are arranged by default according to their number size. You can also click on registered users to modify their detailed information. Or can search and display it by flipping the page and clicking on "<" ">" below; and also click below to search for the corresponding registered user by number or name.

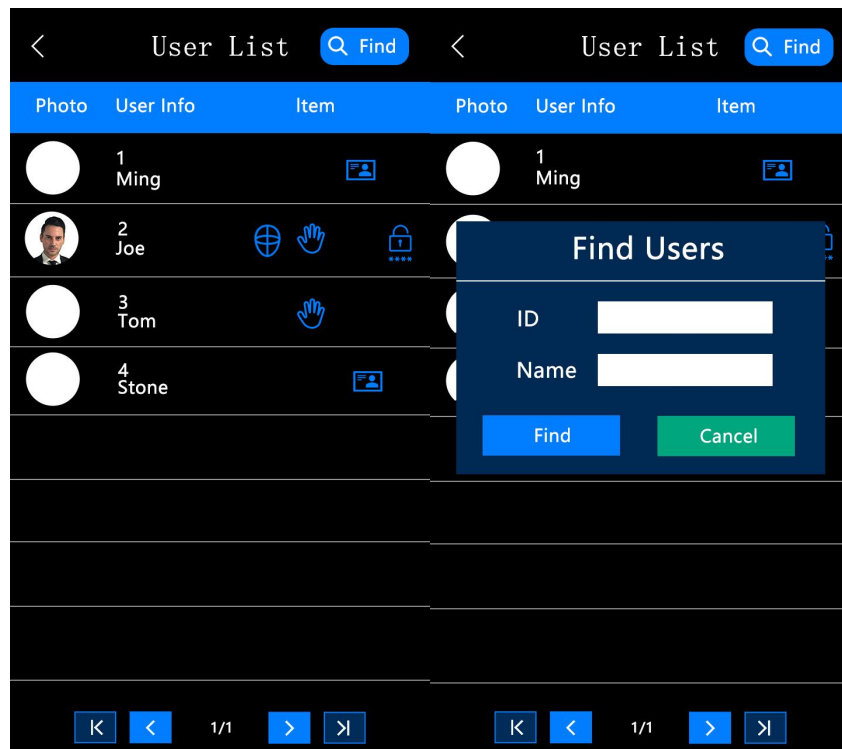


Find the user who needs to be modified, click on the user to view their detailed information. The name, card number, password, department, and permissions of personnel can be modified. For those who have not registered their fingerprint or palm vein, they can click to re-enter the user's fingerprint or palm vein, re record faces or directly delete users. Users can be set as administrators through permission modification.

< Enroll	
ID	2
Name	Joe
Card	
Pwd	••••
Dept	
Admin	User
Fingerprint	
Palm Vein	1
	
	
Modify Delete	

Department Settings

Click on "**Department Settings**" to query or add department information by clicking on the icon in the upper right corner, in order to manage personnel information by department.

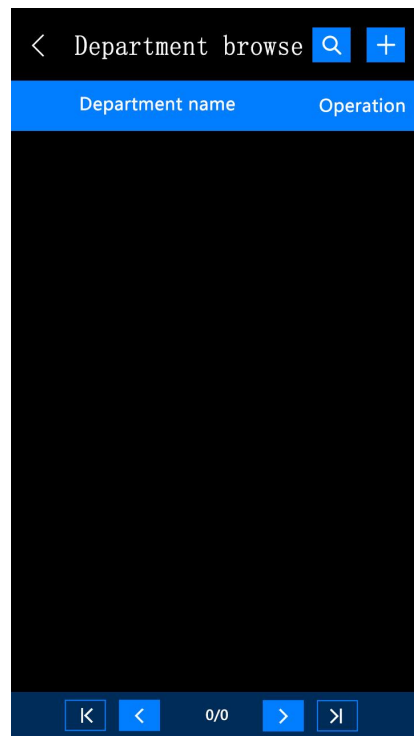

Department Setting Interface

Backup User Information


Click "**Backup User Information**" to back up the registered personnel information to a USB drive for saving.

Restore User Information

Click "**Restore User Information**" to restore the personnel information saved in the USB flash drive to the facial terminal.

Attendance Rules

Click on "**Attendance Rules**" under the menu. Attendance settings can be set on this menu.

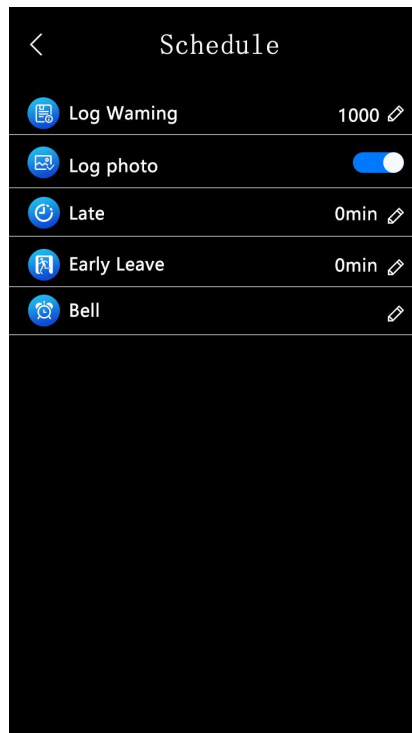

Attendance Rules

Attendance record warning: Before the storage capacity is about to be full, you can set how many remaining record capacities are left, and the device will start alarming (default is 1000 records).

Number of recognized photos: Can be set to save photos taken by the device in real-time when legal verification is passed

You can set the allowed late time and allowed early leave time, max can be set to 120 minutes.

Click on the timed bell setting, total support 24 sets of bell times. Click on the time section in the timed ringer group to modify the specific time for setting the ringer. Click on "disable" to set the ringer duration (0 seconds is the default disabled state, with a maximum setting of 255 seconds), as shown in the following figure:




< Bell		
1	00:00	You disabled! ✎
2	00:00	You disabled! ✎
3	00:00	You disabled! ✎
4	00:00	You disabled! ✎
5	00:00	You disabled! ✎
6	00:00	You disabled! ✎
7	00:00	You disabled! ✎
8	00:00	You disabled! ✎
9	00:00	You disabled! ✎
10	00:00	You disabled! ✎
12	00:00	You disabled! ✎
13	00:00	You disabled! ✎

Timed Ringer Interface

Report Management

Click on "**Report Management**" under the menu to enter the report management menu.

The "**Company Name**" display in the attendance report can be modified, and the shift schedule and attendance table can be imported and exported through a USB flash drive.

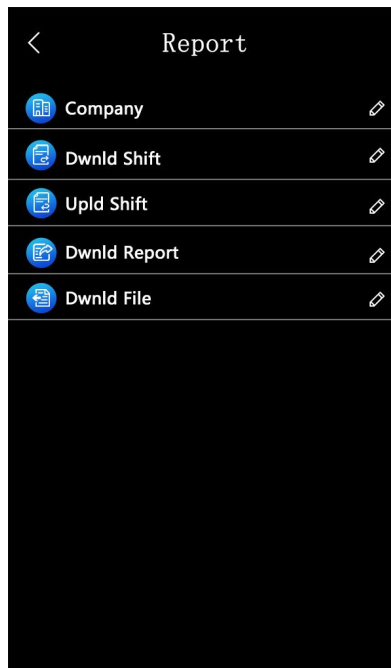


< Report	
Company	✎
Dwnld Shift	✎
Upd Shift	✎
Dwnld Report	✎
Dwnld File	✎

Report Management Interface


System Settings

Click on "**System Settings**" under the menu, which includes general settings, advanced settings, recognition settings, and alarm settings.

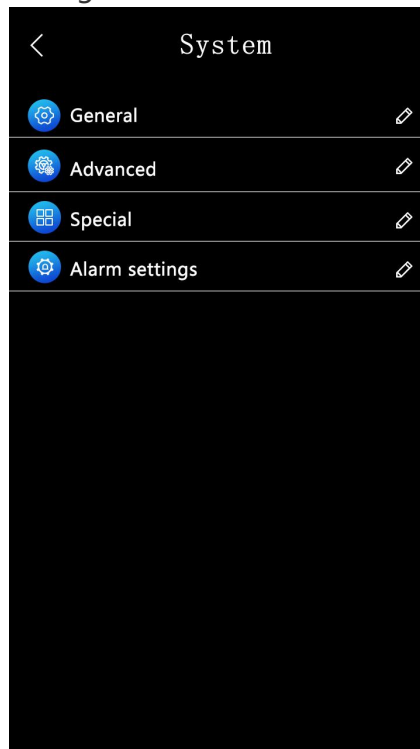

System Setting Interface


General Settings

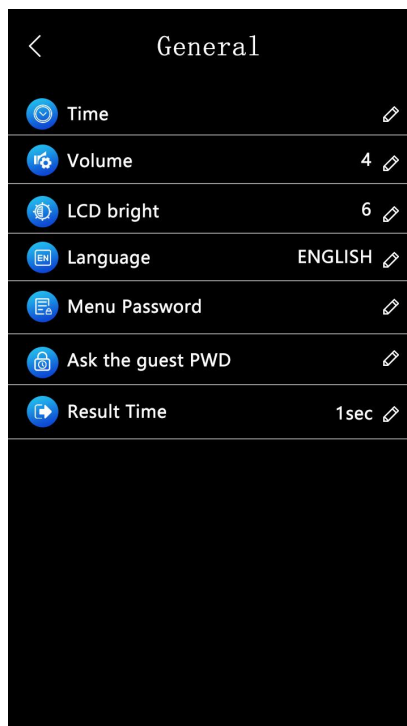

General Setting Interface

The device's clock, sound volume, screen brightness, language, menu password, visitor root password, and interface return time can be set.

The clock can be automatically set for networking or manually, as shown in the following figure.

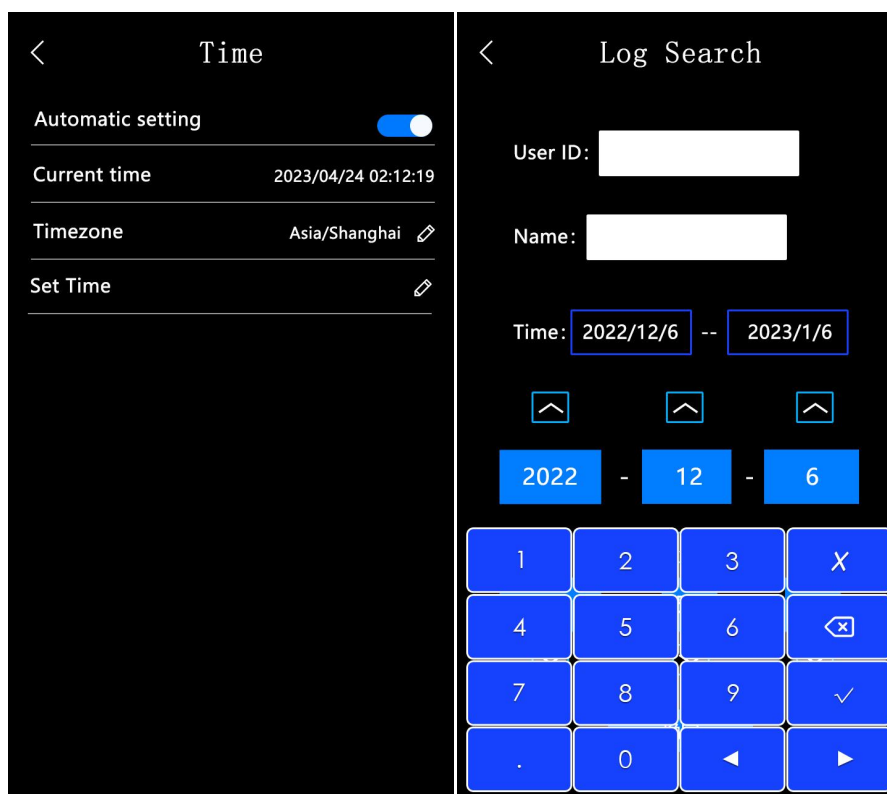

Clock Setting Interface


The sound volume and screen brightness maximum can be adjusted to 10.

Language include Simplified Chinese, Traditional Chinese, English, Portuguese, Spanish, Russian, French, Japanese, Korean, Thai, and Arabic.

The menu password and visitor root password of the device can be set.

The maximum interface return time can be set to 60 seconds (default is 1 second).

Advanced Settings

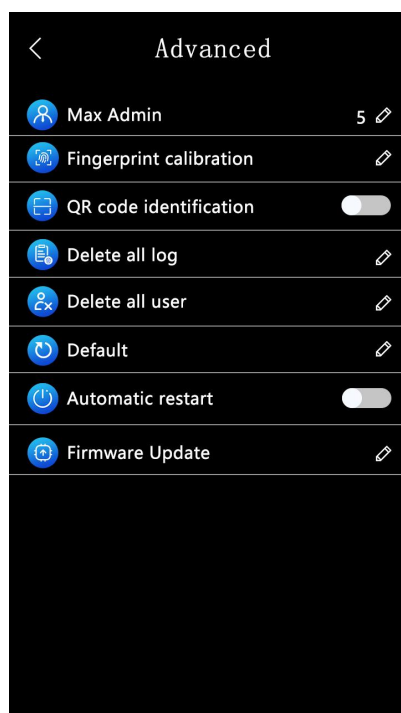

Advanced Settings

The total number of administrators can be set, maximum is 255 administrators

Fingerprint Calibration: Clean the fingerprint head first, then click on sensor calibration to make fingerprint input and recognition more sensitive.

After enabling QR code recognition, you can use the QR code to open the door.


All recorded data and user data in the device can be deleted.

The device can be restored to factory settings.

The automatic restart function can be enabled to set the automatic restart time of the device.

You can upgrade the device firmware through a USB flash drive.

Recognition Settings

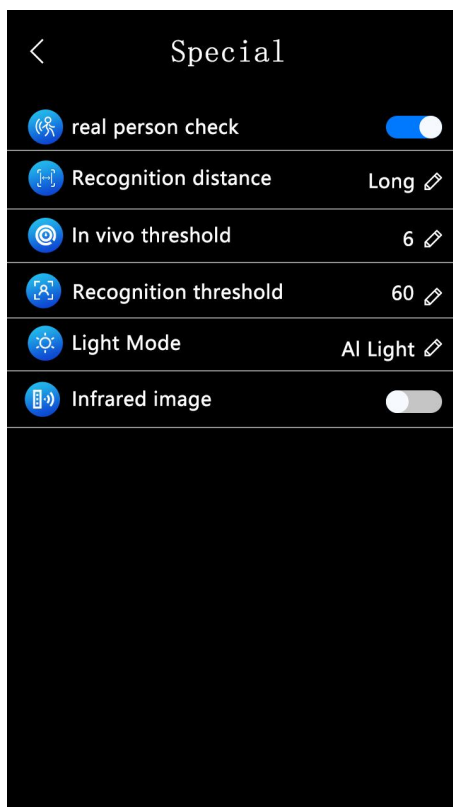

Recognition Setting Interface

The device's liveness threshold and recognition threshold can be modified, maximum setting is 99. The higher the threshold, the higher the recognition accuracy, but the higher the requirement


for registered photos.

The recognition distance of the device can be adjusted (near, middle, and far).

Liveness detection and infrared image display can be turned on or off.

Supplement Light Mode: The supplement light can be set to three modes: off, always on, and automatic. When set to automatic mode, it will automatically light up when someone recognizes it, and automatically turn off when no one recognizes it.

Alarm Settings

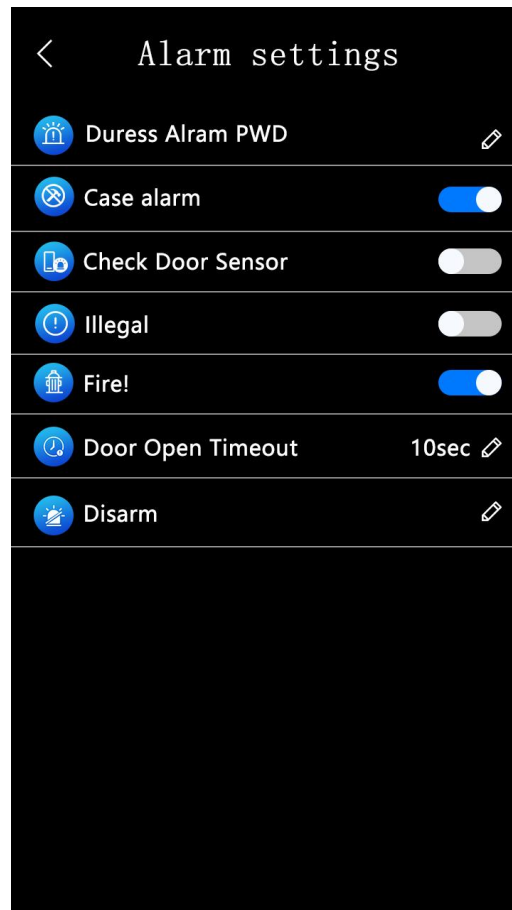

Alarm Setting Interface


The tamper alarm, door sensor alarm, illegal verification alarm, and fire alarm of the device can be turned on or off.

The password of force alarm and door opening of device timeout can be set.

Turn off Alarm: Turn off all alarm prompts.

Access Control Setting

Click on "Door Access" under the menu, as shown in the following figure:

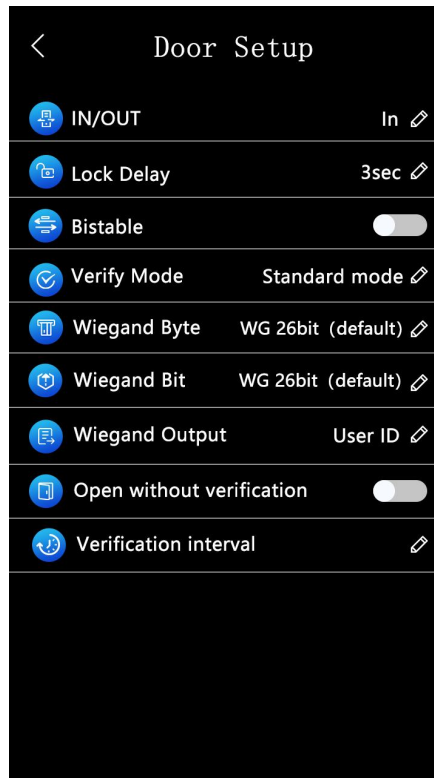

Access control setting interface

Entry and exit mode: Can select entry and exit types are either entry or exit;

The lock hold time can be set from 0 to 65535, (0 represents 0.5 seconds, 65535 represents normally opening after verification)

Bistable state: on/off, (the function of opening the bistable state is to legally recognize once open, then legally recognize once again to close, and switch back and forth to open this function);

Verification Mode: Can be set to standard mode, face+password, card+face, and fingerprint+face according to user needs;


The card reading byte and WG output mode can be modified to Wiegand 26 (two bytes, three bytes), Wiegand 34 (four bytes), and Wiegand 66 (eight bytes);

The output content of WG can be modified to number output or card number output;

Can set the door opening of non-registered verification and verification interval.

Record Viewing

Click on "**Record Viewing**" under the menu. Click on "Search" and enter the number and name to search for all entry and exit records of the personnel with this number from the start time to the end time. As shown in the following figure:

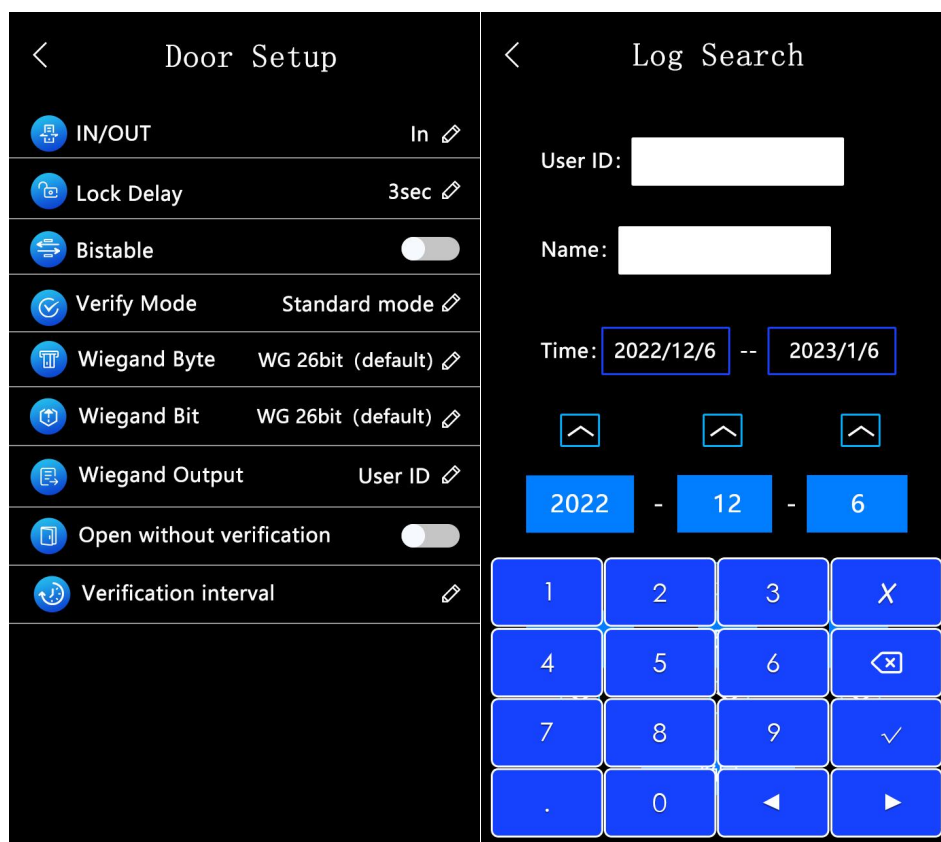


Record viewing interface

Attendance Record Search Interface


Communication

Click on "Communication Settings" to enter the communication settings menu. The device port, password, server settings, wired settings, and wireless settings can be modified, as shown in the following figure:

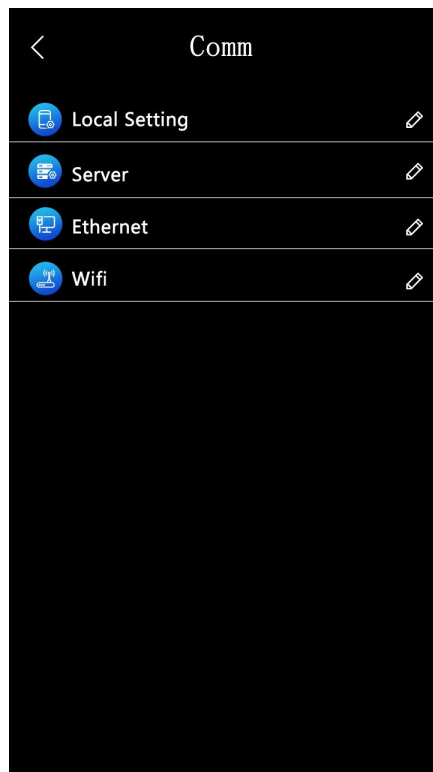

Communication Settings Interface

Port/Password: You can modify the device's port number (default is 8101), communication password, and enable or disable the main interface display IP address function, as shown in the following figure:

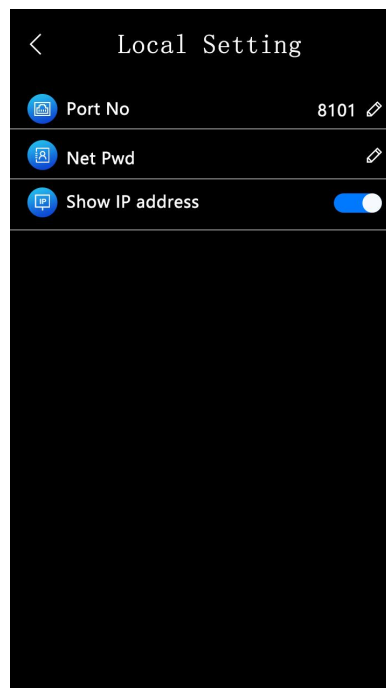


Port Password Interface

Server Settings: When installing this device through our desktop software and selecting real-time monitoring of this device, the software will automatically fill in the settings here, as shown in the following figure:

Server Settings Interface

Wired Settings: The TCP/IP parameters of the machine can be modified. As shown in the following figure:

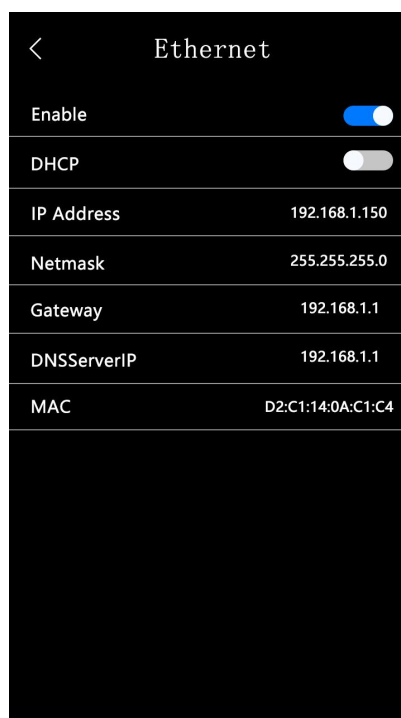

Wired Settings Interface

The default IP address is 192.168.1.150;

The subnet mask defaults to 255.255.255.000


The default gateway is 192.168.1.1;

The DNS server IP defaults to 192.168.1.1;

The MAC address is fixed and unique.

Wireless Settings: You can enable the search to connect to the network, select the wireless

network you want to connect to, and click to enter the password to complete the WIFI connection, as shown in the following figure:

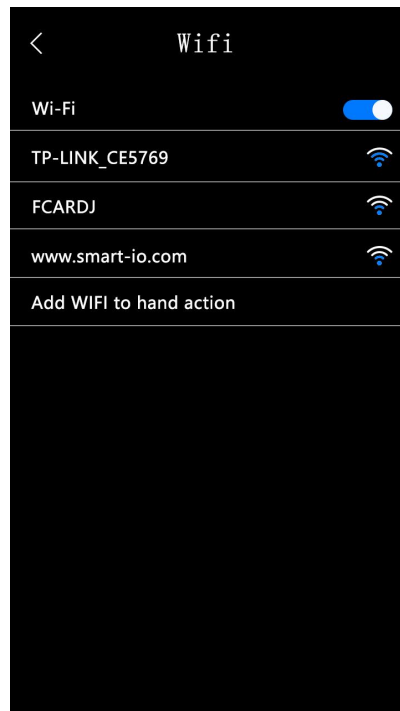

WIFI Setting Interface

Device Information

Click on "**Device Information**" under the menu to query the registration information and device information.

The registration information includes: number of administrators, number of user registrations, number of facial registrations, number of fingerprint registrations, number of palm vein registrations, number of Mifare card registrations, number of password registrations, number of attendance logs, and number of identification photos. The number on the left represents the amount of information already in the device, while the number on the right represents the maximum capacity of device registration information, as shown in the following figure:

< User Info		
	Admin quantity	0/5
	Users quantity	1/20000
	Face quantity	1/20000
	Finger quantity	2/10000
	Palms quantity	2/10000
	Card registered	1/20000
	Password quantity	2/20000
	Log quantity	4/1000000
	Log photo	4/50000

Registration Information Interface

The device information includes: manufacturer, website address, reminder information, serial number, factory date, device name, firmware version, algorithm version, and other information. As shown in the following figure:

< Device		
	Manufacture	
	Web Site	
	Reminder	
	Serial Num	8255H66244654
	Released	2023/04/14 16:45:15
	Model	
	Firmware	7.24
	Engine	Ver600.5000.001
	Import language(test)	

Device Information Interface