


Client Operation Instruction

Face Access Controller Installation And Settings

Can auto search online device through auto-search. It is convenient for the devices to join the software system. Click **“Device Install”** - **“Auto Search”** . As shown in Figure6-1:




Click **“Auto Search”** , will enter Figure 6-2:

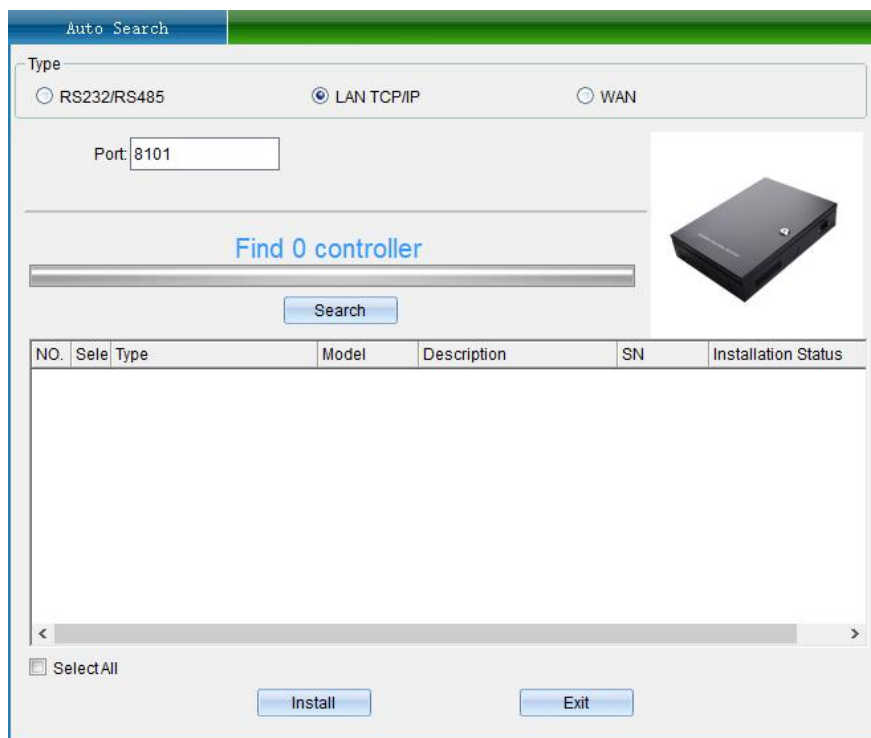

TCP/IP LAN mode: enter the network port first, and the default is 8101, and click **“Search”** . (Note: device need to communicate with the computer through

switcher.) As shown in Figure6-3:

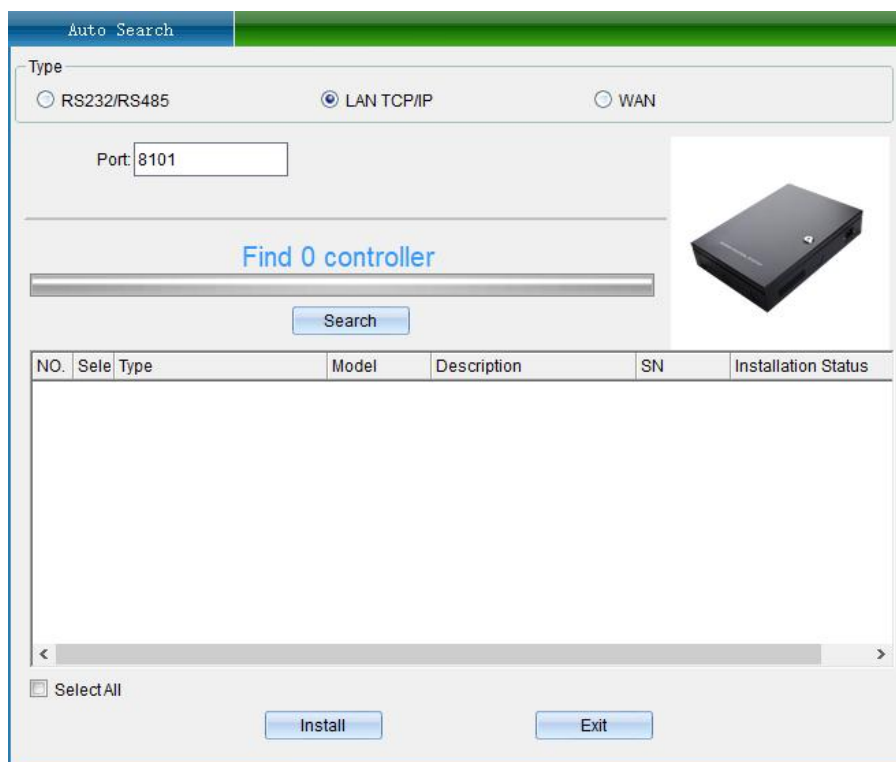

If your device is TCP/IP communication and you need to modify the device's IP address. (When installing the device, the user needs to change the IP address of the device and needs to check the communication password of the device. If the device has changed the communication password, then you need to enter the correct password to allow the change of IP address to prevent other people through the installation of software to change the device IP leading to the original user's communication breakdown.) You can double-click the TCP/IP face access controller, and the interface of TCP connection parameters will pop up (As shown in Figure6-4).

Install Controller

Controller Name: 8100 Face Controller

Picture: 

Door 1 Name: 20086095 - 1 Tag Name: [Default] [Select](#) [Advanced Attribute](#)

Working Parameters Menu Password: 0000 Language: Chinese

SN: 8100T20086095 (Please select the valid installation tag name for the door)

[Install](#) [Exit](#)

☐ Initialize the controller ☐ Change connection password as default password ☒ Calibrate

(Note: this system can search the face access controller which are in different network segment with the local computer. You need to modify the IP address with the same network segment address of the computer before normal communication. If the router you use supports multi-segment mapping, the system software can directly communicate with the access control controller of other segments) Double-click the IP address, subnet mask and gateway address to change it into parameters matching the computer IP or LAN segment, click **"Save"** to return to the installation interface, and then click **"Install"**. After installing the device, click the device property, and the following picture pops up. (As shown in Figure6-5)

Details

Basic Info | Setting | Face Recognition | Communication | Administrator | Wiring Diagram

Name: 20086095 - 1 ☐ Display on Screen

SN: 8100T20086095 Version: 4.82

Description: 8100T Face Controller

Remark:

Location: [Default]

Fingerprint Version:	Ver 01.11	Factory Date:	2020/08/29
Fingerprint Capacity:	-	User Capacity:	0/20000
Access Capacity:	0/200000	System Capacity:	-

Release Time(s): 3 s (Range:0.5-65535s)

Alarm Status: **None**

Initialization: **Initialization will empty all data!**

Name can be modified according to requirements.

Unlock Holding Time: can adjust according to requirements (default: 3 seconds)

Select " " in the " " can modify the face access Setting Details controller **"Menu Password"** , **"Recognition Distance"** , "Bioassay Mode Entry and Exit Type Swiping Card Bytes WG Output " , " " , " " , " " , " " , "Sub-machine and host machine" , etc.
(As shown in Figure6-6)

Details

Basic Info **Setting** Face Recognition Communication Administrator Wiring Diagram

System Function Settings

Language: Chinese Volume: 5

Menu Password: 0000

Short Message:

Door Access Settings

WG Output: User No. WG Byte: MSB First

Card Bytes: 3 Bytes(WG26) Entry/Exit: Entry

Verification Interval: Beep Only Interval Time(s): 3 s

Alarm Settings

Tamper Alarm: ON Blacklist Alarm: ON

Illegal Alarm: OFF

Save Exit

Select **“communication Parameters”** in the **“Equipment Details”** , as shown in the figure below

Details

Basic Info | Setting | Face Recognition | **Communication** | Administrator | Wiring Diagram

SN: 20086095 Status: Device Online

Communication

☐ RS232/RS485 ☒ LAN TCP/IP ☐ WAN

IP: 192 . 168 . 1 . 151 Port: 8101 [Change IP](#)

[Test](#) Login Password: [Unlock](#)


Caution: The connection password will be set to the controller, remember password else cannot connect to controller!

Controller Time Clock: 2020/11/03 14:39 Computer Time Clock: 2020/11/03 14:39 [Calibrate time](#)


[Save](#) [Exit](#)

Add face and authorize Add face and authorize

In the **"Enterprise Info"** - > **"Personnel File"** , as shown in the following figure

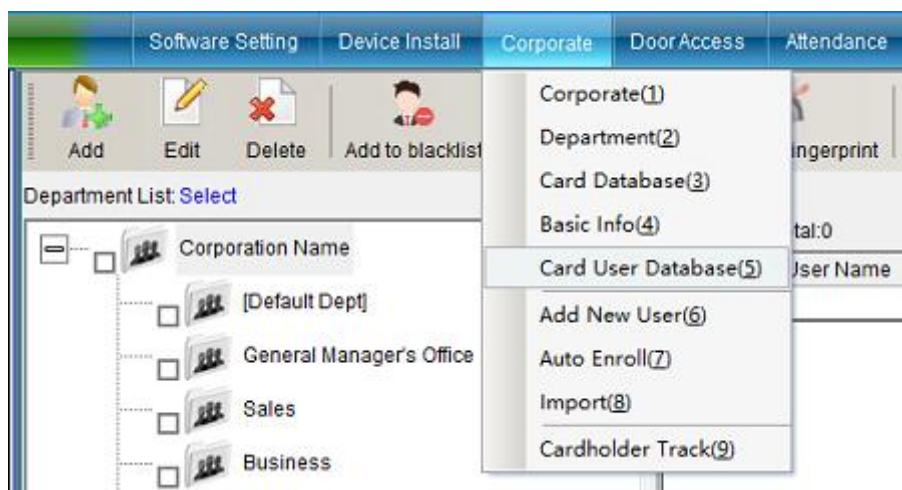

Click the personnel file to enter, as shown in the following figure:

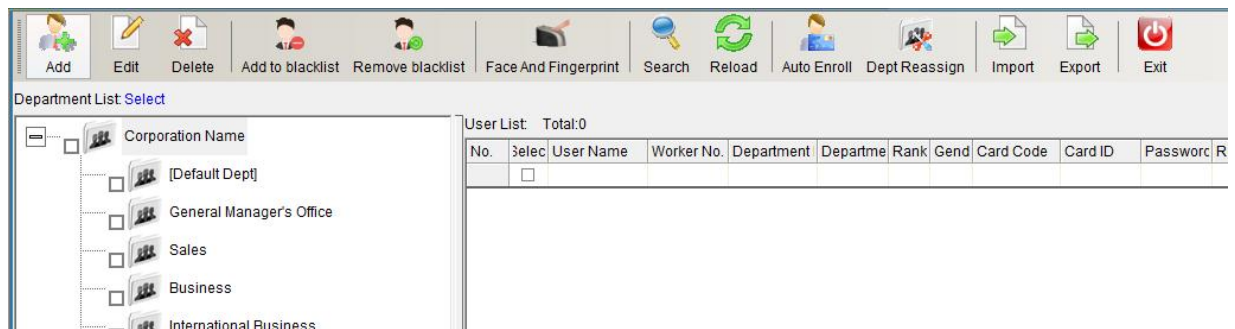

Click the add personnel icon in the toolbar to enter the personnel modification interface, as shown in the following figure:

The screenshot shows the 'Edit User---Stephanie' interface. The 'Basic Profile' tab is selected. The 'Basic Information' section includes: Name: Stephanie, Card ID: 0, and a 'Select' button. There are also checkboxes for 'More Formats', 'Fingerprints: 0 pcs', and 'Faces: 0 pcs'. The 'Other Information' section includes: Password: [masked], Card + PIN checkbox, Worker No.: 10000, Card Code: [empty], Religion: Han Nationality, Gender: Male, Department: [Default Dept], Dept No.: [Default Dept], and Rank: Staff. The 'Picture' section shows a placeholder for a photo with a resolution of 480 X 640 pixel. There are buttons for 'Select', 'Delete', 'Take', and 'Take by Face Drive'. The 'Attendance' section has a checked 'Attendance' checkbox, 'Auto Shift: Work Normal', and 'Type: Normal'. At the bottom, there are buttons for 'Save & Add', 'Save', and 'Exit'.

After filling in the personal information, please click to select photos, add local computer photos as personnel photos, and then click save.

Note: the photo requires a resolution of more than 480 * 640 (file size: < 300KB), clear and unobstructed face photos (without glasses, masks and hats), regular and natural color photos.

This can also be connected the photographing device (traditional USB computer camera) .It takes photos directly and saves them. Click "take photos" to pop up the following page. (Note: the face needs to be aligned with the prompt outline before the Photo button is displayed)

Click to take photos. After taking photos, you will return to the personnel page, edit the data and click save.

For authorization of door opening authority, click **“Set Door Opening Authorization”** in the drop-down menu of **“Access Control Information”** of the software. Click **“Set Door Opening Authorization”** to enter the interface, as shown in the following figure:

Select the person who needs to set the access control authority, select the opening period and times, the validity period, and select the equipment door. After selecting, click “allow the selected person to pass through the selected door and upload” .

Select **“All Users”** or **“All Optional Doors”** .

Select a **“Single User”** or a **“Single Optional Door”** .

Remove a **“Single Selected User”** or a **“Single Selected Door”** .

“prohibit the selected personnel from passing through the selected door” delete the access permission of the selected user to the selected door. After that, you

must synchronize the data to the face machine, and the deleted permission can take effect.

“allow selected personnel to pass through the selected door” add the access permission of the selected user to the selected door. After that, the added permission can only take effect after synchronizing the data to the face machine.

“allow selected personnel to pass through the selected door and upload” add the access authority of the selected user to the selected door, and upload the added information to the face machine.


After all permissions are set, the information will not take effect until it is uploaded to the face machine.

Face Machine Record Collection And Viewing


Face machine record collection

The system has memory storage function, and each face machine can store records offline (even if it is not connected to the computer, it also will store automatically, and the records will never be lost after power failure.) You can choose the appropriate time to extract the data into the computer.

Click the “**Access Control Information**” drop-down menu “**Collect Access Records**” of the software, as shown in the following figure:

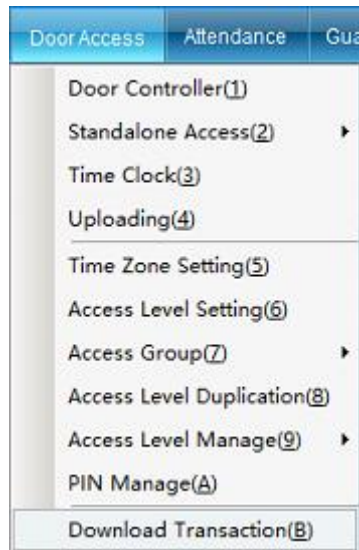

Click **“Acquisition Access Record”** to enter the interface ,as shown in the following figure:

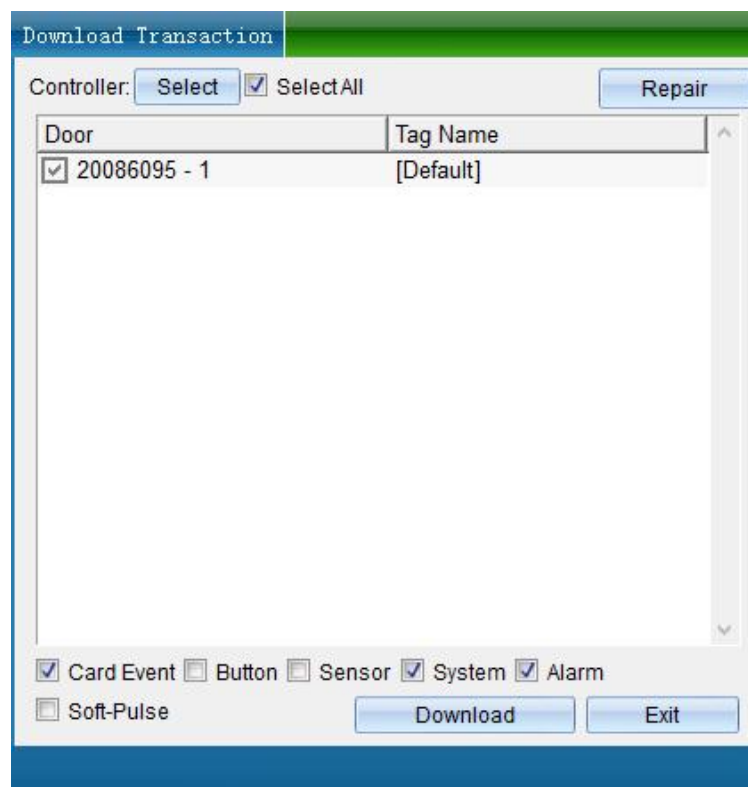

After selecting the face machine and record type to be collected, click **“Collect Records of the Selected Equipment”** to pop up the window, as shown in the following figure:

The 'Download Transaction' window has a title bar with a green tab labeled 'Download Transaction'. It contains two main sections:

Door List: A table with columns 'Door', 'Tag Name', and 'Description'. It is currently empty.

Downloaded Transaction: A table with columns 'Door', 'Tag Name', 'Description', and 'Status'. It contains five rows of data:

Door	Tag Name	Description	Status
20086095 - 1	[Default]	Card Event	Saved:00005,Downloaded:00005
20086095 - 1	[Default]	System	Saved:00001,Downloaded:00001
20086095 - 1	[Default]	Alarm	Saved:00001,Downloaded:00001
20086095 - 1	[Default]	Read Temp Re...	Saved:00000,Downloaded:00000
20086095 - 1	[Default]	Download reco...	Downloaded,photos:5

A 'Back' button is located at the bottom right of the window.

After the collection is completed, click **"Finish"** .

If you have collected card reading records before, you can retrieve all records through **'Repair Records'**.

Click **"Repair Record"** in the **"Acquisition Access Record"** interface of the software **"Access Control Information"** drop-down menu to pop up the verification window, enter the verification password: 0000 (default administrator password), and then click **"OK"** , as shown in the following figure:

The 'Verify Password' window has a title bar with a green tab labeled 'Verify Password'. It contains the following fields and buttons:


- Admin Name:** A text box containing the value 'SYSTEM'.
- Password:** A text box for entering the password.
- OK** and **Exit** buttons at the bottom.

The 'Download Transaction' window is shown again, but the 'Downloaded Transaction' table now contains three rows, all with the status 'Repaired, please download.':

Door	Tag Name	Description	Status
20086095 - 1	[Default]	Card Event	Repaired, please download.
20086095 - 1	[Default]	System	Repaired, please download.
20086095 - 1	[Default]	Alarm	Repaired, please download.

The 'Back' button remains at the bottom right.

After the repair is completed, click **“Finish”** to return to the acquisition access control record interface, select the door to extract the card reading record and the data to be collected, then click “ ” and wait a moment to complete the acquisition. At this time, all the records in the controller are collected into the computer, as shown in the following figure:

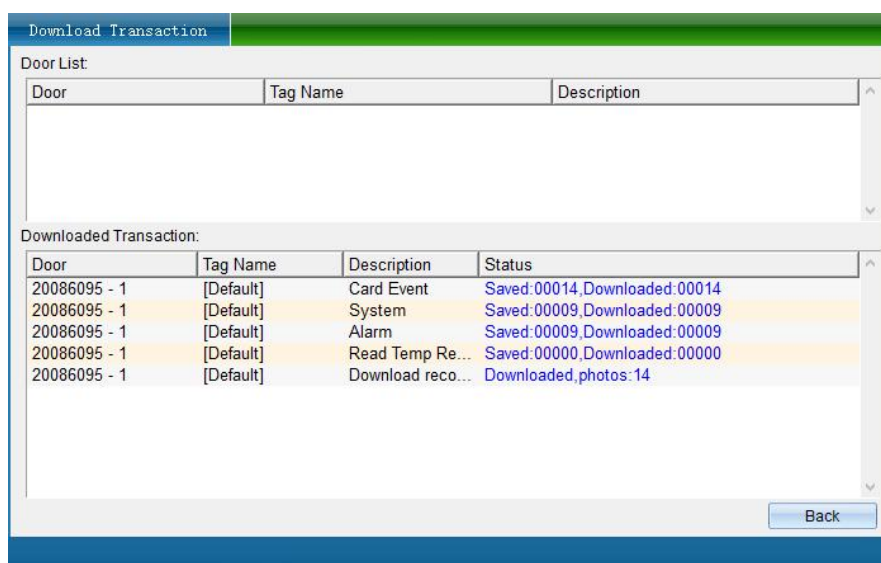


When the acquisition is completed, click **“Finish”** . After the records are collected, the query can be carried out.


Face Machine Record Viewing

Please collect records before querying.

Click **“Access Control Information”** drop-down menu **“View Access Record”** in the software menu bar, as shown in the following figure:

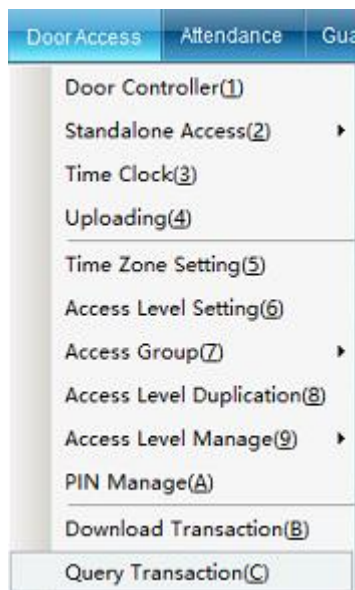

Click **“Enter And Exit Record ”** , as shown in the following figure:

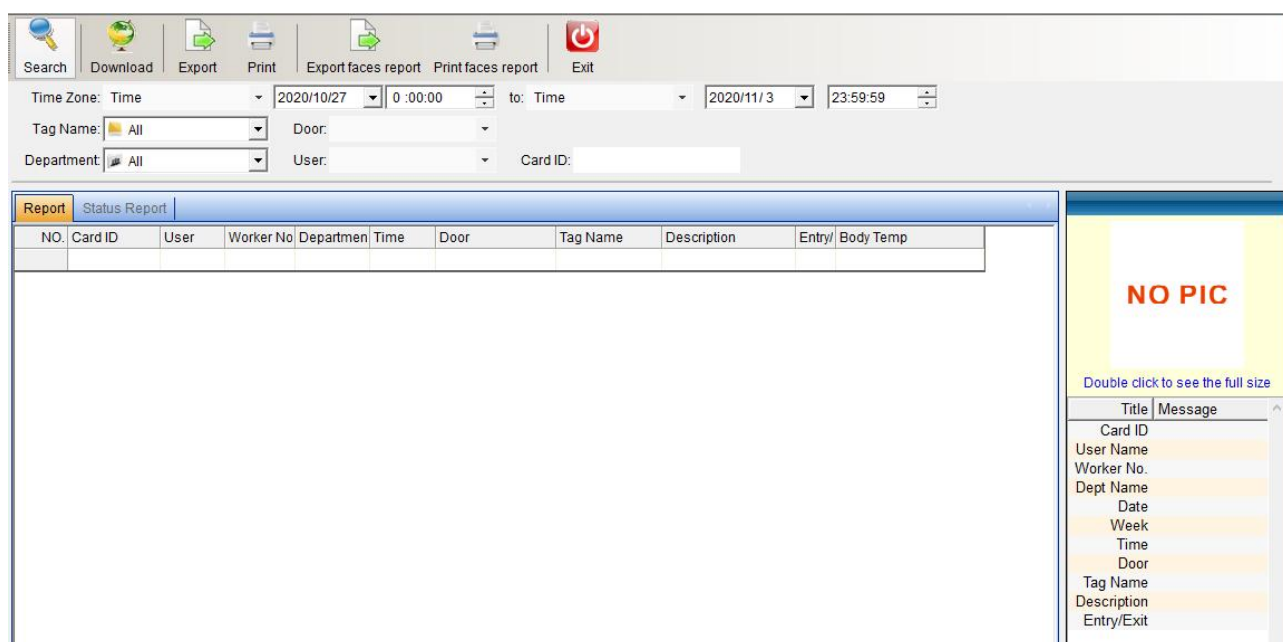

Collect records firstly, click **“Collect Records”** . After collecting records, you can query as needed and enter query criteria. Query criteria can query relevant records according to **“Time Range”** , **“Name”** , **“Card Number”** , **“Department”** and **“Place”** . Then click **“Search”** to query the access records of relevant personnel, or directly click **“search”** to query the access conditions of all people, As shown in the figure below:

Search Download Export Print Export faces report Print faces report Exit

Time Zone: Time 2020/10/27 0 00:00 to: Time 2020/11/3 23:59:59

Tag Name: All Door: Department: All User: Card ID:

Report	Status Report								
NO	Card ID	User	Worker No	Department	Time	Door	Tag Name	Description	Entry/ Body Temp
00001	0000000001	-	1	-	2020/11/0	20086095 - 1	[Default]	Face	Entry
00002	0000000001	-	1	-	2020/11/0	20086095 - 1	[Default]	Face	Entry
00003	0000000001	-	1	-	2020/11/0	20086095 - 1	[Default]	Face	Entry
00004	0000000001	-	1	-	2020/11/0	20086095 - 1	[Default]	Face	Entry
00005	0000000001	-	1	-	2020/11/0	20086095 - 1	[Default]	Face	Entry
00006	0000000001	-	1	-	2020/11/0	20086095 - 1	[Default]	Face	Entry
00007	0000000001	-	1	-	2020/11/0	20086095 - 1	[Default]	Face	Entry
00008	0000000001	-	1	-	2020/11/0	20091020 - 1	[Default]	Fingerprint	Entry
00009	0000000001	-	1	-	2020/11/0	20091020 - 1	[Default]	Fingerprint	Entry
00010	0000000001	-	1	-	2020/11/0	20091020 - 1	[Default]	Fingerprint	Entry
00011	-	-	-	-	2020/11/0	20091020 - 1	[Default]	Power on	Entry
00012	-	-	-	-	2020/11/0	20091020 - 1	[Default]	DisConnect LAN	Entry
00013	-	-	-	-	2020/11/0	20091020 - 1	[Default]	Connect LAN	Entry
00014	-	-	-	-	2020/11/0	20091020 - 1	[Default]	DisConnect LAN	Entry
00015	-	-	-	-	2020/11/0	20091020 - 1	[Default]	Connect LAN	Entry
00016	-	-	-	-	2020/11/0	20091020 - 1	[Default]	Power on	Entry



Double click to see the full size

Title | Message

Card ID 0000000001

User Name -

Worker No. 1

Dept Name -

Date

Week

Time 2020/11/03 14:51

Door 20086095 - 1

Tag Name [Default]

Description Face

Entry/Exit Entry

You can also export the queried records. Click **“Export”** to export personnel access records