MARCH 2, 1914

Date of Revision

SECTIONAL EXPANDERS FOR BOILER FLUES

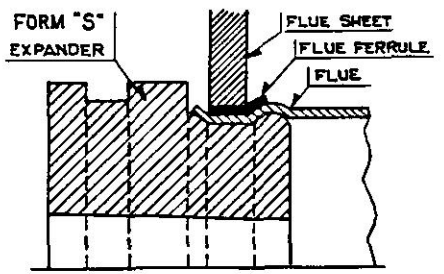


FIG. NO. 1

FLUE SIZE	THICKNESS OF FLUE SHEET	SIZE OF EXPANDER	MANUFACTURER
4 1/2	1/2	4 1/2 x 1/2	FAESSLER
4 1/2	9/16	4 1/2 x 9/16	"
4 1/2	1/2	4 1/2 x 9/16	WIEDEKE
4 1/2	9/16	4 1/2 x 5/8	"

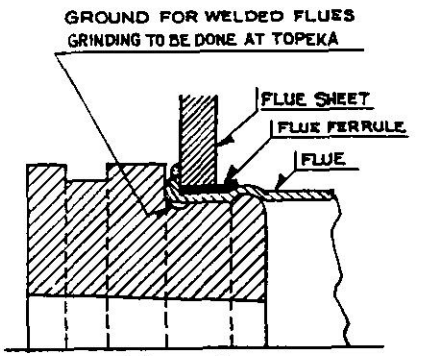


FIG. NO. 2

FLUE SIZE	THICKNESS OF FLUE SHEET	SIZE OF EXPANDER	MANUFACTURER
4 1/2	1/2	4 1/2 x 1/2	FAESSLER
4 1/2	9/16	4 1/2 x 9/16	"
4 1/2	1/2	4 1/2 x 9/16	WIEDEKE
4 1/2	9/16	4 1/2 x 5/8	"

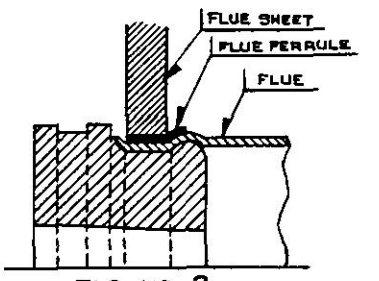


FIG. NO. 3

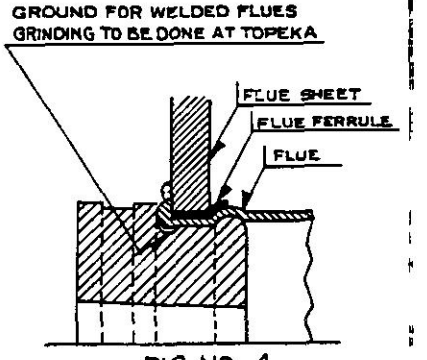


FIG. NO. 4

	FLUE SIZE	THICKNESS OF FLUE SHEET	SIZE OF EXPANDER
A	1 1/2	1/2	9/16
A	1 1/2	9/16	5/8
A	1 3/4	1/2	9/16
A	1 3/4	9/16	5/8
	1 7/8	1/2	9/16
	1 7/8	9/16	5/8
	2	1/2	9/16
	2	9/16	5/8
	2 1/8	1/2	9/16
	2 1/8	9/16	5/8
	2 1/4	1/2	9/16
	2 1/4	9/16	5/8
B	2 1/2	1/2	9/16
B	2 1/2	9/16	5/8
	3	9/16	5/8
	3 1/2	9/16	5/8
	3 1/2	5/8	11/16

A = WORK EQUIPMENT BOILER
B = STATIONARY BOILER

	FLUE SIZE	THICKNESS OF FLUE SHEET	SIZE OF EXPANDER
A	1 1/2	1/2	1/2
A	1 1/2	9/16	9/16
A	1 3/4	1/2	1/2
A	1 3/4	9/16	9/16
	1 7/8	1/2	1/2
	1 7/8	9/16	9/16
	2	1/2	1/2
	2	9/16	9/16
	2 1/8	1/2	1/2
	2 1/8	9/16	9/16
	2 1/4	1/2	1/2
	2 1/4	9/16	9/16
B	2 1/2	1/2	1/2
B	2 1/2	9/16	9/16
	3	9/16	9/16

FIGURES 1 AND 3 SHOW THE STYLE OF EXPANDER TO BE USED FOR SETTING FLUES WHEN MAKING REQUISITION FOR THIS EXPANDER CLEARLY SPECIFY THE SIZE OF THE EXPANDER, THE THICKNESS OF FLUE SHEET ON WHICH IT IS TO BE USED AND ALSO STATE THAT IT IS TO BE USED FOR SETTING FLUES.


NOTE : *Expanders No 1 and No. 3 must NOT be used for reworking flues.*

THE FLUES MUST BE CUT SQUARE AND BE FREE FROM BURRS BEFORE USING THE EXPANDER.

FIGURES 2 AND 4 SHOW THE STYLE OF EXPANDER TO BE USED FOR REWORKING FLUES WHEN MAKING REQUISITION FOR THIS STYLE OF EXPANDER CLEARLY SPECIFY THE SIZE OF THE EXPANDER, THE THICKNESS OF FLUE SHEET ON WHICH IT IS TO BE USED AND ALSO STATE THAT IT IS TO BE USED FOR RE-WORKING FLUES

NOTE : *Expanders No 2 and No. 4 must NOT be used for setting flues.*

See pages 14 A and 14 J for setting of flues.
See page 14 L for limits of wear for flue beading tools.

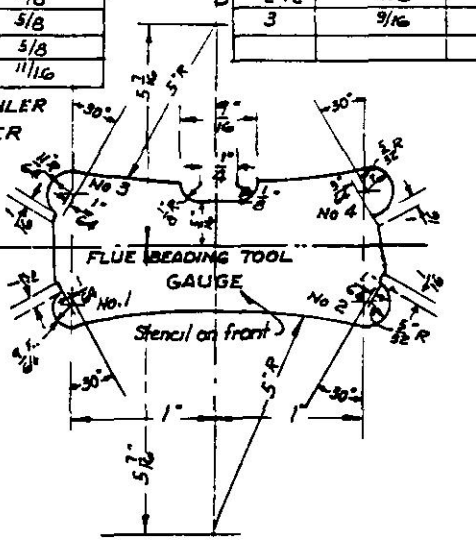

NOMINAL SIZE OF FLUES	FLUE BEADING TOOL NUMBER TO BE USED	
	FRONT FLUE SHEET	BACK FLUE SHEET
2 & 2 1/4	2	1
3 1/2	3	2
5 3/8 & 5 1/2	4	3
2 1/2 - 3 - 3 1/2 ARCH TUBES	USE NO 4 BEADING TOOL AT BOTH FLUE AND DOOR SHEET ENDS.	

This information formerly shown on page 121 E

Retraced from page of same number 1-4-47