Thermostat

Replacement

Fuel-Injected Engine:

NOTE: Use new gaskets and O-rings whenever reassembling.

THERMOVALVE
15 N·m (1.5 kg-m, 11 lb-ft)

THERMOSTAT HOUSING

8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

BLEED BOLT
10 x 1.25 mm
10 N·m (1.0 kg-m, 7 lb-ft)

O-RING
Replace

THERMOSTAT
Install with pin up.

THERMOSTAT HOUSING OUTLET

GASKET
Replace

GROUND TERMINAL

THERMOSENSOR
18 N·m (1.8 kg-m, 13 lb-ft)

TEMPERATURE GAUGE SENDING UNIT
9 N·m (0.9 kg-m, 7 lb-ft)

6 x 1.0 mm
12 N·m
(1.2 kg-m, 9 lb-ft)
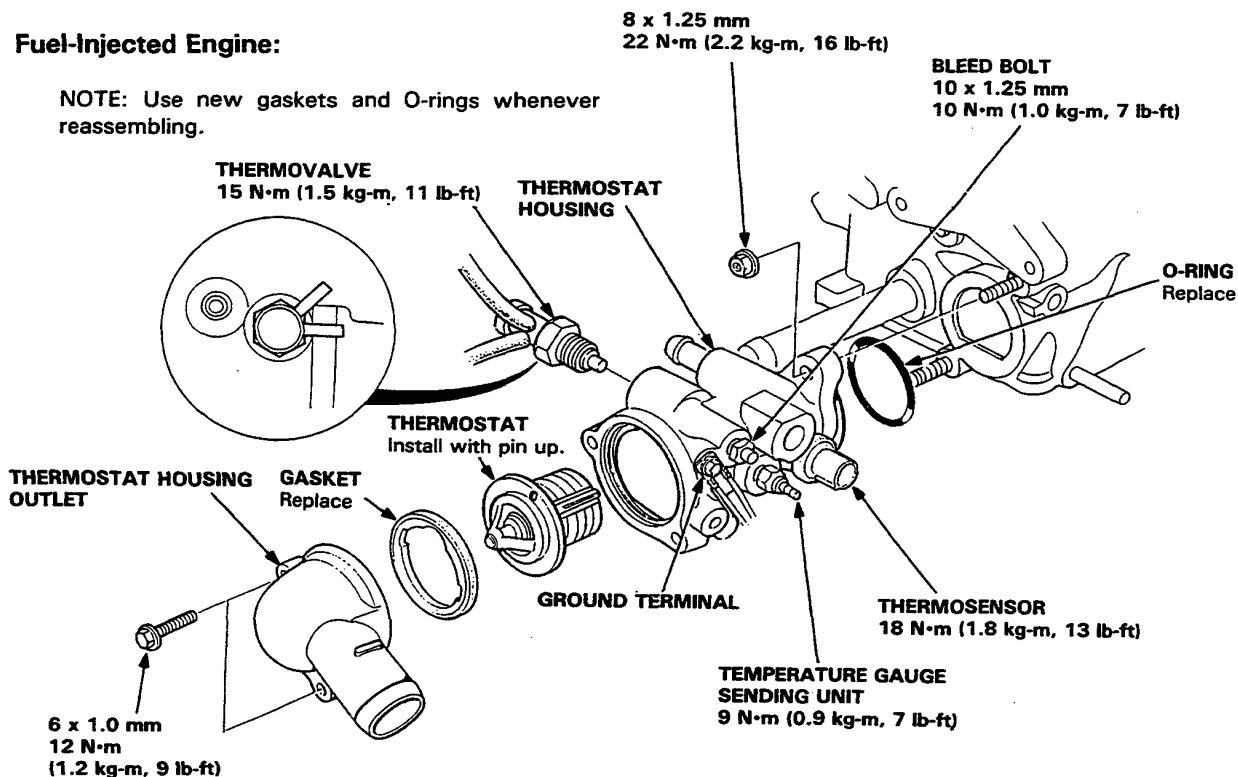
Carbureted Engine:

NOTE: Use new gaskets and O-rings whenever reassembling.

8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

THERMOSENSOR
18 N·m (1.8 kg-m, 13 lb-ft)
(Except M/T KB, KE, KF, KG, KW)

BLEED BOLT
10 x 1.25 mm
10 N·m (1.0 kg-m, 7 lb-ft)

THERMOSTAT HOUSING

THERMOSTAT
Install with pin up.

THERMOSTAT HOUSING OUTLET

GASKET
Replace

O-RING
Replace

TEMPERATURE GAUGE SENDING UNIT
9 N·m (0.9 kg-m, 7 lb-ft)

GROUND TERMINAL

6 x 1.0 mm
12 N·m
(1.2 kg-m, 9 lb-ft)

6 x 1.0 mm
10 N·m (1.0 kg-m, 7 lb-ft)

THERMOVALVE
10 N·m (1.0 kg-m, 7 lb-ft)