## **Emission Control System**


## - Catalytic Converter

[KX, KS, KZ model]

## Inspection

If excessive exhaust system back-pressure is suspected, remove the catalytic converter from the car and make a visual check for plugging, melting or cracking of the catalyst. Replace the catalytic converter if any of the visible area is damaged or plugged.

NOTE: Tighten each nut in the sequence shown below.

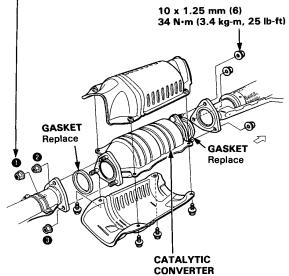

Removal Installation, section 5 Inspect housing for cracks or other damage.

Inspect element for clogging. by looking through the inside.