# Power Distribution

## Circuit Identification

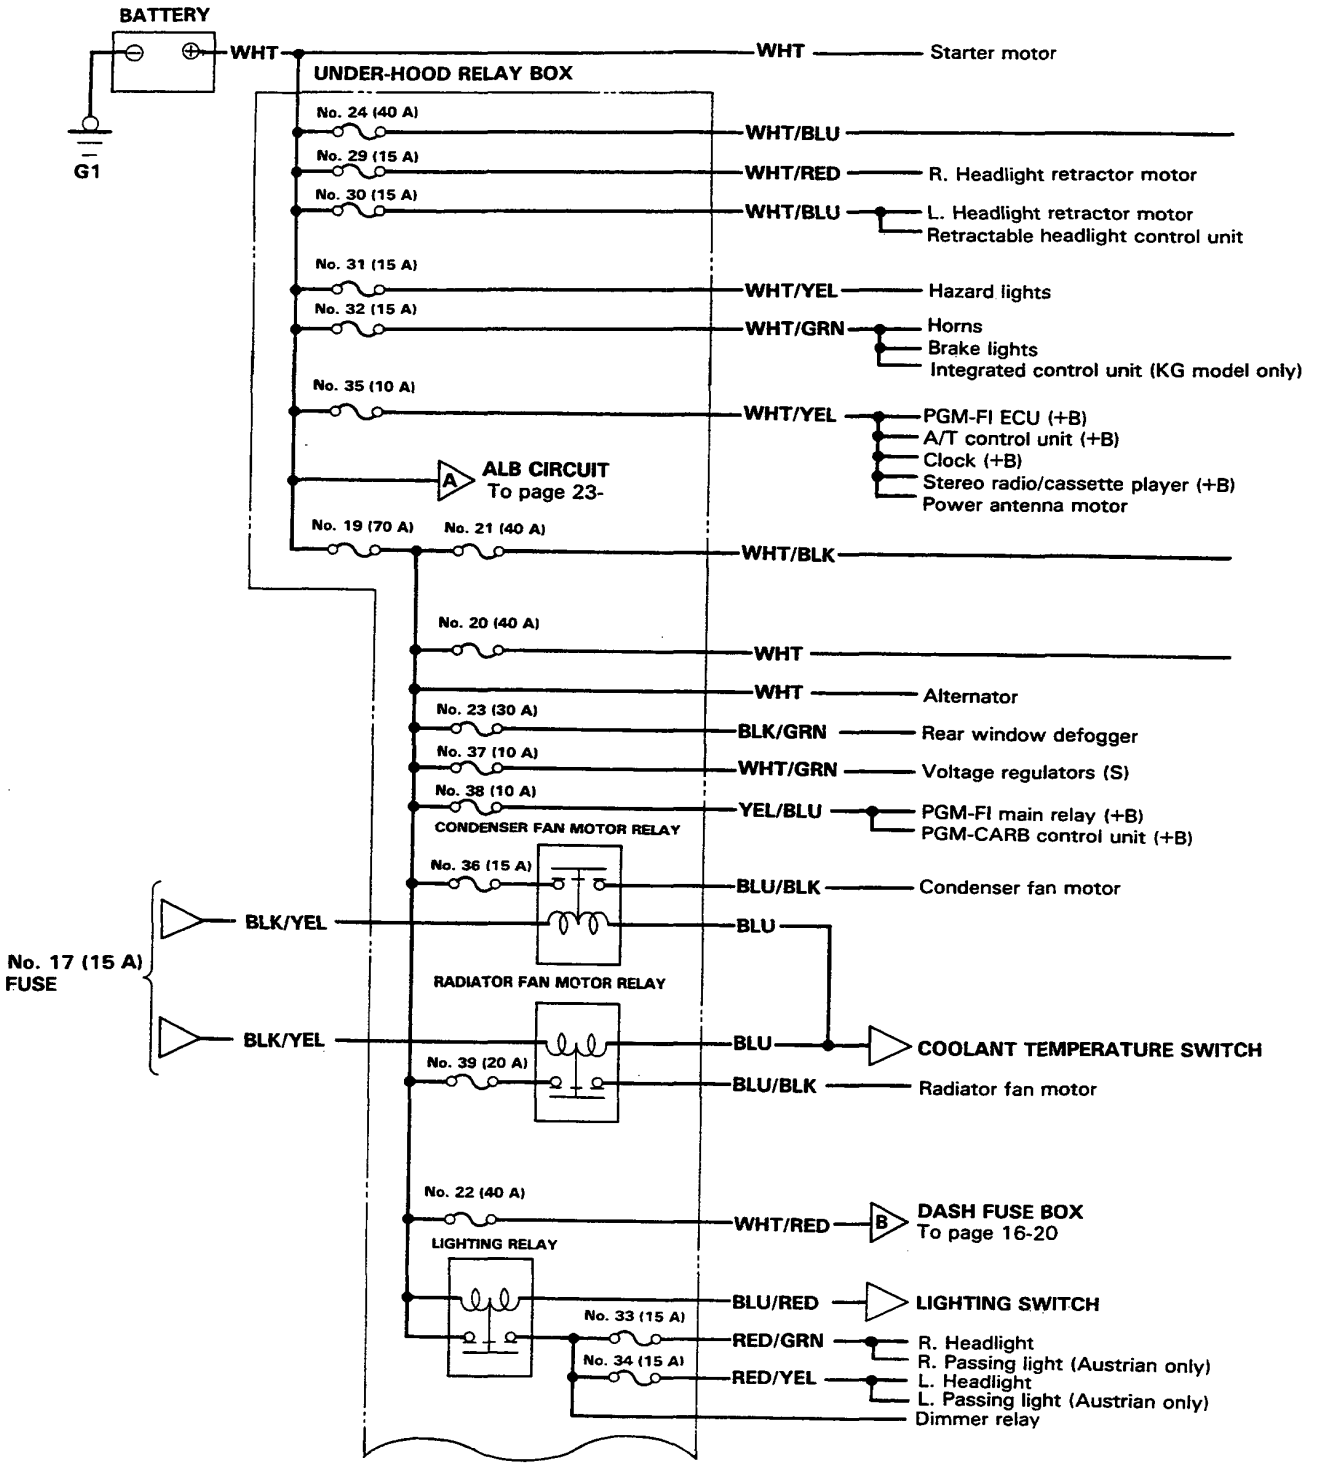

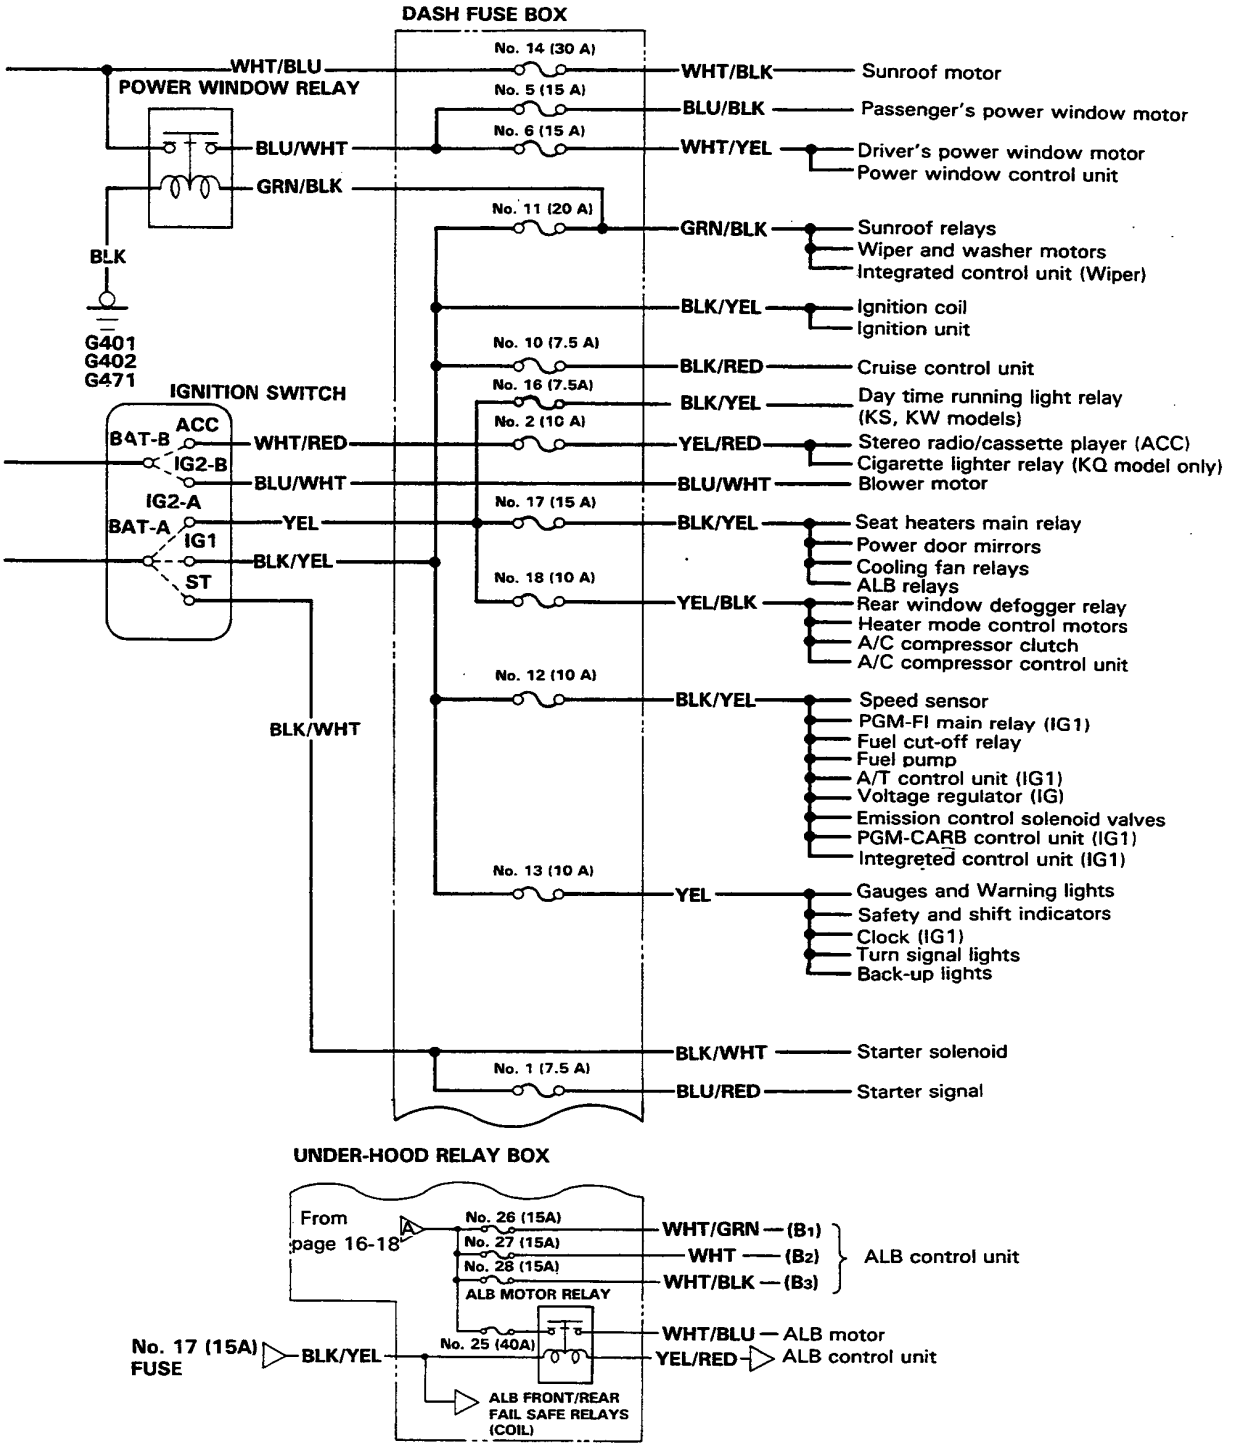
DASH FUSE BOX
No. 14 (30 A)
WHT/BLU
POWER WINDOW RELAY
WHT/BLK
Sunroof motor
No. 5 (15 A)
BLU/BLK
Passenger's power window motor
No. 6 (15 A)
BLU/WHT
WHT/YEL
Driver's power window motor
Power window control unit
GRN/BLK
No. 11 (20 A)
GRN/BLK
Sunroof relays
Wiper and washer motors
Integrated control unit (Wiper)
BLK
G401
G402
G471
BLK/YEL
Ignition coil
Ignition unit
No. 10 (7.5 A)
BLK/RED
Cruise control unit
IGNITION SWITCH
No. 16 (7.5A)
BLK/YEL
Day time running light relay
(KS, KW models)
ACC
BAT-B
No. 2 (10 A)
WHT/RED
YEL/RED
Stereo radio/cassette player (ACC)
Cigarette lighter relay (KQ model only)
IG2-B
BLU/WHT
BLU/WHT
Blower motor
IG2-A
BAT-A
YEL
No. 17 (15 A)
BLK/YEL
Seat heaters main relay
Power door mirrors
Cooling fan relays
ALB relays
IG1
BLK/YEL
ST
No. 18 (10 A)
YEL/BLK
Rear window defogger relay
Heater mode control motors
A/C compressor clutch
A/C compressor control unit
No. 12 (10 A)
BLK/YEL
Speed sensor
PGM-FI main relay (IG1)
Fuel cut-off relay
Fuel pump
A/T control unit (IG1)
Voltage regulator (IG)
Emission control solenoid valves
PGM-CARB control unit (IG1)
Integreted control unit (IG1)
BLK/WHT
No. 13 (10 A)
YEL
Gauges and Warning lights
Safety and shift indicators
Clock (IG1)
Turn signal lights
Back-up lights
BLK/WHT
Starter solenoid
No. 1 (7.5 A)
BLU/RED
Starter signal
UNDER-HOOD RELAY BOX
From
page 16-18
A
No. 26 (15A)
WHT/GRN — (B1)
No. 27 (15A)
WHT — (B2)
No. 28 (15A)
WHT/BLK — (B3)
ALB control unit
ALB MOTOR RELAY
WHT/BLU — ALB motor
No. 17 (15A)
FUSE
BLK/YEL
No. 25 (40A)
YEL/RED
ALB control unit
ALB FRONT/REAR
FAIL SAFE RELAYS
(COIL)

(cont'd)

# Power Distribution

## Circuit Identification (cont'd)

<KG, KB, KX, KF, KE>

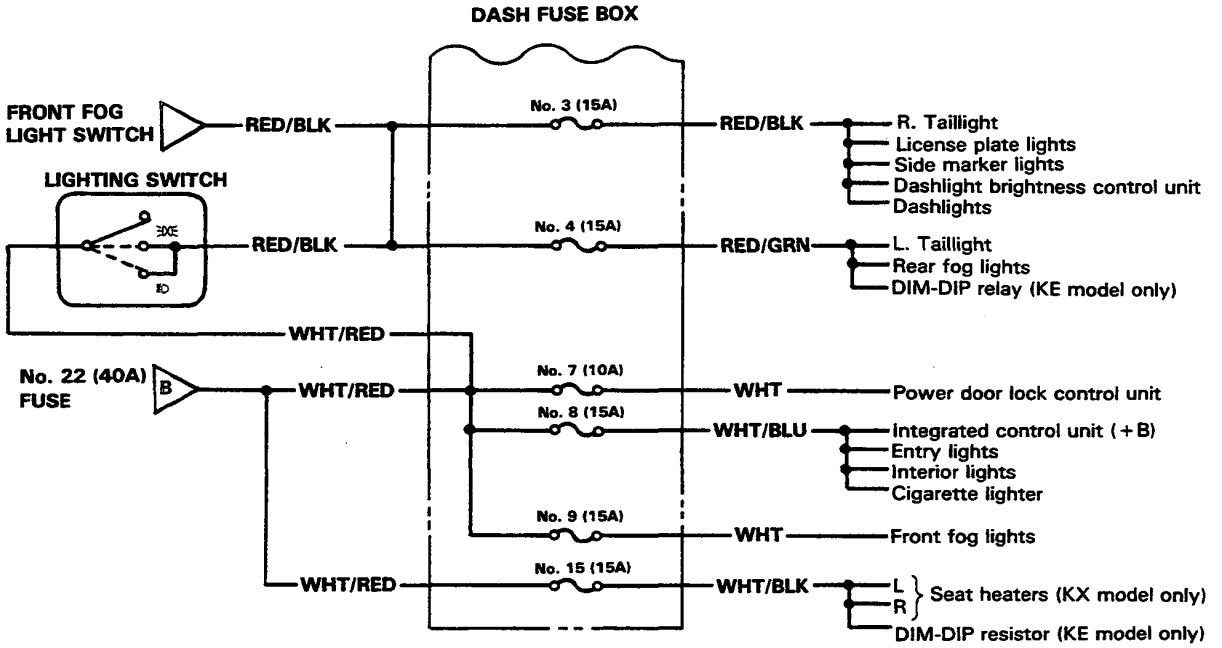

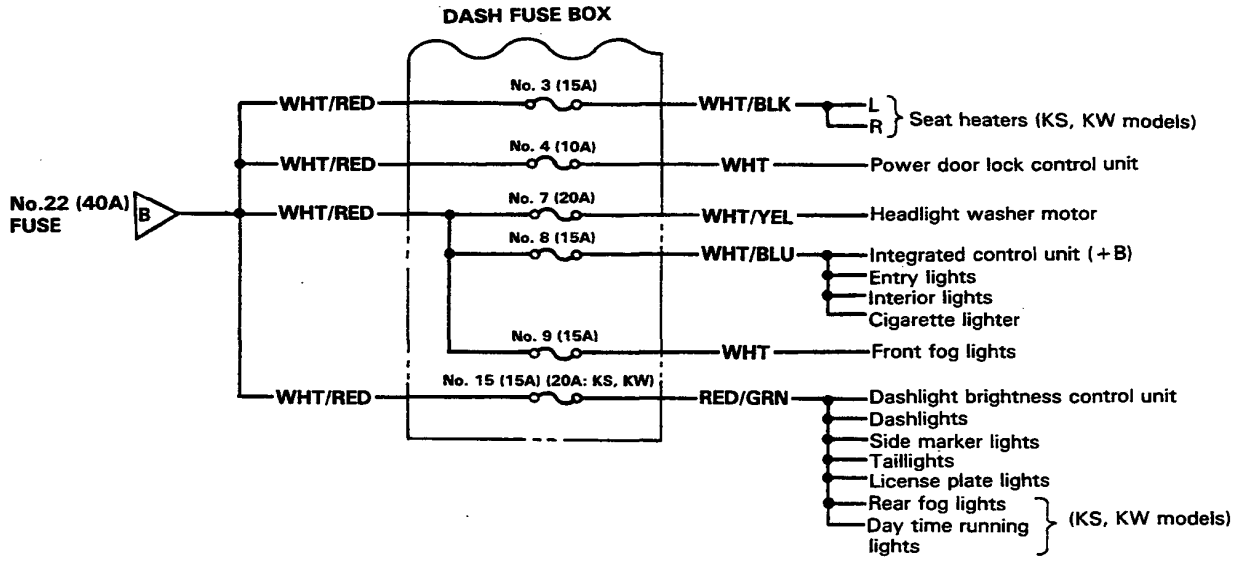
<KS, KW, KQ, KT, KY>