Compressor


Thermal Protector Inspection -

Check for continuity between the 1 and 3 terminals of the compressor connector.

There should be continuity.

 If no continuity, replace the thermal protector (page 15-52).

NOTE: Replace the thermal protector and pick-up as a set.

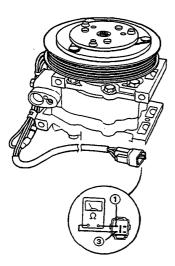

Pick-up Sensor Inspection

Check for continuity between the 2 and 4 terminals of the compressor connector.

There should be continuity.

 If no continuity replace the pick-up sensor (page 15-52).

NOTE: Replace the pick-up sensor and thermal protector as a set.

