
Electrical Connections



[KX, KS, KZ, KQ]

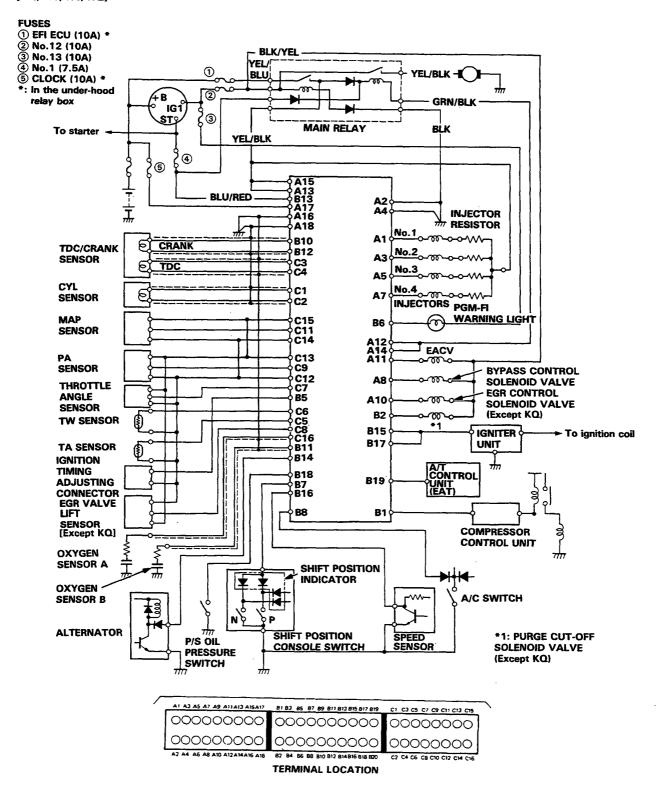

Electrical Connections

[Except KX, KS, KZ, KQ] 1 EFI ECU (10A) * 2 No.12 (10A) BLK/YEL ③ No.13 (10A) ④ No.1 (7.5A) ⑤ CLOCK (10A) YEL/ YEL/BLK -1 BLU *: In the under-hood 2 GRN/BLK relay box IG1 ႗ိုဩ STS MAIN RELAY BLK To starter YEL/BLK 4 (5) A13 B13 BLU/RED **A2** A17 **A4 INJECTOR** RESISTOR A18 No.1 A1 B10 E CRANK TDC/CRANK No.2 **B12** АЗ **SENSOR** C3 TDC No.3 C4 CYL No.4 C1 **A7** INJECTORS PGM-FI SENSOR C2 WARNING LIGHT C15 MAP **B6** C11 C14 SENSOR A12 A14 A11 EACV C13 PA \sim SENSOR C9 **BYPASS CONTROL** C12 **8**A **SOLENOID VALVE THROTTLE** C7 **B**5 ANGLE SENSOR C6 TW SENSOR C5 B20 **B15** IGNITER To ignition coil **B17** UNIT **TA SENSOR** B14 IGNITION A/T CONTROL TIMING B18 **B19 ADJUSTING** UNIT (EAT) B7 B16 CONNECTOR В1 B8 IMA SENSOR **COMPRESSOR CONTROL UNIT** SHIFT POSITION INDICATOR A/C SWITCH **ALTERNATOR** SHIFT POSITION SPEED P/S OIL SENSOR **CONSOLE SWITCH PRESSURE SWITCH** 71A31A E1A11A PA 7A 6A EA 1A 81 83 85 87 89 811 813 815 817 819 C1 C3 C5 C7 C9 C11 C13 C15 00000000 000000000 0000000 00000000 000000000 0000000 AZ A4 A6 A8 A10 A12A14A16 A18 82 84 86 88 810 812 814 816 818 820 C2 C4 C6 C8 C10 C17 C14 C16 **TERMINAL LOCATION**