

Fog Lights

Replacement

1. Remove the front marker/front turn signal light.

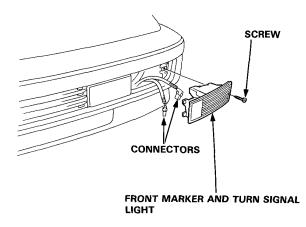


Remove the 4 screws from the bracket.CAUTION: Do not loosen adjust screw.

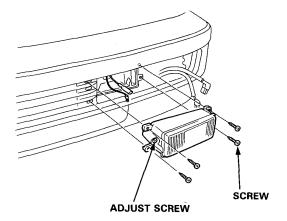

3. Pull out the fog light from the case, then disconnect the connectors from behind the fog light.

4. Remove the retaining spring and the bulb.

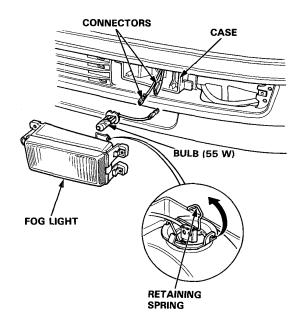

5. Install the fog light in reverse order of removal.