

IE Maker Lab - Introduction Manual

3D Printer - filament extraction/feeding – V1Pro and K1Max

K1Max in IE Marker Lab



V1Pro in IE Marker Lab




This manual will guide you through the procedures of PLA filament changing by extraction and feeding, so you can carry out those steps by yourself. It is recommended that you can inform the staffs or student helpers before changing the filament to get approval to carry out the following process.

A. V1 Pro

Step 1. Filament Retreat

1. Select print mode on the menu

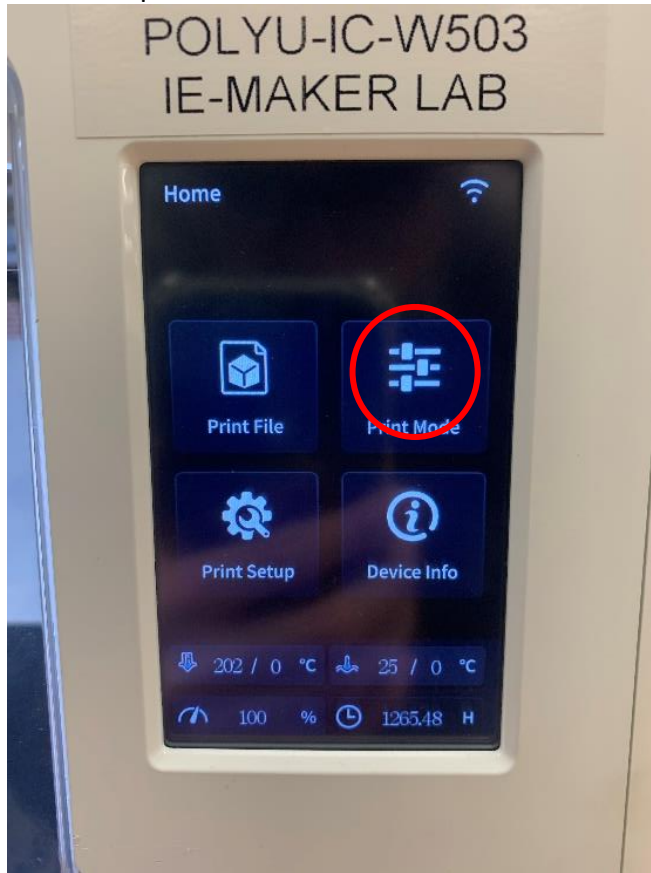

2. Select Feed/Retreat




3. Select Retreat



4. Wait for the filament return until the page on the left shows up



State 1: Heating up

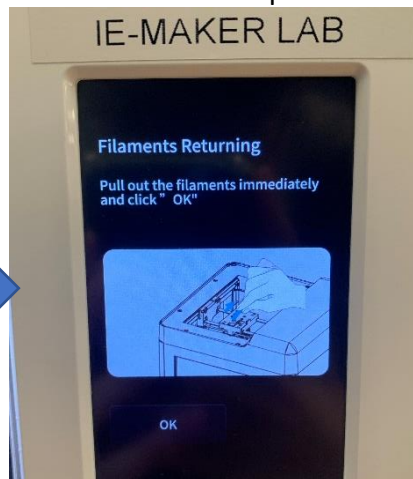

State 2: Ready to retreat



In state 2, melted filament coming out of the extruder

➔ ready to be retreated

Step 2. Remove the initial filament

1. Press down the linkage port to unlock the filament tube




State 1: Pressing




State 2: Unlocked

2. Draw out the remaining filament in the tube

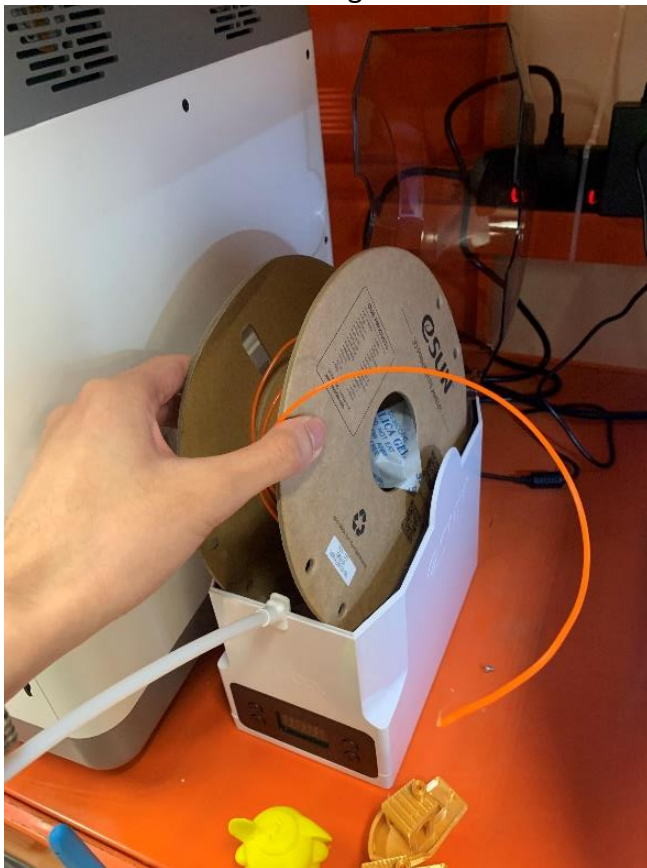


3. Replace the initial filament with new filament

Note: The filament opening should face to the top which shown as above figure

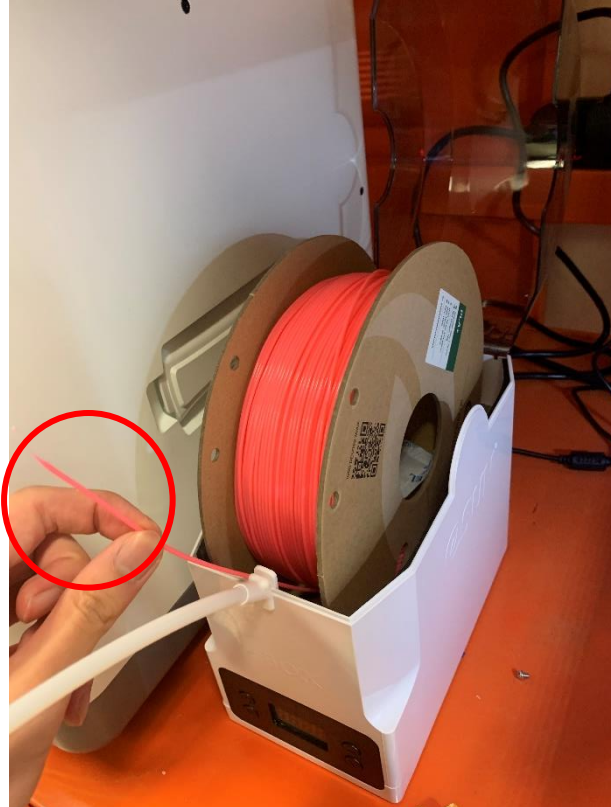

Step 3. Filament Feed

1. Select print mode on menu -> Feed/Retreat -> Feed

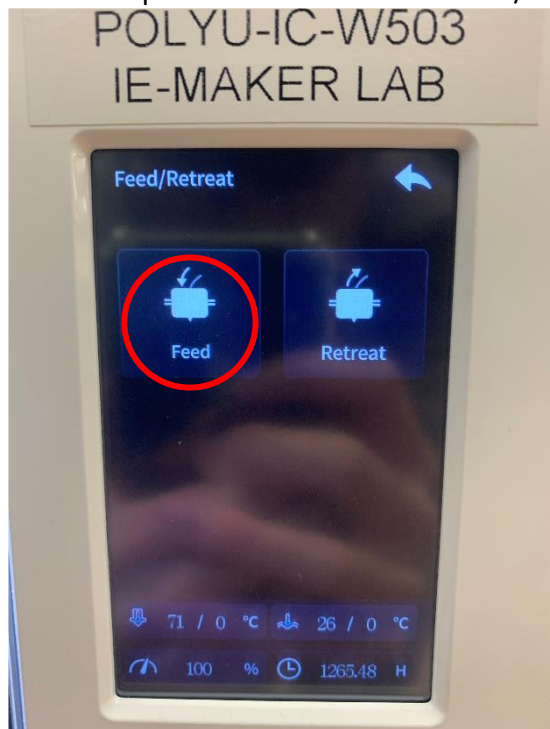


2. Insert filaments to the 3D printer


3. Reserve 2-3 cm of the filament out of the tube to enter the extruder




4. Click and hold the button while inserting the filament into the extruder

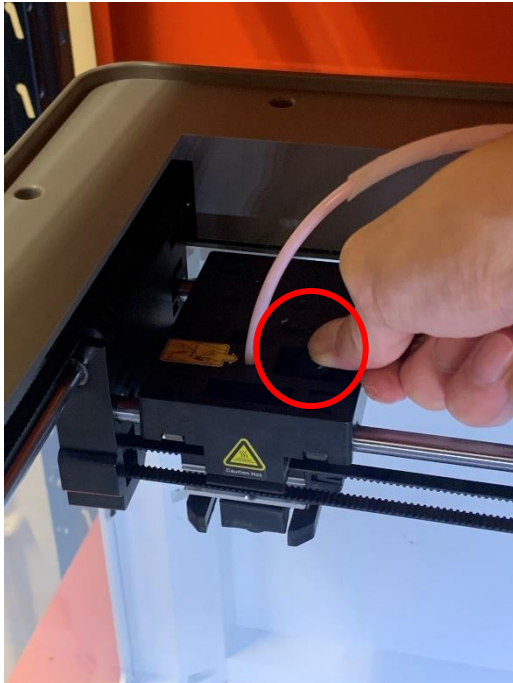


5. Close the cover after finishing

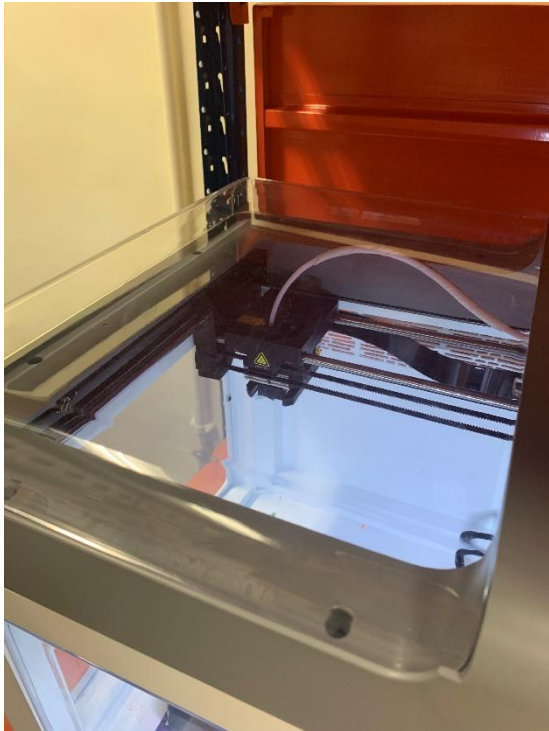


6. click OK on the “Load filaments” page

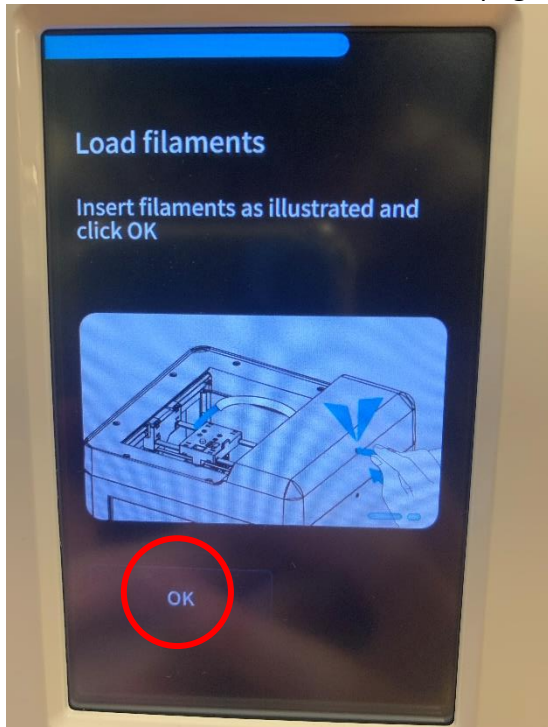

7. Wait for heating up and click OK after seeing the filaments comes out

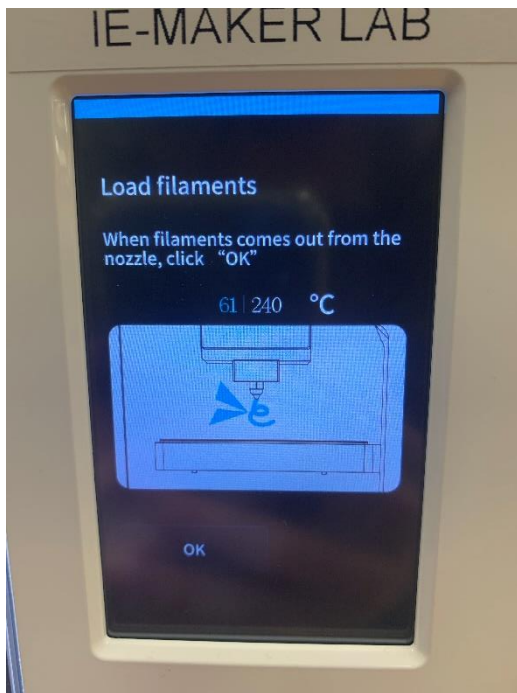


State 1: Heating up

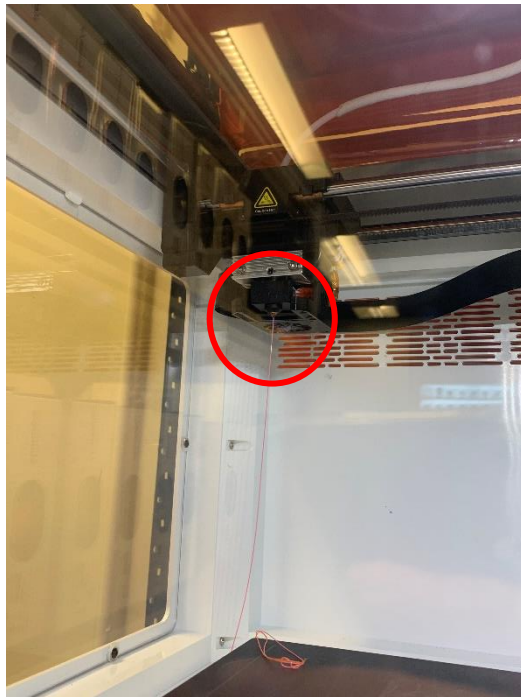

State 2: filaments coming out

8. Remove the extracted filament by hand or tools, when it is too hot

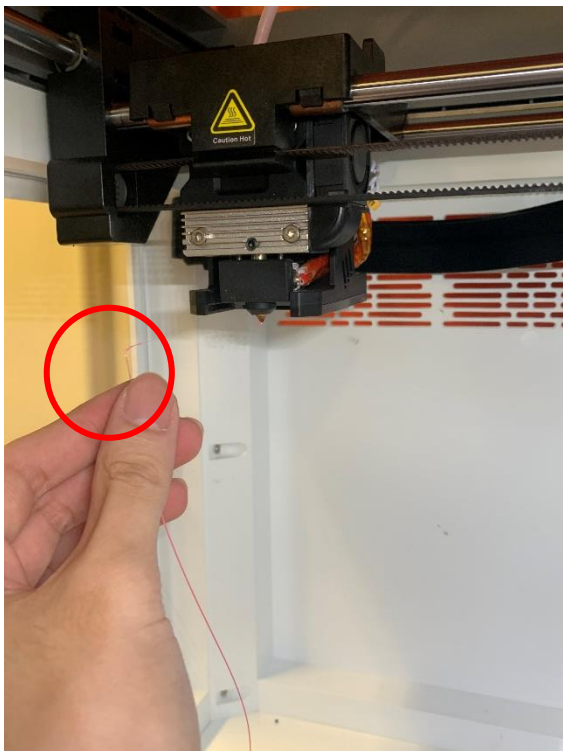

Step 4. Finish


B. K1 Max

The filament change procedures in K1Max is similar to those in V1Pro.

Therefore, this part will only include some distinct steps in K1Max. For the detail procedures, please refer to the above steps in V1Pro.

1. Remove the initial filament

Before pressing the port above the extruder (refer to Step 2 (page 6)), you need to remove a small blue lock first. After refilling the filament, remember to place the blue lock back to its original position.

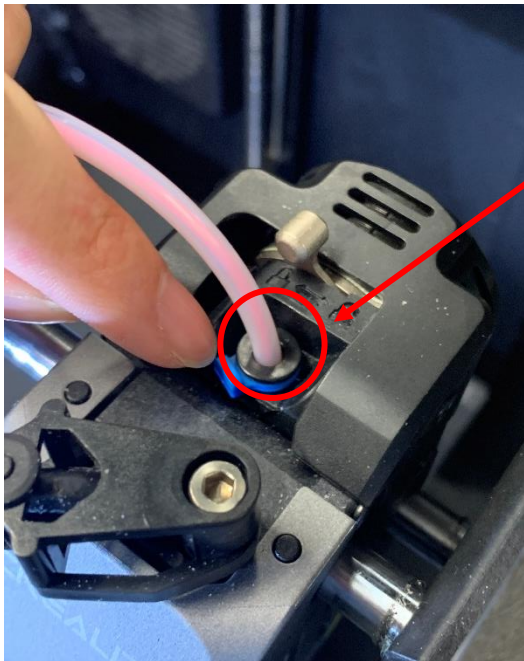

The mentioned blue lock



Remove it by pulling it out

