





AHEAD OF WHAT'S POSSIBLE™

PnP Quick Start Guide


- ▶ A2B RJ45 Eval Boards
 - [EVAL-AD2437A1MZ Evaluation Board | Analog Devices](#) x 1
 - [EVAL-AD2437B1MZ Evaluation Board | Analog Devices](#) x 2
- ▶ [EVAL-ADUSB2EBZ](#) (USBi)
- ▶ Audio Source/Sink
- ▶ AUX cables
- ▶ USB Mini B cable

- ▶ Connect PC to USBi using USB cable.
- ▶ Install [Zadig](#) and update the USBi driver to **libUSB-K**.
- ▶ Update the USBi driver to libUSB-K using Device Manager.

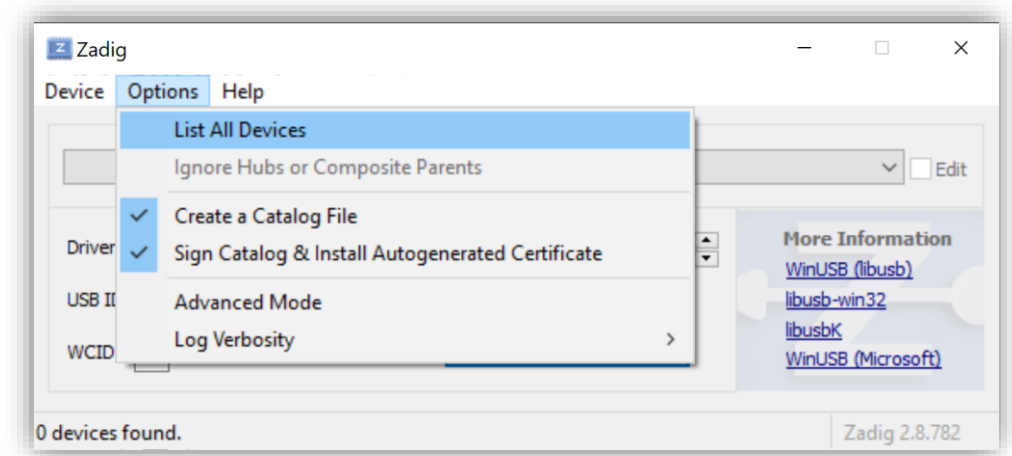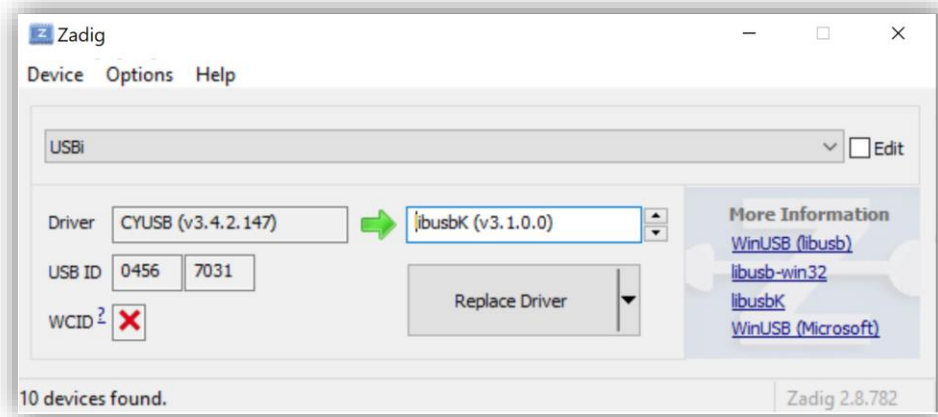

- ▶ Note: LibUSB-K driver is required PnP Windows application. This is not compatible with SS+, refer slide 8 for switching the drivers between SS+ and PnP application

- ▶ Install [MinGW](#) and open **msys2** application from installed directory.
- ▶ Then install MinGW packages using command '`pacman -S mingw-w64-i686-toolchain`'.
- ▶ Update 'Path' Environment variable with path of '`\bin`'.
- ▶ Make sure installed MinGW is made default if multiple versions are present on the PC

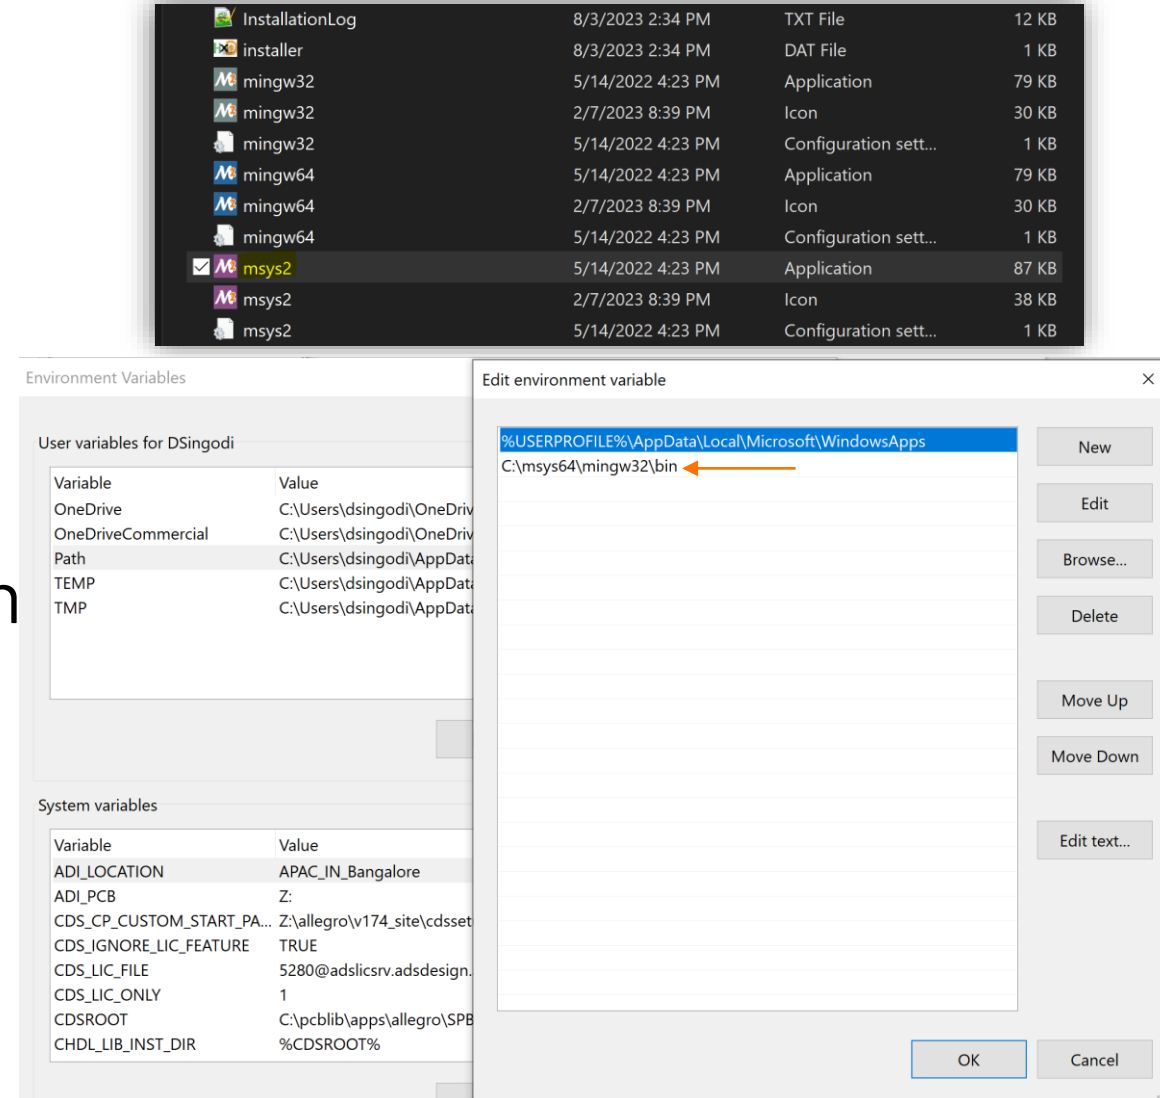

**ANALOG
DEVICES**

AHEAD OF WHAT'S POSSIBLE™



Run the demo

► Program sub node EEPROMs for the first time.


- Navigate to '**Target/software/bin/app/win32/'**
- Double click on '**run_EEPROM_RJ45.bat**'. Close the window after the nodes are programmed
- Press ENTER after all nodes are discovered

► Run the PnP Demo Application

- Double click on '**run_EVAL_RJ45.bat**'. This invokes the demo application with set of commands
- Application discovers the network (**Press ENTER after all nodes are discovered**) and then makes audio connection from Sub 0 to Sub 1 and Main to Sub 0.
- Finally, it uses '**applyRouting**' command to create stream between the added connections.
- Confirm audio between Sub 0 to Sub 1 and Main node to Sub 0

```
1 configType 2
2 streamByConnection 1
3 globalMute 0
4 ignoreEEPROM 0
5 filePath adi_a2b_system_autoconfig_RJ45.dat
6 start
7 wait
8 getNwInfo
9 addCon 0:0 1:0
10 addCon -1:0 0:0
11 applyRouting
12 help
```

ini_EVAL_RJ45.txt

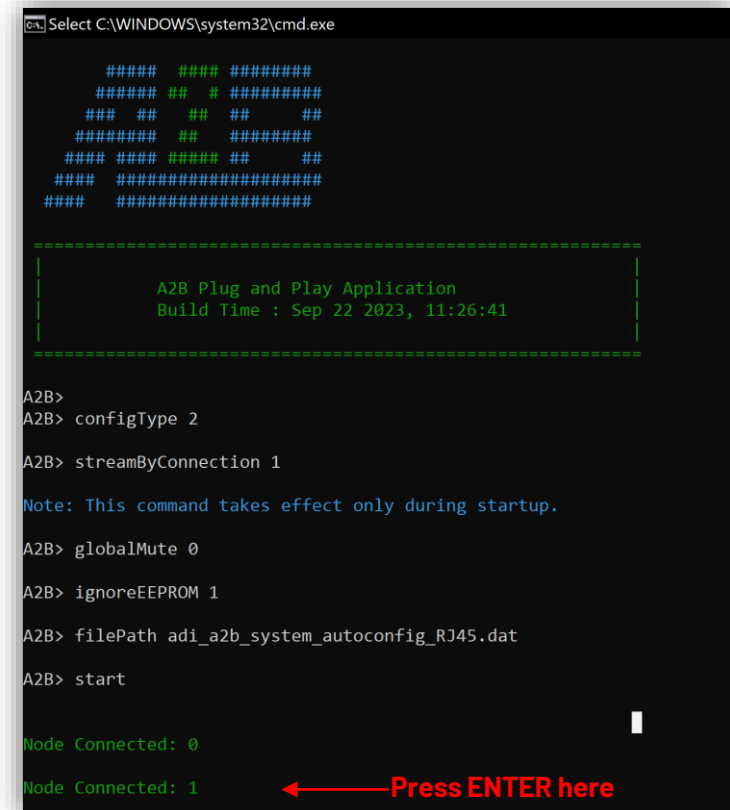

```
Select C:\WINDOWS\system32\cmd.exe

#####
#####
###
#####
#####
#####
#####

-----
A2B Plug and Play Application
Build Time : Sep 22 2023, 11:26:41
-----

A2B>
A2B> configType 2

A2B> streamByConnection 1
Note: This command takes effect only during startup.

A2B> globalMute 0

A2B> ignoreEEPROM 1

A2B> filePath adi_a2b_system_autoconfig_RJ45.dat

A2B> start

Node Connected: 0
Node Connected: 1 ← Press ENTER here
```

Run the Demo

```
A2B> help

help / ?
addCon <source node: group> <dest node: group>
addStream <source node: group> <dest node: group> <Name>
addTunnel
applyRouting
clear
clearStream
clearTunnel
configType <type>
discInterval <value>
disDbg
enDbg
filePath <filename>
getBw
getDiscTime <nodeNum>
getNwInfo
getNodeInfo <nodeNum>
getVendorID <nodeNum>
globalMute <0/1>
ignoreEEPROM <0/1>
intrptPollInterval <value>
maxNumNodes <value>
pause
quit
resume
rdm <regAddr>
rds <nodeNum> <regAddr>
setNetwork <nw ID>
start
streamByConnection <0/1>
updateEEPROM <filename> <nodeNum> <EEPROM Addr>
updateEEPROMAll <filename> <EEPROM Addr>
ver
wrm <regAddr> <Val>
wrs <nodeNum> <regAddr> <Val>
```

Prints this list	
Adds new connection by position	
Add new tunnel	Add Audio stream(Destinations can be
Apply new audio and tunnel Routing	
Clears the display	
Clears the streamlist	
Remove tunnel	
Main node Configuration source. 0 - BCF, 1 - EEPROM, 2 - FILE	
Update discovery interval value	
Disable debug logs	
Enable debug logs	
Name of .dat file for configuration (optional)	
Get bandwidth of network	
Discovery time of a node	
Gets Network Info	
Gets node level Info	
Get Vendor ID	
Mute globally in case of stream reconfiguration	
Ignore reading of EEPROM	
Update Interrupt Polling interval	
Update maximum number of sub nodes	
Pauses PnP discovery	
Quit this application	
Resumes the PnP discovery	
Reads the value from the specified A2B register (Main)	
Reads the value from the specified A2B register (Sub)	
Set the default network to execute further commands	
Starts the PnP application and network discovery	
Enable creating streams by connections	
Update EEPROM of a node	
Update EEPROM of all the nodes	
PnP Software VersionA2B>	
Writes the specified value into the given A2B register (Main)	
Writes the specified value into the given A2B register (Sub)	

- ▶ Try connection/disconnection
- ▶ Try switching node positions
- ▶ Enter more commands within the Prompt for further evaluation

Switching Drivers

- ▶ For using **SigmaStudio+**, user need to update the driver back to **Analog Devices USBi** from **USBi**.
- ▶ If a restart required message appears as shown on the right, please **unplug and re-plug** the USB cable after pressing 'No'.

System Settings Change





Your hardware settings have changed. You must restart your computer for these changes to take effect.

Do you want to restart your computer now?

Yes

No

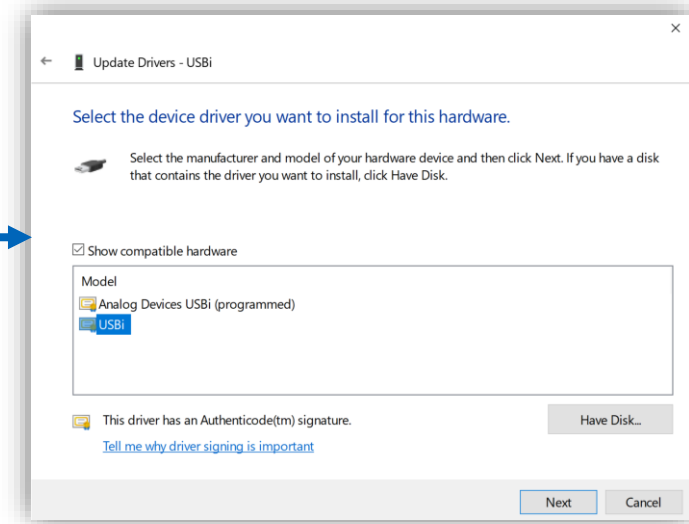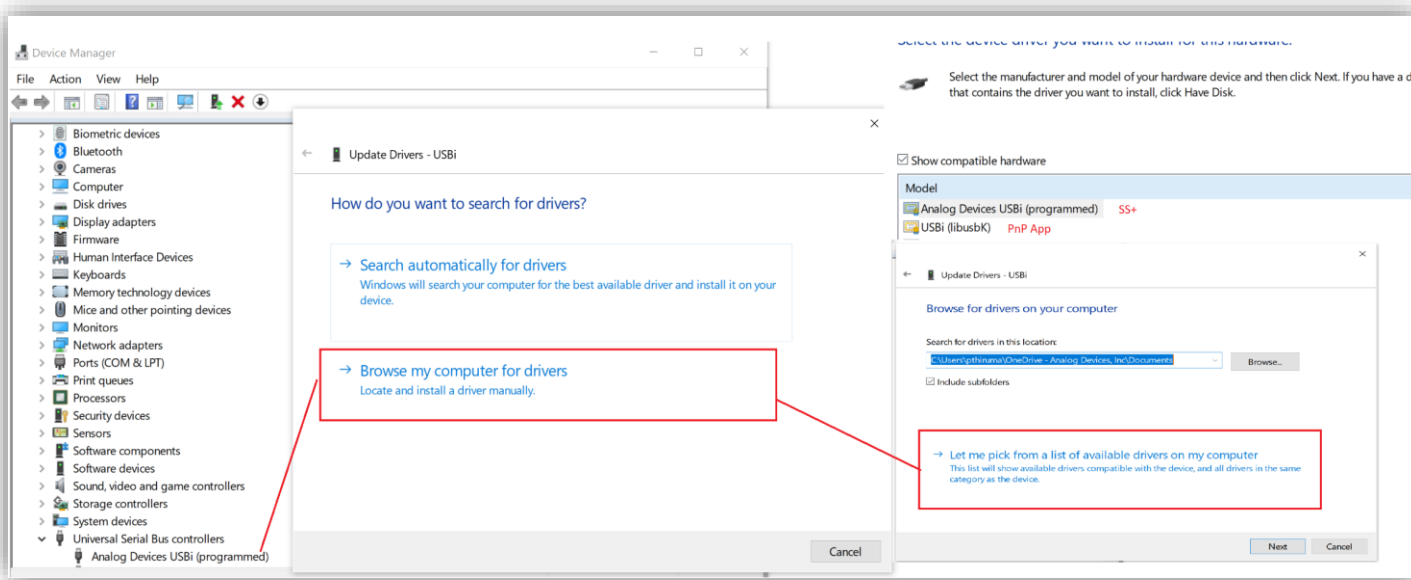

- ▶ PnP User guide
 - PnP API usage and application integration details
 - Programming the EEPROM from SS+
- ▶ PnP Content Spec
 - Details of Fields and Parameters for PnP EEPROM
- ▶ Stack User guide
 - For porting to the SW Stack to custom platform

Feedbacks Please!

***Please give us a quick feedback!
It helps us improve!
(Scan the QR code or [click here](#))***



Thank You!