



Preface

The CoastalTools™ is a Matlab™ App was developed in response to research being undertaken as part of the [University of Southampton](#) Master's degree courses in Coastal Science and Engineering. This routinely required access and manipulation of the data held by the [Channel Coastal Observatory](#) (CCO) and others as a starting point for further research. Whilst the data held is well documented, with extensive supporting meta-data, accessing the different file formats and making proper use of the quality control information, can be time consuming, thereby limiting the time that can be spent analysing the data. CoastalTools™ aims to address this by providing a framework for time series data analysis, with many of the formats that are in routine use in the UK and elsewhere provided for in the data loading tools. Several models that use the measured data are also provided. These provide the ability to estimate near shore wave parameters and properties that describe how the beaches are changing over time. The models generally use simple algorithms to transform the data and are not intended to be a substitute for more detailed coastal process modelling. The focus is very much on providing a means to rapidly explore the data that is now available from national archives.

Requirements

The model is written in Matlab™ and provided as Open Source code (issued under a GNU General Public License) and runs under v2016b or later. CoastalTools uses the muitoolbox and dstoolbox.

The following functions developed by others and obtained from the Matlab Exchange Forum, or through personal contact are as follows:

mat2clip.m - Copyright © 2009, The MathWorks, Inc.
wind_rose.m - Copyright © 2009, M MA
peakseek.m - Copyright © 2010, Peter O'Connor
polarplot3d.m - Copyright © 2016, Ken Garrard
mgpdfit.m (requires statistics toolbox) - Copyright © 2015, Ivan Haigh
downsample_ts.m - Copyright © 2014, Chad Greene
moving.m - Copyright © 2017, Aslak Grinsted
inpaint_nans.m Copyright © 2012, John D'Errico
utide (ut_solv.m and ut_reconst.m) Copyright © 2017, Daniel Codiga
Hurst exponent experimental code derived from several sources in the Matlab™ Exchange Forum, including Conrado Chiarello, 2019; Vilen Abramov, 2018; Athara Aalok, 2022; Ioannis Antoniades and Giuseppe Brandi, 2021.

The beach simulation options use the Matlab Global Optimization Toolbox.

Resources

The CoastalTools App and two toolboxes (muitoolbox and dstoolbox) can be downloaded from www.coastalsea.uk.

Cite as:

Townend, I.H., 2021, CoastalTools manual, CoastalSEA, UK, pp100, www.coastalsea.uk.

Bibliography

Key links and papers setting out the background to the model include:

<http://www.channelcoast.org/introduction/>

http://www.bodc.ac.uk/products/bodc_products/ntsif/

Further sources are detailed in the References towards the end of the Manual.



Revision history

Version	Date	Changes
3.44	Feb 2026	Added (i) option to import tables from a spreadsheet, mat or text file using <code>muiTableImport</code> class; (ii) use set of profiles to construct a shoreline volumes and shoreline position data sets; (iii) access to spectrum plots; (iv) runup and overtopping for gravel beaches.
3.43	June 2025	Added bespoke coastal plots. Improved use of spectral transfer function to compute nearshore waves.
3.42	Jan 2025	Added wave height-period-direction scatter plot. Add functions to resample wave data and scale variables.
3.41	June 2024	Added function to define wave height-direction bins of equal energy. Additional plots added to tidal range function. Minor bugs in documentation corrected.
3.4	Jan 2024	Added function to analyse cycles in tidal range data. Modified handling of oblique waves near shore in the refraction model. Corrected bug in nearshore wave model when using the surf zone depth option (<code>NaN</code>), causing function to misread the offshore depth. Added <code>ctModelData</code> class to load model output files, such as Blue Kenue files.
3.3	May 2023	Added option to use wave refraction transfer tables, as produced by the WaveRayModel App, to generate inshore wave climates. Added explanation of the CCO topographic survey feature codes to the manual. Crenulate Bay tool can now use imported image (e.g., aerial) or a profile extracted shoreline as the background for bay plots.
3.2	Nov 2022	Added Hurst statistic and Crenulate Bay to the tool set.
3.1	June 2022	Various bug fixes to plot multiple profiles, order profiles along shore correctly and retain this order when plotting. Check added to Add data to ensure both data sets have same number of variables.
3.0	May 2021	CoastalTools packaged as a Matlab App and migrated to use <code>muitoolbox</code> and <code>dstoolbox</code> .
2.1	Dec 2020	Added tidal analysis and reconstruction options using ‘utide’ by Daniel Codiga (Matlab™ Forum). Added option to identify shore or profile data on multi-line plots. Fixed issue with ordering of profiles along the coast.
2.0	May 2020	First release in ModelUI framework via www.coastalsea.uk This version supersedes CoastalTools v1.9, which will no longer be supported. With this change it has not been possible to maintain backward compatibility because the class definition used to hold the data has been modified. However, it should be possible to load any data used in the previous version, to create similar projects in this version.



Contents

1	Introduction	1
2	Getting Started.....	1
2.1	Configuration	1
2.1.1	Installing the toolboxes.....	1
2.1.2	Installing the App	1
2.2	CoastalTools™ software.....	1
2.3	Opening CoastalTools™	2
2.4	Typical workflow for a new project.....	2
2.5	Sample project	4
3	Menus.....	5
3.1	File	5
3.2	Tools	5
3.3	Project	5
3.4	Setup	6
3.4.1	Import data.....	6
3.4.2	Import Table	6
3.4.3	Site parameters	9
3.4.4	Model parameters	11
3.4.5	Data clean-up.....	13
3.5	Run	14
3.5.1	Wave properties.....	14
3.5.2	Beach properties	15
3.5.3	Tidal Analysis.....	18
3.5.4	Derive Output	18
3.5.5	Simulation.....	19
3.5.6	Vulnerability.....	20
3.5.7	User Model	21
3.6	Analysis	21
3.6.1	Plotting	21
3.6.2	Statistics.....	25
3.6.3	Coastal Plots	30
3.6.4	Spectrum Plots.....	30
3.7	Help.....	33
3.8	Tabs.....	34
3.9	UI Data Selection.....	34
3.10	Accessing data from the Command Window	35



4	Supporting Information and Model Setup	37
4.1	Quality Checks.....	37
4.1.1	Waves	37
4.1.2	Water levels	37
4.2	Nearshore waves	38
4.2.1	Refraction, Shoaling and Friction.....	38
4.2.2	Breaking wave height	39
4.2.3	Shore profile	40
4.3	Deepwater waves	40
4.4	Wind-waves	40
4.5	Wave power	42
4.6	Runup (setup & wash)	42
4.7	Littoral drift.....	43
4.8	X-shore Transport	43
4.9	Overtopping	44
4.9.1	Structure Overtopping	44
4.9.2	Beach Overtopping	44
4.10	Iribarren number and beach type	45
4.11	Tides.....	45
4.12	Beach type.....	46
4.13	Volumes and shoreline position.....	46
4.14	Shoreline Change.....	48
4.15	Crenulate Bay.....	48
4.16	Wave Spectra	48
4.16.1	Wave spectrum models	48
4.16.2	Direction spreading	51
4.16.3	Wave buoy directional spreading	51
4.17	Derive Output.....	52
4.17.1	Calling an external function	53
4.17.2	Input and output format for external functions	53
4.17.3	Pre-defined functions	56
4.17.4	Adding variables to peak and cluster time series	61
4.18	Simulation.....	61
4.18.1	YGOR model	61
4.18.2	BMV model.....	64
4.19	Beach Vulnerability Index	67



CoastalTools™ manual

February 2026

4.19.1	Single site BVI (<i>Run> Vulnerability>BVI site:</i>).....	67
4.19.2	Multi-profile BVI (<i>Run> Vulnerability>BVI profile set:</i>)	68
4.20	Taylor diagram.....	70
4.20.1	Taylor diagram theory	70
4.20.2	Skill score.....	71
5	User functions.....	73
5.1	User Data	73
5.2	User Models.....	73
5.3	User Statistics.....	73
5.4	User Plots	73
6	Program Structure.....	74
7	Bibliography.....	78
Appendix A – Input Data File Formats		82
Appendix B – Data set properties (DSproperties).....		92
Appendix C – Sample DSProperties for data import		93
Appendix D - Date and Time Locale		95



1 Introduction

CoastalTools was originally designed to enable data held by the [Channel Coastal Observatory](#) (CCO), along with tide data from the [British Oceanographic Data Centre](#) (BODC) to be loaded, analysed, used in a range of simple models and plotted. In principle, the software can handle any timeseries data and has been extended to handle a number of other common file formats. This version has provision for winds, waves, water levels, beach profiles, shorelines and a user defined data set. There are several types of modelling capability relating to:

- wave parameters such as nearshore waves, littoral drift and structure overtopping;
- examining changes in beach volume, or shoreline position;
- simulation of shoreline position and beach profile volume change;
- beach vulnerability index models.

Data and model variables can be used to derive new variables using simple data manipulation expressions. Measured and model data can all be used in the statistical analysis functions to obtain descriptive statistics, peaks and clusters, extreme values, regression and profile interval statistics (the latter provides descriptive statistics of some parameter (eg wave power) for the intervals between beach profile surveys). Finally, the results can be plotted and there is provision for time series plots, profile x-y plots, a range of x-y-z surface plots and wave rose plots.

2 Getting Started

2.1 Configuration

CoastalTools is installed as an App and requires muitoolbox and dstoolbox to be installed. The download for each of these includes the code, documentation and example files. The files required are:

dstoolbox: [dstoolbox.mltbx](#)

muitoolbox: [muitoolbox.mltbx](#)

The App file: [CoastalTools.mlappinstall](#)

2.1.1 Installing the toolboxes

The two toolboxes can be installed using the *Add-Ons>Manage Add-Ons* option on the Home tab of Matlab™. Alternatively, right-click the mouse on the 'mltbx' files and select install. All the folder paths are initialised upon installation and the location of the code is also handled by Matlab™. The location of the code can be accessed using the options in the *Manage Add-Ons* UI.

2.1.2 Installing the App

The App is installed using the Install Apps button on the APPS tab in Matlab™. Alternatively, right-click the mouse on the 'mlappinstall' file and select install. Again all the folder paths are initialised upon installation and the location of the code is handled by Matlab™.

Once installed, the App can be run from the APPS tab. This sets the App environment paths, after which the App can be run from the Command Window using:

```
>> CoastalTools;
```

The App environment paths can be saved using the Set Path option on the Matlab™ Home tab.

Documentation can be viewed from the Supplementary Software in the Matlab™ documentation. The location of the code can be accessed by hovering over the App icon and then finding the link in the pop-up window.

2.2 CoastalTools™ software

The CoastalTools™ software has been written using the software language Matlab™, version 2016b. The software utilises core Matlab™ functions, except for the extremes analysis function which makes



use of the statistical toolbox and some standalone functions (e.g. dvolstats) which use other toolboxes. Some information on the program structure, that will be of use to those who wish to explore alternative model parameterisations, or develop the software, can be found in Section 6. To support this, several functions have been written as standalone (i.e. not contained within a set of class methods) to allow the user to modify aspects of the model behaviour. These are detailed in Section 5.

2.3 Opening CoastalTools™


A graphical user interface (GUI) is used to load data, run models, manipulate the data, carry out some simple statistical procedures, plot results and export model output.

If you installed CoastalTools as an App use the icon on the APPS tab, or if the App environment paths have been set, simply type CoastalTools at the command prompt:

>> CoastalTools; OR >>ct = CoastalTools; if you want a handle to the model instance.

A splash screen crediting the developers appears for a few seconds before being replaced by the CoastalTools interface (Figure 1). Documentation can be viewed from App Help menu, or the Supplemental Software in the Matlab™ documentation. The location of the code can be accessed by hovering over the App icon and then finding the link in the pop-up window.

Figure 1 – The CoastalTools GUI

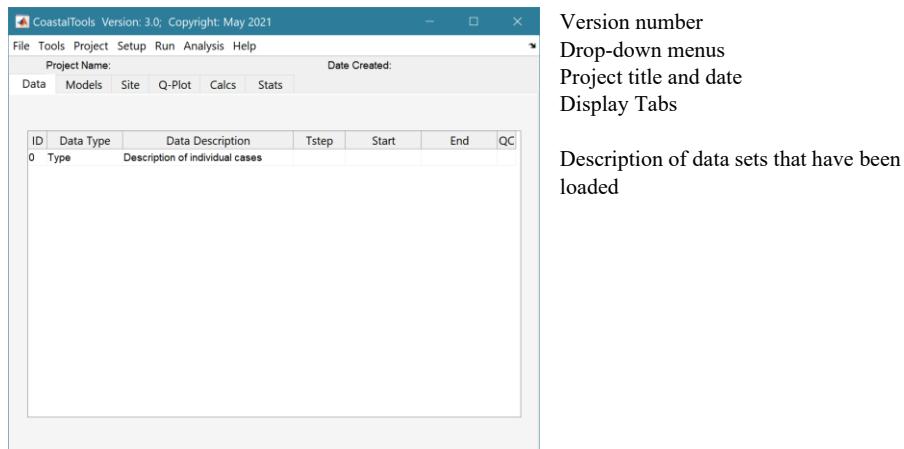

2.4 Typical workflow for a new project

The following steps explain how to set-up a model using the various tools provided. Text in *Red italic* refers to drop down menus. Text in *Green italic* refers to Tab titles.

File>New: define project name and date

Setup>Import data>Waves>Load data: load selected CCO wave data from file (when bulk loaded they should be in order and not contain data that overlaps in time)

Setup> Import data> Water levels>Load data: load selected CCO or BODC water level data from file (when multiple files are loaded, they should be in order and not contain data that overlaps in time)

Setup> Import data> Beach profiles>Load data: load selected CCO beach profile data from file (when multiple files are loaded, they should be in order and not contain data that overlaps in time)

Setup>....>Add data: load additional files (one at a time)

Setup>....>Edit data: open UI to select a time series and edit the values (but not the dates)



CoastalTools™ manual

February 2026

Setup>...>Data QC: apply quality control to the data set. This makes use of the quality flags that are included with some data sets and additional measures to remove records that are spurious.

Once loaded, data can be plotted, used to add modelled data, or statistically analysed.

To examine what has been set-up the Tabs provide a summary of what is currently defined. Note: the Tabs update when clicked on, using a mouse, but the values cannot be edited from the Tabs.

Data: lists the data sets that have been loaded.

Models: lists the modelled parameters that have been created.

Site: tabulates the properties required for model calculations, and is split into two tabs:

Site>Waves: tabulates the site properties used in the various wave models and structure properties, as used in overtopping calculations (only one definition at any one time).

Site>Simulation: tabulates the parameter settings required for the YGOR and BMV simulations models (see Sections 3.5.5 and 4.18 for further details).

Q-Plot: provides rapid access to default plotting of any variable in any data set shown on the **Data** or **Models** tabs. These plots cannot be edited and are designed to check data records when loading.

Calcs: tabulates the results from model analysis, and is split into two tabs:

Calcs>Volumes: tabulates the results of the most recent beach volume calculations. Includes a button to copy results to the clipboard.

Calcs>Shoreline: tabulates the results of the most recent shoreline calculations. Includes a button to copy results to the clipboard.

Calcs>Profile: plot an idealised profile and closure depths, or the Dean profile.

Stats: tabulates the results from statistics UI, and is split into two tabs:

Stats>Descriptive: tabulates the results of the most recent descriptive statistics. Includes a button to copy results to the clipboard.

Stats>Extremes: tabulates the results of the most recent extremes analysis. Includes a button to copy results to the clipboard.

Figure 2 – Tabs in Main GUI

The screenshot shows the main interface of CoastalTools™ with several open tabs and data displays:

- Data**: Shows a table of data types and descriptions, including offshore waves, current data, and bathymetry.
- Models**: Shows a table of derived parameters like energy equivalent and derived parameters.
- Site**: Shows a table of site properties for waves and structures.
- Plot**: A Q-Plot showing wave height (m) vs. time for a 'Russtring wave buoy'.
- Calcs**: Shows descriptive statistics for offshore waves, including mean, standard deviation, and extreme values.
- Stats**: Shows a table of extreme values for offshore waves.
- Wave Simulation**: Shows wave parameters like direction, fetch, and average water depth over flesh.
- Structure Definitions**: Shows structure definitions like crest level, upper wall slope, and lower wall slope.
- Volume**: Shows volumes and crest data for a specific model.
- Extreme**: Shows descriptive statistics for offshore waves.



NB: **Data** and **Models** tabs provide access to the associated metadata. Click on the first column of a row to generate a table figure with details of the variables for the case and any associated metadata. Buttons on the figure provide access the class definition metadata, source information (files input or models used) and any user data (e.g., tables of derived parameters) that is saved with the data set.

Running a model:

Setup>Site parameters: define the characteristics of the site being studied

Run>Wave properties>: select the type of wave parameters to be calculated

Run>Beach properties>: select the type of beach parameters to be calculated

Statistical analysis:

Analysis>Statistics: launches the statistical analysis UI. Using the **Timeseries** Tab, any data set and variable can be selected and used in a number of different statistical analysis routines, such as general descriptive statistics over the defined time interval, cluster analysis, or extremes analysis.

To plot the results:

Analysis>Plots: launches the plotting UI. Using the **Time** Tab, any data set can be selected and the results plotted for a chosen variable over a user defined time interval.

To write the results to an Excel file:

Project>Cases>Save Data Set: list dialogue allows user to select which data set is to be written to file (only a single data set can be selected at a time). A user input dialogue then prompts for a file name (no extension required).

2.5 Sample project

The *example* folder contains several sample data files for some of the different types of data that can be loaded, and a demonstration project file.



3 Menus

3.1 File

File>New: clears any existing model (prompting to save if not already saved) and a popup dialog box prompts for Project name and Date (default is current date).

File>Open: existing CoastalTools projects are saved as *.mat files. User selects a project file from dialog box.

File>Save: save a file that has already been saved.

File>Save as: save a file with a new or different name.

File>Exit: exit the program. The close window button has the same effect.

3.2 Tools

Tools>Refresh: updates *Data* tab.

Tools>Clear all>Project: deletes the current project (data, models and all project specific variables).

Tools>Clear all>Figures: deletes **all** results plot figures (useful if a large number of plots have been produced).

Tools>Clear all>Data: deletes **all** Data sets listed on the *Data* tab.

Tools>Clear all>Models: deletes **all** models listed on the *Models* tab.

3.3 Project

Project>Project Info: edit the Project name and Date.

Project>Case>Edit Description: select a Case description to edit.

Project>Cases>Edit DS properties: edit the properties that define the meta-data for a dataset.

Project> Case >Edit Data Set: edit a data set. Initialises a data selection UI to select the record to be edited and then lists the variable in a table so that values can be edited. The user can also limit the data set retrieved based on the variable range and the independent variable (X) or time. This can be useful in making specific edits (eg all values over a threshold or values within a date range). This option also works for profiles. Ensure the variable to be edited is selected (Chainage, Elevation, etc). The user is then prompted to select a survey date and the relevant profile data can then be edited. An alternative for cleaning up profile data is *Setup>Data clean-up>Edit or Delete profile in timeseries* (see Section 3.4.5). Using the Copy to Clipboard button also provides a quick way of exporting selected data.

Figure 3: Edit Peversey wa...	
To edit select a cell, amend value and press return, or select another cell	
Peversey wave buoy (Dataset)	Significant wave height:
	Hs_1
21-09-2019 06:30:00	1.1300
21-09-2019 07:00:00	1.0800
21-09-2019 07:30:00	1.1600
21-09-2019 08:00:00	1.1500
21-09-2019 08:30:00	1.1400
21-09-2019 09:00:00	1.1200
21-09-2019 09:30:00	1.0700
21-09-2019 10:00:00	1.1200
21-09-2019 10:30:00	0.9800
21-09-2019 11:00:00	0.9200
21-09-2019 11:30:00	0.9400
21-09-2019 12:00:00	0.9600
21-09-2019 12:30:00	0.8500
21-09-2019 13:00:00	0.9200
21-09-2019 13:30:00	0.8700
21-09-2019 14:00:00	0.8300

Save Cancel Copy to clipboard

Project> Case >Save Data Set: select the Case to be saved from the list of Cases, select whether to save the Case as a *dstable* or a *table* and name the file. The dataset *dstable* or *table* are saved to a mat file.

Project> Case >Delete Case: user selects the Case(s) to be deleted from a list box of Cases and these are then deleted (the model setup is not changed). NB: once deleted they cannot be recovered.

Project> Case >Delete Dataset: user selects a Case from a list of Cases and if the selected Case has more than one Dataset, the Dateset to be deleted can be selected from a list and deleted from the Case.

Project> Case >Reload Case: select a previous model run from the current list of Model Cases and reload the input values as the current input settings.



Project> Case >View Case Settings: display a table of the model input parameters used for a selected Case.

Project>Export/Import>Export Case: saves a Case class instance to a Matlab binary ‘mat’ file.

Project> Export/Import>Import Case: loads data from a Matlab binary ‘mat’ file. Only works for data sets saved using Export. These two functions can be used to move class instances between projects or models.

NB: to export the data from a Case for use in another application (eg text file, Excel, etc), use the *Project>Cases>Edit Data Set* option to make a selection and then use the ‘Copy to Clipboard’ button to paste the selection to the clipboard.

3.4 Setup


3.4.1 Import data

The setup menu provides a series of menus to enable different types of data to be loaded, edited and quality controlled. The following applies to each type of data (waves, water levels, beach profiles, beach dips, shoreline, BlueKenue file formats and user defined data). For details of User Data see Section 5.1 and for file format information see Appendix A – Input Data File Formats.

Setup>Import data>[Data type]>Load: prompts user for file format to be loaded. The options available vary with Data type. The user then selects one or more files to be loaded. Once files have been read, user is prompted for a description (working title) for the data set.

NB: CCO format Beach profile files use the file name to get the profile id. The file name format for beach profile data must be id_datexxx.txt, eg: 4dMU2_20090824tip.txt.

Files with multiple surveys and multiple profiles can take time to load.

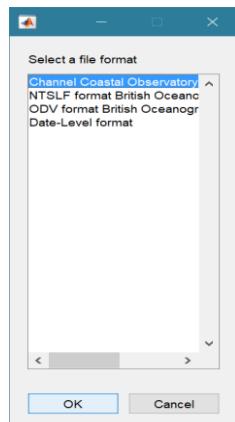

Setup>Import data >[Data type]>Add: prompts user for file to be loaded (only one file at a time can be added). Only files with the format used to create the data set can be used to Add data to a data record (see note below).

Setup>Import data >[Data type]>Quality Control: runs a series of checks on the data. This is only available for waves and water levels in this version. See Section 4.1 for details of the checks applied. Once run, the last column of the *Data* tab is updated to show that qc has been applied.

Files with different formats can be included in a project but they will need to be defined as different data records (i.e., class instances). The format to be used for a given data record is selected when the first file is loaded.

When new file formats are added for a particular Data type, these need to be defined in the class constructor. The additional file required is the same as when adding User Data, as explained in Section 5.1.

3.4.2 Import Table

Setup>Import table> Load Table: the user is prompted for a file. Accepted formats are:




1. A table or dstable created in Matlab and saved as a mat file
e.g., `>> save('my_table.mat', mytable)`, where the table was assigned to the variable 'mytable';
2. As option 1, containing a struct of tables or dstables, where the fieldnames of the struct define the dataset name assigned to each table.
3. A worksheet in an Excel spreadsheet. If there is more than one worksheet the user is prompted to select one. The Matlab™ *readtable* function is used in *muiTableImport.loadFile* to read the file with the option to ReadRowNames set to true. This assumes that the first column of the spreadsheet contains unique names for the data. The *readtable* function allows other options including reading variable names and handling date-time input. The variable names must be valid variable names (a valid variable name starts with a letter, followed by letters, digits, or underscores).

The variable names can be edited (number of variables should not change)


Start cell for row of variables

Start cell for array of data

Start cell for column of row names

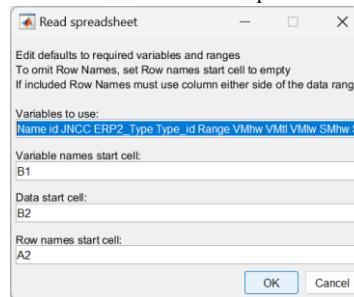

When loading from a spreadsheet, one can also select to load datetime or duration data to define the rows in the table. This modifies the 'Read spreadsheet UI' to include the Variable Name of the column that contains the row names and the relevant Variable start cells. This is necessary to ensure that the datetime or duration values are correctly captured and not read as text. The imported data then plots as a timeseries data set, rather than categorical rows.

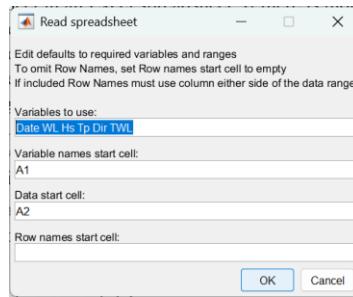

4. An ASCII text file using the Matlab™ *readtable* function. The header contains the variable names with tab or comma separation (a valid variable name starts with a letter, followed by letters, digits, or underscores). The first column contains the row name (if used) and subsequent columns contain the data with the same separator as the header.

Examples of the spreadsheet and text file formats are provided in Appendix A – Input Data File Formats.

The user is then prompted for a description of the data source (text string) and a name for the dataset (must be a valid Matlab™ variable name or code will try to convert the text entered to a valid name).

When data are loaded into a dstable the data are assigned dsproperties (i.e., name, description, unit, label and qcflag or format – see Appendix B – Data set properties (DSproperties)). By default, these are assigned the variable name and qcflag is set to none.

The user is then prompted to select an option from File, UI and Skip:

File - loads a file of definitions (.m, text or Excel file)¹, or

UI - uses a UI to input the definitions,

¹ Sample files are provided in the /example folder.



Skip - skips this step and uses the defaults.


[NB: when loading a struct of tables from a .mat file it is assumed that these already have DSProperties and the UI is used to step through the definitions to provide the opportunity to edit, or modify the definitions.]

Load DSproperties from file:

A Matlab™ function file that defines a variable that holds a struct of the DSproperties, as explained in Appendix B – Data set properties (DSproperties)and illustrated in Appendix C – Sample DSProperties for data import.

A text file lists the definitions of the variables only as illustrated in . These are then scrolled through using the UI (see below) and allows the Description of the rownames to be edited to suit the dataset.

Load DSproperties using UI:

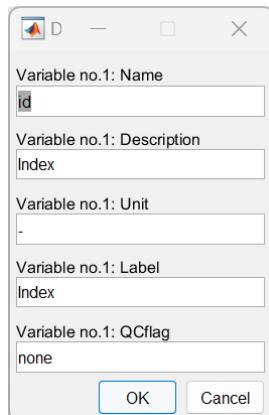

Data in the imported table is used, where possible, to define the metadata for each variable. The user is then prompted to either accept the definition to be assigned for each variable in turn. As well as the variable name, this includes a description, units, the label to use when plotting this and similar variables, and the quality control flag for variables, or format for the rowname. The QCflag input values are not used in muiTableImport. The field is used to hold the data type for each variable and is added when the data is loaded. The rowname format property defines the date format, when used, using the Matlab identifiers (e.g., 'dd-MM-yyy HH:mm:ss' for 26-Oct_2024 13:22:00 date style).

NB : the UI prompts for Dimensions with a value of 0. For scalar table data, only rows are used to hold a unique identifier (i.e., a dimension). Accept the default value to continue.

When the data has been loaded, the user is prompted to provide a description of the data set (case) and this is listed on the *Cases* tab. All input data sets can be viewed (just one variable at a time) on the *Q-Plot* tab. The DSproperties can be edited using the *Project>Cases>Edit DS properties* option and viewed by suing the mouse to click on the Case ID on the *Cases* tab. Individual tables can be viewed on the *Table* tab and default plots are accessed using the *Q-Plot* tab.

Setup>Import Data>Add: There are three options for adding data:

Setup> Import Data>Add>Rows: add rows of data to an existing dataset. Data can be loaded from a text file, table or spreadsheet but the number of variables should be the same as the existing dataset².

Setup> Import Data>Add>Variables: add variables to an existing dataset. Data can be loaded from a text file, table or spreadsheet but the number of rows should be the same as the existing dataset³.

Setup> Import Data>Add>Dataset: this links another dataset to a selected Case record. The dataset is loaded using the same process as used to *Load data* (see above).

The user is prompted to choose the existing case and/or dataset that the data is to be added to.

The next prompt is to define any likely non-standard missing value indicators. The incoming table/spreadsheet is then concatenated to the existing table. The data added can be as additional rows,

² Formats for adding data are the same as for loading data, as detailed in the Appendices with sample files provided in the /example folder.



in which case the first column of the incoming table is used to define row names and these must be unique for the combined table and the number of variables must match the existing table. Or the incoming table/spreadsheet can contain additional variables, in which case the incoming table must have the same number of rows as the existing table. When variables are added, the user is prompted to accept or update the meta-data for each new variable.

Setup>Import data > Delete: There are three options for adding data:

Setup> Import Data> Delete >Rows: select rows to be deleted.


Setup> Import Data> Delete >Variables: select variables to be deleted.

3.4.3 Site parameters

Setup> Site parameters>Wave propagation: input dialogue allows user to define characteristic properties of the site. The current values can be viewed on the *Site/Waves* tab.

Bed level offshore, relates to the depth of the offshore wave data.

The angle of the offshore bed contour from True North (degTN) – set this to be the same as Shoreline angle for plane bed refraction. Otherwise an iterative procedure is used between the two angles (see Section 4.2.1).

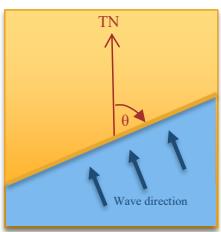

Friction coefficient can be used to further modify the wave offshore to inshore wave transformation³.

The angle of the shoreline from True North (degTN) is used to refract the offshore waves to a point near the shoreline.

Beach crest level or high water level (mOD)

Upper beach slope is the beach slope above mean tide level (MTL) used to extend the idealised profile from MTL to high water⁴.

Bed elevation 1km from shore defines an idealised profile to compute beach slope across the surf zone. There is an option to use a co-ordinate definition of an offshore point (y, z) where y is the distance from MTL and z is the bed elevation at that distance offshore (see Section 4.2.3).

Inshore bed level is the depth used to calculate inshore wave conditions. Set to NaN to use an iterative procedure that finds the depth at the edge of the surf zone.

Breaker height model used to calculate monochromatic breaking wave height (see Section 4.2.2).

Wave breaking model takes a value of 0, 1, 2 or 3 and defines the model to be used (see Section 4.2.2).

Grain size is a representative d50 diameter for the sediments that make up the beach.

The Drift coefficient is as used in the CERC longshore drift formula.

The dialog box contains the following settings:

Offshore bed level (mOD - so probably negative)	-13.2
Offshore contour angle (degTN)	90
Friction coefficient (value 0-1)	0.9
Shoreline angle (degTN)	48
Beach crest or HW level (mOD)	5
Upper beach slope (1:s - enter value for s)	8
Bed level 1km out from SWL (mOD) [or y,z]	-8
Nearshore bed level (NaN for surf zone depth)	NaN
Breaker height model for Hb (0,1,2, or 3 - see manual)	1
Wave breaking model for Hsb (0,1,2, or 3 - see manual)	1
Sediment grains size (m)	0.001
CERC Drift coefficient, Kc	0.0006

Buttons: OK, Cancel

³ A value of 1 results in no friction loss and a value 0 results in total wave damping – see Section 4.2.1.

⁴ Note that in CoastalTools slopes are all defined as the horizontal distance, bs, for a unit change in the vertical distance. Hence the slope angle, $\tan(\theta) = 1/\text{bs}$ and the slope is often expressed as 1:bs.



Setup >Site parameters>Wind-wave hindcast: input dialogue to define model parameters for the wind-wave hindcast model.

Direction exponent (2-10)	2
Fetch method (0=Donelan, 1=SPM)	0
Height of wind speed measurement (m)	10
Average water depth over fetch (m)	8.1
Water depth at site (m)	3.5

This is the exponent used to define the amount of directional wave spreading. A local wind wave has a small value (large spread) typically around 2, a swell wave has a larger value (narrow spread) with a value of about 10.

The 0=Donelan method, uses a $1/\cosh$ directional spreading function, whereas 1=SPM method uses a cos function. A value of -1 uses the fetch along the wind direction.

Height at which the input wind data was measured (m).

Average water depth over the model domain. As this will vary with direction an average value for the offshore area can be used (or one based on the dominant fetches).

Water depth at the site (m) – used to apply spectral saturation for limiting water depths.

See the Shore Protection Manual (SPM) and other references given below for details.

Setup>Site parameters>Structure parameters: input dialogue to define the parameters used when calculating wave overtopping. The current values can be viewed on the Site/Waves tab.

Crest level: top level of beach or structure.

Crest width: horizontal extent of crest.

The model allows for an upper and lower beach or wall slope that may or may not be separated by a horizontal berm.

Toe level: the elevation of the beach or structure toe.

Wall roughness: a coefficient to account for frictional effects on the beach or wall.

Crest level (mOD)	7
Crest width (m)	9
Upper wall slope (1:uws)	3
Berm level (mOD)	1
Berm width (m)	5
Lower wall slope (1:lws)	5
Toe level (mOD)	-3
Wall roughness (-)	0.9



3.4.4 Model parameters

Setup>Model parameters>YGOR simulation parameters: used to define the fit coefficients to be used in YGOR simulations (see Sections 3.5.5 and 4.18.1). The current values can be viewed on the *Site/Simulation* tab.

The dialog box contains the following fields:

Forecast origin position (m):	66
Forecast origin date (dd-MM-yyyy):	01-06-2014
Equilibrium slope, a:	-0.0075481
Equilibrium intercept, b:	0.090721
Accretion rate coefficient, C+:	-2.0688
Erosion rate coefficient, C-:	-1.099
Offset to initial shore position:	-0.0005179
Fitted coefficients RMSE (read only)	3.7886

Buttons: OK, Cancel

The Origin position and date allow the forecast to be adjusted so that the forecast position matches the origin on the specified date.

The values for equilibrium slope, a, equilibrium intercept, b, accretion rate, C+, erosion rate, C- and the initial offset are the fit parameters for the YGOR model obtained by fitting a data set (see Section 4.18.1).

This field is used to report the Root Means Square Error on the *Site/Simulation* tab when the YGOR fitting function has been used to derive the fit parameters a, b, C+, C- and offset.



Setup>Model parameters> BMV simulation parameters: used to define the parameters needed to run the BMV simulation (see Section 3.5.5 and 4.18.2). The current values can be viewed on the *Site/Simulation* tab.

Sediment sphericity, S, from literature or data

Beach porosity, ϕ , from literature or data

Typical sediment grain size of the beach sediment (in metres).

Indicative upper dune slope, for the profile data set

Indicative upper beach slope, of the profile data set (used to initialise estimate of runup slope).

Indicative beach crest level, Z_c for the profile data set, or co-ordinate pair, X_c, Z_c .

High water level used to define upper limit of the equilibrium profile

Low water level, used to define lower limit of the equilibrium profile

The minimum distance over the study period from the origin to high water

The UI on the right is followed by the following UI:

Setup coefficient (-)	0.2
Runup coefficient (default=1)	1.2
Dune berm factor (0-1)	0.5
Depth limited breaker index	0.78
Wave averaging interval (days)	2
Empirical coefficient option (1 or 2)	2
Profile zones equation option (1,2,3)	2
Beach adjustment method (1 or 2)	1
Fit using 3,4,6 or 8 parameters (3,4,6,8)	3

Setup coefficient, scaling of wave setup at the shoreline (used in runup slope formula)

Runup coefficient, scales runup based on Iribarren number

Dune berm factor, proportion of berm and slope between toe of dune and the limit of wave runup.

The breaker index to use (defines the limit of the surf zone closure options 1 and 2).

The period (in days) prior to the date of a measured profile over which wave data are averaged.

Empirical coefficient option for the equilibrium profile:

1. Using coefficients defined in Bernabeu *et al* (2003b)
2. Using coefficients defined in Bernabeu *et al* (2003a)

Define the limits of the surf and shoal zones using one of 3 options

1. hr = breaker index x H_s , $ha = 0.008gT^2$
2. hr = breaker index x H_s , $ha = 3H_s$
3. hr and ha defined using Hallermeier equations (Hallermeier, 1981).

Beach adjustment method:

1. Using the “minimum profile” for all adjustments
2. Using the profile from the previous time step

Fit using 3 or 7 parameters:

1. Using the parameters for the “dune” profile: i.e. setup coefficient, runup coefficient, dune berm factor defined above.
2. Using the upper “dune” profile parameters, as in option 1, and the equilibrium profile coefficients. The initial estimates defined by the option selected for the Empirical coefficients are relaxed to fit the entire profile.

Sediment sphericity (-)	0.9
Beach porosity (-)	0.35
Sediment grains size (m)	0.001
Upper dune slope (1:uds)	4
Upper beach slope (1:ubs)	10
Beach crest, Z_c or $[X_c, Z_c]$ (m,mOD)	5 9
High water level (mOD)	0.7
Low water level (mOD)	-0.6
Minimum distance to high water (m)	48

OK

Cancel



Setup>Model parameters>Model constants: Various constants are defined for use in models, such as the acceleration due to gravity, viscosity and density of sea water, and density of sediment. Generally, the default values are appropriate (9.81, 1.36e-6, 1025 , 2650 respectively) but these can be adjusted and saved with the project if required.

3.4.5 Data clean-up

Setup>Data clean-up>Concatenate two timeseries: allows two timeseries data sets to be joined. Two records, or two variables, of a similar type can be joined to form a single timeseries or timeseries collection. The user is prompted to select the timeseries records to be used (only records of the same type are shown for the second selection). If there is an overlap in time, the user is prompted to select which timeseries to use for the overlap. The option is then provided to create a new timeseries based on selecting a Single variable or a timeseries collection that concatenates All variables. For single variables they can have different variable names. For All variables, the selected records must have the same set of variables with the same names. This is useful to merge data sets from different sites to extend the record.

Setup>Data clean-up>Resample timeseries: allows a selected timeseries to be resampled at user specified interval, using a user specified method (e.g. mean/max/min over the interval). This can be useful to reduce size of a data set (e.g. long tidal records before using the data in models).

Setup>Data clean-up>Patch timeseries: allows gaps in a selected timeseries to be patched using the data from another timeseries that overlaps the primary timeseries (at least for some or all of the gaps). The function assumes that the primary data set has time intervals defined with no data (NaNs). These times are matched with coincident times in the timeseries used to make the patch (there is currently no interpolation in time) and the data values of the patch timeseries are added to the primary timeseries.

Setup>Data clean-up>Trim timeseries: allows the start and end dates of a timeseries to be modified.

Setup>Data clean-up>Match timeseries: match one set of variables to another set of variables.

Currently set up and tested for matching one wave timeseries (ts1) to another timeseries (ts2) using wave height, period and direction as the input variables. There is an option to use part of ts2 to generate the linear transform matrix and a different part of ts2 for validation of the adjusted ts1 dataset. The first timeseries and linear transform matrix are then used to create an adjusted record for the full length of ts1.

Setup>Data clean-up>Delete interval: set an interval within a selected variable to NaN. This maintains the length of the record for plotting, etc but removes the data. Can be useful when cleaning up tidal data and similar time series where this option can be used in conjunction with the Patch option to create a “clean” timeseries.

Setup>Data clean-up>Merge cases: some cleanup functions only work on one variable at a time and the data are then saved as a new case. This function compiles several variables back into a single case (e.g., when concatenating Hs, Tp and Dir for use in models).

Setup>Data clean-up>Subsample case: create a new case from an existing case with a subset of the variable from the source case. This includes the option to rename the selected variables and add modified descriptions (if required). This can be useful when importing data sets that are named with the conventions used for many of the models (e.g. wave data with names Hs, Tp, Dir in the wave models).

Setup>Data clean-up>Scale variables: scale selected variables in a dataset based on user defined factors for each variable (saves result as a new case).

Setup>Data clean-up>Scale range: scale the water levels based on factors for above and below zero (saves result as a new case).



Setup>Data clean-up>Delete multiple profiles: allows all profile data sets with less than ‘N’ surveys available to be deleted. The user selects a threshold for the minimum number of time steps required to retain a profile. Useful for reducing the number of profiles when analysing long-term change.

Setup>Data clean-up>Edit or Delete profile in timeseries: options to scroll through all profiles in the data set of select individual profiles and then to either edit or delete individual profiles. For editing profiles this is easier to use than the *Project>Cases>Edit Data Set* option.

3.5 Run

3.5.1 Wave properties

Run> Wave properties>Deepwater Waves:

Run> Wave properties>Nearshore Waves:

Run> Wave properties>Wind-waves:

Run> Wave properties>Spectral Transfer:

Run> Wave properties>Wave Power:

Run> Wave properties>Runup:

Run> Wave properties>Littoral Drift:

Run> Wave properties>X-shore Transport:

Run> Wave properties>Overtopping>Structure Overtopping:

Run> Wave properties>Overtopping>Beach Overtopping:

Run> Wave properties>Iribarren Number:

All of these models require the Site parameters to have been defined (except Spectral Transfer)⁵. Overtopping also requires the Structure parameters to be defined (even if this is being used to calculate beach overtopping). If there is only one wave data source of offshore data, the models run without additional input. If there is more than one possible source, the user is prompted to select a wave data source. The same is true for water levels, although the model will also run if there are no water levels available, and uses a still water level of 0mOD. The first three models listed above use imported data as input, the subsequent models all use a nearshore wave data set as input. Hence the Nearshore waves model needs to be run before running these other models.

The results are listed on the **Models** tab and can be checked visually on the **Q-Plot** tab or selected for use in one of the analysis or plotting UIs.

The Wind-Wave model requires a fetch file to be loaded (see Appendix A for format). For each location to be modelled, the fetch file defines the fetch exposure as a function of direction. The file Test_Fetch_Lengths.txt is an example file. This defines the fetch lengths at the site in 10-degree intervals, measured from true north (defined at intervals from 0 to 350 degrees, even if the fetch is zero for some directions).

The Spectral Transfer option uses a Spectral Transfer table from the WaveRayModel to transfer an offshore timeseries to an inshore point. This requires a SpectralTransfer table to have been imported

⁵ Models use the current settings of the *Setup> Site parameters>Wave propagation* when the model is run. The Deepwater and Nearshore wave models use the following site parameters: offshore bed level, inshore bed level, angle of contours at offshore wave data location, angle of contours at shoreline, friction coefficient, beach crest level, upper beach slope, bed level 1km from shore, flags for wave breaking model; The other models use the following parameters where required: upper beach slope, bed level 1km from shore, angle of shoreline from north, grain size d50, drift coefficient.


from the WaveRayModel App using *Project> Export/Import>Import Case*. In addition, the WaveRayModel App must be on the Matlab Environment Path⁶. For further details of the how the model works and input requirements, see the WaveRayModel App manual.

The Littoral Drift model prompts the user to select which formulation to use. See Section 4.7 for further details on the options. Note: this model uses the shoreline angle defined in Site settings (which can be different to the value used to compute the nearshore wave climate). Littoral drift can also be computed using the *Analysis> Coastal Plots* menu option (see Section 3.6.3). This plots the littoral drift statistics directly from a selected wave data set and provides the option to save the full time series and yearly and monthly datasets.

3.5.2 Beach properties


Run> Beach properties>Profiles>Volumes: a list box prompts the user to select a beach profile from those currently loaded. Once the data is retrieved a plot is shown with all of the profiles for the selected location and a separate dialogue box prompting the Minimum X distance and Minimum Z elevation. Values are suggested based on the data available but these can be adjusted to suit the analysis. ON clicking OK, a defining rectangle is added to the plot (dashed red line) and there are also buttons to accept or reject the definition. If the definition is rejected, the user is prompted to amend the Minimum values. Once accepted the analysis proceeds and the resulting volume parameters (strictly area per metre run of beach) are listed on the *Models* tab.

The results are also tabulated on the *Calcs/Volumes* tab and can be copied to the clipboard for use in other applications.

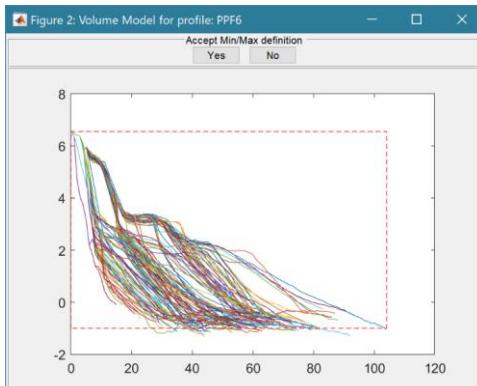

Run> Beach properties>Profiles>Shoreline position:

the analysis of shoreline position is very similar to beach volumes. Initially the user selects a profile from the list provided. A figure then shows the profiles and initial level at which shoreline position (x distance) will be evaluated, together with the upper and lower bounds for estimating the average slope at the selected elevation. Once completed the plot is redrawn showing the mid-point and upper and lower bounds on each profile that will be used in the analysis of position and slope. The buttons on the figure allow the user to reject the solution and define a new elevation and limits or proceed to the analysis. The start distance is for profiles that have a crest and backslope. The start distance should be set beyond the distance of the crest to

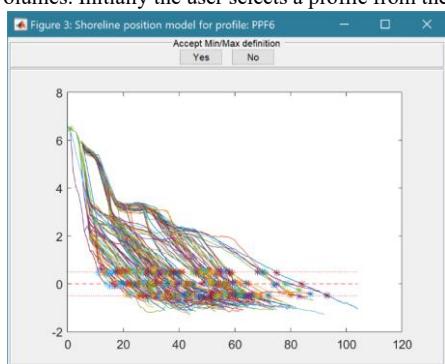

the analysis of shoreline position is very similar to beach volumes. Initially the user selects a profile from the list provided. A figure then shows the profiles and initial level at which shoreline position (x distance) will be evaluated, together with the upper and lower bounds for estimating the average slope at the selected elevation. Once completed the plot is redrawn showing the mid-point and upper and lower bounds on each profile that will be used in the analysis of position and slope. The buttons on the figure allow the user to reject the solution and define a new elevation and limits or proceed to the analysis. The start distance is for profiles that have a crest and backslope. The start distance should be set beyond the distance of the crest to

⁶ NB: when a project is saved that includes spectral transfer tables (SpectralTransfer class) or wave timeseries generated using the tables (WRM_WaveModel class), these class files must be on the Matlab Environment Path when the project file is opened.



avoid two sets of distances being found (i.e. on the front and back sides of the beach).

The results are also tabulated on the **Calcs/Shorelines** tab and can be copied to the clipboard for use in other applications.

Beach properties are saved with a label generated from the source data set. If more than one analysis is performed with the same source data set the output has the same label with the addition of a sequential number. To edit the default label use *Project>Cases>Edit Description*.


Run> Beach properties>Profiles>Location plot: if some beach profiles have been loaded the first profile at each location can be plotted to produce a map of profile locations.

Run> Beach properties>Profiles>Centroid plot: if volumes for a set of profiles have been calculated (use Profiles>Volumes) a plot of the movement of the profile centroid can be plotted. To produce a plot of the beach centroid over time:

- (i) run the Volumes model for a profile;
- (ii) select *Run> Beach properties>Profiles>Centroid plot*;
- (iii) select the profile to use;
- (iv) select whether to number or assign a time stamp to the output;
- (v) select the dates to subdivide the record into intervals (hold down 'Ctrl' button to make multiple selections, or just accept without making any selections to plot the full trace as one line);
- (vi) select how frequently the output should be numbered or time-stamped. Default value of zero only labels the dates defined in step (v). If a marker interval is defined (>0) then time labels are added at this interval but the line work is coloured according to the sub-periods defined in step (v);
- (vii) data input ui shows the minimum x and z values of the current axes.

Accept or modify the extent to plot the same range on both axes press OK, or press Cancel to leave the plot unchanged. This can be useful to avoid visual distortion of the x and z dimensions.

This produces the style of plot shown here.

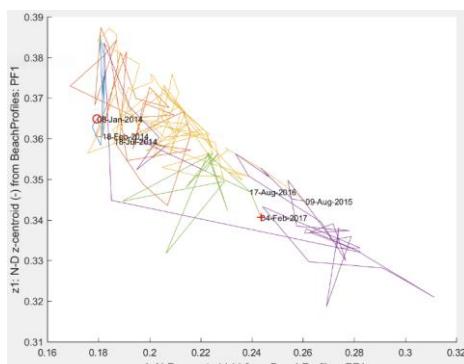

Run> Beach properties>Profiles>Space-time plot: if volumes or shoreline position have been calculated, a surface plot of the change in a volume property (vol, m0, x1, z1, bs) or a position property (chainage, slope) can be generated for a selected set of profiles and plotted as a function of time (x) and alongshore position (y).

Run> Beach properties> Shore change>Shore lines: a list dialogue allows the user to select several profiles (or use Select All button) to define a beach “set”. The elevation that is to be used to define the “shoreline” is then requested. This routine makes use of some of the properties set in *Setup> Site parameters>Wave propagation*, including the angle of the shoreline from True North (degTN). beach



crest level, or high-water level (mOD), the upper beach slope above mean tide level (MTL) and the bed elevation 1km from shore (see Sections 3.4.3 and 4.2.3). The output is saved as both:

- Chainage: the movement of the “shoreline” as a distance from the baseline as a new variable in the dataset for each profile.
- Eastings & Northings: the Easting and Northing location of the “shoreline” on each profile.
- Beach slope (as bs in 1:bs) of the profile over the range +/-0.5m of the shoreline elevation.
- Orientation of the extracted shoreline at the defined elevation.
- Regression parameters for Chainage, Slope, and Orientation (shoreline angle degTN).

Run> Beach properties> Shore change>Shore volumes: a list dialogue allows the user to select several profiles (or use Select All button) to define a “set” of profile volumes. [NB: the volumes must have been calculated for each profile using *Run> Beach properties>Profiles>Volumes*]. This is used to create a space time plot of a volume variable and duplicates the *Run> Beach properties>Profiles>Space-time plot* option.

Run> Beach properties> Shore change>Profile variance: a list dialogue allows the user to select several profiles (or use Select All button) to define a “set” of profiles. An input dialogue is used to define upper and lower elevations and vertical increment to be used construct a dataset of shoreline positions as a function of time and elevation. The data can be saved as a Case or simply plotted. The plot output includes contour plots of the maximum and standard deviation of the shoreline position anomaly and a 2D plot of the average standard deviation of the anomaly across all profiles.

Run> Beach properties> Shore change>Change plot: generates a plot of the E,N shoreline positions for the selected beach “set” as a series of shorelines for each time sample. Output can also be plotted as a function of profile location along the shore rather than E,N points. This allows the changes in chainage (distance from profile baseline), beach slope and beach orientation to be plotted.

Run> Beach properties> Shore change>Rates plot: generates a plot of the rate of change of shoreline position and beach slope for the selected beach “set”. The plots show the slope of the regression line for each variable and the associated standard error. The rate of shoreline change is in m/yr. The beach slope is defined in terms of the horizontal distance, bs, for a unit change in vertical elevation and the rate of change of bs is therefore also m/yr.

Run> Beach properties>Beach Type: uses inshore wave data to estimate the dimensionless fall velocity (which can be used to characterise beach type – see Section 4.10). If there is more than one wave data set available, the user is prompted to select one. Results can be used to identify beach type: as: dfv>=6: dissipative, dfv<6 & dfv>1: intermediate, dfv<=1: reflective.

Run> Beach properties>Crenulate Bay: plots crenulate (also known as zeta) bays on an image or shoreline. Select image or shoreline and either import image (e.g., an aerial jpg, png, etc), or use a set of beach profiles to generate a shoreline over the user selected sub-set at a user specified profile elevation. The user is then prompted to interactively select a spiral control point and the end point of the bay on the plot. A further UI prompts for the wave crest angle, the angle the wave crest makes with the control line, and the direction of spiral rotation. The resulting crenulate bay is added to the plot and the UI reappears, allowing input values to be modified. Press Cancel to exit the updating loop. Note there is an option to retain or delete crenulate bay linework with each iteration. However, delete removes all previous linework.

For further details of the method used see Section 4.15.

Run> Beach properties>Shore profile: plots an idealised profile on the *Calcs>Profile* tab. The user is prompted to select an inshore wave data set and then either define a wave condition (Hs and Tp) or specify a percentile value to use. The profile is based on the parameters defined using *Setup>Model parameters> BMV simulation parameters* (see Section 3.4.3). Closure Option 3 gives Za and Zr based



on Hallermeier's algorithm (Hallermeier, 1981). Other options are based on the set-up for the BMV model (see Section 4.18.2).

Run> Beach properties>Dean profile: plots an idealised Dean profile on the *Calcs>Profile* tab. The profile is based on the parameters defined using *Setup> Site parameters>Wave propagation:* (see Section 3.4.3). This profile model is used to compute shoreface slopes in the wave propagation model that iterates to find wave heights on the edge of the surf zone (see Section 4.2.3).

3.5.3 Tidal Analysis

Water level data can be analysed to obtain the tidal constituents, or the constituents can be used to reconstruct a tide only water level time series (see Section 4.11 for further details).

Run>Tidal analysis>Analysis: a list box prompts the user to select a water level data set and this is passed to `ut_solv` with the 'lat' property left blank, 'const' set to 'auto' and the following options included: 'NodsatNone','White','NoDiagn'. For details of the methods used and alternative analysis options see the `ut_tide` manual. The estimated constituents are output to the Command Window and the source data, predicted record and the differences are plotted. The predicted record and constituents can be saved.

Run>Tidal analysis>Reconstruction: a list box prompts the user to select an existing tidal analysis data set and then to define the data range and time interval to be used for the predictions. The saved constituents are used to predict the tides for the defined date range and saved as a dataset using `ut_reconstr`.

Water level data can be used to generate tidal constituents and predict tidal data for periods of time not covered by the water level data. The source water level data can then be merged with the tidal data to give a more complete record using *Setup>Data clean-up>Patch timeseries*, selecting the water levels as the primary dataset and tidal dataset for the patches.


3.5.4 Derive Output

Time series data that have been added (either as data or modelled values) can be used to derive new variables using the *Run>Derive Output* menu option. The UI allows the user to select data and use a chosen selection of data/variable/range to

define either a Variable, or Time. Each data set is sampled for the defined data range. If the data set being sampled includes NaNs the default is for these to be included (button to right of Var-limits is set to '+N'). To exclude NaNs press the button so that it displays '-N'.

The selection is assigned by clicking one of the X, Y or Z buttons. The user is prompted to assign a Variable, XYZ dimension, or Time (the options available varies with the type of variable selected) – see Section 3.9 for details of how this works.

An equation is then defined in the text box below using the x, y, z or t variables⁷. Based on the user selection the routine applies the defined

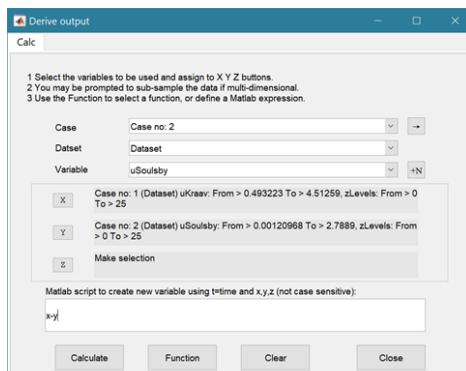

⁷ Various pre-defined function templates can be accessed using the 'Function' button. Alternatively, text can be pasted into the equation box from the clipboard by right clicking in the text box with the mouse.



variable ranges to derive a new variable. In addition text inputs required by the call and the model object (mobj) can also be passed.

Adding the comment %time or %rows, allows the the row dimension to be added to the new dataset. For example if x and y data sets are timeseries, then a Matlab™ expresion, or function call, call can be used to create a new time series as follows:

```
x^2+y %time
```

The output from function calls can be figures or tables, a single numeric value, or a dataset to be saved (character vectors, arrays or dstables). External functions should return the table RowNames (e.g., time or location) as the first variable (or an empty first variable), followed by the other variables to be saved.

If there is no output to be passed back the function should return a string variable.

If varout = 'no output'; this suppresses the message box, which is used for single value outputs. For expressions that return a result that is the same length as one of the variables used in the call, there is the option to add the variable to the input dataset as a new variable. In all there are three ways in which results can be saved:

1. As a new dataset;
2. As an additional variable(s) to one of the input datasets;
3. As an additional variable(s) to some other existing dataset.

For options 2 and 3, the length of the new variables must be the same length (numbere of rows) as the existing dataset.

An alternative when calling external functions is to pass the selected variables as dstables, thereby also passing all the associated metadata and RowNames for each dataset selected. For this option up to 3 variables (plus time if defined for a selected variable) can be selected but they are defined in the call using dst, for example:

```
[time,varout] = myfunction(dst, 'usertext', mobj);  
dst = myfunction(dst, 'usertext', mobj);
```


This passes the selected variables as a struct array of dstables to the function. Using this syntax the function can return a dstable, or struct of dstables, or a number of variables. When a dstable, or struct of dstables is returned, it is assumed that the dsproperties have been defined in the function called and dstables are saved without the need to define the meta-data manually.

Some further details on using this option and the ‘Function’ library available are provided in Section 4.17

3.5.5 Simulation

The simulation menu option provides access to two simulation models: the so called YGOR and BMV models. Whilst both models simulate change for a single cross-shore transect (profile), the YGOR model simulates the change in shoreline position at some chosen elevation over time. In contrast, the BMV model considers an idealised profile and examines how the section volume and centroid change over time. Further background to the models is provided in Section 4.18.

The two models are accessed via the respective tabs on the Simulation UI. The UI’s for the two models are similar but the selections required for each model are different.

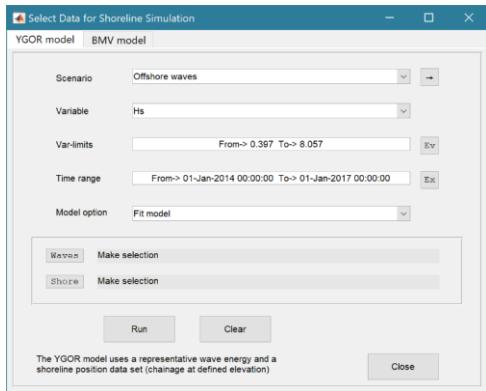

For the **YGOR model** the inputs required are:

1. a timeseries of the forcing variable, such as wave energy. Yates et al (2009) a surrogate for wave energy (e.g. $Hs^2/16$) which must be setup as new data set derived from the Nearshore wave timeseries using the Derive Output UI (*Run>Derive Output*).
2. a timeseries of shoreline positions. These can be loaded as a data set, or generated from a profile data set using the *Run>Beach properties>Profiles>Shoreline position*: model.

The two data sets are assigned to the Waves

and Shore buttons, respectively. Any bounds on the data selection, for magnitude or time, should be defined using the Var-limits and Time range boxes before assigning the variable to the Wave or Shore buttons. A description of the selection made is given in the text box alongside the button.

To derive a set of fit coefficients from an observed data set use the ‘Fit model’ option. The computes a set of fit coefficients which can be saved, viewed on the *Site/Simulation* tab and edited using the *Setup>Run parameters>YGOR simulation parameters* menu option (see Section 3.4.4).

To use the model to make a projection/forecast use the ‘Simulation’ option. For this option, the fit coefficients to be used need to have been defined using the *Setup>Run parameters>YGOR simulation parameters* menu option (see Section 3.4.4). When running a simulation, as well as selecting a wave variable for the desired period, it is necessary to select the shoreline data set that was used to “fit” the model. Further explanation and details of the workflow are given in Section 4.18.1.

On the ‘Model option’ drop-down list there is also an option to ‘Preload mean forcing’. For very large data sets loading the data can take some time. When using the ‘Fit model’ option to try multiple fits this can be time consuming. This option allows the mean values of the forcing between profile surveys to be added to the selected shoreline position data set. Subsequent runs using the ‘Fit model’ option, use these saved mean values rather than re-calculating them. If different wave climates are used, or different variables are used, in Preload mean forcing, the mean values are saved as a new variable.

When running Fit Model, the user is prompted to select a mean data set if there is more than one mean wave data set available.

NB. The mean forcing values between profile surveys are used to make an initial estimate of the fit parameters ‘a’ and ‘b’ but are not used for the subsequent optimisation which uses the full wave timeseries.

The model is initialised using the Run button and the selection can be cleared using the Clear button.

The BMVmodel is under development

3.5.6 Vulnerability


There are two options accessible from the Run menu to examine beach vulnerability:

Run> Vulnerability> BVI site: runs a form of Beach Vulnerability Index for a single location. A prerequisite is that there must be at least one case available for each of the following models:



- Nearshore waves: *Run> Wave properties>Nearshore Waves*
- Runup: *Run> Wave properties>Runup*
- Littoral drift: *Run> Wave properties>Littoral Drift*
- Cross-shore transport: *Run> Wave properties>X-shore Transport*
- Shoreline: *Run> Beach properties> Shore change>Shoreline*

Different scenarios can be considered by generating multiple cases of the above models and then selecting different combinations in the Vulnerability UI. Results are averaged over the profiles used in the selected Shoreline model case. The tabulated results are presented in a stand-alone figure. For details of how the BVI is calculated see Section 4.19.1.

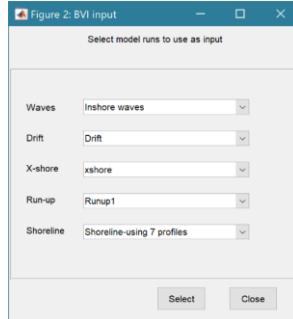

Run> Vulnerability>BVI profile set: runs a more complex version of the Beach Vulnerability Index for a beach defined by a set of beach profiles. The models used are similar to those for the *Single site* option but are run for all profiles as part of the simulation rather than being run beforehand. The prerequisites are that the Site Run parameters for the wave model have been defined and the Nearshore wave model has been run (see Sections 3.4.3 and 3.5.1). The user selects which profiles to include to define a beach “set” of profiles, defines the number of years to be considered as the exposure period (default is 1 year) and selects which nearshore wave data set to use (if there are more than one). The tabulated results are presented on the *Cals>Shoreline* tab. The results for the Mean Tide Level (0mOD) shoreline change used in the analysis can be viewed in the same way as other Shore change results using the *Run> Beach properties> Shore change>Change plot* and *Rates plot* menu options. For details of how the BVI is calculated see Section 4.19.2.

Run> Vulnerability>BVI set plot generates a plot of the indices as a function of beach profiles along the shore.

3.5.7 User Model

This class is provided for the user to add their own models by defining a new model class (see Section 5.2 for further details on how to add a model).

3.6 Analysis

Analysis allows data and model variables to be plotted or used in various forms of statistical analysis.

3.6.1 Plotting

Analysis>Plots: initialises the Plot UI to select variables and produce various types of plot. The user selects the Case, Dataset, and Variable to be used and the plot Type from a series of drop-down lists, Figure 3. There are then buttons to create a New figure or Add or Delete variables from an existing figure.

Alongside the Data set drop down menus there are various button, which alter properties, or selection:

- : updates the list of Cases
- XY : swaps the X and Y axes
- + : switches between cartesian and polar plot type

[NB: not all buttons are included on all plotting UIs].

The plotting UI has seven tabs:

- Timeseries - to handle time series plotting;
- Profiles - to handle plotting of beach profiles;



Rose - for wind and wave rose plots, or polar plots;


2D - for a range of types of plot with two variables (line, scatter, bar etc);

3D- for a range of surface plots

2DT-animates a 2D plot

3DT- animates a 3D plot

Figure 3 - Plot menus and notes on their use

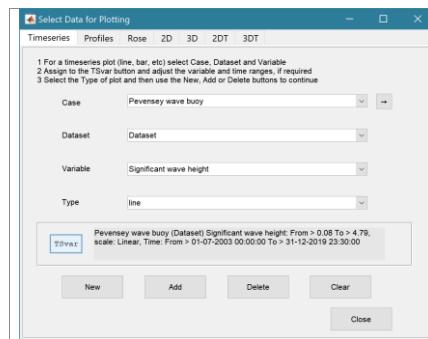

Time series plot

The X variable is time and does not need to be set.

> Select a Case, Dataset and Variable to plot.

The Y variable can be scaled (log, normalised, etc) and the range to be plotted can be adjusted from the range values when assigning a variable to the TSvar button.


> Select plot type (line, bar, scatter, stem, etc)

Buttons:

New – generate a new figure

Add – add data to an existing figure

Delete – remove selected data from an existing figure

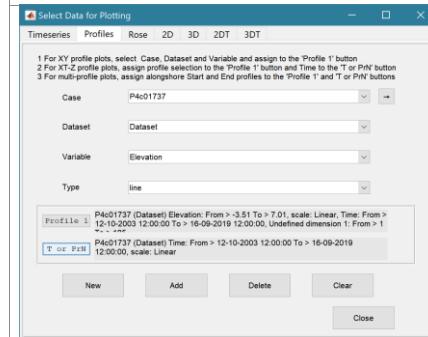

Profiles plot

> Select Case, Dataset and Variable (only cases that are beach profile data are shown).

> For X-Y chainage-elevation plots of one or more profiles use the New/Add/Delete buttons. The popup UI lists the surveys available. This UI returns after each plot until Cancel is used to exit.

> By assigning a selection to the 'Profile 1' button and time to the 'T or PrN' button, a surface plot of the variable as a function of chainage and time is produced.

> By assigning a start profile to the 'Profile 1' button and an end profile to the 'T or PrN' button, plots of the variable as a function chainage and alongshore position are produced. The option is provided to plot individual survey dates, or an animation. Animation figures include buttons to replay and/or save the output. Alternatively, use the Save button on the Plot Selection UI to save the most recently created animation as an mp4 or avi file. The Clear button to resets the UI to an empty selection



Select Data for Plotting

Timeseries Profiles Rose 2D 3D 2DT 3DT

1 For a Polar or Rose plot select the Case, Dataset and Variable
2 Assign to the 'Rose' button
3 Add and Delete buttons only work for Polar plots

Case: Surf zone waves
Dataset: Dataset
Variable: Inshore wave height
Type: line

Rose: Surf zone waves (Dataset) inshore wave height: From > 0 To > 9.93296, scale: Linear, Time: From > 01-07-2003 00:00:00 To > 31-12-2019 23:30:00

New Add Delete Clear Close

Select Data for Plotting

2D 3D 4D 2DT 3DT 4DT

1 For a plot (line, bar, etc) select variable and dimension to use for X and Y axes
2 The Ind button defines X and the Dep button defines Y
3 Where Dep is the dependent variable and Ind is the independent variable

Case: Case no: 1
Dataset: Dataset
Variable: Transport property
Type: line

Var: Case no: 1 (Dataset) Transport property: From > 0 To > 0.85, scale: Linear, X: XY
X: Case no: 1 (Dataset) Time: From > 0 sec To > 50 sec, scale: Linear
Y: Case no: 1 (Dataset) Y co-ordinate: From > 0 To > 150, scale: Linear

New Add Delete Clear Close

Select Data for Plotting

2D 3D 4D 2DT 3DT 4DT

1 For a contour or surface plot - select a variable with at least 2 dimensions
2 If the variable has more than 2 dimensions you will be prompted to select a sub-set
3 Select dimensions to use for the X-Y axes

Case: Case no: 1
Dataset: Dataset
Variable: Transport property
Type: surf

Var: Case no: 1 (Dataset) Transport property: From > 0 To > 0.85, scale: Linear, X co-ordinate: From > 0 To > 100, Y co-ordinate: From > 0 To > 150, Time: 25 sec
X: Case no: 1 (Dataset) X co-ordinate: From > 0 To > 100, scale: Linear
Y: Case no: 1 (Dataset) Y co-ordinate: From > 0 To > 150, scale: Linear

Select Clear Close

Rose plot

The Direction variable is selected by default.

- > Select Scenario, Variable, Scaling, Limits, date range and Plot type.

Prompted to use a polar or a rose plot.

Additional variables can be added and deleted for polar plots. A second rose plot can be added to a rose plot but there is no delete option for this plot type.

2D plot

For each selection choose the Case, Dataset and Variable to be used.

- > Assign a variable, or a dimension, to the Var and X buttons to set the Y and X axes, respectively
Each selection can be scaled (log, normalised, etc) and the range to be plotted can be adjusted when assigning the selection to a button.

> Select plot type (line, bar, scatter, stem, etc)

Control Buttons:

→ : updates the list of Cases

XY : swaps the X and Y axes

+ : switches between cartesian and polar plot type

If polar selected then Ind assumed to be in degrees.


3D plot

For each selection choose the Case, Dataset and Variable to be used.

- > Assign selections to the Var, X and Y buttons
Take care to ensure that the assignments to X and Y correctly match the dimensions selected for the variable (including any adjustment of the dimension ranges to be used).

> Select plot type.

Control Buttons: see 2D plot above.

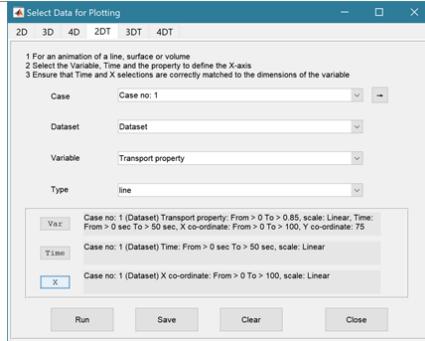

2DT animation

For each selection choose the Case, Dataset and Variable to be used.

> Assign a variable, or a dimension, to the Var, Time and X buttons.

Each selection can be scaled (log, normalised, etc) and the range to be plotted can be adjusted when assigning the selection to a button.


> Select plot type (line, bar, scatter, stem, etc)

Control Buttons:

→ : updates the list of Cases

+ : switches between cartesian and polar plot type

If polar selected, then X assumed to be in degrees and when prompted select Polar and NOT Rose.

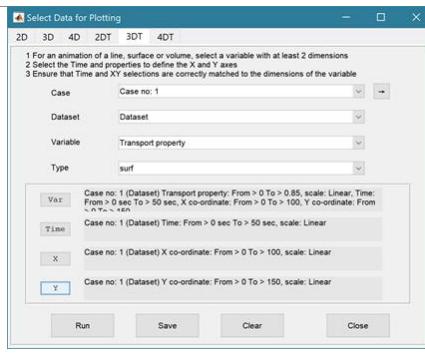


3DT animation

For each selection choose the Case, Dataset and Variable to be used.

> Assign selections to the Var, Time, X and Y buttons
Take care to ensure that the assignments to Time, X and Y correctly match the dimensions selected for the variable (including any adjustment of the dimension ranges to be used).


> Select plot type.

Control Buttons: see 2DT plot above.

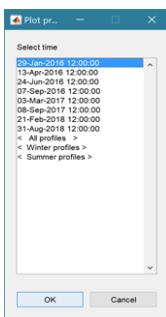

The selection UI for plotting profiles on the profiles tab includes the options to plot ‘All profiles’, ‘Winter profiles’, or ‘Summer profiles’. These options are appended to the end of the list of survey dates. Winter is defined as October-March and Summer is defined as April-September. Multiple profile plots have a colour order that proceeds from dark blue for the earliest profile to dark red for the most recent. When there are too many profiles to include a legend a colour bar is included instead. When a profile is clicked on with the mouse the date is displayed in the Matlab™ Command Window. This applies to all multi-line plots that have a date stamp.

Example plots:

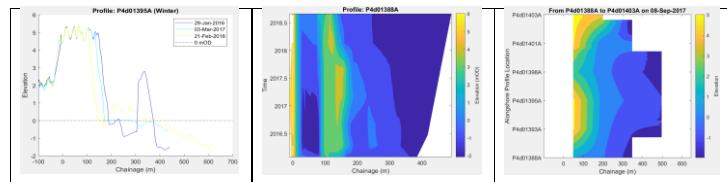



It is easy to rapidly generate a lot of plots. When the Plotting UI is closed, the user is given the option to delete all the plots generated by the Plotting UI. Alternatively, all the current plots can be deleted using *Tools>Clear all>Figures*.

Setting the plot Type to User calls a user defined function as explained in Section 5.4.


3.6.2 Statistics

Analysis> Statistics: several statistical analysis options have been included within the Statistical Analysis GUI. The tabs are for **General** statistics, **Timeseries** statistics, model comparisons using a **Taylor** Plot, and the generation of a new record based on the statistics over the **Intervals** defined by another timeseries.

General tab


The General tab allows the user to apply the following statistics to data loaded in ModelUI:

- 1) **Descriptive for X:** general statistics of a variable (mean, standard deviation, minimum, maximum, sum and linear regression fit parameters). Only X needs to be defined. The range of the variable can be adjusted when it is assigned to the X button (see Section 3.9). If the variable being used is a multi-dimensional matrix (>2D), the user is prompted to define the range or each additional dimension, or select a value at which to sample. The function can return statistics for a vector or a 2D array.

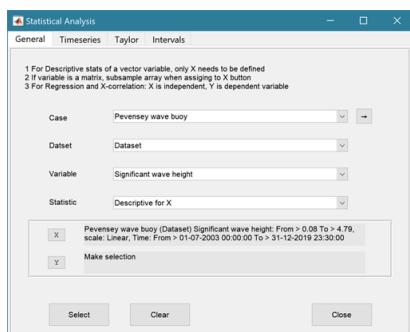


The results are tabulated on the **Stats>General** tab and can be copied to the clipboard for use in other applications.

- 2) **Regression:** generates a regression plot of the dependent variable, Y, against the independent variable, X. For time series data, the default data range is the maximum period of overlap of the two records. For other data types the two variables must have the same number of data points. After pressing the Select button, the user is prompted to select the type of model to be used for the regression. The results are output as a plot with details of the regression fit in the plot title.

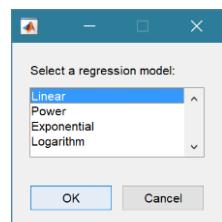

- 3) **Cross-correlation:** generates a cross-correlation plot of the reference variable, X, and the lagged variable, X (uses the Matlab ‘xcorr’ function). For time series data, the default data range is the maximum period of overlap of the two records. For other data types the two variables must have the same number of data points. This produces a plot of the cross-correlation as a function of the lag in units selected by the user.

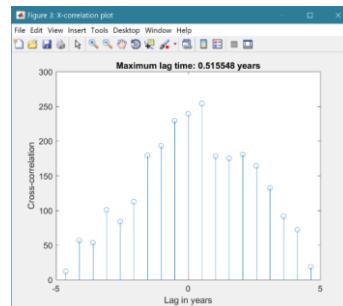




- 4) **User:** calls the function user_stats.m, in which the user can implement their own analysis methods and display results in the UI or add output to the project Catalogue (see Section 5.3 for further details). Currently implements an analysis of clusters as detailed for Timeseries data below.

Timeseries tab

The Timeseries tab allows the user to select a single Timeseries variable and apply any of the following statistics:

- 1) **Descriptive:** general statistics of a variable (mean, standard deviation, minimum, maximum, sum and linear regression fit parameters). The results are tabulated in a new window and can be copied to the clipboard for use in other applications.
Various ‘seasonal’ sub-divisions can be defined. The required option is selected from the table in the UI, by selecting a Syntax cell and then closing the UI.

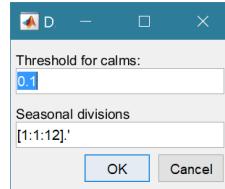

The next UI prompts for a threshold for calms (values below threshold are deemed to be “calm” conditions) and allows the selected ‘seasonal’ divisions to be changed (if the desired option is not in the default list), or edited. The divisions can be expressed in several ways, as detailed below:

Script	Result
1	Descriptive statistics for the full-time series
[1:1:12].'	Descriptive statistics for the full-time series and monthly values (the .’ creates a column vector).
[12,1,2; 3,4,5; 6,7,8; 9,10,11]	Descriptive statistics for the full-time series and seasons based on groupings – Dec-Feb, Mar-May, Jun-Aug, Sep-Nov shown.

When seasonal statistics are produced with more than 2 seasons a plot is generated. This can be a cartesian or polar plot of the mean values with error bars used to depict +/- one standard deviation. The polar plot maps the year as one revolution.

- 2) **Peaks:** generates a new timeseries of peaks over a defined threshold. There are three methods that can be selected:
0 = all values above the threshold, not just ‘peaks’;
1 = all peaks above the threshold;
2 = the peak value within each up-down crossing of threshold; and
3 = peaks that have a separation of at least ‘tint’ hours.
4 = maximum values that are separated by at least ‘tint’ hours.

For options 3 and 4⁸, the separation between peaks (‘tint’) is also defined in the pop-up UI. This can be used to try and ensure that peaks are independent. The peaks are marked on a plot with the defined threshold. If rejected, new values can be defined. If accepted a new timeseries is added. This has the class of the Data Type that was used as the source timeseries but is not appended to that timeseries because the date/times are a subset of the source.

- 3) **Clusters:** The selection process is similar to peaks, where the user defines a threshold, selection method and time between peaks (for method 3). In addition, the cluster interval is

⁸ Option 3 finds the peaks (values that are greater than the values before and after) and checks for a separation between the peaks. Option 4 sorts the date in descending order and finds the maximum values in the record that are separated by the required interval.



defined in days. This is the period of time separating two peaks for them to be no longer considered part of a cluster (e.g. if a sequence of storms occurs every few days they will form a cluster. If there is then a gap of, say, 31 days to the next storm, with a cluster time interval of 30 days this would be considered as part of the next cluster). Once a selection has been made, a plot is generated that shows the peaks for each cluster with a different symbol. The user can either choose a different definition, or accept the definition. Once accepted, the results are added as a new timeseries, with the class of the Data Type that was used as the source timeseries. Two values are stored at the time of each peak in the clusters: the magnitude of the peak; and the number of the cluster to which it belongs (numbered sequentially from the start). This allows the data for individual clusters to be retrieved, if required.

- 4) **Extremes:** The selection process is similar to peaks, where the user defines a threshold, selection method and time between peaks (for method 3). A figure is generated with two plots. The left-hand plot shows the peaks for the defined threshold and the right-hand plots shows the mean excess above the threshold (circles), the 95% confidence interval (dotted red lines) and the number of peaks (vertical bars + right hand axis) as a function of threshold. This plot can be used to help identify a suitable threshold for the peak-over-threshold extremes analysis method. The user can either choose a different definition, or accept the definition. Once accepted, the user is prompted to select a plot type. Options are: None; Type 1 – a single return period plot; Type 2 – a composite plot showing the probability, quantile, return period and density plots. See Coles (2001) for further details of the method used and the background to these plots. The results are tabulated on the *Stats/Extremes* tab and can be copied to the clipboard for use in other applications.
- 5) **Poisson Stats:** user is prompted to select a threshold, method and peak separation (see Peaks above) and the function generates a plot of the peak magnitude, time between peaks (interarrival time) and the duration above the threshold for each peak. The plot shows a histogram of each variable and the exponential pdf derived from the data, along with the μ value for the fit.
- 6) **Hurst Exponent:** user is prompted to select from one of 3 methods, which are based on different computation routines taken from the Matlab Forum, as follows:

- 1= Chiarello matrix method
- 2=Abramov loop code
- 3=Aalok-Ihlen code
- 4=Aste using unweighted option.

Methods 1 and 2 are similar, whereas method 3 explores the effect of scale and method 4 derives the unweighted generalized Hurst exponent. The main difference between the first two methods is that Abramov uses a different form for S, rather than the Matlab standard deviation function (std).

The Hurst parameter H is a measure of the extent of long-range dependence in a time series (while it has another meaning in the context of self-similar processes). H takes on values from 0 to 1. A value of 0.5 indicates the absence of long-range dependence. The closer H is to 1, the greater the degree of persistence or long-range dependence. H less than 0.5 corresponds to a lack of persistence, which as the opposite of LRD indicates strong negative correlation so that the process fluctuates violently. H is also directly related to fractal dimension, D, where $1 < D < 2$, such that $D = 2 - H$.

This is experimental code (for code see .../muitoolbox/psfunctions/hurst_exponent.m, hurst_aalok_ihlen.m and genhurstw.m) and the user should refer to the background literature for further details. (Di Matteo *et al.*, 2003; Pacheco *et al.*, 2008; Ihlen, 2012; Morales *et al.*, 2012; Sutcliffe *et al.*, 2016; Abramov and Khan, 2017; Antoniades *et al.*, 2021; Brandi and Di Matteo, 2021).



- 7) **User:** calls user_stats.m function, where the user can define a workflow, accessing data and functions already provided by the particular App, or the mu.toolbox (see Section 5.3 for further details). The sample code can be found in the psfunctions folder and illustrates the workflow to produce a clusters plot. Some code in the header (commented out) shows how to get a time series using the handles passed to the function (obj and mobj). This code would get the same timeseries as the one passed to the function. However, by modifying the ‘options’ variable it is possible to access other timeseries variables.


Taylor tab

The Taylor tab allows the user to create a Taylor Plot using 1D or 2D data (e.g timeseries or grids):

A Reference dataset and a Test dataset are selected. Datasets need to be the same length if 1D, or same size if 2D. If the data are timeseries they are clipped to a time-period that is common to both, or any user defined interval that lies within this clipped period. The statistics (mean, standard deviation, correlation coefficient and centred root mean square error) are computed, normalized using the reference standard deviation and plotted on a polar Taylor diagram (Taylor, 2001).


[The ModelSkill App provides additional tools to test data and the ModelSkill App manual provides further details of the methods used.]

Selecting New generates a new Taylor Plot. Selecting the Add button adds the current selection to an existing plot and the Delete button deletes the current selection. The Clear button resets the UI to a blank selection.

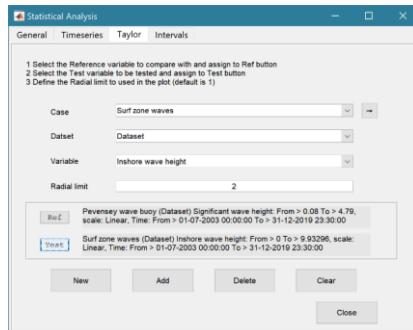

Once New or Add are selected, the user is asked whether they want to plot the skill score (Yes/No). If Yes, then the user is prompted to set the skill score parameters. As further points are added to the plot, this selection remains unchanged (i.e. the skill score is or is not included). To reset the option it is necessary to close and reopen the Statistics UI.

If the number of points in the Reference and Test datasets are not the same the user is prompted to select which of the two to use for interpolation.

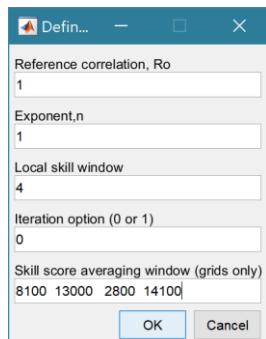


This is the maximum achievable correlation (see Taylor (2001) for discussion of how this is used).

Exponent used in computing the skill score (see Section 4.20.2).


Number of points (+/-W) used to define a local window around the ith point. If W=0 (default) the local skill score is not computed.

Local skill score is computed for window around every grid cell (=1), or computes score for all non-overlapping windows (=0)

Window definition to sub-sample grid for the computation of the average **local** skill score. Format is [xMin, xMax, yMin, yMax].

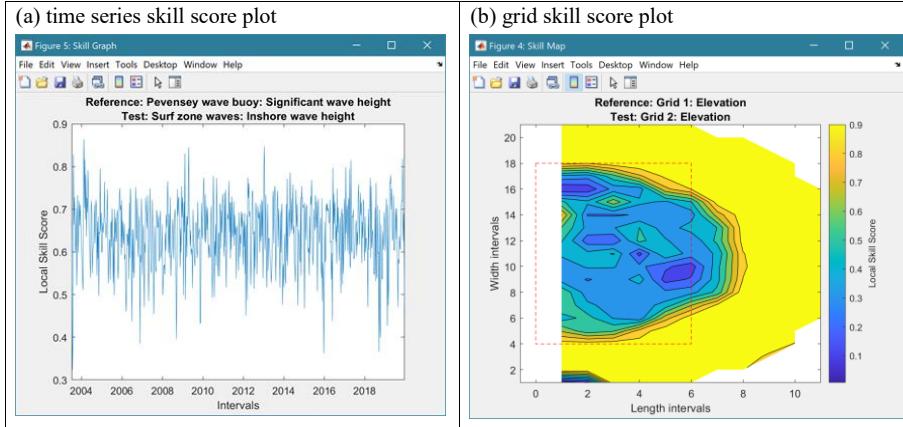


The Taylor Plot shows the Reference point as a green cross and the Test points as coloured circles. The legend details the summary statistics and the Case List button generate a table figure listing all the results. These can be copied to the clipboard.

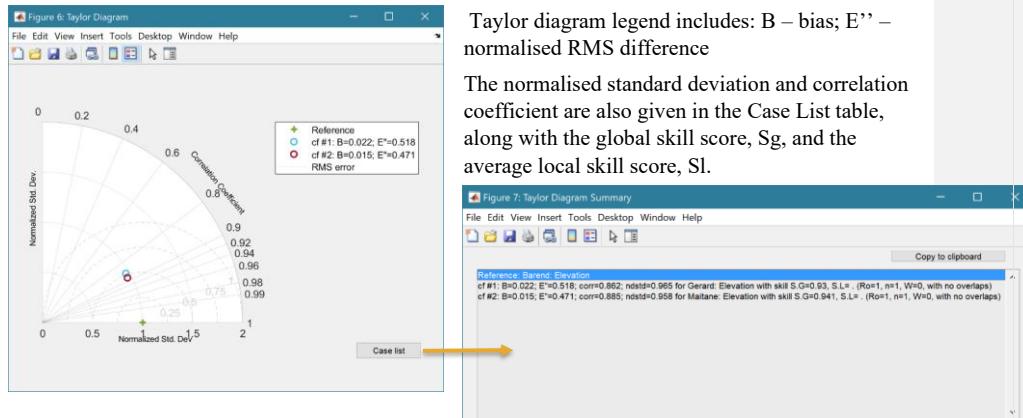

Intervals tab

The Intervals tab allows the user to compute selected simple statistics of a timeseries variable for the intervals between the times recorded in another timeseries. For example, the mean wave power between beach profile surveys.

The Reference dataset defines the time intervals to be used. As only the times are used it does not matter which variable is selected. The Sample dataset is the timeseries variable to be used. The analysis is run using the Select button and the user is prompted to define the statistical function.

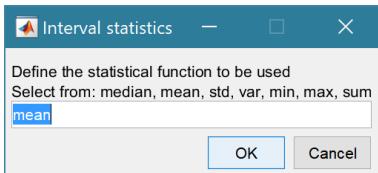

The UI provides a list of the functions that can be used.
[Any function that simply requires a single variable as an input could be used. To modify the list, edit the variable 'statoptions' in `muiStats.getIntervalStats`.]

Default properties are derived from the source variable and the selected statistic. The user is prompted to confirm, or edit these default properties. The results are saved as a new timeseries dataset in which the variable describes the statistical value for the interval preceding each time.

3.6.3 Coastal Plots

The *Analysis> Coastal Plots* menu option calls the function ‘`ct_coastal_plots`’, which provides access to a range of bespoke plotting options, including:

Littoral Drift: This plots the littoral drift statistics directly from a selected wave data set and provides the option to save the full time series and yearly and monthly datasets. This is an alternative to using *Run> Wave properties>Littoral Drift* and the ‘`littoraldriftstats`’ function in *Run>Derive Output* (see Sections 3.5.1, 3.5.4 and 4.17.3).

Generic Scatter Plot: Select any two variables of the same length and plot as a 2-var scatter plot, or select 3 variables for a scatter plot with the colour or size of the markers scaled by the 3rd variable.

Wave Scatter Plot: Bespoke plots for wave data allowing exploration of height, period and water depth, or height, period and direction relationships. The former includes options for wave steepness plots. Uses ‘`wave_scatter.m`’ and ‘`wave_scatter_3d.m`’, see Section 4.17.3.

Frequency Analysis: Selection of frequency analysis plots of timeseries data. Plot options include Time series plot of variable, Time series plot of variable above threshold, ‘Plot variable frequency, Plot variable frequency above threshold, Spectral analysis plot, Duration of threshold exceedance, Rolling mean duration above a threshold. Uses ‘`frequencyanalysis.m`’ and for water level data uses ‘`waterlevelfreqplots.m`’, see Section 4.17.3.

Spectrum Plots: to visualise measured spectra in terms of direction and frequency spread, this option creates a surface plot for a selected date-time. There is also an option to compare the spectrum with a model spectrum, such as JONSWAP. Plots can be in X-Y or polar format and the X-Y plot includes a difference plot. Some details of wave spectrum models is given in Section 4.4 and further details are given in the WaveRayModel App manual (<https://github.com/CoastalSEA/WaveRayModel>).

Pos-Neg Change Plot: Computes the change in a variable over each time interval and the rate of change (assuming a linear rate of change between observations), subdivides the population into positive and negative change values (typically this represents accretion and erosion when using volumes, or shoreline position, data) and presents the histogram and exponential fit for each data set. Uses ‘`posneg_dv_stats.m`’, see Section 4.17.3.

3.6.4 Spectrum Plots


Analysis>Spectral Plots> Spectrum Plots: plotting options to view measured and modelled spectra. This includes the following options:

1. **Plot a spectrum using Case data:** uses a selected Case dataset and plots the spectrum of the selected date and time. This can be an imported spectral record to plot the observed spectrum (this uses the methods described in Section 4.16.3 to reconstruct the directional spreading). Alternatively, it can be a wave data record and uses one of the theoretical spectrum models, as



described in Section 4.16.1, to construct the spectrum (Note: If γ is given a value of NaN , the value is estimated using the values of T_p and T_2).

2. **Plot a spectrum using a model:** define the spectrum model to use, as described in Section 4.16.1, and specify the wave or wind parameters for use in the model. The inputs to define a spectrum are detailed below:

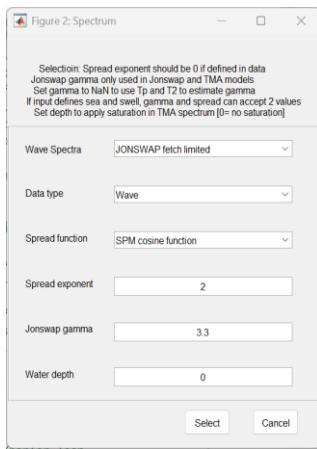

Spectrum options: JONSWAP fetch limited, TMA shallow water, Pierson-Moskowitz fully developed, Bretschneider open ocean.

Source data type can be: Wave or Wind.

Spreading can be: SPM cosine function, Donelan secant function


Spread exponent – typically ranging from ~2 for a wind sea to ~10 for swell sea.

Jonswap gamma exponent. Only used for Jonswap and TMA options. Set to 0 to use built-in definitions for gamma (see Section 4.16.1).

Water depth is used to estimate saturation when using the TMA spectrum. When using Spectrum Plots, this is the depth at the point of interest.

When examining a bimodal spectrum, where the input is defined in terms of the wind-sea and swell components, the spread exponent and gamma can be given different values for the wind-sea and swell. The first value defined is used for the wind-sea component and the second value for the swell component.

3. **Plot a bimodal model spectrum:** This is similar to option (2) but uses a dual input to define the form of the spectrum model and the wave conditions, as shown below:

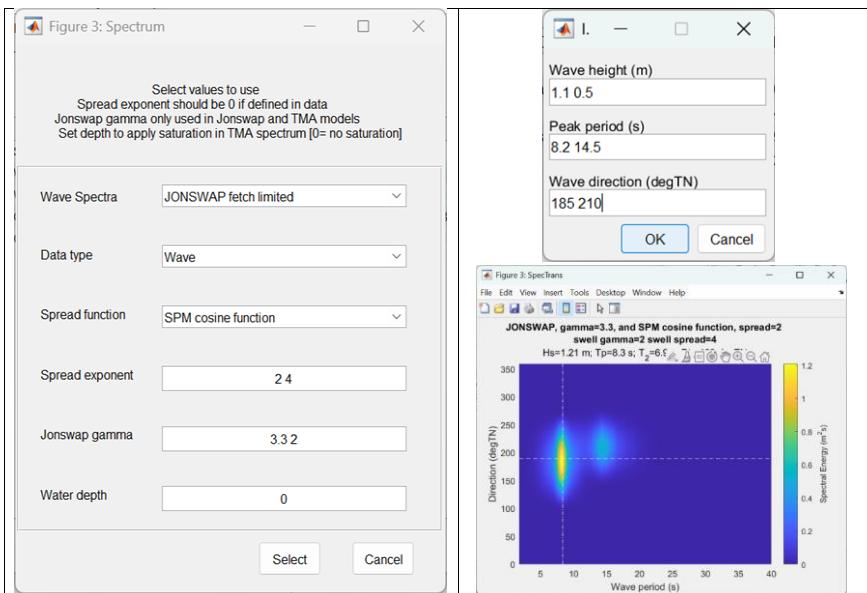


Note: dual inputs are separated by a space. Dual values for spread and gamma are not required. If not given the same values are used for sea and swell components. However, all 3 values of the wave condition must be specified for a bimodal spectrum.


Input and output parameters are written to the Command Window.

4. **Plot a spectrum loaded from file:** similar to option (1) but importing a spectrum record directly from a file rather than using an imported Case record.
5. **Plot comparison of Case spectra:** select two cases, datasets, and times (as in option 1) to plot the spectra of each for comparison in a single plot.
6. **Plot measured against modelled:** plot a measured spectrum from a selected case record against a model constructed using one of the theoretical spectrum models, as described in Section 4.16.1, and the wave parameters (Hs, Tp, etc) estimated from reconstructed the measured spectrum. Output plots include a composite plot of measured, modelled and difference (XY plot only), a comparison of the measured and modelled omni-directional spectra, a Taylor diagram of the statistical performance of the model relative to the measured spectrum and a plot of the local skill score (see Sections 3.6.2 and 4.20 for the input variables and background to these plots).
7. **Animation of spectrum timeseries:** creates an animation window of a selected period of a timeseries. This can use wave parameters or wave spectrum records as input. When using wave parameters, the spectrum is constructed using one of the theoretical spectrum models, as described in Section 4.16.1.
8. **Model v Measured timeseries skill:** explores how well a spectrum model performs against measured spectra based on a timeseries of measured spectra. The model spectrum is constructed using one of the theoretical spectrum models, as described in Section 4.16.1. If γ is given a value of NaN, the value is estimated using the values of T_p and T_2 and the time series of values plotted.

Output includes a Taylor diagram showing the skill for each data point and the option to plot a range of output wave parameters.

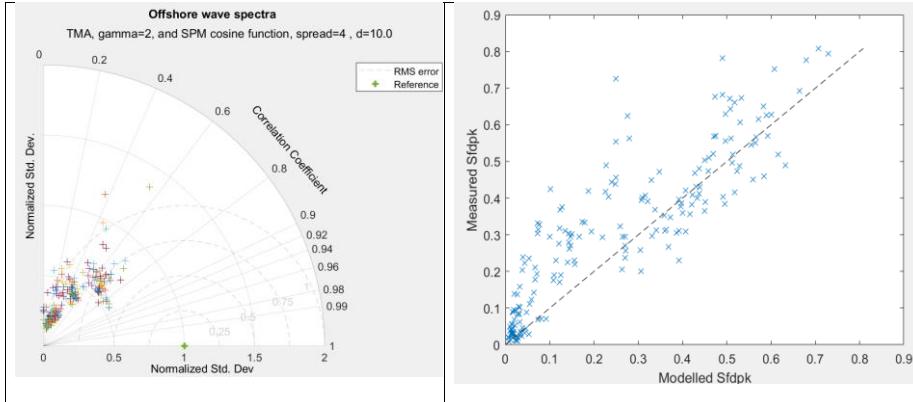

9. **Bimodal model analysis:** finds the sea and swell components in a measured spectrum using the method adopted by the Channel Coastal Observatory (Mason and Dhoop, 2018) to identify the two components. The wave parameters for each ‘component’ spectrum are then used to construct a model of each (as described in Section 4.16.1) and the two parts are added to obtain the composite model spectrum. The output includes a comparison of the measured and modelled omnidirectional spectra and frequency-direction plots of the measured, modelled and difference. A summary of the wave parameters is provided in the Command Window.

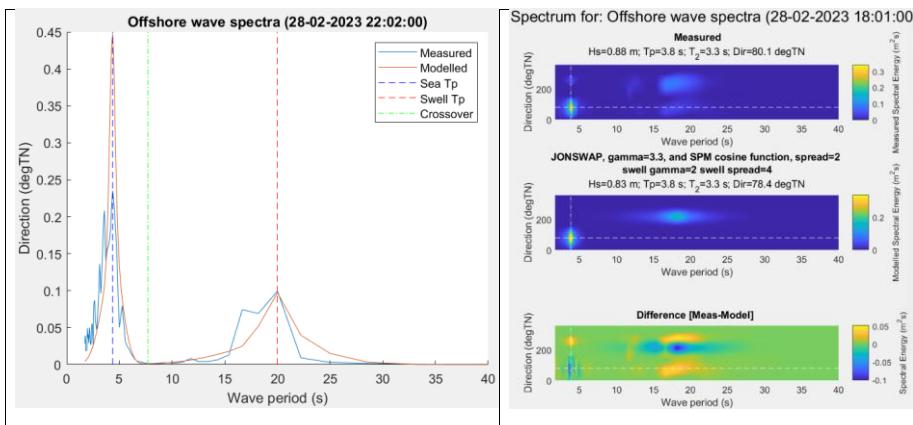

3.7 Help

The help menu provides options to access the App documentation in the Matlab™ Supplemental Software documentation, or the App manual.



3.8 Tabs

To examine what has been set-up the Tabs provide a summary of what is currently defined. Note: the tabs update when clicked on using a mouse but values displayed cannot be edited from the Tabs.

Data and Models: lists the data loaded and the cases that have been run with a case id and description. Clicking on the first column of a row generates a table figure with details of the variables for the case and any associated metadata. Buttons on the figure provide access the class definition metadata, source information (files input or models used) and any user data (e.g., tables of derived parameters) that is saved with the data set.

Inputs: tabulates the system properties that have been set (display only).

Q-Plot: displays a quick-plot defined for the class of the selected case (display only).

Stats: displays a table of results for any analyses that have been run (can be copied to clip board).

3.9 UI Data Selection

Functions such as Derive Output (3.5.4 and 4.17), Plotting (3.6.1) and Statistics (3.6.2) use a standardised UI for data selection. The Case, Dataset and Variable inputs allow a specific dataset to be selected from drop down lists. Once each of these has been set to the desired selection the choice is assigned to a button. The button varies with application and may be X, Y, Z, or Dependent and Independent, or Reference and Sample, etc. Assigning to the button enables further sub-sampling to be defined if required. Where an application requires a specific number of dimensions (e.g., a 2D plot), then selections that are not already vectors will need to be subsampled. At the same time, the range of a selected variable can be adjusted so that a contiguous window within the full record can be extracted. In most applications, any scaling that can be applied to the variable (e.g., linear, log, relative, scaled, normalised, differences) is also selected on this UI. The selection is defined in two steps:

Select the property to use and any limits to be applied to the data range of the selected property

Select: Significant wave height

Range: From > 0.08 To > 4.79

Scaling: Linear

Select Close

Step 1.

Select the attribute to use. This can be the variable or any of its associated dimensions, which are listed in the drop-down list.

The range for the selection can be adjusted by editing the text box or using the Edit (Ed) button.

Any scaling to be applied is selected from the drop-down list.⁺

Press Select to go to the next step or Close to quit.

+ scaling options include Linear; Log; Relative (V-V(x=0)); Scaled (V/V(x=0)); Normalised; Normalised (=ve); Differences; Rolling mean.

The number of variables listed on the UI depends on the dimensions of the selected variable. For each one Select the attribute to use and the range to be applied.

Commented [IT1]: Need a note on which dimension normalisation is applied. By default in scalevariable this is over the first dimension (ie the rows).

Select the property to use and any limits to be applied to the range of the selected property

Select: Time


Range: From 01-07-2003 00:00:00 To 31-12-2019 23:30:00

Select Cancel

Step 2 - Variable only has dimension of time.

No selection to be made.

Edit range if required.

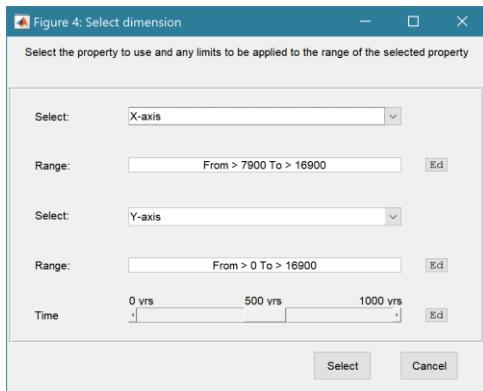**Step 2 - Variable has 3 dimensions but only 2 are needed for the intended use.**

Select the 1st variable to use as a dimension.

Edit range if required.

Select the 2nd variable to use as a dimension.

Edit range if required.

Use the slider or the Edit (Ed) button to set the value of the dimension to use. (A value of t=500 is selected in the example shown).

Press Select to accept the selection made.

[NB: Only unused dimensions can be selected

from the Select drop-down lists. To adjust from the default list this can sometimes require that the second Select list-box is set first to allow the first Select list-box to be set to the desired value.]

The resulting selection is then detailed in full (including the ranges or values to be applied to all dimensions) in the text box alongside the button being defined.

Note where a variable is being selected as one property and a dimension as a second property, any sub-selection of range must be consistent in the two selections. This is done to allow variables and dimensions to be used as flexibly as possible.

3.10 Accessing data from the Command Window

In addition to the options to save or export data provided by the *Project>Cases>Save* and *Project>Import/Export* options, data can also be accessed directly for use in Matlab™, or to copy to other software packages. This requires use of the Command Window in Matlab™, and a handle to the App being used. To get a handle, open the App from the Command Window as follows:

```
>> myapp = <AppName>;           e.g., >> as = Asmita;
```

Simply typing:

```
>> myapp
```

Which displays the results shown in the left column below with an explanation of each data type in the right hand column.

myapp = <AppName> with properties:	Purpose
Inputs: [1×1 struct]	A struct with field names that match all the model parameter input fields currently
Cases: [1×1 muiCatalogue]	muiCatalogue class with properties DataSets and Catalogue. The former holds the data the latter the details of the currently held records.
Info: [1×1 muiProject]	muiProject class with current project information such as file and path name.
Constants: [1×1 muiConstants]	muiConstants class with generic model properties (e.g. gravity, etc).



To access current model settings, use the following:

```
>> myapp.Inputs.<InputClassName>
```

To access the listing of current data sets, use:

```
>> myapp.Cases.Catalogue
```

To access imported or model data sets, use:

```
>> myapp.Cases.DataSets.<DataClassName>
```

If there are more than one instance of the model output, it is necessary to specify an index. This then provides access to all the properties held by that data set. Two of these may be of particular interest, RunParam and Data. The former holds the input parameters used for that specific model run.

RunParam is a struct with fields that are the class names required to run the model (similar to Inputs above). The Data property is a model specific struct with field names defined in the code for the model class. If there is only a single table assigned this will be given the field name of 'Dataset'. To access the *dstable* created by the model, use:

```
>> myapp.Cases.DataSets.<DataClassName>(idx).Data.Dataset
```

```
>> myapp.Cases.DataSets.<DataClassName>(idx).Data.<ModelSpecificName>
```

To access the underlying *table*, use:

```
>> myapp.Cases.DataSets.<DataClassName>(idx).Data.Dataset.DataTable
```

The result can be assigned to new variables as required. Note that when assigning *dstables* it may be necessary to explicitly use the copy command to avoid creating a handle to the existing instance and potentially corrupting the existing data.



4 Supporting Information and Model Setup

This section provides some background on the methods used in the quality control of data and the models included within CoastalTools.

4.1 Quality Checks

Once the Data QC option has been run for a data set, ‘qc’ is displayed in the QC column on the right-hand side of the Data tab. If the Data QC is re-run this applies the quality checks to the currently saved timeseries and overwrites the values. The following checks are currently run when Data QC is selected.

4.1.1 Waves

The CCO checks for Hs, Tz and Tp are as follows:

- Flag = 0 - all data pass
- Flag = 1 - either Hs or Tz fail, so all data fail
- Flag = 2 - Tp fail + derivatives
- Flag = 3 - Direction fail + derivatives
- Flag = 4 - Spread fail + derivatives
- Flag = 5 - Tp fail Jump test only (exclude on advice from Travis Morgan at CCO)
- Flag = 7 - Buoy adrift
- Flag = 8 - Sea Temperature fail
- Flag = 9 - Missing data (already assigned as NaN)

If any of flags 1-4 are set, the data are changed to NaN. In addition, the following checks are performed and again data that fail are set to NaN:

- ~ 0 > Direction < 360
- ~ Hs < Hmax
- ~ Hs-Tz steepness < 1/7 (using deep water steepness)
- ~ Hmax-Tp steepness < 1/7 (ditto)
- ~ Tp < MaxTp (defined in *Setup>Run parameters>Model constants* but the user is also prompted to confirm or adjust this value).

4.1.2 Water levels

Some BODC file formats have an error flag for bad data. This is written as a 9 when the timeseries is loaded. Running the Data QC for water levels sets data values with a 9 flag to NaNs. In addition, a time series plot is generated and the user is prompted to define minimum and maximum values.

Values outside this range are assigned NaN values.

For CCO tidal data the flags used are loaded with the data. The flags are used in the Data QC tool to remove suspect data. Flags 3, 4, 8 and 9 are set to NaN when Data QC is applied.

- Flag = 1 correct value
- Flag = 2 interpolated
- Flag = 3 doubtful
- Flag = 4 isolated spike or wrong value
- Flag = 5 correct but extreme
- Flag = 6 reference change detected
- Flag = 7 constant value
- Flag = 8 out of range
- Flag = 9 missing



4.2 Nearshore waves

For each time interval the model uses the offshore values of wave height, period and direction. If water levels are included, these are interpolated to the time intervals of the wave data. Wave refraction and shoaling is computed to either the specified inshore depth, or to the edge of the surf zone. For the latter, an iterative procedure is used to calculate the depth at which the inshore wave height based on refraction, shoaling and bed friction is equal to the depth limited breaking wave height. The model outputs a time series of inshore wave heights and the inshore depth used (which is either the depth at the specified bed level, or the edge of the surf zone). Wave period is assumed to remain constant.

Method	Specified inshore point	Edge of surf zone
	Inshore bed level = value	Inshore bed level = NaN
0 – no breaking	Refraction to inshore point	Not applicable
1 – SPM breaking on a slope	Refraction and breaking at inshore point	Refraction to breaker depth taken to be the edge of the surf zone
2 – La Roux method		
3 – Holmes/TCP method		

4.2.1 Refraction, Shoaling and Friction

Nearshore waves are calculated using linear wave theory and plane bed refraction and shoaling, as follows:

$$H_{si} = k_r k_s k_f H_{so}$$

where H_s is the significant wave height (inshore and offshore), k_r is the refraction coefficient, k_s is the shoaling coefficient, k_f is the friction coefficient. The coefficients are defined as follows:

$$k_r = \sqrt{\frac{\cos(\alpha_o)}{\cos(\alpha_i)}} \quad \text{and} \quad \alpha_i = \sin^{-1}\left(\frac{c_i}{c_o} \sin \alpha_o\right)$$

where α is the angle between wave crest and bed contour, and c is the wave celerity (both onshore (i) and offshore (o) respectively). The default method of computing refraction is to assume a plane bed and constant contour angles. This requires the depths at the offshore and inshore points and a shoreline angle. For this option set the Offshore and Shoreline contour angles to be the same, or leave the Offshore contour angle blank.

Two other options are possible.

- (i) An offshore contour angle is specified (see *Setup>Run parameters>Site parameters*) that is different to the shoreline angle. The inshore wave angle and refraction coefficient are calculated in increments from the source point to the target point. At each increment the depth and angle of the bed contour are adjusted as follows:

$$\delta\theta = \frac{|\theta_1 - \theta_0|}{nint} \quad \text{and} \quad \delta d = \frac{|d_1 - d_0|}{nint}$$

where θ is the contour angle (degTN), d is the depth of water and $nint$ is the number of intervals (=10). The number of intervals does influence the result (mainly for oblique wave angles). The value of $nint$ is hard coded at the head of the refraction.m function.

- (ii) A series of Offshore contour angles and Offshore bed levels are defined in *Setup>Run parameters>Site parameters* (e.g., Offshore bed levels of -13 -9 -6 and Offshore angles of 75 63 54). The number of bed levels and angles must be the same. The Shoreline angle and



Inshore bed level define the last (inshore) point. The inshore angle and refraction coefficient are computed by iterating through the specified values.

The shoaling coefficient is given by:

$$k_s = \sqrt{\frac{c_{go}}{c_{gi}}} \quad \text{where} \quad c_g = \frac{c}{2} \left(\frac{1 + \frac{4\pi d}{c \cdot T_p}}{\sinh \left(\frac{4\pi d}{c \cdot T_p} \right)} \right)$$

where d is the water depth, c is the wave celerity, c_g is the group celerity, T_p is the peak period.

The friction coefficient, k_f , is defined in [Setup>Run parameters>Site parameters](#).

The resultant nearshore wave height, H_{si} , is then checked for wave breaking.

4.2.2 Breaking wave height

The monochromatic wave breaking height, H_b , is calculated using one of the following methods, depending on the value set in [Setup>Run parameters>Site parameters](#) for the Breaker Height model:

- 0: simple ratio of 0.78 (maximum for a solitary wave)
- 1: breaking on a slope using equations (2-92 to 2-94) in the Shore Protection Manual (1984) based on the nearshore bed slope (see Section 4.2.3), water depth and wave period.

$$\frac{d_b}{H_b} = \frac{1}{b - \left(\frac{a H_b}{g T^2} \right)}, \quad \text{where } a = 43.75(1 - e^{19m}), \text{ and } b = \frac{1.56}{1 + e^{19.5m}}$$

- 2: breaking on a slope in a water depth one plunge length in front of a structure toe, using equations (2-92 to 2-94) in the Shore Protection Manual (1992)
- 3: as option 2 but modified for overtopping as detailed on Owen (1980). This is set automatically when the overtopping model is called.

The Wave Breaking Model to be used is defined in [Setup>Run parameters>Site parameters](#). Option '0' does not consider wave breaking. Options 1-3 use different methods to include wave breaking height, based on one of three methods: Options 1 and 3 make use of the Breaker Models defined above.

0. No breaking included in the model.
1. The depth limiting wave height, H_b , is estimated using one of the Breaker Height models as defined above. Note, the peak period used in accordance with the suggestion of Soulsby (1997, p69). When running the Nearshore wave model to calculate waves at the edge of the surf zone (bed level = NaN) only Breaker Height models 0 or 1 can be used.
2. The formulation of Le Roux (2007) as given in equation (25) of the paper.
3. Formulations for the wave breaking of the significant wave height as presented by Tucker et al (1983) and Holmes (pers. comm.). These provide upper and lower bounds to the change in significant wave height which are calculated as follows:

$$H_{sb} = \left(\frac{\beta^2 H_s^2 \left(1 - \exp \left(-2 \left(\frac{H_b}{H_s} \right)^2 \right) \left(1 + 2 \left(\frac{H_b}{H_s} \right)^2 \right) \right)}{1 - \exp \left(-2 \left(\frac{H_b}{H_s} \right)^2 \right)} \right)^{1/2} \quad \text{a lower bound (Holmes, pers.comm.)}$$



$$H_{sb} = \left(\beta^2 H_s^2 \left(1 - \exp \left(-2 \left(\frac{H_b}{H_s} \right)^2 \right) \right) \right)^{1/2} \text{ an upper bound (Tucker et al., 1983)}$$


The value of H_b is determined using the Breaker Model specified (as above). It is assumed that the lower bound applies for very flat slopes (1:200 and greater) and the upper bound for very steep shores (less than 1:50). Between these two a linear transition is applied. *It should be stressed that the basis for the limits and the transition have not been tested against real data.*

4.2.3 Shore profile

An idealised beach profile is used to define the slope as a function of depth. The profile is based on a linear slope (upper beach slope) between the beach crest level and mean tide level ($SWL=0\text{mOD}$) and an equilibrium profile out to deep water. This uses the Dean equation (Dean, 1977):


$$h = Ay^{2/3}$$

In the Dean formulation, A is a function of sediment fall velocity. Here it is derived from the depth 1km out from the mean tide level, which is input as a bed level (mOD and so a negative value). Alternatively, if a (y, z) coordinate is used to define an offshore point, this is used to determine A. The figure shows the case the profile and slope variation for a crest level of +5mOD, upper beach slope of 1:8 and a bed elevation at 1km of -6mOD.

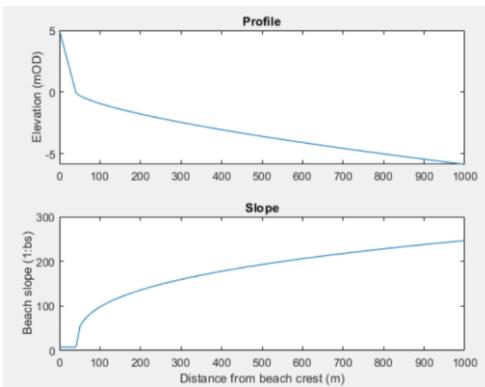

4.3 Deepwater waves

This option treats the selected wave data record as a “nearshore” data set and applies refraction and shoaling to a deepwater depth and a user specified offshore seabed angle (specified using the same convention as the Shoreline Angle above). The three methods of calculating refraction are the same as for Inshore waves (Section 4.2.1). The input dialogue defaults to a contour angle that is the same as the Offshore contour angle defined in the main UI ([Setup>Run parameters>Site parameters](#)) and a bed level of -100m.

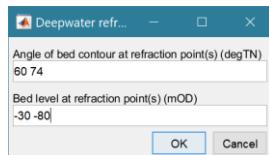

Changing the angle to a different value invokes the incremental method; option (i) in Section 4.2.1. Entering multiple angles and bed levels invokes option (ii) in Section 4.2.1. The deepwater wave angle and refraction coefficient are computed by iterating through the specified values.

4.4 Wind-waves

The Wind-wave hindcast model uses measured wind data and a set of defined fetch lengths for a given (usually nearshore) location. The latter are used to calculate the effective fetch, based on the method of Donelan (1985), or the method given in the Shore Protection Manual (USACE, 1984). Wave height and period are computed using the effective fetch lengths and the TMA spectrum (Hughes, 1984; Bouws *et al.*, 1985; 1987).

The TMA spectrum modifies the JONSWAP spectrum to take account of shallow water effects (depth saturation of the energy spectra). The JONSWAP spectrum is defined as:



$$S(\omega) = E(f) \exp \left[-1.25 \left(\frac{f_p}{f} \right)^4 \right] \gamma^{\Gamma}$$

where

$$\Gamma = \exp \left[-\frac{(f - f_p)^2}{2\beta^2 f_p^2} \right]; \quad E(f) = \frac{\alpha g^2}{(2\pi)^4 f^5}$$

f is the frequency, f_p is the peak frequency (frequency at which $S(f)$ is a maximum), α is the Phillips constant (sometimes called the equilibrium-range parameter), γ is the peak-enhancement factor (usually taken to be 3.3), and $\beta = 0.07$ for $f < f_p$ and $\beta = 0.09$ for $f > f_p$.

To correct for depth-dependent effects, Bouws et al. (1985) also manipulated the linear term $E(f)$ to reflect the loss of energy due to enhanced dissipation of shallow water. They replace $E(f)$ with $E_k(f, H)$, where:

$$E_k(f, H) = \frac{\alpha g^2 \varphi_k(\omega_H)}{(2\pi)^4 f^5}, \quad \varphi_k(\omega_H) = \frac{\left(k(\omega, H) \right)^{-3} \frac{\partial k(\omega, H)}{\partial f}}{\left(k(\omega, \infty) \right)^{-3} \frac{\partial k(\omega, \infty)}{\partial f}} \text{ and } \omega_H = 2\pi f \sqrt{h/g}$$

The solution of the partial derivatives is detailed in Kitaigorodskii et al. (1975) and Bouws et al. give the following approximate solution:

$$\begin{aligned} \varphi_k &\approx 0.5 \cdot \omega_H^2 && \text{for } \omega_H \leq 1 \\ \varphi_k &\approx 1 - 0.5 \cdot (2 - \omega_H)^2 && \text{for } 1 < \omega_H \leq 2 \\ \varphi_k &\approx 1 && \text{for } \omega_H > 2 \end{aligned}$$

The peak frequency is estimated from the peak period using the equation proposed by Donelan (1985):

$$T_p = 0.54 \cdot \frac{U^{0.54} F^{0.23}}{g^{0.77}}$$

Where U is the wind speed at 10m (m/s), F is the fetch length (m) and g is the acceleration due to gravity (m/s^2)

Integrating the energy spectrum and the second moment of the spectrum gives the significant wave height and mean zero crossing period.

$$\text{i.e. } m_n = \int_0^\infty \omega^n S(\omega) d\omega \quad \text{gives } H_{m_0} = 4\sqrt{m_0} \text{ and } T_z = \sqrt{m_0/m_2}$$

See Carter (1982) for further details.

Two methods are available for calculating the effective fetch, as proposed in the Shore Protection Manual and by Donelan (1985). They both modify the fetch along the mean wave direction to account for directional spreading.

$$effF = \frac{\sum F_i < \text{trigfn} > (\beta(\varphi_i - \theta))^n}{\sum < \text{trigfn} > (\beta(\varphi_i - \theta))^n}$$



Where F_i is the fetch length in the direction of φ_i , $\langle \text{trigfn} \rangle$ is a trigonometric function, θ is the wind direction, β is a constant and n is the spreading coefficient.

For the Donelan formulation, developed for wind-wave generation in lakes where the fetches can be long and narrow, the trigonometric function is hyperbolic secant $\text{sech}(z) = 1/(\cosh(z))$ and the constant is 2.28.

For the SPM method, the trigonometric function is a cosine and the constant is 1.

Typically, a spreading coefficient of $n=2$ is appropriate for locally generated wind-waves whereas an exponent of $n=10$ is more representative of developed sea states.

4.5 Wave power

The wave power or wave energy flux (J/ms) is calculated using linear wave theory as:


$$F = g \cdot \rho_w \cdot \frac{H_s^2}{8} \cdot C_g$$

Where ρ_w is the density of water (kg/m^3) and g is the acceleration due to gravity (m/s^2).

The option from the *Run > Wave properties > Wave Power* menu uses nearshore waves and requires the nearshore wave model to have been run (Sections 3.5.1 and 4.2). The wave power for the input wave data (e.g. buoy location) or offshore point can be calculated using the *Run > Derive Output* menu option (Section 3.5.4). The inputs required are wave height, H_s , wave period, T_p , water depth, d , density of water, and acceleration due to gravity. The water depth record needs to be at the same sampling intervals as the waves. This can be created by first subsampling the record at time intervals defined by another record (use Function button on Derive Output UI to access this option). Assign the water level time series to be used the X button and set the ‘method’ to ‘linear’. The user is prompted to select the time series to define the new time intervals and the wave data to be used should be selected. This establishes and new water level timeseries with the same number of records as the wave timeseries. Using the Derive Output UI, assign wave heights to the X button, wave periods to the Y button, and the newly created water levels to the Z button. Then use the following function call:

`wave_energyflux(x, y, z+depth at the site, water density, g)`

Note that the water levels, z , are combined with the *depth at the site* (e.g., buoy location) which should be measured relative to the same datum that is being used for the water levels. This may be relative to National/Ordnance Datum, or Chart Datum, depending on the source data.

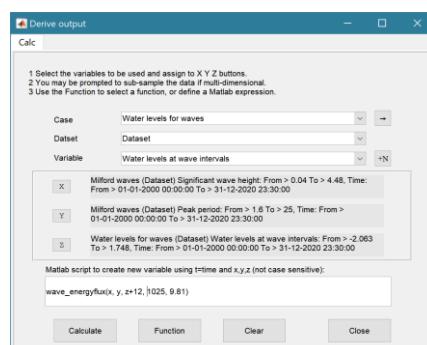

4.6 Runup (setup & wash)

The runup is based on the formulation of Stockdon et al (2006) Their equation combines setup ($\langle \eta \rangle$), and swash made up of incident, S_{inc} and infragravity, S_{ig} components to give the 2% runup level as:

$$R_2 = 1.1 \left\{ 0.35\beta_f (H_o L_o)^{1/2} + \frac{[H_o L_o (0.56\beta_f^2 + 0.004)]^{1/2}}{2} \right\}$$



Where β_f is the foreshore slope, H_o is the deep water wave height and T_o is the deep water wave period (assumed to be the peak period). The runup elevation is the runup added to the water level time series. The algorithm takes the measured wave height and water depth at the buoy and applies the shoaling coefficient to get the deep water wave height (depth of 50m used). The resultant deep water wave height and wavelength (obtained from the peak period and wave celerity based on linear wave theory) are then used in the above equation.

In addition, runup for gravel beaches is also computed using the method of Poate et al (Poate *et al.*, 2016)

$$R_2 = 0.33\sqrt{\beta_f} T_p H_s$$

Where, as with the Stockdon formula, β_f is the foreshore slope, H_s is the deep water wave height and T_p is the peak wave period.

4.7 Littoral drift

Four formulations for calculating littoral drift rates are available. The inputs used are the inshore wave parameters and the site parameters defined in *Setup>Run parameters>Site parameters*. When the inshore depth is set to NaN this function uses an iterative procedure to find the depth limited wave conditions at the edge of surf zone. Alternatively, the inshore depth can be specified, see Section 4.2.

The available options for the littoral drift formula are:

- 1) the US Army Corps CERC formula ((1984). The drift coefficient can be defined in *Setup>Run parameters>Site parameters* (and is only applied to this formulation).
- 2) the SANDS formula, this is essentially the CERC with adjustments for wave breaking and the group celerity (Soulsby, 1997, p194).
- 3) the Kamphuis formula, to take account of grain size and beach slope (Kamphuis, 1991)
- 4) the Damgaard and Soulsby formula for shingle (Soulsby, 1997, p195).

The convention used for drift volumes is that positive values are from left to right when looking at the shore from the sea.

See also the function for the calculation of littoral drift volumes using littoraldriftstats in *Run>Derive Output* (Section 4.17).

4.8 X-shore Transport

Cross-shore transport is estimated using the method proposed by Bailard and Inman (Bailard and Inman, 1981). They derive an equation for the cross-shore transport rate, Q_c , comprising bedload and suspended load components, of the form:

$$Q_c = Q_b + Q_s = \rho C_d u_m^3 \left\{ \frac{\varepsilon_b}{\tan \phi} \left(\psi_1 + \frac{2}{3} \delta_u - \frac{\tan \beta}{\tan \phi} u_3^* \right) + \frac{u_m}{w_s} \varepsilon_s \left(\psi_2 + \delta_u u_3^* - \frac{u_m}{w_s} \varepsilon_s u_5^* \tan \beta \right) \right\}$$

where $\varepsilon_b=0.21$, $\varepsilon_s=0.025$, C_d is the drag coefficient (which Bailard takes as ~0.005), w_s is the sediment fall velocity (m/s), ϕ is the angle of repose, β is the beach slope, u_m is the near bed velocity (m/s), ρ is the water density (kg/m^3), ρ_s is the sediment density (kg/m^3) and δ_u , ψ_1 , ψ_2 , u_m , and u_3^* , u_5^* are cross-shore velocities (positive onshore). These cross-shore velocities are presented in (Alexandrakis and Poulos, 2014), based on (Bailard, 1981; 1982):

$$\begin{aligned}\psi_1 &= 0.00303 - 0.00144H_s \\ \psi_2 &= 0.00603 - 0.00510H_s \\ \delta_u &= 0.0 - 0.00157H_s \\ u_m &= 0.319 + 0.403H_s \\ u_3^* &= 0.00548 + 0.000733H_s \\ u_5^* &= 0.015 + 0.00346H_s\end{aligned}$$


in which H_s is the significant wave height. Note the original paper presented the equation in units of cm/s and the above equation are in units of m/s. The equation for δ_u has also been modified to correctly represent the data presented in the source paper. The cross-shore transport rate has units of m³/s and is positive in the onshore direction. For an example of application see Masselink *et al* (2008).

4.9 Overtopping

4.9.1 Structure Overtopping

The volume of water overtopping a sea wall, or beach crest can be estimated using the overtopping formula proposed by Owen (1980). This can take account of upper and lower slopes, a berm and the wall or beach ‘roughness’ (essentially a friction or dissipation coefficient). The definition sketch, for the variables used, is shown below. Minimum definition requires a crest and toe level, relative to the datum used in the water level data set, and the lower wall slope (input as m for a slope of 1:m). Specifying a berm level with zero berm width allows a compound slope with different upper and lower wall slopes. Strictly this model is limited to slopes in the range 1:1 to 1:5 and berm widths from 0-80m at depths of 0 to 4m below swl (see Owen, 1980 for details). When the berm is above the swl a compound slope is used.

Figure 4 – Seawall definition sketch (Owen, 1980)

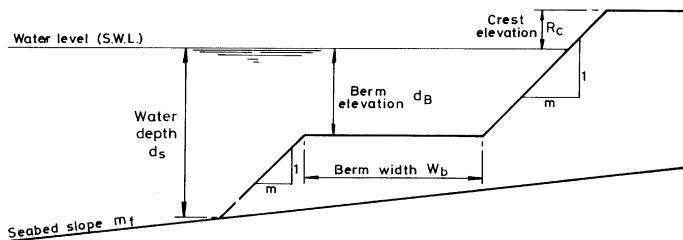

4.9.2 Beach Overtopping

The theoretical model is similar to the one developed by Owen and subsequently evolved as part of EuroTop (Van der Meer *et al.*, 2018) as proposed by Stokes *et al.* (2021) and is specific to gravel beaches. The 2% runup, $R_{2\%}$, is estimated using the equation of Poate *et al.* (2016), as detailed in the section on Runup above. The dimensionless freeboard exceedance is then given by:

$$R^* = (R_{2\%} - Z_c) / H_s$$

where Z_c is the crest elevation, H_s is the wave height as defined for overtopping (see option 3 for the Breaker Height model in Section 4.2.2 above).



The normalised overtopping discharge is given by:

$$Q^* = 8e - 5 \cdot \exp(3.1 \cdot R^*)$$

Such that the discharge in m³/s-per m run of beach is given by:

$$Q = Q^* \cdot \sqrt{gH_s^3}$$

The models output includes the overtopping discharge, Q, the 2% runup, R_{2%}, and the elevation of the 2% runup, zR_{2%} = R_{2%} + Z_{swl}.

4.10 Iribarren number and beach type

The Iribarren wave number is calculated as follows:

$$Ir = \frac{\tan(\alpha)}{\sqrt{H/L_o}}$$

Where α is the beach slope, H is the wave height and L_o is the deep-water wave length. The function is passed the nearshore wave conditions (see Section 4.2) and calculates the wave length from $gT_p^2/2\pi$, where T_p is the peak wave period. The function also returns Breaker Type based on Ir where (SPM, USACE, 1984):

- Ir>2: Breaker Type = 3; surging
- Ir<=2 & Ir>0.4: Breaker Type = 2; plunging
- Ir<=0.4: Breaker Type = 1; spilling

4.11 Tides

Measured wave data can be used to derive the tidal constituents, or to create a tide only water level record for a chosen period of time using *Run>Tidal analysis>Analysis* and *Run>Tidal analysis>Reconstruction* (see Section 3.5.3). These make use of the functions from U-Tide, developed by Daniel Codiga (2011). In this implementation the function *ut_solv.m* is used to derive constituents from water level time series and the function *ut_reconst.m* is used to generate tide level time series from a set of constituents. When analysing a water level time series the predicted time series can be saved along with the constituents (saved to the class property *Constituents*). To recreate records the user can select from the analysed constituents available. [Note: there is currently no provision to input constituents manually]. The paper by Codiga (2011) provides a detailed explanation of the methods being used and a range of options that have not been implemented within CoastalTools. The implementation provided is sufficient for extracting surges from water level data and to patch gaps in water level records, with the tidal record, for use in models such as the Nearshore Wave model. The calls used are as follows:

Input variables:

```
lat = [];  
cnstid = 'auto';  
options = {'NodsatNone','White','NoDiagn'};
```

Function call:

```
coef = ut_solv(time,data,[],lat,cnstid,options{:});
```

Input variables:

```
options = {};  
Function call: predicted = ut_reconstr(time,coef,options{:});
```



4.12 Beach type

The Beach Type is determined from dimensionless fall velocity (Ω) for the grain size defined in Site Parameters and the selected wave time series as:

$$\Omega = \frac{H_s}{w_s T_p}$$

Where H_s is the significant wave height, T_p the peak period and w_s is the settling velocity obtained using eqn (102) in 'Dynamics of marine sands', (Soulsby, 1997). The dimensionless fall velocity can be used to identify beach type based on the following categories (Wright and Short, 1984):

$\Omega \geq 6$: dissipative

$\Omega < 6$ & $\Omega > 1$: intermediate

$\Omega \leq 1$: reflective

4.13 Volumes and shoreline position

When calculating volumes (cross-sectional area per metre run of each), a defining rectangle is used as the control area (see Section 3.5.2). Within this control area the following parameters are calculated:


Volume: $V = \int z' dx'$

Horizontal centroid: $X_1 = \int x' z' dx' / V$ (first moment in x)

Vertical centroid: $Z_1 = \int x' z' dz' / V$ (first moment in z)


Second moment distance: $X_2 = (\int x'^2 z' dx' / V)^{1/2}$ (legacy – no longer output)

Where x and z are the raw profile data. x' is then the horizontal distance from the origin of the control area and z' is the elevation above the same origin (as defined by x_{min} and z_{min}). For each profile, the points on the profile nearest the defined minimum x or minimum z are found and used to define the two end points for that profile.

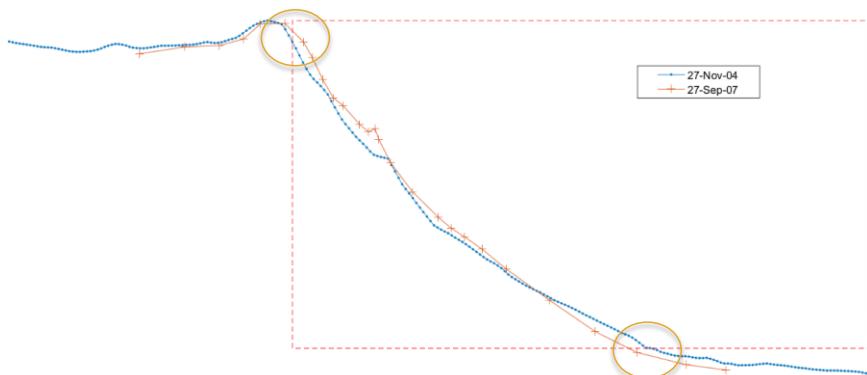

These values are then subtracted from the profile x-z co-ordinates, such that

$$x' = x - x_{min}; \quad x' \geq 0 \quad \text{and} \quad z' = z - z_{min}; \quad z' \geq 0$$

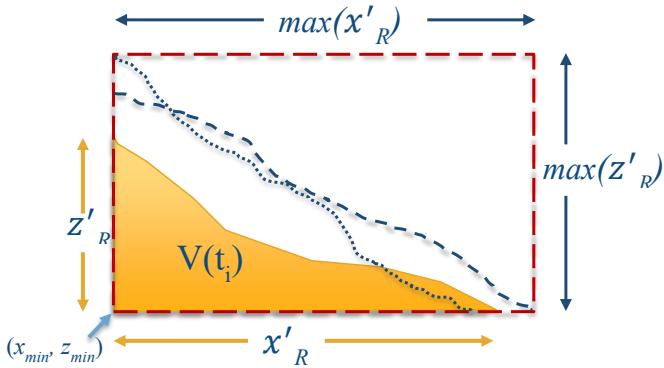

The range of x and z is then defined as: $L_x = \max(x')$ and $L_z = \max(z')$

These are used to define non-dimensional variables $x''=x'/L_x$ and $z''=z'/L_z$. The non-dimensional moments are then:

$$\text{Non-dimensional volume:} \quad m_0 = \int z'' dx''$$

$$\text{Non-dimensional x centroid:} \quad x_1 = \int x'' z'' dx'' / m_0$$



$$\text{Non-dimensional z centroid:} \quad z_1 = \int x'' z'' dz'' / m_0$$

$$\text{Non-dimensional second moment arm:} \quad x_2 = (\int x''^2 z'' dx'' / m_0)^{1/2} \quad (\text{legacy - no longer output})$$

The beach slope (1:m) for each profile is defined as L_x/L_z .

The values saved as time series are V , m_0 , x_1 , z_1 and beach slope. The values reported to the *Calcs/Volumes* tab are V , m_0 , L_x , L_z , X_1 and Z_1 .

The Shoreline position follows a similar procedure and finds the points on each profile nearest the defined elevation and the upper and lower bounds. The shoreline distance is the interpolated x-distance to the defined elevation and the slope is the mean gradient of the profile between the upper and lower bounds. The plots show volume (left) shoreline (right) selection plots:

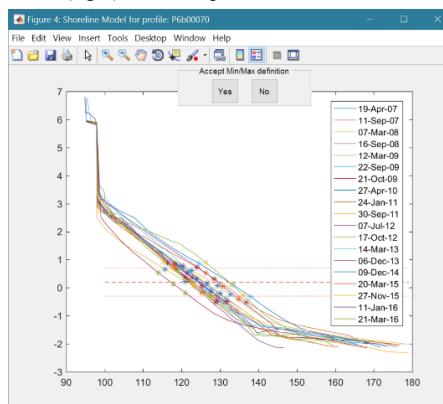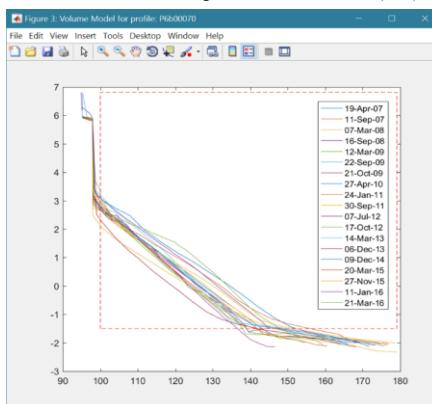



The **Setup>Shoreline>Load data**: provides the option to load a time series of positions (distance values from a back-beach datum measured at some elevation on the beach. This provides an equivalent data set to the shoreline position calculated from the beach profiles as outlined above.

4.14 Shoreline Change

The option to compute the change in a shoreline uses the method for finding the shoreline position that is used in the profile analysis tools, see Section 4.13, based on the user defined shoreline elevation.

4.15 Crenulate Bay

Crenulate bays (also known as logspiral or zeta) where first reported by (Yasso, 1965). This idea was developed into a simple model by Silvester who wrote numerous papers and eventually a book (Silvester, 1985; Hsu *et al.*, 1989; Silvester and Hsu, 1997; Hsu *et al.*, 2010). The option in CoastalTools implements the method proposed in (Hsu and Evans, 1989) and is run as one of the Beach analysis tools (see Section 3.5.2).

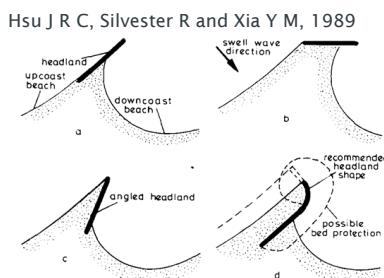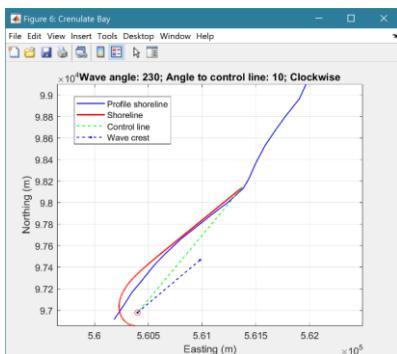

By defining a control point, and end point for the control line, along with the wave crest angle and the angle the wave crest makes with the control line, the bay formation is plotted against the selected shoreline. Where the profiles provide for multiple time steps from which to construct the shoreline at a user defined elevation, the mean shoreline position is used (solid blue line in the plot). The Bay can expand from the control point in a clockwise or anticlockwise manner. The combination of control line definition, wave angle and direction of rotation should be sufficient to obtain a fit to most shorelines where the crenulate bay concept is applicable.

4.16 Wave Spectra

Measured wave spectrum data can be loaded and analysed using the options for Spectrum Plots (Section 3.6.4) and used with a spectral transfer table to derive inshore spectra and wave conditions. The spectral transfer needs to be generated using the WaveRayModel App and imported into the CoastalTools project.

4.16.1 Wave spectrum models

An excellent summary of the most common wave spectra in common use is provided by Carter (Carter, 1982). The four spectra included are Bretschneider open ocean, Pierson-Moskowitz fully developed, JONSWAP fetch limited, and TMA shallow water. These are detailed below:

Bretschneider open ocean

The Bretschneider spectrum was developed to represent open ocean wave conditions and the spectral energy as a function of frequency, f , has the following form:



$$S(f) = 0.31H_s^2 \frac{1}{f_p} \left(\frac{f}{f_p} \right)^{-5} \exp \left(-1.25 \left(\frac{f}{f_p} \right)^4 \right) \quad (10)$$

where H_s is the significant wave height, f_p , is the peak frequency of the spectrum (I/T_p).

Pierson-Moskowitz

The data for the spectrums of fully developed seas for wind speeds from 20 to 40 knots (10.29 to 20.58 m/sec), were used to identify a power spectrum for fully developed seas (Pierson Jr. and Moskowitz, 1964). The spectral energy as a function of frequency, f, has the following form:

$$S(f) = \frac{\alpha g^2}{(2\pi)^4 f^5} \exp \left(-\frac{5}{4} \left(\frac{f}{f_p} \right)^4 \right) \text{ where } \alpha = 0.0081 \quad (11)$$

Given the significant wave height this can be written as:

$$S(f) = 5.10^{-4} f^{-5} \exp \left(-2.10^{-3} / H_s^2 f^4 \right) \quad (12)$$

Given the peak wave period this can be written as:

$$S(f) = 5.10^{-4} f^{-5} \exp \left(-1.25 / (T_p f)^4 \right) \quad (13)$$

JONSWAP fetch limited

The JONSWAP formulation is used to represent the deepwater spectrum describes developing seas, which is appropriate for most coastal sites around the UK and has following functional form:

$$S(f) = \frac{\alpha g^2}{(2\pi)^4 f^5} \exp \left(-\frac{5}{4} \left(\frac{f}{f_p} \right)^4 \right) \gamma^q \quad (14)$$

where $q = \exp \left(-\frac{(f-f_p)^2}{2\sigma^2 f_p^2} \right)$

and σ is 0.07 when $f < f_p$ and 0.09 when $f > f_p$, α is a constant obtained either from measured offshore spectra, or by parameterisation, f_p , is the peak frequency of the spectrum and g is the acceleration due to gravity. Comparing equations (10) and (11) it is clear that the only differences are the additional term γ^q and the definition of α . Using the integral moments of the spectrum the value of α can be estimated from H_s using the following expression:

$$\alpha = \frac{H_s^2 (2\pi)^4 f_p^4}{16g^2 I_0(\gamma)} \quad (15)$$

in which $I_0(\gamma)$ is the zero moment integral. Typically, γ is given a value of 3.3 but can range from 1-7.

When using wind inputs the values of α and γ are given by:



$$\alpha = 0.076 \left(\frac{gF}{U^2} \right)^{-0.22} \quad \gamma = 7.0 \left(\frac{gF}{U^2} \right)^{-0.143} \quad (16)$$

If γ is given a value of NaN , the value is estimated using the values of T_p and T_2 and the integral values given in Table 1 of MIAS Publication No.4, 1982 (Carter, 1982).

TMA shallow water

The TMA spectrum modifies the JONSWAP spectrum to take account of shallow water effects (depth saturation of the energy spectra). To correct for depth-dependent effects, Bouws et al. (1985) also manipulated the linear term $S(f)$ to reflect the loss of energy due to enhanced dissipation of shallow water. They replace $S(f)$ with $S_k(f, h)$, where h is the water depth:

$$S_k(f, H) = \frac{\alpha g^2 \varphi_k(\omega_h)}{(2\pi)^4 f^5}; \quad \varphi_k(\omega_h) = \frac{\left[(k(\omega, h))^{-3} \frac{\partial k(\omega, h)}{\partial f} \right]}{\left[(k(\omega, \infty))^{-3} \frac{\partial k(\omega, \infty)}{\partial f} \right]} \text{ and } \omega_h = 2\pi f \sqrt{h/g} \quad (17)$$

in which k is the wave number ($1/L$) and other variables are as defined for the JONSWAP spectrum. The solution of the partial derivatives is detailed in Kitagorodskii et al. (1975) and Bouws et al. give the following approximate solution:

$$\begin{aligned} \varphi_k &\approx 0.5 \cdot \omega_h^2 && \text{for } \omega_h \leq 1 \\ \varphi_k &\approx 1 - 0.5 \cdot (2 - \omega_h)^2 && \text{for } 1 < \omega_h \leq 2 \\ \varphi_k &\approx 1 && \text{for } \omega_h > 2 \end{aligned} \quad (18)$$

Such that: $S_k(f, H) = S(f) \cdot \varphi_k$ where $S(f)$ is as defined for the JONSWAP spectrum.

When using wind input the peak frequency is estimated from the peak period using the equation proposed by Donelan (1985):

$$\begin{aligned} T_p &= 0.54 \cdot \frac{U^{0.54} F^{0.23}}{g^{0.77}} \\ k_p &= \frac{2\pi U^2}{gL_p}; \quad \alpha = 0.078 k_p^{0.49} \quad \text{and} \quad \gamma = 2.47 k_p^{0.39} \end{aligned} \quad (19)$$

where U is the wind speed at 10m (m/s), F is the fetch length (m), g is the acceleration due to gravity (m/s^2) and L_p is the wavelength of the peak period. If a value of $\gamma > 0$ is specified this is used instead. When using wave inputs:

$$\alpha = \left(\frac{\pi H_{mo}}{L_p} \right)^2 \quad \gamma = 6614 \left(\frac{H_{mo}}{4L_p} \right)^{1.59} \quad (20)$$

Again, if a value of $\gamma > 0$ is specified this is used instead.

The wavelength is calculated using the celerity of each frequency for the average depth along the rays. To compute the offshore spectrum the offshore depth is used to determine the saturation (Eq.17), whereas the minimum depth is used to determine the inshore spectrum. In all cases the depth is based on the weighted value for all rays using the directional spreading



function (Eq.19), to weight the relevant depth value for each ray based on the mean direction of the wave condition.

4.16.2 Direction spreading

Two methods are available for calculating the effective fetch, as proposed in the Shore Protection Manual and by Donelan (1985).

The functional form of the cosine directional distribution used in the SPM is:

$$G(\theta) = \frac{\cos^n(\beta(\theta - \bar{\theta}))}{\int_{-\pi/2}^{\pi/2} \cos^n(\beta(\theta - \bar{\theta})) d\theta} \quad (21)$$

where $\bar{\theta}$ is the mean direction of the spectrum, β is a constant and the exponent n is typically in the range 2-10. An exponent of 2 corresponds to a broad banded distribution which can be associated with locally wind-generated waves, whilst a value of 10 corresponds to a relatively narrow-banded distribution which can be associated with seas generated over a long fetch.

For the SPM method, the trigonometric function is a cosine and the constant, β , is 1.

For the Donelan formulation, developed for wind-wave generation in lakes where the fetches can be long and narrow, the trigonometric function is hyperbolic secant $\operatorname{sech}(z) = 1/(\cosh(z))$ rather than a cosine and the constant, β , is 2.28.

4.16.3 Wave buoy directional spreading

The SPT file format from the Datawell wave buoy returns spectral energy and directional statistics as a function of 64 frequency bins. The direction properties available in the file are the mean direction, spread, skew and kurtosis. Equations 14.2.24 and 14.2.27 in the Datawell Waves5 Reference Manual, 2023, p224-5 describe how to use these parameters to reproduce an approximation of the directional spreading function. Kuik *et al.* (1988) works with a similar set of parameters, to those included in the SPT Format output file, namely the mean direction *Dir*, the directional spread *Spr*, the skewness

Skew and the kurtosis *Kurt*. These parameters can also be used to compute the centred Fourier

Coefficients as follows:

$$\begin{aligned} \theta_0 &= Dir \cdot \frac{\pi}{180} \\ m_1 &= 1 - \frac{\sigma^2}{2}, \text{ where } \sigma = Spr \cdot \frac{\pi}{180} \\ m_2 &= \frac{1}{2} (Kurt \cdot \sigma^4 - 6 + 8m_1) \\ n_2 &= -Skew \left(\frac{1}{2} (1 - m_2) \right)^{\frac{3}{2}} \end{aligned} \quad (22)$$

The directional distribution can then be described in terms of these centred Fourier coefficients as follows:

$$D(\theta, f) = \frac{1}{\pi} \left\{ \frac{1}{2} + m_1 \cos(\theta - \theta_0) + m_2 \cos 2(\theta - \theta_0) + n_2 \sin 2(\theta - \theta_0) \right\} \quad (23)$$



4.17 Derive Output

The *Run> Derive Output* option allows the user to make use of the data held within App to derive other outputs or, pass selected data to an external function (see Section 3.5.4). The equation box can accept t, x, y, z in upper or lower case. Time can be assigned to X, Y, or Z buttons, or simply included in the equation as t (as long as the data being used in one of the variables includes a time dimension). Each data set is sampled for the defined data range. If the data set being sampled includes NaNs, the default is for these to be included (button to right of Variable is set to '+N'). To exclude NaNs press the button so that it displays '-N'. The selection is based on the variable limits defined whenever a variable is assigned to X, Y or Z using the X, Y, Z buttons.

The equation string entered in the UI is used to construct an anonymous function as follows:

```
heq = str2func(['@(t,x,y,z,mobj)',inp.eqn]); %handle to anonymous function  
[varout{:}] = heq(t,x,y,z,mobj);
```

or when using dstables:

```
heq = str2func(['@(dst,mobj)',inp.eqn]); %handle to anonymous function  
[varout{:}] = heq(dst,mobj);
```

This function is then evaluated with the defined variables for t, x, y, and z and optionally mobj, where mobj passes the handle for the main UI to the function. Some functions may alter the length of the input variables (x, y, z, t), or return more than one variable. In addition, the variables selected can be sub-sampled when each variable is assigned to the X, Y, or Z buttons. The dimensions of the vector or array with these adjustments applied need to be dimensionally correct for the function being called. This may influence how the output can be saved (see Section 4.17.2).

If the function returns a single valued answer, this is displayed in a message box, otherwise it is saved, either by adding to an existing dataset, or creating a new one (see Section 4.17.2 and 3.5.4).

NB1: functions are forced to lower case (to be consistent with all Matlab functions), so any external user defined function call must be named in lower case.

Equations can use functions such as diff(x) - difference between adjacent values - but the result is n-1 in length and may need to be padded, if it is to be added to an existing data set. This can be done by adding a NaN at the beginning or the end:

e.g.: [NaN;diff(x)]

NB: the separator needs to be a semi-colon to ensure the correct vector concatenation. Putting the NaN before the equation means that the difference over the first interval is assigned to a record at the end of the interval. If the NaN is put after the function, then the assignment would be to the records at the start of each interval.

Another useful built-in function allows arrays to be sub-sampled. This requires the array, z, to be multiplied by an array of the same size. By including the dimensions in a unitary matrix, the range of each variable can be defined. For a 2D array that varies in time one way of doing this is:

```
>> [z.*repmat(1, length(t), length(x), length(y))]
```

NB2: the order of the dimensions t, x, y must match the dimensions of the array, z.

NB3: When using Matlab compound expressions, such as the above sub-sampling expression, the expression must be enclosed in square brackets to distinguish it from a function call.



Adding the comment %time or %rows, allows the the row dimension to be added to the new dataset. For example if x and y data sets are timeseries, then a Matlab™ expresion, or function call, can be used to create a new time series as follows:

```
x^2+y %time
```

4.17.1 Calling an external function

The Derive Output UI can also be used as an interface to user functions that are available on the Matlab search path. Simply type the function call with the appropriate variable assignment and the new variable is created. (NB: the UI adopts the Matlab convention that all functions are lower case). Some examples of functions provided in CoastalTools are detailed in Section 4.17.3.

The input variables for the function must match the syntax used for the call from the Derive Output UI , as explained above. In addition, functions can return a single value, one or more vectors or arrays, or a dstable (see Section 4.17.2). If the variables have a dimension (e.g., *time*) then this should be the first variable, with other variables following. If there is a need to handle additional dimensions then use the option to return a dstable.

If there is no output to be passed back, the function should return a variable containing the string 'no output' to suppress the message box, which is used for single value outputs (numerical or text).

An alternative when calling external functions is to pass the selected variables as dstables, thereby also passing all the associated metadata and RowNames for each dataset selected. For this option up to 3 variables can be selected and assigned to the X, Y, Z buttons but they are defined in the call using *dst*, for example:

```
[time,varout] = myfunction(dst, 'usertext', mobj);  
dst = myfunction(dst, 'usertext', mobj);
```

where '*usertext*' and *mobj* are call strings and a handle to the model, respectively.

This passes the selected variables as a struct array of dstables to the function. Using this syntax, the function can return a dstable or struct of dstables, or as variables, containing one or more data sets.

4.17.2 Input and output format for external functions

There are several possible use cases:

4.17.2.1 Null return

When using a function that generates a table, plots a figure, or some other stand alone operation, where the function does not return data to the main UI, the function should have a single output variable. The output variable can be assigned a text string, or 'no output', if no user message is required, e.g.:

```
function res = phaseplot(x,y,t,labels)  
...  
res = 'Plot completed'; %or res = 'no output'; for silent mode  
...  
end
```

4.17.2.2 Single value or single variable output

For a function that may in some instances return a single value this should be the first variable being returned and can be numeric or text. Otherwise, the row names and variable, which must be the same length, are returned as the first and second outputs, respectively. e.g.:



```
function [qtime,qdrift] = afunction(qs,tdt,varargin)
    ...
    %Case 1 - return time and drift
    qdtime = array1;
    qdrift = array2;
    %Case 2 - return summary value
    qtime = mean(array2); %return single value
    %Case 3 - return summary text
    qtime = sprintf('Mean drift = %.1f',mean(array2)); %return text string
    ...
end
```

4.17.2.3 Using variables

If only one variable is returned (length>1), or the first variable is empty and is followed by one or more variables, the user is prompted add the variables to:

- i) Input Cases – one of the datasets used in the function call;
- ii) New Case – use output to define a new dataset;
- iii) Existing Case – add the output to an existing dataset (data sets for the selected existing case and the data being added must have the same number of rows).

In each case the user is prompted to define the properties for each of the variables.

Note that variable names and descriptions must be unique within any one dataset.

```
function y = moving(x,m,fun)
    %a single variable is returned with no rows
    y is a vector or array
    ...
end

or

function [x,y,z] = afunction(x,m,fun)
    %multiple variables returned but the first variable is empty
    x=[ ];
    y and z are a vectors or arrays
    ...
end
```

When the first variable defines the rows of a table and subsequent variables the table entries, all variables must be the same length as the first dimension. This is treated as a new Case and the user is prompted to define the properties for each of the variables.

```
function [time,x,y,z] = afunction(wl,t,issave,isplot)
    %first variable is row dimension followed by additional variables
    x,y,z are vectors or arrays
    ...
end
```



4.17.2.4 Using dstables

When the output has multiple variables of a defined type it can be more convenient to define the dsproperties within the function and return the data in a dstable. This avoids the need for the user to manually input the meta-data properties. In addition, if the function generates multiple dstables, these can be returned as a struct, where the struct fieldnames define the Dataset name.

```
function dst = tidalrange(wl,t,issave,isplot)
    %dst is a dstable with variables, dimensions and dsproperties assigned
    %as required, or a struct of dstables with the struct fieldnames defining
    %each Dataset.
    dst = ...
    ...
end
```

Similarly, if the input is also using dstables, the syntax is as follows:

```
function dst_out = myfunction3(dst_in,'usertext',mobj)
    %dst_in is one or more input dstables, 'usertext' is some additional
    %instruction to the function and mobj is a handle to the model
    %allowing access to other datasets. dst_out is either a dstable, or a
    %struct of dstables with the struct fieldnames defining each Dataset.
    dst = ...
    ...
end
```

4.17.2.5 Returning variables or dstables with additional metadata

If there is a need to pass additional metadata along with the results then the results should be returned as a struct. The struct should have a field ‘meta’ and is itself a struct with fields ‘caserec’ and ‘desc’ to hold selected cases and additional metadata text. The other field will then be either ‘var’ or ‘dst’. If a variable is being returned this should be a cell containing any of the formats explained in Section 4.17.2.3. If a dstable, or struct of dstables, is being returned, these follow format explained in Section 4.17.2.4. For example, to pass time and a variable with metadata the function could be as follows:

```
function output = afunction(inp)
    %output is a struct with fields 'var' and 'meta'
    %put new time and variable into a cell to match the output for default
    %derive output functions that return [time,variable] which is captured
    %as a cell array in muiUserModel.callfcn_dst using varout.
    ...
    outvar = {newtime,newvar};
    metadata.caserec = caserec;
    metadata.desc = sprintf('Times obtained from %s',dst.Description);
    output = struct('var',{outvar}, 'meta',metadata);
end
```

4.17.2.6 Saving additional model parameters

When saving function results as dstable, it is also possible to save additional parameters as part of the table. The following example puts a table of summary statistics in the dstable UserData property.



```
function dst = tidalrange(wl,t,issave,isplot)
.....
dsp = setDSproperties();
results = {R,hwl,lwl};
dst = dstable(results{:}, 'RowNames',rt,'DSproperties',dsp);
%Put fit parameters in UserData
dst.UserData = summary_stats_table;
...
end
```

These results are then accessible using the user data button, when accessing the data set properties from the Data or Model tabs (see Section 3.8).

Adding functions to the Function library

To simplify accessing and using a range of functions that are commonly used in an application, the function syntax can be predefined in the file functionlibrarylist.m which can be found in the utils folder of the muitoolbox. This defines a struct for library entries that contain:

- fname - cell array of function call syntax
- fvars - cell array describing the input variables for each function
- fdesc - cell array with a short description of each function

New functions can be added by simply editing the struct in functionlibrarylist.m, noting that the cell array of each field in the struct must contain an entry for the function being added. In addition a sub-selection of the list can be associated with a given App based on the class name of the main UI. To amend the selection included with an App or to add a selection for a new App edit the ‘switch classname’ statement towards the end of the function.

The Function button on the Derive Output UI is used to access the list, select a function and add the syntax to the function input box, where it can be edited to suit the variable assignment to the XYZ buttons.

4.17.3 Pre-defined functions

The following examples are provided within CoastalTools, where the entry in the UI text box is given in Courier font and X, Y, Z, refer to the button assignments. Some useful examples primarily for timeseries data include:

1. **Moving Average.** There are several moving average functions available from the Matlab Exchange Forum, such as moving.m. The call to this function is:
`moving(x, n, 'func')`, where x is the variable to be used, n specifies the number of points to average over and 'func' is the statistical function to use (e.g. mean, std, etc). If omitted the *mean* is used. Add %time to the call, to include time in the output dataset.
2. **Moving average (or similar) of timeseries,** over defined duration, advancing at defined interval
`movingtime(x, t, tdur, tstep, 'func')`, where x is the variable to be used and t the associated datetimes (defined by variable selection), *tdur* is the duration over which to apply the statistic, *tstep* is the interval to advance the start time for the averaging period and 'func' is the statistical function to use (e.g. mean, std, etc). If omitted the *mean* is used. *tdur* and *tstep* are both duration character strings of form '2.5 d'. Any of the following duration intervals can be used: y, d, h, m, or s. Returns a time series based on the defined *tstep*, where the time used is for the



beginning of each stepping interval, i.e. every *tstep* from the start of the record to the nearest interval that is less than *tdur* from the end of the record.

3. **Down-sampling a time series.** This allows a timeseries to be resampled at a different interval (that must be less than the source timeseries). The call to this function is:

```
downsample(x, t, 'period', 'method'), where x is the variable to be resampled, time is the associated time for that variable, period can be 'year', 'month', 'day', 'hour', 'minute', 'second', and method can be any valid function call such as 'mean', 'std', etc. The 'period' is required but the 'method' is optional and if omitted the mean is used.
```

For timeseries with gaps the 'nanmean' function is particularly useful but requires the Statistics toolbox.

4. **Interpolate and add noise.** To infill a record with additional points and, if required, add some random noise to the interpolated values. This is called using:

```
interpwithnoise(x, t, npad, scale, method, ispos), where X is the variable, t is time, npad is the number of points to add between the existing data points, scale determines the magnitude of the random noise (a value of 0 results in an interpolated record with no noise), method is the Matlab algorithm used for the interpolation (the default is linear) and ispos is a true/false flag which sets negative values to zero if true.
```

5. **Subsample one record at the time intervals of another record (e.g. subsample** water levels to be at the same intervals as the wave data). Function is:

```
subsample_ts(X, t, mobj, 'method'), where X and t are the variable to be subsampled, mobj is the UI handle (must be mobj), and method is the interpolation method (optional, default is linear). The user is prompted to select the dataset to be used to define the time intervals. A time series is returned and added as a Derived data set. The user is prompted to define the metadata for the new data set. An additional option is to specify the method as 'none'. This forces an exact match of times with the dataset used to define the time intervals. A tolerance can also be used with this option to find time matches within the tolerance interval in seconds (e.g. subsample_ts(X, t, mobj, 'none', 3600) finds all matches with 3600 seconds).
```

6. **Subsample one record based on a threshold defined for another record (e.g. subsample waves based on a threshold water level).** Function is:

```
subsample(X, t, thr, mobj), where X and t are the variable to be subsampled, thr is the threshold value and mobj is the UI handle (must be mobj). The user is prompted to select the dataset and variable to be used to define the condition and a condition operator (<=, ==, etc). A time series is returned and added as a Derived data set. The user is prompted to define the metadata for the new data set.
```

7. **Scale one or more variables.** The call to the function is:

```
scale_variables (dst), where dst is the dataset to select variables to scaled from.
```

8. **Phase plot.** This function is similar to the recursive plot function but generates a plot based on two variables that can, optionally, be functions of time. The call to this function is:

```
phaseplot(X, Y, t), where X and Y are the variables assigned to the respective buttons and t is time (this does not need to be assigned to a button and t can be omitted if a time stamp for the datapoints is not required).
```

9. **Recursive plot.** Generates a plot of a variable plotted against itself with an offset (e.g. x(i) versus x(i+1)). This is called from the Derive Output GUI using:



`recursive_plot(x, 'varname', nint)`, where `x` is the variable, '`varname`' is a text string in single quotes and `nint` is an integer value that defines the size of the offset.

10. **Plot differences.** Compute a vector of differences from the input data and plot the result. When used for the Derive Output UI, assign the variables to be differenced to X and Y buttons (for X-Y) and use the following call:

`plot_difference(dst, isangle, 'method')`, where `dst` is used to pass the variables to the function, `isangle` is a logical flag which is true if the data are directions and need to be wrapped across 0-360, and `method` is the interpolation method if the variables are different lengths (must be timeseries data variables). The default is linear.

11. **Add sea level rise to tidal water levels** (ie typically predictions rather than measured water levels). Based on exponential growth from 1900 and zeroed to a defined year using:

`addslrtotides(X, t, delta, exprate, pivotyear)`, where `X` and `t` relate to the water level variable to be adjusted, `delta` is a rate for the year 1900 (e.g. 0.001 m/yr), `exprate` is the rate of exponential growth (e.g. 0.011 for a fit to observations to-date) `pivotyear` is the year to use for zero sea level rise (e.g. 1900 adds slr based on change since 1900, whereas 2000 assumes that the tidal predictions are correct to the datum for the year 2000 and adjusts the record based on the slr function relative to that year).

12. **High and low waters from a water level series.** The call to the function is:

`tidalhighlow(x, t)`, where `X` is the water level and `t` are the times of the water level values. Assumes that there are multiple water level values per tide and finds the highest and lowest values. Creates two datasets for High and Low water with times defined by their respective peaks.

13. **Tidal range time series from a water level series.** The call to the function is:

`tidalrange(X, t, issave, isplot)` where `X` is the water level and `t` are the times of the water level values. Assumes that there are multiple water level values per tide. Also, outputs mean water level and tidal range values as a table. `issave` = true to save the results as a dataset and `isplot` = true to generate a plot of the results. Times are based on the centralup/down-crossing of mean water level. ie NOT explicit HW and LW times. This provides the high and low water values associated with each value of tidal range.

14. **Scale water levels:** The call to the function is:

`scale_waterlevels (x,t,issave,isplot)`, where `X` is the water level to be scaled and `t` the times of the values. User is prompted to give a scaling factor for values > and <= to 0.


15. **Fit trends and cycles to tidal range or high/low water time series:** The call to the function is:

`tidalrange_nltc(x, t, issave, isplot, 'titletxt')` where `X` is the water level and `t` are the times of the water level values. Assumes that there are multiple water level values per tide. When `issave` = true the fit parameters of the selected are also saved. If `isplot` = true the fit plots are generated by the function in addition to the summary table of fit parameters. The '`titletxt`' variable is optional and is used to define the output label used for the dataset. This is research code and a linear trend and up to 3 cycles are fitted. However, the cycle periods are hard coded as 8.85, 18.9 and 180 years for the Lunar Perigee, Lunar Nodal and a Long-term cycle, respectively.

16. **Selection of plots for water level frequency and duration** using the function:

`waterlevelfreqplots (X, t)` where `X` is the variable and `t` is time. Plot options include Water level elevation frequency, Water level spectrum, Elevations above a threshold, Duration of

threshold exceedance, Elevation frequency above threshold. Designed to analyse water levels but could easily be adapted for other variables.

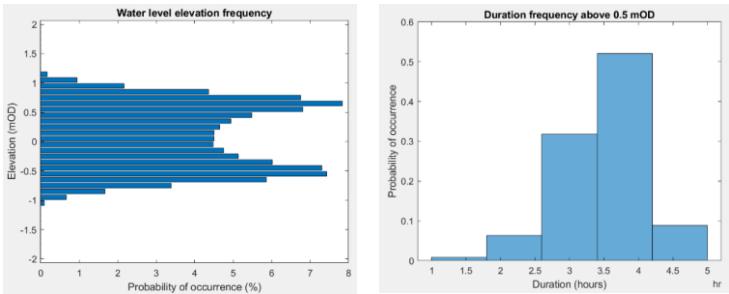

17. Selection of frequency analysis plots of timeseries data using the function:

`frequencyanalysis(X, t, 'vardesc')` where X is the variable, t is time and `vardesc` is the description of the variable to be used in the plots (optional – defaults to ‘Variable’). Plot options include Time series plot of variable, Time series plot of variable above threshold, ‘Plot variable frequency’, Plot variable frequency above threshold, Spectral analysis plot, Duration of threshold exceedance, Rolling mean duration above a threshold.

18. Depth dependent wave steepness using the function:

`wave_stEEPNESS(X, Y, Z, t)` where X is the wave height, Y the wave period and Z the water depth, with t passing the time associated with the timeseries variables. Note that the water depth data should be a times series of the same length and at the same time intervals as the wave data, or specified as a single constant value (i.e.: `wavestEEPNESS(X, Y, 3.5, t)`).

19. Wave height-period scatter plots using the function:

`wave_scatter(dst)` where `dst` invokes the option to pass the data as dstables. This requires that the wave height, wave period and water depth time series to be used are assigned to the x, y and z buttons respectively.


20. Wave height-period-direction scatter plots using the function:

`wave_scatter_3d(X, Y, Z)` where X is the wave height, Y the wave period and Z the wave direction.

21. Littoral drift statistics. Plots the annual and monthly volumes of drift along with details of gaps and calms. The call to this function is:

`littoraldriftstats(X, t, 'period')`, where X is the rate of drift, time is the associated time for that variable and `period` can be ‘year’, or ‘month’.

If no `period` is specified, the default is month. The `period` selection does not alter the plot (which shows both) but if the results are saved as a timeseries, `period` can be used to determine the timeseries interval to save, or both year and month data sets can be saved. In the lower plot, the diamonds denote the start and end of the timeseries. Additional optional inputs are (i) a logical value after `period` which suppresses output if

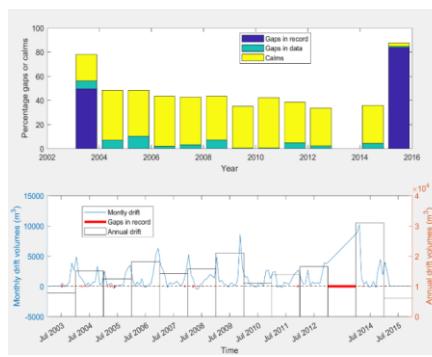



false, or (ii) a numeric value from 0-3. 0 generates the default plot and values of 1 to 3 generate the selected subplot.

22. **Ratio of alongshore to cross-shore transport.** The CERC formula for littoral transport is based on the energy flux (P) in the direction of wave advance per unit length of beach. ie: $F = P.\cos(\alpha)$, where α is the angle between wave crest and bed contour. The longshore component of energy flux is $P.\cos(\alpha).\sin(\alpha)$, which leads to the main terms in the CERC formula. It follows that the cross-shore component is $P.\cos^2(\alpha)$. The ratio of longshore/cross-shore energy flux (or transport potential) = $\tan(\alpha)$. The call to the function is:

`beachtransportratio(X, theta, isvector)` where X is a timeseries of inshore wave directions, ‘ θ ’ is the angle of the shoreline to True North and ‘`isvector`’ is optional and is set to 1 or true if the direction is be retained in the output (default if 0/false). The sign convention is the same as for littoral drift: positive is left to right when looking at the shore from offshore.


23. **Examining the rate of beach profile change (accretion and erosion).** The function computes the change in the variable over each time interval and the rate of change (assuming a linear rate of change between surveys), subdivides the population into positive and negative change values (typically this represents accretion and erosion when using volumes, or shoreline position, data) and presents the histogram and exponential fit for each data set.

Warning: the results are entirely dependent on the adequacy of the source data to represent change (e.g. volumes or shoreline position). If the survey frequency is not regular the results are unlikely to be reliable.


Select a variable X . The variable can be any metric such as beach volume or shoreline position. Use the function:

`posneg_v_stats(x, t, 'VariableName')`, where x is a time series variable, such as beach volume or shoreline position, with associated time, t (defined by variable selection). The *VariableName* is optional but if used should be between single quote marks. The *VariableName* is used to label the plot axes.

The output comprises the following plots and dialogue box:

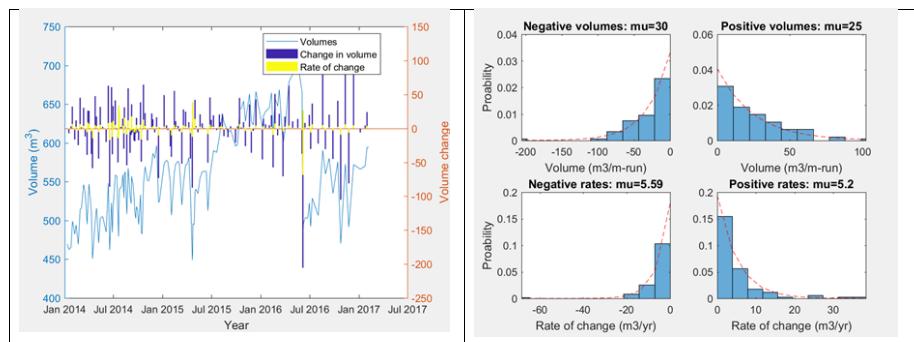

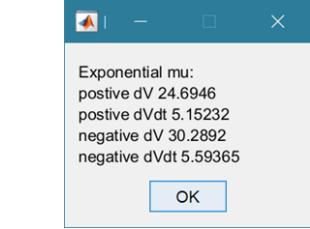

	Where dV is the change in the variable (e.g. volume) and $dVdt$ is the rate of change. In the plot above, an exponential pdf has been fitted to the data and the coefficient is reported in the title for each subplot as the ‘mu’ value and listed in the dialogue box (as shown on the left). The probability density function (pdf) is: $f(x \mu) = \frac{1}{\mu} e^{\frac{-x}{\mu}} ; \quad x \geq 0$
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

N.B. posneg_dv_stats.m requires the statistics and machine learning toolbox.

24. **Compute equal energy flux bins for the wave height-direction scatter.** The function computes the energy flux for the given wave time series and plots this as bins on a wave height direction scatter diagram where each bin has the same wave energy. This based on the method proposed by Walstra et al (Walstra et al., 2013; Benedet et al., 2016).
binned_wave_climate(dst) where dst invokes the option to pass the data as dstables. This requires that the wave height, wave period and wave direction time series to be used are assigned to the x, y and z buttons respectively.

4.17.4 Adding variables to peak and cluster time series

Peak and cluster time series are a subset of the source data set, saved as an independent record. For some workflows, there may be a need to add other variables with the same date-time as the subseries (e.g. to produce a polar plot of the cluster events, direction must be added to the timeseries, or to run a model (such as overtopping) period and direction may need to be added). This can be done using the Derive Output GUI, by selecting the subseries variable (e.g. wave energy clusters) as X (it must be X) and the source data set variable (e.g. wave period or direction) as the Y variable.

Then for the equation string, use a function of the form > $Y.*(X/X)$

This simply adds the variable defined by Y at the intervals defined by X (assuming X is the subseries). The new variable is then named as required. However, if the new variable is *direction* and it is to be used in the plotting routines (e.g. wave roses) the Variable Name MUST begin with ‘Dir’ but this can be followed by any additional characters.

4.18 Simulation

Allows two simulation models to be run, which are given the shorthand names of YGOR and BMV models.

Warning: *This is research code. It has been subject to limited testing and requires a detailed knowledge of the source literature and optimization methods to use effectively.*

The optimisation in the YGOR model uses constrained optimisation, such as simulated annealing, which requires the Matlab Global Optimization Toolbox. [YGOR model](#)

YGOR is named after the authors of the paper on which the model is largely based, namely Yates, Guza and O'Reilly (Yates et al., 2009). Additional development was based on the work of (Castelle et al., 2014) and (Villamarín, 2017).


To generate a set of fit parameters, wave forcing and shoreline position data are required and this requires some pre-processing, as explained in Section 3.5.5. The output of the fitting procedure is a set of coefficients that can be used to make simulations (hindcasts or forecasts) using a wave timeseries. The fitting process generates a series of plots and the user is offered the option to adjust the fitting









values being used. For each input dialogue box press ‘OK’ to make a change and ‘Cancel’ to accept the default values.

The fitting and hindcasting of shoreline position uses a derivative of the Kriebel and Dean model, as proposed by Yates *et al* (Yates *et al.*, 2009). An offset to the initial shoreline is included as an additional fit parameter, as proposed by Castelle *et al* (2014). The model relates nearshore wave energy, (represented by $\frac{H_s^2}{16}$), to shoreline position, Y . Nearshore wave data are typically obtained using plane bed refraction to account for refraction and shoaling from the wave data point to the closure depth of the beach profile, taking account of water levels variations due to the tide. Fitting the parameters is sensitive to the initial guess and search bounds. Two of the model parameters (a and b) are estimated by finding the line for $dY/dt = 0$ from the mean energy between surveys and the shoreline anomaly (dY) but only uses the points that are close to $dY/dt = 0$. The accretion and erosion rates, C^+ and C^- , are estimated from the mean positive and negative values of dY/dt respectively, and the initial offset is assumed to be zero. Parameter fitting is done using derivative free, constrained non-linear optimisation. Matlab functions for particle swarm, simulated annealing and simplex optimisation are provided as options.

The following images show the steps in a typical workflow. After Step 1, an input dialogue prompts for the Averaging interval to use. This allows the only the defined interval prior to time of each shoreline position to be used as the wave forcing. The default (0) is to use the full wave time series and this generally works better. Once a fit has been accepted in Step 4, some simple regression statistics of model versus observed are generated (Step 5) and the user has the option to add a Taylor diagram (Step 6). If the Local Skill Window have a value >0 , the local skill score is plotted, followed by the Taylor diagram. The ‘Case List’ button provides full details of the Taylor parameters and the global and local skill scores (if requested). See Section 4.20 for further details about the Taylor Diagram. These statistical tools can be used to help evaluate how well the model is performing.

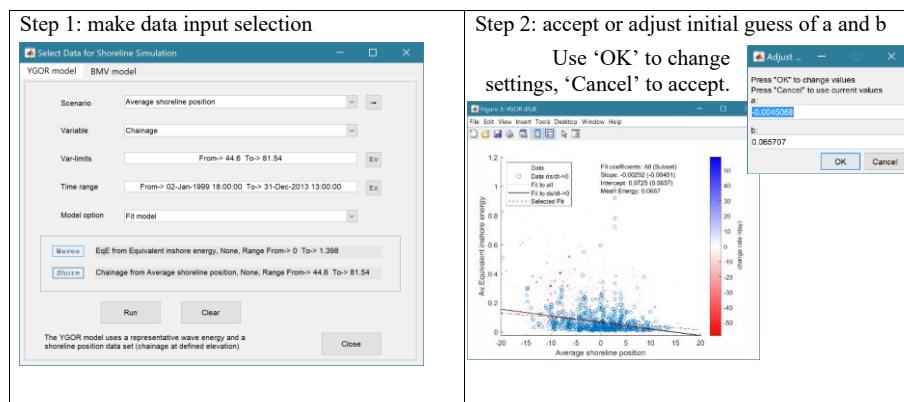

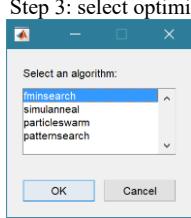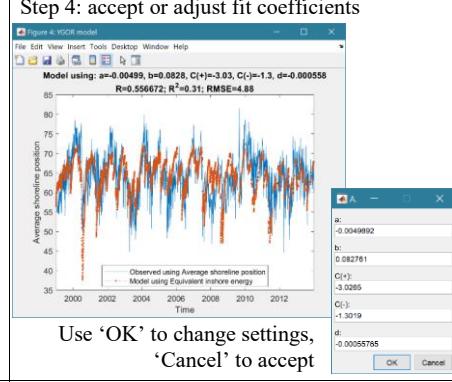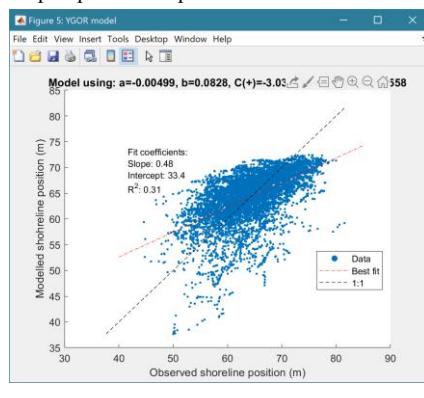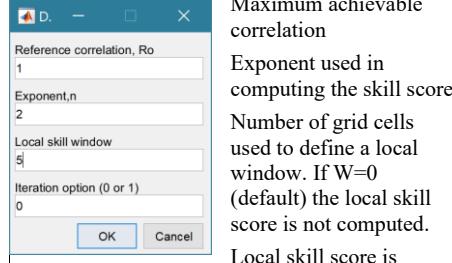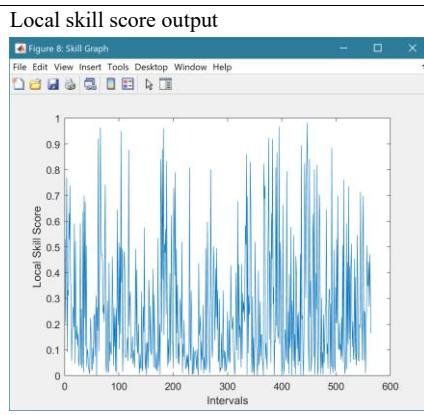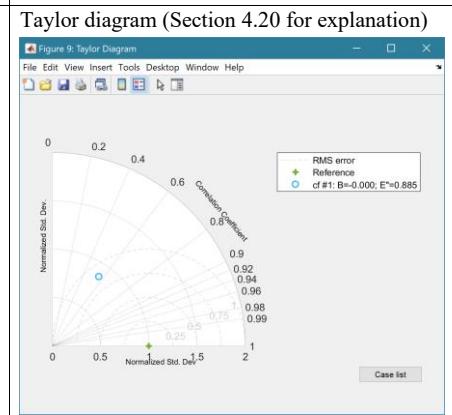Step 3: select optimisation algorithm  <p>Note - in this UI: 'OK' selects the algorithm to be used 'Cancel' aborts the run</p>	Step 4: accept or adjust fit coefficients  <p>Use 'OK' to change settings, 'Cancel' to accept</p>
Step 5: plot model performance statistics 	Step 6: optional Taylor diagram of model performance (see Taylor, 2001)  <p>Maximum achievable correlation Exponent used in computing the skill score Number of grid cells used to define a local window. If W=0 (default) the local skill score is not computed. Local skill score is computed using a sampling window around every time step (=1), or computed for all non-overlapping windows (=0)</p>
Local skill score output 	Taylor diagram (Section 4.20 for explanation) 

When the fitting of the YGOR model is complete, the option is provided to save the fit coefficients. This updates *Setup>Model parameters>YGOR simulation parameters* UI, which defines the fit




coefficients to be used in YGOR simulations (see Section 3.4.3). The current values can be viewed on the *Site/Simulation* tab.

Alternatively, YGOR simulations can be made using any set of coefficients defined in the *Model parameters>YGOR simulation parameters* menu option - see Section 3.4.3. The model then uses the wave timeseries to generate a set of shoreline positions. The wave timeseries can cover any required simulation period. However, the shoreline position variable used to generate the fit coefficients must also be selected for Simulations (this is used to impose any trend applied during the optimisation). The resulting estimates of shoreline position are plotted as a function of time and if the period of the observed data used for fitting the model overlaps the simulation period these are also plotted. Once the run is complete, there is an option to save the output as Shoreline model timeseries.

For an example of the model application see Montano *et al.* (2020).

4.18.2 BMV model

BMV is named after the authors of the papers on which the model is largely based, namely Bernabeu, Medina, and Vidal To generate a set of fit parameters, wave forcing and beach profile volume data are required and this requires some pre-processing, as explained in Section 3.5.5. The output of the fitting procedure is a set of coefficients that can be used to make simulations (hindcasts or forecasts) using a wave timeseries.

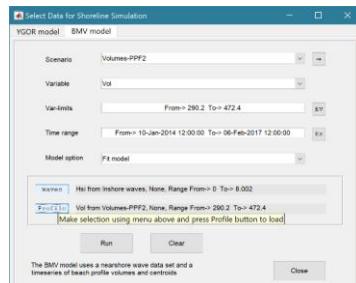

The initial model uses an equilibrium profile for the cross-section below high water, as proposed by Bernabeu et al (2003b), Figure 5. Above this there is a runup profile from high water to the maximum level of wave runup, with a slope estimated using the concept of least action (Reis and Gama, 2010). Under some conditions there is a berm before the beach slopes up to the crest of the dune. In some profiles, there is no berm and the there is a continuous slope

from the limit of runup to the dune toe. In others, the runup zone extends to an almost vertical cliff at the toe of the dune (yellow profile in Figure 5).


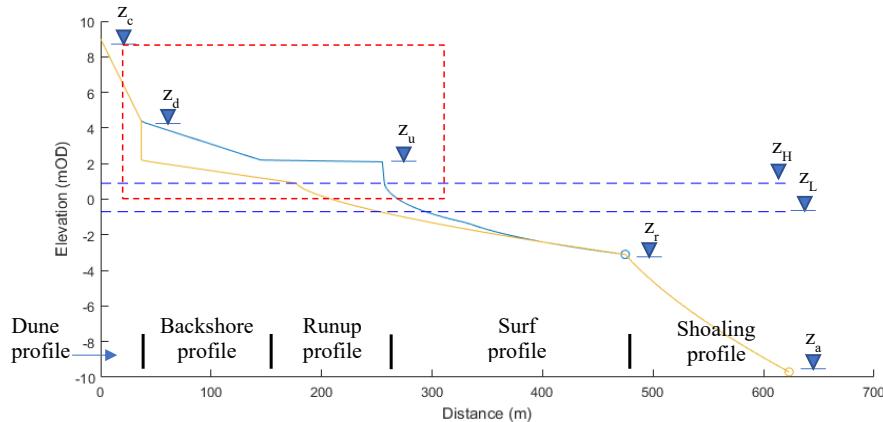


Figure 5 – Definition sketch showing the relevant levels used in the model and illustrating the “minimum profile” based on the maximum wave condition in yellow and the profile for a typical wave condition in blue. Levels of the profile sections shown relate to the blue profile. Red dashed box indicates the control box used when calculating the volume of the profile (see Section 4.13).

Except for the dune and backshore berm/slope the profile can be determined using the incident wave conditions. The hypothesis is that the distance of the equilibrium profile from observed profile at a given point in time represents the anomaly and hence the gradient of the restoring potential. If the same wave condition were to prevail for a period of time, the anomaly would reduce to zero.

After initiating the Run, the user is given the opportunity to make modifications to the run-time options for the model. These parameters are defined in *Setup>Model parameters>BMV simulation parameters*: (see Section 3.4.3

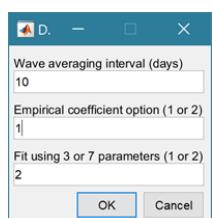

The period (in days) prior to the date of a measured profile over which wave data are averaged.


Empirical coefficient option:

1. Using equilibrium profile coefficients defined in Bernabeu *et al* (2003b)
2. Using equilibrium profile coefficients defined in Bernabeu *et al* (2003a)

Fit using 3 or 7 parameters:


1. Using the parameters for the “dune” profile: i.e. setup coefficient, runup coefficient, dune berm factor defined above.
2. Using the upper “dune” profile parameters, as in option 1, and the

equilibrium profile coefficients. The initial estimates defined by the option selected for the Empirical coefficients are relaxed to fit the entire profile.

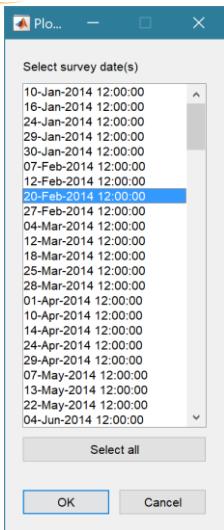


Two workflows are possible using the Fit model option. In one the user selects an individual profile and the parameters can be adjusted and fit re-examined. Once acceptable, the nonlinear curve-fitting (data-fitting) function `lsqcurvefit`, which searches for the best fit in a least-squares sense. The resultant fit parameters are returned as a time series and plotted as shown below


Again, the profile Selection UI re-appears for further analysis, or press 'Cancel' to exit.

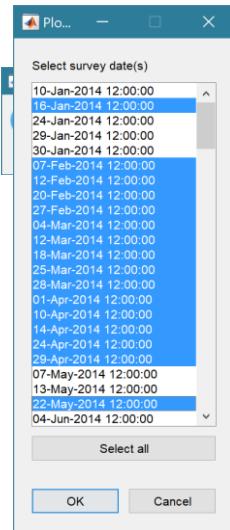

Output when fitting an individual profile:

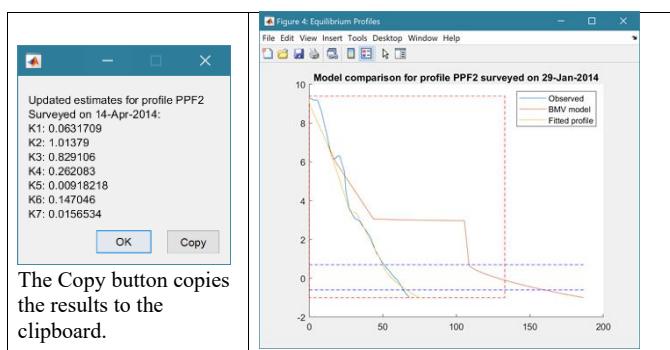

Output when multiple profiles are selected:

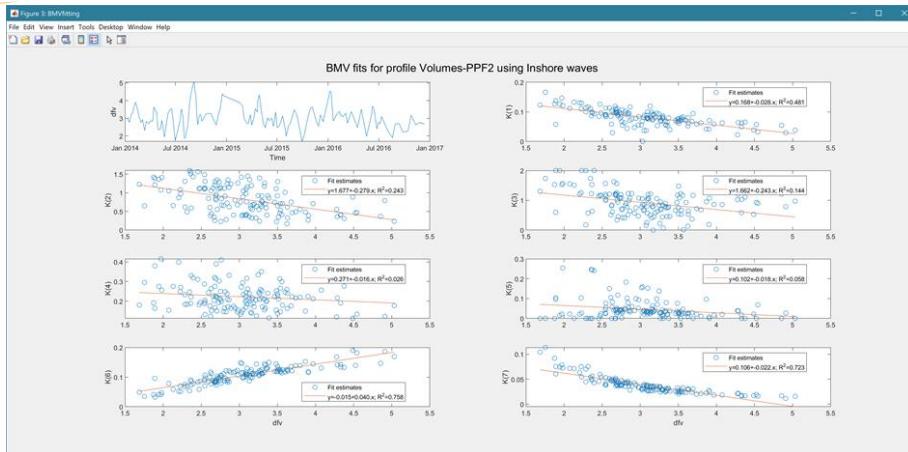

The Simulation model option computes the volume, and centroid position (x, z) for each wave condition in the time series. The resultant time series is plotted and can be saved as a new data set for more detailed comparison with similar data from the measured profiles.

The BMVmodel simulation option is still under development.

4.19 Beach Vulnerability Index

There are two options accessible from the Run menu, namely a Single site version and a version that examines a beach based on a set of beach profiles (see Section 3.5.6). The basis of these two models are summarised in the following sections. These models make use of the Matlab™ Statistical Toolbox.

4.19.1 Single site BVI (*Run> Vulnerability>BVI site*)

Uses a set of models that are run independently to provide data on wave conditions, runup, littoral drift, cross-shore transport and shoreline position change rates. For further details of these models, see:

- Nearshore waves: Section 4.2
- Runup: Section 4.6
- Littoral drift: Section 4.7
- Cross-shore transport: Section 4.8
- Rate of Shoreline change: Section 4.14

Different scenarios can be considered by generating multiple cases of the above models and then selecting different combinations in the Vulnerability UI, see Section 3.5.6.

Three statistics are computed for four indicators, which are then combined as an arithmetic mean to give a summary statistic. The three statistics are for the relative magnitude index (RMI), coefficient of variation index (CVI) and the beach vulnerability index BVI (a slightly modified version of the form used by Alexandrakis (2014)). The four indicators relate to drift potential, cross-shore exchange, runup, and shoreline change.

The relative magnitude is defined as:

$$RMI = \frac{\mu}{\mu + \sigma}, \text{ where } \mu \text{ is the mean and } \sigma \text{ is the standard deviation.}$$



For the variables that can be positive and negative (cross-shore transport, erosion/accretion), the data are divided into positive and negative values. The positive values are used to compute the index as defined above and the negative values contribute to the index based on:

$RMI = I - RMI_{(x<0)}$. The final index is then the average of the two contribution.

The coefficient of variation is defined as:

$$CVI = \sigma/\mu, \text{ where } \mu \text{ is the mean and } \sigma \text{ is the standard deviation.}$$

Again, the data are divided for variables that can be positive and negative. Using absolute values of the negative component, the two values are averaged.

The BVI is defined for each indicator as follows:

$$\text{Drift: } QsI = |\bar{Q}_s| / Q_s^{\max}$$

$$\text{Cross-shore: } QxI = |\bar{Q}_x^{on} - \bar{Q}_x^{off}| / Q_x^{\max}$$

$$\text{Runup: } RuI = \bar{zRu} / zCrest$$

$$\text{Shoreline change: } \partial xI = N(\overline{\Delta x^+} - \overline{\Delta x^-}) / W_B$$

where an overbar indicates a mean value and subscript *max* the maximum value. Q are rates of littoral or cross-shore transport, the overbar indicates a time mean value, the vertical bars denote absolute values, and the superscripts *on* and *off*, refer to onshore and offshore transport. For runup, zRu is the 2% runup elevation (Stockdon *et al.*, 2006), taking into account variations in still water level, and $zCrest$ is the specified crest elevation (as defined in Site properties – see Section 3.4.3).

The shoreline change indicator uses rates of shoreline change based on the regression slope of the shoreline position, Δx m/yr (which depends on the elevation used when running the Shoreline model – see Section 4.14) averaged across all the profiles included in the Shoreline model case. The difference of the positive and negative mean rates of change gives the net rate of change. To make this a “representative” distance it is multiplied by 1 year and this is divided by the beach width, W_B . This reflects the potential of losing the beach over this time interval. An upper bound value of 1 is set, should there be the potential to lose the beach in a shorter period. The beach width is computed from indicative high and low water levels (95% percentiles using the still water levels) and mean slope of the profiles at the defined shoreline position.

NB: there are no checks in the model for data validity. It is therefore important to examine the contributing data sets and model outputs, to ensure that the data are representative of the conditions and have been suitably quality checked.

Table rows are:

1 – RMI = mean/(mean+st.dev)

2 – CVI = st.dev/mean

3 – BVI = beach vulnerability indicators

Figure 2: BVI output					
RMI = mean/(mean+st.dev) = 0.55				-	
CVI = coefficient of variation = 1.16				□	
BVI = beach vulnerability index (based on Alexandrakis <i>et al.</i>) = 0.04				×	
	Drift	Xshore	Runup	Shoreline	Index
1	0.3261	0.7346	0.5383	0.6016	0.5501
2	2.0666	1.0595	0.8577	0.6706	1.1636
3	0.0300	0.0444	0.1036	0	0.0445
Copy to clipboard					

4.19.2 Multi-profile BVI (*Run>Vulnerability>BVI profile set*)

The multi-profile BVI also computes 4 indices and a resultant BVI based on the arithmetic mean of the constituent indices. The method used defines a set of variables that seek to represent the dominant impacts on UK beaches. The definition of vulnerability used to define these variables is as follows:



“Vulnerability is defined as the potential of a coastal system to be harmed by the impact of a storm event and it is quantified by comparing the magnitude of the impact with the adaptation capacity of the system. In simple terms, the impact is characterised by the intensity of storm-induced coastal processes, whereas the adaptation ability is defined by the beach physical properties determining the capacity to cope with considered impacts” (Bosom and Jiménez, 2011).

Following this well-posed definition, data on wave, water level and sediment movement are used to characterise the potential impact. The ability of the coastal system to cope with the induced impacts is measured in terms of beach variables that provide an indication of the ability of the system to contain the impact. The indices are computed using historic data and so represent a “state” of the system over the duration of the data, rather than a projection (e.g. by including projected changes in sea level). The indices are defined as summarised in the following table. The indices are computed and tabulated for each profile in the selected beach “set”.

	Measure of impact	Measure of capacity	Index
Inundation	Runup elevation, using waves and water levels (10% exceedance used)	Mean beach crest (Minimum could also be used)	$I_{Ru} = zRu_{10\%} / zCrest$
Beach erosion	Rate of erosion ¹	Mean width of intertidal (HW-LW) and backshore (HW to crest)	$I_{dX} = \frac{ dx/dt _{(<0)}}{\bar{W}_{int} + \bar{W}_{back}} \cdot N$
Beach steepening	Rate of beach rotation (intertidal width narrowing ¹)	Mean width of intertidal (HW-LW)	$I_{dR} = \frac{ dW_{int}/dt _{(<0)}}{\bar{W}_{int}} \cdot N$
Beach mobility	Littoral and cross-shore transport	Dependence on supply ²	$I_{Sm} = \frac{\sum Q_s + \sum Q_x}{\sum Q_s + \sum Q_x }$

Notes:

1 – accretion and widening of the beach are treated as countering vulnerability and result in 0 impact.

2 – when the net transport alongshore and on-offshore tends to zero the beach is less dependent on a supply, Where the exchanges are more unidirectional then the mobility and hence vulnerability is higher.

The variables in the above equations are:

I_{Ru} : uses $zRu_{10\%}$ - the 10% exceedance level of wave runup, $zCrest$ – the average level of the beach crest over the data record. The runup based on the method of Stockdon et al (2006) is added to the water levels to get the runup elevation, see Section 4.6.

I_{dX} : uses dx/dt – rate of horizontal change of the beach based on the average of estimates at HW, MTL and the lowest level on the measured profiles (usually just above LW). Only values that are negative, indicating erosion, are used to measure the index W_{int} – width of the intertidal between HW and LW. W_{back} – width of backshore between HW and the beach crest. Overbars indicate averages over the duration of the data record. N is the number of years for the “exposure” period. If this is large (e.g. 10 or more years) the index can exceed one. In this case the value of the index reported is the number of years for the beach width to be lost, whilst an index value of 1 is used to calculate the BVI. NB: if the reported value of the indicator is 0, this indicates that the profile is accreting and does not therefore contribute to the vulnerability.

I_{dR} : uses dW_{int}/dt – rate at which the beach width between HW and the lowest level on the measured profiles (usually just above LW) is determined by taking the difference of dx/dt_{HW} and dx/dt_{zmin} . This is scaled relative to the intertidal beach width, W_{int} . N is the number of years for the “exposure” period, which is applied in the same way as explained above for I_{dX} . NB: if the reported value of the indicator is 0, this indicates that the profile is flattening and does not therefore contribute to the vulnerability.




I_{Sm} uses the littoral drift, Q_s and the cross-shore transport, Q_x . For details of how these are computed see Sections 4.7 and 4.8.

The Beach Vulnerability Index, BVI, is then given by:

$$BVI = \frac{I_{Ru} + I_{dX} + I_{dR} + I_{Sm}}{4}$$

Tabulated results for each profile are presented on the *Calcs>Shoreline* tab and can be plotted using the *Run> Vulnerability>BVI set plot* menu option. In addition, the results for the Mean Tide Level (0mOD) shoreline change used in the analysis can be viewed in the same way as other Shore change results using the *Run> Beach properties> Shore change>Change plot* and *Rates plot* menu options.

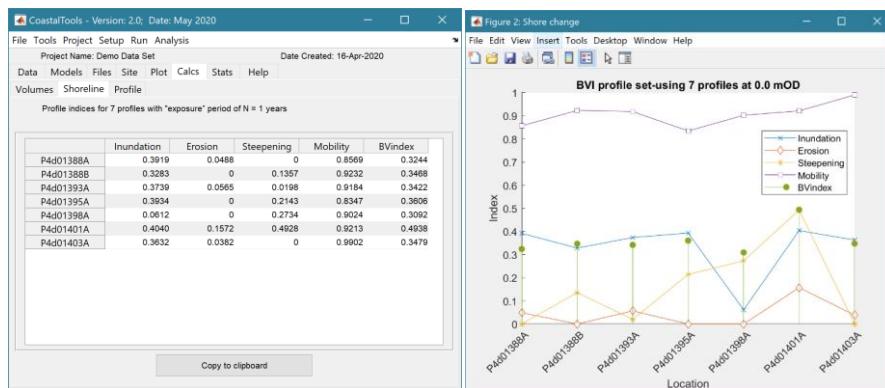

4.20 Taylor diagram

The basis of the Taylor Diagram and associated skill score is explained in Taylor (2001) and summarised here.

4.20.1 Taylor diagram theory

For a variable, X we denote:

$$\text{Bias as: } \bar{E} = \bar{X}_{model} - \bar{X}_{obs} \quad [\text{denoted } B \text{ in plot}]$$

Centred Root Mean Square Difference (or Error) as:

$$E' = \sqrt{\frac{\sum \{(X_{model} - \bar{X}_{model}) - (X_{obs} - \bar{X}_{obs})\}^2}{N}}$$

to give the total Mean Square Difference as;

$$E^2 = \bar{E}^2 + E'^2$$

As $E' \rightarrow 0$, patterns become similar, so it is not possible to determine how much of the error is due to a difference in structure and phase and how much is simply due to a difference in the amplitude of the variations.

Standard deviations for model and observed data sets are given by:

$$\sigma_{model} = \sqrt{\sum (X_{model} - \bar{X}_{model})^2 / N}$$

$$\sigma_{obs} = \sqrt{\sum (X_{obs} - \bar{X}_{obs})^2 / N}$$

and the Correlation coefficient is given by:

$$R = \frac{\sum(X_{model} - \bar{X}_{model})(X_{obs} - \bar{X}_{obs})}{N\sigma_{model}\sigma_{obs}}$$

These measures are related as follows:

$$E'^2 = \sigma_{model}^2 + \sigma_{obs}^2 - 2\sigma_{model}\sigma_{obs}R$$

And by defining R as $\cos(\phi)$ this has the form of the law of cosines equation, where the mean square error and two standard deviations form the sides of a triangle with angle ϕ between the two sides defined by standard deviations.

When comparing different metrics, it can be convenient to use the above in a normalised form, where the normalised variables are denoted by a hat.

Normalised RMS difference: $\hat{E}' = \frac{E'}{\sigma_{obs}}$ [denoted E'' in plot]


Normalised Standard deviations: $\hat{\sigma}_{model} = \frac{\sigma_{model}}{\sigma_{obs}}$

$$\hat{\sigma}_{obs} = 1$$

Leading to: $\hat{E}'^2 = \hat{\sigma}_{model}^2 + \hat{\sigma}_{obs}^2 - 2\hat{\sigma}_{model}\hat{\sigma}_{obs}R$

whence: $\hat{E}'^2 = 1 + \hat{\sigma}_{model}^2 - 2\hat{\sigma}_{model}R$

The figure below shows the form of the resultant Taylor diagram for one data set.

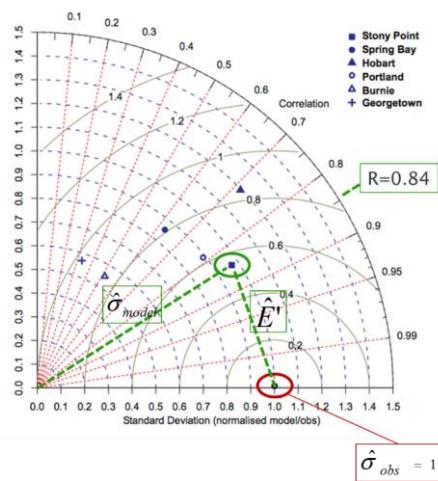

4.20.2 Skill score

Taylor defines the basis of a good skill score as:

"For any given variance the score should increase monotonically with increasing correlation, and for any given correlation the score should increase as the modelled variance approaches the observed"



variance. Traditionally, skill scores have been defined to vary from zero (least skilful) to one (most skilful)."

He then proposes a skill score that achieves this without being too complicated as:

$$S = \frac{4(1+R)}{(\hat{\sigma}_{\text{model}} + 1/\hat{\sigma}_{\text{model}})^2 (1+R_0)}$$

where R_0 is the maximum correlation attainable and $S=0$ -poor skill; $S=1$ -good skill. This option weights the pattern variance. However, this is just a model and the weighting can be varied based on what is considered to be most important for the application. E.G. to increase penalty for low correlation, the equation of the following form could be adopted:

$$S = \frac{4(1+R)^4}{(\hat{\sigma}_{\text{model}} + 1/\hat{\sigma}_{\text{model}})^2 (1+R_0)^4}$$

Bosboom et al (2014a; 2014b) use similar variations on this basic structure.

In ModelSkill this is implemented as:

$$S = \frac{4(1+R)^n}{(\hat{\sigma}_{\text{model}} + 1/\hat{\sigma}_{\text{model}})^2 (1+R_0)^n}$$

The exponent, n , and the maximum correlation attainable, R_0 , are defined in Run Parameters.

The foregoing provides an estimate based on values (mean, standard deviation, etc) for the full grid domain; a global skill score, 'Sg'. Bosboom and Reniers (2014) also make use of spatially local estimates of the skill score, 'Sl', which they obtain by applying a weighting based on distance from each point, when computing the mean, standard deviation and correlation. They then average the local skill score estimates, to obtain an average local skill score. When this is done based on the grid points for the surrounding cells (where the window, W , is the number of grids cells either side of the central point that are to be included) and the weighting is constant across this sub-grid, this is the same as simply sub-sampling the grid. A similar one-dimensional window can be applied to a vector when comparing timeseries data. This is the approach adopted in Coastaltools. The average skill score, Sl, is added to the metadata for the test point in the Taylor diagram and can be viewed by selecting the 'Case List' button on the Taylor Diagram figure



5 User functions

To allow the user to add other data sets, models or statistical routines, without disrupting the underlying model structure, selected functions have been made external to the class definitions. Copies of the sample files can be found in the ..\muitoolbox\muitemplates folder. For User Data and User Model these can be copied to a working folder and renamed to suit the application. For User Statistics and User Plots the files in the templates folder can be used to replace the version in the ..\muitoolbox\psfunctions folder. The user_plots and user_stats functions are called from the respective UIs, hence the names should not be changed (unless the code in the calling class is also edited).

5.1 User Data

This option allows the user to load data that is different to the ones provided. The class is muiUserData and the class file handles the loading and amending of records but requires the file format and meta-data for the variables being loaded to be defined. The file dataimport_format_template.m, in the ..\muitoolbox\muitemplates folder, provides an example of the code needed to load a bespoke file format. This is called from *Setup> Import data> User Data* and loads the date into the generic muitoolbox muiUserData class. The key functions that need to be edited in the file are *getData* and *setDSproperties*. The *getData* function defines how to read the data and assign it to a single dstable or a named struct array of dstables, where each field name provides a reference to the dataset in the table. The *setDSproperties* function defines the metadata needed to describe the variable and any associated dimensions. Examples of the code to load a range of different formats can be found in the ...\\muiAppCoastalClasses\\FormatFiles folder.

5.2 User Models

The User Model option (*Run>User Model* - see Section 3.5.7) calls the user_model function in the ..\muitoolbox\psfunctions folder. The user is prompted to define the classname and the function call to run the model (default is runModel). This the calls the chosen model and adds any results to the App database (depending on the actions defined in the user model class. The file Model_template.m, in the ..\muitoolbox\muitemplates folder, provides a template for creating a model class. Any existing model classes can also be called using this method.

5.3 User Statistics

On the General and Timeseries tabs of the Statistics UI there is a Statistic list dialogue box. The User option in this list calls the user_stats.m function, which can be found in the ..\muitoolbox\psfunctions folder. This allows the user to define their own workflow, accessing data and functions already provided by the CoastalTools App. The sample code illustrates the workflow for timeseries data to produce a clusters plot. If called from the General statistics tab the code simply returns a warning message. The code could be added to provide some alternative function when called from the General stats.


5.4 User Plots

On the Plots UI there is a Plot type list dialogue box. Select User and assign the required variables to the buttons for the selected tab. This passes the variables selected to the user_plot.m function, which can be found in the ..\muitoolbox\psfunctions folder. This allows the user to set up their own plotting function. The demonstration function provided plots a line or surface plot depending on whether a variable has been assigned to the z-dimension.

6 Program Structure


The overall structure of the code is illustrated schematically in Figure 6. This is implemented through several classes that handle the graphical user interface and program workflows (Main UI) and several classes that handle the data manipulation and plotting (Input UIs and Data UIs).

Figure 6 – High level schematic of program structure

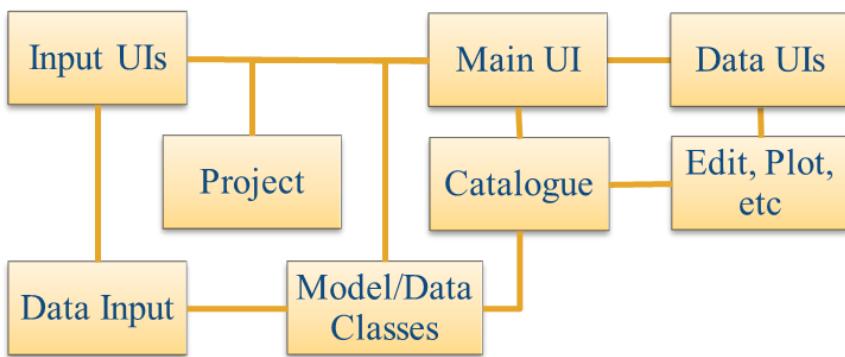

The interfaces and default functionality are implemented in the CoastalTools App using the following mu.toolbox classes depicted in Figure 7, which shows a more detailed schematic of the program structure. See the mu.toolbox and dstoolbox documentation for more details.

Figure 7 – schematic of program structure showing how the main classes from mu.toolbox and dstoolbox are used

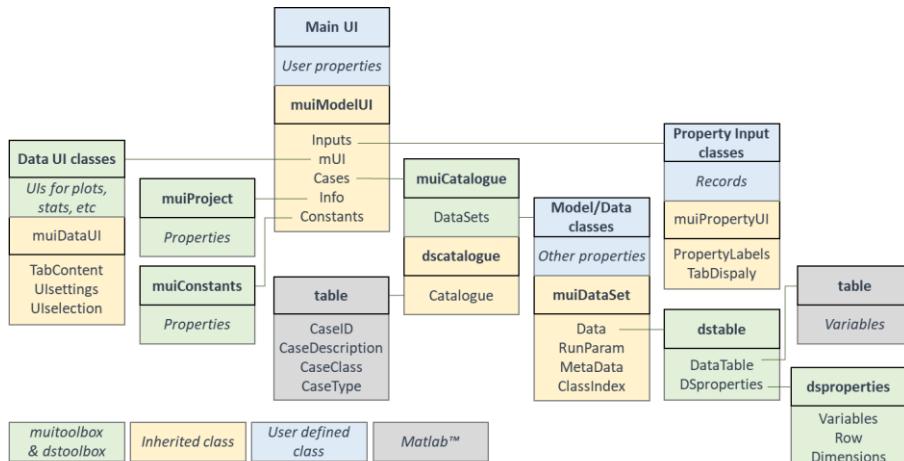

In addition, the CoastalTools App uses the following classes and functions:

In .../CoastalTools/

CoastalTools – main UI

CT_BeachAnalysis – tools to analyse beach profile data

CT_PlotsUI – UI for CoastalToools plots (alternative to muiPlotsUI class)

CT_Plots – inherits muiPlots and adds additional plotting options



CT_SimUI – UI for shoreline and profile simulation models

CT_WaveModels – models using wind, wave and water level data

Sim_BMV – runs the BMV beach profile simulation model

Sim_BMVinput – data input for the BMV model

Sim_BMVmodel – setup and running of BMV simulation

Sim_YGOR – runs the YGOR shoreline simulation model

Sim_YGORinput – data input for the YGOR model

Functions:

ct_beachvulnerability – function to compute Beach Vulnerability Index for a set of beach profiles

ct_data_cleanup – set of functions to help clean up timeseries and beach profile data

ct_sitevulnerability – function to compute Beach Vulnerability Index for a single site

simBMVfitting – functions to fit the BMV model to a profile data set

simYGORmodel – functions to run the YGOR model

DemoDataSet.mat – sample file of wave, water level and beach profile data

In .../muiAppCoastalClasses/

ctBeachProfileData – handle beach profiles as Chainage + Elevation and/or Easting, Northings + Elevation

ctModelData – load model output files e.g., for timeseries data at a point

ctHindcastParameters – input parameters for the wind-wave model

ctShorelineData – shoreline position data (e.g. distance to mean tide level)

ctStructureInput – definition of a beach or structure used to estimate overtopping quantities

ctTidalAnalysis – analyse water level data to extract tidal constituents and use constituents to construct tidal elevation timeseries.

ctWaterLevelData – import water level data

ctWaveData – import wave data

ctWaveModel – model of wave propagation to a nearshore or deep-water locations

ctWaveParameters – input parameters for the wave models

ctWindData – import wind data

ctWindWaveModel – model wind-wave generation over varying fetch lengths

In .../muiAppCoastalClasses/FormatFiles/

Folder contains a range of format files for loading a number of different data formats and some generic QC functions.

SFcodes – beach profile survey feature codes

In .../muiAppCoastalFcns

addslrtotides – add a linear, or exponentially varying, rate of sea level rise to a tidal record.

beachtransportratio - compute the ratio of onshore to alongshore wave action given by tan(alp).

binned_wave_climate – compute equal energy flux bins for the wave height-direction scatter.

celerity - calculate the wave celerity using Hunt's equation.

coeff_AB - function called by overtopping functions otop_Q and otop_C.



deanbeachprofile - find the bed slope across the surf zone the profile is based on a user defined slope between Hw and SWL (0mOD) and a Dean profile below this level.

eff_fetch - compute the effective fetch for each mean direction based on the directional distribution function.

get_profile_times - get the composite time intervals for all profiles.

getalp - find the angle between the wave crest and the bed contour.

hallermeier_zones - computes the limits of the surf and shoal zones and returning the surf zone limit and the closure depth or shoal limit.

hb_break - wave height after breaking for given water depth.

hs_break - significant wave height after breaking for given water depth.

hs_surf - calculate the inshore wave height at the edge of the surf zone.

iribarren - function to calculate the Iribarren number which characterise the wave breaker type.

littoraldrift - sediment transport drift rates for sand and shingle.

littoraldriftstats - estimate net drift over selected period from the time series of drift rates.

otop_Q - function to calculate the overtopping discharge for a simple sloping structure based on the Method proposed by Owen.

posneg_dv_stats - computes the rate of change of variable and plot histograms for positive and negative components.

profileslope - calculate the bed slope at some depth within the surf zone.

readfetchfile - read the file that contains the fetch lengths as a function of direction.

refraction - plane bed wave refraction and shoaling using linear wave theory.

rmswaveorbitalvelocity - calculate the root mean square wave orbital velocity.

runup - wave runup magnitude.

runup_slope - calculate runup beach slope using Reis A H and Gama C, 2010.

section_centroid - find centroid and area of a cross-section defined by points (xi,zi).

settling_velocity - calcualte the settling velocity using Soulsby equation.

shoaling - plane bed wave shoaling using linear wave theory.

shore_orientation - find the orientation for a series of coordinates that define a line.

shore_profile_order - sort the profile order based on the E,N of the base point - min(Chainage).

simple_tide - function to compute a tidal water level time series using main constituents scaled to required tidal amplitude.

slope_points - find point and slope on line (eg a shore profile nearest to zlevel).

sortENdata2line - sort the eastings and northings into an order that makes the best continuous line

tau_crit - calculate the critical erosion shear stress and erosion rate for sand, mud or mixed sediments.

tma_spectrum - calculate the TMA spectrum for waves that are depth limited.

tidalrange - compute tidal range from a water level time series.

ucrit - compute the critical flow velocity for a given critical shear stress and wave conditions in the wave-current case.

ut_constants.mat - binary file of constituents used by **ctTidalAnalysis** class.

ut_reconstr - reconstruct superposed harmonics (code from Matlab™ Forum).



ut_solv - execute harmonic tidal analysis (code from Matlab™ Forum).

waterlevelfreqplots - create various water level exceedance and duration plots.

wave_energyflux - function to calculate the wave energy flux (wave power) using linear wave theory.

wave_friction - compute the wave friction factor for rough and smooth turbulent conditions and smooth laminar conditions.

wave_scatter - plot H-T scatter diagram that uses the wave celerity based on water depth to add contours of wave steepness, plot a 3D contoured histogram or various combinations of height, period, depth and steepness.

wave_scatter_3d - plot H-T-D scatter diagram of wave height, period and direction as a scatter diagram with colormap used for wave height.

wave_stEEPNESS - compute the wave steepness for given wave height, wave period and water depth.

xshore_bailard - computes the cross-shore transport for given wave and beach conditions.



7 Bibliography

Abramov V and Khan M K, 2017, A Practical Guide to Market Risk Model Validations (Part II - VaR Estimation). p. 70, <http://dx.doi.org/10.2139/ssrn.3080557>.

Alexandrakis G and Poulos S, 2014, An holistic approach to beach erosion vulnerability assessment. *Sci Rep*, 4, p. 6078, 10.1038/srep06078.

Antoniades I P, Brandi G, Magafas L and Di Matteo T, 2021, The use of scaling properties to detect relevant changes in financial time series: A new visual warning tool. *Physica A: Statistical Mechanics and its Applications*, 565, 10.1016/j.physa.2020.125561.

Bailard J A, 1981, An energetics total load sediment transport model for a plane sloping beach. *Journal of Geophysical Research: Oceans*, 86 (C11), pp. 10938–10954, 10.1029/JC086iC11p10938.

Bailard J A, 1982, Modelling on-offshore sediment transport in the surf zone, International Conference on Coastal Engineering, pp. 1419–1438, ASCE.

Bailard J A and Inman D L, 1981, An energetics bedload model for a plane sloping beach: Local transport. *Journal of Geophysical Research: Oceans*, 86 (C3), pp. 2035–2043, 10.1029/JC086iC03p02035.

Benedet L, Dobrochinski J P F, Walstra D J R, Klein A H F and Ranasinghe R, 2016, A morphological modeling study to compare different methods of wave climate schematization and evaluate strategies to reduce erosion losses from a beach nourishment project. *Coastal Engineering*, 112, pp. 69–86, 10.1016/j.coastaleng.2016.02.005.

Bernabeu A M, Medina R and Vidal C, 2003a, A morphological model of the beach profile integrating wave and tidal influences. *Marine Geology*, 197 (1-4), pp. 95–116, 10.1016/s0025-3227(03)00087-2.

Bernabeu A M, Medina R and Vidal C, 2003b, Wave reflection on natural beaches: an equilibrium beach profile model. *Estuarine, Coastal and Shelf Science*, 57 (4), pp. 577–586.

Bosboom J and Reniers A J H M, 2014, Scale-selective validation of morphodynamic models, 34th International Conference on Coastal Engineering, pp. 1911–1920, Seoul, South-Korea.

Bosboom J, Reniers A J H M and Luijendijk A P, 2014, On the perception of morphodynamic model skill. *Coastal Engineering*, 94, pp. 112–125, <https://doi.org/10.1016/j.coastaleng.2014.08.008>.

Bosom E and Jiménez J A, 2011, Probabilistic coastal vulnerability assessment to storms at regional scale – application to Catalan beaches (NW Mediterranean). *Natural Hazards and Earth System Science*, 11 (2), pp. 475–484, 10.5194/nhess-11-475-2011.

Bouws E, Günther H, Rosenthal W and Vincent C L, 1985, Similarity of the wind wave spectra in finite depth water: Part 1 - spectral form. *Journal of Geophysical Research*, 90 (C1), pp. 975–986.

Bouws E, Günther H, Rosenthal W and Vincent C L, 1987, Similarity of the wind wave spectrum in finite depth water: Part 2 - statistical relations between shape and growth stage parameters. *Dt.hydrogr.Z*, 40, pp. 1–24.

Brandi G and Di Matteo T, 2021, On the statistics of scaling exponents and the multiscaling value at risk. *The European Journal of Finance*, pp. 1–22, 10.1080/1351847x.2021.1908391.

Carter D J, 1982, Estimation of wave spectra from wave height and period, MIAS Publication, Report No: 4, pp. 1–21, Godalming.



Castelle B, Marieu V, Bujan S, Ferreira S, Parisot J-P, Capo S, Sénéchal N and Chouzenoux T, 2014, Equilibrium shoreline modelling of a high-energy meso-macrotidal multiple-barred beach. *Marine Geology*, 347, pp. 85–94, 10.1016/j.margeo.2013.11.003.

Codiga D L, 2011, Unified Tidal Analysis and Prediction Using the UTide Matlab Functions, Report No: 2011-01, p. 59, Graduate School of Oceanography, University of Rhode Island, Narragansett, RI, 10.13140/RG.2.1.3761.2008.

Coles S, 2001, An Introduction to Statistical Modeling of Extreme Values, Springer-Verlag, London.

Dean R G, 1977, Equilibrium beach profiles: US Atlantic and Gulf coasts, Report No: Ocean Engineering Report No 12, Newark, Delaware.

Di Matteo T, Aste T and Dacorogna M M, 2003, Scaling behaviors in differently developed markets. *Physica A: Statistical Mechanics and its Applications*, 324 (1-2), pp. 183–188, 10.1016/s0378-4371(02)01996-9.

Donelan M A, Hamilton J and Hui W H, 1985, Directional Spectra of wind-generated waves. *Phil.Trans.R.Soc.Lond.A.*, 315 (1534), pp. 509–562.

Hallermeier R J, 1981, A profile zonation for seasonal sand beaches from wave climate. *Coastal Engineering*, 4 (3), pp. 253–277.

Hsu J R-C, Yu M J, Lee F C and Benedet L, 2010, Static bay beach concept for scientists and engineers: A review. *Coastal Engineering*, 57 (2), pp. 76–91.

Hsu J R C and Evans C, 1989, Parabolic bay shapes and applications. *Proceedings - Institution of Civil Engineers.Part 2.Research and theory*, 87, pp. 557–570.

Hsu J R C, Silvester R and Xia Y M, 1989, Applications of headland control. *Journal of Waterway, Port, Coastal and Ocean Engineering*, 115 (3), pp. 299–326.

Hughes S A, 1984, The TMA shallow-water spectrum description and applications, *Coastal Engineering Research Centre*, Report No: CERC-84-7, pp. 1–39, Washington DC.

Ihlen E A, 2012, Introduction to multifractal detrended fluctuation analysis in matlab. *Front Physiol*, 3, p. 141, 10.3389/fphys.2012.00141.

Kamphuis W J, 1991, Alongshore sediment transport rate. *ASCE, Journal of the Waterway, Port, Coastal and Ocean Division*, 117 (6), pp. 624–640.

Kitaigorodskii S A, Krasitskii V P and Zaslavskii M M, 1975, On Phillips theory of equilibrium range in the spectra of wind-generated gravity waves. *Journal of Physical Oceanography*. *Journal of Physical Oceanography*, 5 (3), pp. 410–420.

Kuik A J, Van Vledder G P and Holthuijsen L H, 1988, A Method for the Routine Analysis of Pitch-and-Roll Buoy Wave Data. *Journal of Physical Oceanography*, 18 (7), pp. 1020–1034, 10.1175/1520-0485(1988)018<1020:amfra>2.0.co;2.

Mason D C and Dhoop T, 2018, Occurrence of Bimodal Seas around the English Coastline, National Network of Regional Coastal Monitoring Programmes of England, Report No: TN 02, p. 8, Channel Coastal Observatory,, Southampton,
https://coastalmonitoring.org/ccoresources/bimodalseas/Occurrence_of_Bimodal_Seas_around_the_English_Coastline_TN02.pdf.



Masselink G, Austin M, Tinker J, O'Hare T and Russell P, 2008, Cross-shore sediment transport and morphological response on a macrotidal beach with intertidal bar morphology, Truc Vert, France. *Marine Geology*, 251 (3-4), pp. 141–155, 10.1016/j.margeo.2008.01.010.

Medina R, Bernabeu A M, Vidal C and González M, 2004, A general equilibrium beach profile formulation, In: SASME Book of Abstracts, Series, pp. 1–3.

Montano J, Coco G, Antolinez J A A, Beuzen T, Bryan K R, Cagigal L, Castelle B, Davidson M A, Goldstein E B, Ibaceta R, Idier D, Ludka B C, Masoud-Ansari S, Mendez F J, Murray A B, Plant N G, Ratliff K M, Robinet A, Rueda A, Senechal N, Simmons J A, Splinter K D, Stephens S, Townend I, Vitousek S and Vos K, 2020, Blind testing of shoreline evolution models. *Sci Rep*, 10 (1), p. 2137, <https://doi.org/10.1038/s41598-020-59018-y>.

Morales R, Di Matteo T, Gramatica R and Aste T, 2012, Dynamical generalized Hurst exponent as a tool to monitor unstable periods in financial time series. *Physica A: Statistical Mechanics and its Applications*, 391 (11), pp. 3180–3189, <https://doi.org/10.1016/j.physa.2012.01.004>.

Owen M W, 1980, Design of seawalls allowing for wave overtopping, Report No: EX 924, Wallingford.

Pacheco J C R, Román D T and Vargas L E, 2008, R/S Statistic: Accuracy and Implementations, 18th International Conference on Electronics, Communications and Computers (conielecomp 2008), IEEE, 10.1109/conielecomp.2008.14.

Pierson Jr. W J and Moskowitz L, 1964, A proposed spectral form for fully developed wind seas based on the similarity theory of S. A. Kitaigorodskii. *Journal of Geophysical Research (1896-1977)*, 69 (24), pp. 5181–5190, <https://doi.org/10.1029/JZ069i024p05181>.

Poate T G, McCall R T and Masselink G, 2016, A new parameterisation for runup on gravel beaches. *Coastal Engineering*, 117, pp. 176–190, 10.1016/j.coastaleng.2016.08.003.

Reis A H and Gama C, 2010, Sand size versus beachface slope — An explanation based on the Constructal Law. *Geomorphology*, 114 (3), pp. 276–283, 10.1016/j.geomorph.2009.07.008.

Silvester R, 1985, Natural headland control of beaches. *Continental Shelf Research*, 4 (5), pp. 581–596.

Silvester R and Hsu J R C, 1997, *Coastal Stabilization*, World Scientific Publishing, Singapore.

Soulsby R, 1997, *Dynamics of marine sands*, p. 249, Thomas Telford, London.

Stockdon H F, Holman R A, Howd P A and Sallenger A H, 2006, Empirical parameterization of setup, swash, and runup. *Coastal Engineering*, 53 (7), pp. 573–588, 10.1016/j.coastaleng.2005.12.005.

Stokes K, Poate T, Masselink G, King E, Saulter A and Ely N, 2021, Forecasting coastal overtopping at engineered and naturally defended coastlines. *Coastal Engineering*, 164, 10.1016/j.coastaleng.2020.103827.

Sutcliffe J, Hurst S, Awadallah A G, Brown E and Hamed K, 2016, Harold Edwin Hurst: the Nile and Egypt, past and future. *Hydrological Sciences Journal*, 61 (9), pp. 1557–1570, 10.1080/02626667.2015.1019508.

Taylor K E, 2001, Summarizing multiple aspects of model performance in a single diagram. *Journal of Geophysical Research - Atmospheres*, 106 (D7), pp. 7183–7192, 10.1029/2000JD900719.



CoastalTools™ manual

February 2026

Tucker M J, Carr A P and Pitt E G, 1983, The effect of an offshore bank in attenuating waves. *Coastal Engineering*, 7 (2), pp. 133–144, [http://dx.doi.org/10.1016/0378-3839\(83\)90009-1](http://dx.doi.org/10.1016/0378-3839(83)90009-1).

USACE, 1984, Shore Protection Manual, US Army Corps, Vicksburg.

Van der Meer J W, Allsop N W H, Bruce T, De Rouck J, Kortenhaus A, Pullen T, Schüttrumpf H, Troch P and Zanuttigh B, 2018, EurOtop manual, <http://www.overtopping-manual.com/>.

Villamarín B C, 2017, Beach Cross-shore dynamics: Applicability of Equilibrium Shoreline models. Masters thesis, Universidad del País Vasco, Plentzia.

Walstra D J R, Hoekstra R, Tonnon P K and Ruessink B G, 2013, Input reduction for long-term morphodynamic simulations in wave-dominated coastal settings. *Coastal Engineering*, 77, pp. 57–70.

Wright L D and Short A D, 1984, Morphodynamic variability of surf zones and beaches: A synthesis. *Marine Geology*, 56 (1–4), pp. 93–118, [http://dx.doi.org/10.1016/0025-3227\(84\)90008-2](http://dx.doi.org/10.1016/0025-3227(84)90008-2).

Yates M L, Guza R T and O'Reilly W C, 2009, Equilibrium shoreline response: Observations and modeling. *Journal of Geophysical Research*, 114 (C9), 10.1029/2009jc005359.



Appendix A – Input Data File Formats

Existing file formats are detailed in this section. For details of how to add a file format to an existing data class, or add a new data class see Appendix B.

Waves

1) Channel Coastal Observatory (CCO) format: <http://www.channelcoast.org/>

Date/Time (GMT)	Latitude	Longitude	Flag	Hs (m)	HsMax (m)	Tp (s)	Tp (Tm) (s)	Dirp (degrees)	Spread (deg)	SST (deg C)
01-Jan-2004 00:00:00	50.73422	-0.49434	3	1.510	2.600	4.8	3.9	183	25	9999.0
01-Jan-2004 00:30:00	50.73412	-0.49400	3	1.630	2.580	5.0	4.0	176	27	9999.0
01-Jan-2004 01:00:00	50.73412	-0.49400	3	1.940	3.300	5.3	4.3	176	18	9999.0
01-Jan-2004 01:30:00	50.73409	-0.49406	3	2.030	3.900	5.6	4.3	177	23	9999.0
01-Jan-2004 02:00:00	50.73410	-0.49402	3	2.270	3.420	5.6	4.5	183	18	9999.0
01-Jan-2004 02:30:00	50.73410	-0.49404	3	2.360	3.330	5.9	4.6	176	21	9999.0
01-Jan-2004 03:00:00	50.73410	-0.49402	3	2.410	3.740	6.3	4.8	184	15	9999.0
01-Jan-2004 03:30:00	50.73410	-0.49400	3	2.340	3.780	6.3	4.9	186	18	9999.0
01-Jan-2004 04:00:00	50.73417	-0.49402	3	2.600	3.830	6.7	4.9	191	15	9999.0
01-Jan-2004 04:30:00	50.73418	-0.49406	3	2.560	3.740	6.3	5.0	194	17	9999.0

2) Simple wave record

Format is defined using Matlab script in the header line. The format shown here is date, time (hours and minutes only), Hs, Tp, Dir all as real numbers. This allows different date formats to be easily handled. The utility add_file_header.m (located in MUIfunctions folder) can be used to add a file header to multiple files.

```
1 %dd/mm/yyyyD %H:%m%I %f %f %f  
2 01/01/1980 00:00 0.274 9.35 217  
3 01/01/1980 03:00 0.256 9.26 211.5  
4 01/01/1980 06:00 0.256 9.26 211  
5 01/01/1980 09:00 0.25 9.17 210.6  
6 01/01/1980 12:00 0.248 9.17 209.9  
7 01/01/1980 15:00 0.248 9.09 208.9  
8 01/01/1980 18:00 0.246 14.08 207.7  
9 01/01/1980 21:00 0.278 13.89 203.3  
10 02/01/1980 00:00 0.378 13.7 179.3  
11 02/01/1980 03:00 0.402 13.7 258.9  
12 02/01/1980 06:00 0.414 13.51 251.3  
13 02/01/1980 09:00 0.418 13.33 224.  
14 02/01/1980 12:00 0.43 13.16 211.9  
15 02/01/1980 15:00 0.468 12.99 217.6  
16 02/01/1980 18:00 0.436 12.99 203.4  
17 02/01/1980 21:00 0.442 13.16 200.6
```

3) ShoreCast file format (date and time are in vector format followed by variables)

```
Year Month Day Hour[NZST] Min Sec Hs[m]Tp[s]Tm01[s]Tm02[s]Dir[°]  
1979 1 1 12 0 0 1.860000 12.093000 11.615000 11.303000 53.447000  
1979 1 1 15 0 0 1.860000 12.097000 11.625000 11.338000 53.866000  
1979 1 1 18 0 0 1.859000 12.108000 11.636000 11.365000 54.076000  
1979 1 1 21 0 0 1.851000 12.091000 11.626000 11.365000 54.219000  
1979 1 2 0 0 0 1.823000 12.027000 11.598000 11.345000 54.491000  
1979 1 2 3 0 0 1.771000 11.900000 11.505000 11.186000 54.856000  
1979 1 2 6 0 0 1.690000 11.758000 11.301000 10.744000 55.202000  
1979 1 2 9 0 0 1.593000 11.617000 11.158000 10.719000 55.567000  
1979 1 2 12 0 0 1.499000 11.475000 11.001000 10.672000 55.958000  
1979 1 2 15 0 0 1.420000 11.316000 10.826000 10.563000 56.397000
```



4) CCO directional wave spectrum (*.spt)

```
9 : 1.
10 : 71.000.
11 : 2.857.
12 : 2.1271E-1
13 : 24.95
14 : 2.95
15 : 1.
16 : 0.63000.
17 : 0.68500.
18 : -0.55375
19 : 37.969°.
20 : 73.037°.
21 : 0.0250, 1.4088E-3, 96, 80, 0.35, 1.42
22 : 0.0300, 3.5707E-3, 35, 62, -1.21, 1.75
23 : 0.0350, 3.0733E-3, 65, 68, 0.03, 2.14
24 : ...
25 : 0.0850, 1.9695E-3, 98, 51, -2.73, 3.40
26 : 0.0900, 2.9234E-3, 104, 44, 0.70, 6.06
27 : 0.0950, 1.8090E-3, 115, 53, -1.73, 4.03
28 : 0.1000, 2.4664E-3, 117, 44, 0.27, 5.46
29 : 0.1100, 1.6951E-3, 114, 63, -3.81, 2.87
30 : 0.1200, 6.4093E-3, 145, 64, 3.37, 2.47
31 : 0.1300, 3.9360E-2, 198, 58, 0.33, 1.55
32 : 0.1400, 1.1648E-1, 291, 34, -3.77, 9.22
33 : ...
34 : 0.5400, 1.0753E-1, 122, 47, -0.40, 1.71
35 : 0.5500, 1.8177E-1, 122, 38, 0.03, 2.71
36 : 0.5600, 2.1225E-1, 131, 38, -0.90, 3.36
37 : 0.5700, 1.5961E-1, 121, 43, -0.20, 2.50
38 : 0.5800, 1.4661E-1, 114, 45, 0.34, 2.34
```

Header Format

System file (12 parameters)

tn: transmission index (1 to 8)

Hs: significant wave height [cm]

Tz: zero-upcross period [s]

Smax: maximum of the psd S(f) [m^2/Hz]

Tref: reference temperature [°C, centigrade]

Tsea: Sea surface temperature [°C, centigrade]

Bat: Battery status (0 = empty to 7 = full)

Av: offset of the vertical accelerometer

Ax: offset of the x-accelerometer

Ay: offset of the y-accelerometer

Ori: buoy orientation [°]

Incli: magnetic inclination [°]

Spectrum data (64 x 6 array)

f, S(f) / Smax, Dir(f), Spr(f), Skew(f), Kurt(f)

f: wave frequency [Hz]

S(f) / Smax: relative psd (power spectral density) [-]

Dir(f): wave direction [°]

Spr(f): directional spread [°]

Skew(f): skewness of the directional distribution [-]

Kurt(f): kurtosis of the directional distribution [-]



5) CEFAS Wavenet format

```
1 Time (GMT) → Average (zero crossing) wave period (s) → Dominant (peak)
2 wave direction (degrees) → Dominant (peak) wave period (s) → Significant
3 wave height (Hm0) (m) → Temperature (°C) → Wave spread (degrees)
4 2016-01-01 00:00:00 7.5 211 14.3 2.72 11.65 20 → → → → →
5 2016-01-01 00:30:00 7.5 217 13.3 2.71 11.65 15 → → → → →
6 2016-01-01 01:00:00 8.0 212 15.4 2.71 11.65 19 → → → → →
7 2016-01-01 01:30:00 8.2 219 12.5 2.73 11.65 13 → → → → →
8 2016-01-01 02:00:00 8.2 222 15.4 2.45 11.65 13 → → → → →
9 2016-01-01 02:30:00 8.5 218 12.5 2.53 11.65 9 → → → → →
10 2016-01-01 03:00:00 8.7 214 12.5 2.48 11.60 9 → → → → →
11 2016-01-01 03:30:00 8.3 222 12.5 2.22 11.60 10 → → → → →
12 2016-01-01 04:00:00 8.5 218 16.7 2.18 11.60 11 → → → → →
13 2016-01-01 04:30:00 7.8 214 16.7 1.90 11.55 22 → → → → →
14 2016-01-01 05:00:00 7.7 224 14.3 1.87 11.55 23 → → → → →
15 2016-01-01 05:30:00 7.4 232 15.4 1.68 11.50 30 → → → → →
16 2016-01-01 06:00:00 6.9 221 16.7 1.68 11.50 30 → → → → →
17 2016-01-01 06:30:00 6.6 221 15.4 1.66 11.50 19 → → → → →
18 2016-01-01 07:00:00 6.1 219 14.3 1.62 11.45 18 → → → → →
19 2016-01-01 07:30:00 6.3 222 15.4 1.72 11.40 18 → → → → →
20 2016-01-01 08:00:00 5.6 226 14.3 1.62 11.40 17 → → → → →
21 2016-01-01 08:30:00 5.6 222 15.4 1.74 11.40 19 → → → → →
22 2016-01-01 09:00:00 5.6 214 14.3 1.93 11.40 20 → → → → →
23 2016-01-01 09:30:00 5.1 210 14.3 1.91 11.40 20 → → → → →
24 2016-01-01 10:00:00 5.4 214 14.3 2.06 11.45 16 → → → → →
25 2016-01-01 10:30:00 5.6 215 14.3 2.21 11.50 19 → → → → →
26 2016-01-01 11:00:00 5.6 219 14.3 2.37 11.55 17 → → → → →
27 2016-01-01 11:30:00 5.7 214 14.3 2.54 11.55 20 → → → → →
```

6) Copernicus wave physics reanalysis

Files are in netCDF format. The import function currently assumes that the file contains a single point at a given Latitude, Longitude (see copernicus_wave_format.m). For details of data available and the file format see for example: for example:

Atlantic- European North West Shelf- Wave Physics Reanalysis

https://data.marine.copernicus.eu/product/NWSHELF_REANALYSIS_WAV_004_015/description

<https://doi.org/10.48670/moi-00060>

Water Levels

1) Date-Level format

Format is defined using Matlab script in header line. Format shown here is record number (not used), date, time, elevation (mOD). This allows different date formats to be easily handled. The utility add_file_header.m (located in MUIfunctions folder) can be used to add a file header to multiple files.

```
%*s %{yyyy/MM/dd}D %{HH:mm:ss}D %q
262921) 2000/01/01 00:00:00 1.599
262922) 2000/01/01 00:15:00 1.604
262923) 2000/01/01 00:30:00 1.633
262924) 2000/01/01 00:45:00 1.669
262925) 2000/01/01 01:00:00 1.704
262926) 2000/01/01 01:15:00 1.750
262927) 2000/01/01 01:30:00 1.804
262928) 2000/01/01 01:45:00 1.868
262929) 2000/01/01 02:00:00 1.926
262930) 2000/01/01 02:15:00 1.986
262931) 2000/01/01 02:30:00 2.038
```



CoastalTools™ manual

February 2026

2) Channel Coastal Observatory (CCO) format: <http://www.channelcoast.org/>

```
Date/Time (GMT) Tide_OD Tide_CD Residual (m) Flag
04-Jul-2008 14:50:00 -0.262 2.388 0.328 1
04-Jul-2008 15:00:00 -0.190 2.460 0.307 1
04-Jul-2008 15:10:00 -0.098 2.552 0.309 1
04-Jul-2008 15:20:00 -0.006 2.644 0.311 1
04-Jul-2008 15:30:00 0.095 2.745 0.320 1
04-Jul-2008 15:40:00 0.168 2.818 0.299 1
04-Jul-2008 15:50:00 0.298 2.948 0.330 1
04-Jul-2008 16:00:00 0.429 3.079 0.355 1
04-Jul-2008 16:10:00 0.498 3.148 0.310 1
04-Jul-2008 16:20:00 0.620 3.270 0.311 1
04-Jul-2008 16:30:00 0.711 3.361 0.271 1
04-Jul-2008 16:40:00 0.658 3.508 0.279 1
04-Jul-2008 16:50:00 0.975 3.625 0.250 1
04-Jul-2008 17:00:00 1.124 3.774 0.247 1
04-Jul-2008 17:10:00 1.297 3.947 0.264 1
04-Jul-2008 17:20:00 1.470 4.120 0.279 1
04-Jul-2008 17:30:00 1.631 4.281 0.283 1
04-Jul-2008 17:40:00 1.784 4.434 0.283 1
04-Jul-2008 17:50:00 1.920 4.570 0.273 1
```

3) British Oceanographic Data Centre format: <http://www.bodc.ac.uk/>

3(a) BODC NTSLF format

```
Port: P008
Site: Portsmouth
Latitude: 50.80256
Longitude: -1.11175
Start Date: 01JAN1991-00.00.00
End Date: 31DEC1991-23.00.00
Contributor: National Oceanography Centre, Liverpool
Datum information: The data refer to Admiralty Chart Datum (ACD)
Parameter code: ASLVBG02 = Surface elevation (unspecified datum) of the water body by bubbler tide gauge
Cycle Date Time ASLVBG02 Residual
Number xxw mm dd hh mi ssf f f
689) 1991/01/29 16:00:00 0.618 -0.227
690) 1991/01/29 17:00:00 1.076 -0.155
691) 1991/01/29 18:00:00 1.634 -0.119
692) 1991/01/29 19:00:00 1.946 -0.138
693) 1991/01/29 20:00:00 2.508 -0.133
694) 1991/01/29 21:00:00 3.436 -0.117
695) 1991/01/29 22:00:00 4.291 -0.079
696) 1991/01/29 23:00:00 4.592 -0.046
697) 1991/01/30 00:00:00 4.455 -0.046
698) 1991/01/30 01:00:00 4.151 -0.050
699) 1991/01/30 02:00:00 3.214 -0.049
700) 1991/01/30 03:00:00 1.734 -0.157
```

3(b) BODC ODV format

```
//Data documentation at https://www.bodc.ac.uk/data/documents/series/5377651/
//If you find any issues with this data please report it to enquiries@bodc.ac.uk
//ODV version 1.0
//<subject>SDN:LOC1:Chronological Julian Date:</subject><object>SDN:F01::JDWV1101</object><unit>s</unit>SDN:F06::UTAAK</units>
//<subject>SDN:LOCAL:Seal1:bubbler</subject><object>SDN:F01::ASLVBG01</object><unit>s</unit>SDN:F06::ULAK</units>
//<subject>SDN:LOCAL:Seal1:bubbler2</subject><object>SDN:F01::ASLVBG02</object><unit>s</unit>SDN:F06::ULAK</units>
//<subject>SDN:LOCAL:HTSeal1v1</subject><object>SDN:F01::ASLVBH01</object><unit>s</unit>SDN:F06::ULAK</units>
//<subject>SDN:LOCAL:HTSeal1v2</subject><object>SDN:F01::ASLVBH02</object><unit>s</unit>SDN:F06::ULAK</units>

Cruise Station Type www-mm-ddThhmm:ss.sss Longitude [degrees_east] Latitude [degrees_north] LOCAL_CDI_ID EDMO_code Bot. Depth [m]
Chronological Julian Date [days] QV:SEADATANET SeLvl1_bubbler [m] QV:SEADATANET SeLvl1_bubbler2 [m] QV:SEADATANET HTSeal1v1 [m] QV:SEADATANET HTSeal1v2 [m]
unspecified 988/1996/172 * 1996-06-20T10:00:17.000 -1.8749 50.7149 537651 45 0 2450255.416858 1 1.862 1 1.872 1
2450255.427179 1 1.877 8 1.869 8 1.888
2450255.437500 1 1.901 1 1.892 1 1.901 1
2450255.447500 1 1.820 1 1.811 1 1.820 1
2450255.459333 1 1.941 1 1.935 1 1.940 1
2450255.469750 1 1.904 1 1.895 1 1.901 1
2450255.479167 1 1.898 1 1.890 1 1.896 1
2450255.489583 1 1.884 1 1.882 1 1.888 1
2450255.500000 1 1.860 1 1.859 1 1.864 1
2450255.510417 1 1.831 1 1.828 1 1.834 1
2450255.520833 1 1.799 1 1.796 1 1.802 1
2450255.531250 1 1.765 1 1.763 1 1.765 1
2450255.541667 1 1.731 1 1.726 1 1.736 1
2450255.552083 1 1.713 1 1.707 1 1.718 1
2450255.562500 1 1.705 1 1.698 1 1.705 1
```

4) ShoreCast file format (date and time are in vector format followed by variables)



```
Year Month Day Hour[NZST] Min Sec tide[m]
1968 1 1 2 0 0 -0.796000
1968 1 1 3 0 0 -0.462000
1968 1 1 4 0 0 -0.009000
1968 1 1 5 0 0 0.454000
1968 1 1 6 0 0 0.820000
1968 1 1 7 0 0 1.003000
1968 1 1 8 0 0 0.963000
1968 1 1 9 0 0 0.717000
1968 1 1 10 0 0 0.226000
```

Winds

Three formats are currently implemented.

1) Date-Record format

The format read statement is given as the header of the data. The default definition assumes date, time, wind speed (m/s) direction (degTN). A typical header would then be:

```
%{yyyy-MM-dd}D %{HH:mm:ss}D %f %f
```

This is similar to the wave and water level date-record format files.

Note: the order of the year-month-date format needs to match that used in the file. This allows different date and record formats to be handled. The utility `add_file_header.m` (located in MUIfunctions folder) can be used to add a file header to multiple files.

Note that if the variables in the record change, then a new file format will be needed to define the variables (see Appendix B).

2) CEDA MIDAS format

This data is available from:

<https://catalogue.ceda.ac.uk/data.ceda.ac.uk/badc/ukmo-midas-open/data/uk-mean-wind-obs/dataset-version-201908/>

The data is delivered as a csv file that can be opened in Excel and loaded directly into CoastalTools. The files have a very large header, with a lot of useful meta-data, so an image is not reproduced here.

3) Hong Kong data format

You may need to edit the wind file to replace the header as shown below:

Date	hour	Dir10min	Speed10min	Dir1hr	Speed1hr
20180913 01	80	7.1	80	7.2	
20180913 02	80	7.1	80	6.7	
20180913 03	80	7.1	80	7.5	
20180913 04	80	7.7	80	7.1	
20180913 05	80	6.3	80	7.0	
20180913 06	80	5.4	80	5.9	
20180913 07	70	6.0	80	5.1	
20180913 08	80	5.8	80	5.3	
20180913 09	80	6.3	80	6.2	
20180913 10	90	2.9	80	5.0	
20180913 11	80	6.1	80	4.8	
20180913 12	80	7.4	80	6.4	
20180913 13	80	6.6	80	6.6	
20180913 14	80	6.9	80	7.0	
20180913 15	80	6.5	80	7.0	
20180913 16	90	5.7	80	6.7	
20180913 17	90	5.9	90	6.2	
20180913 18	90	5.7	90	5.7	
20180913 19	90	5.5	90	5.4	

Wind-wave Hindcast Fetches

For each location on the coast you will need a fetch file. The file `Test_Fetch_Lengths.txt` is an example file. This defines the fetch lengths at the site in 10-degree intervals measured from true north (defined from 0 to 350 degrees even if zero).



CoastalTools™ manual

February 2026

```
1 Dir Fetch
2 0 0
3 10 0
4 20 0
5 30 1500
6 40 2300
7 50 16000
8 60 17500
9 70 23000
10 80 22000
```

Beach Profiles

- 1) Channel Coastal Observatory (CCO) format: <http://www.channelcoast.org/>

```
Easting Northing Elevation_OD Chainage FC Profile Reg_ID
488072.856 95985.552 6.364 130.396 G 112 4d01403
488075.556 95986.445 6.381 133.882 G 112 4d01403
488078.392 95984.552 6.446 137.406 G 112 4d01403
488081.390 95982.129 6.501 141.260 G 112 4d01403
488084.150 95979.326 6.373 144.793 G 112 4d01403
488087.123 95977.767 6.619 148.463 G 112 4d01403
488089.877 95975.476 6.691 152.044 G 112 4d01403
488092.331 95973.597 6.659 155.134 G 112 4d01403
488094.608 95971.872 4.963 157.991 G 112 4d01403
488095.918 95970.882 4.910 159.632 G 112 4d01403
488096.593 95970.270 4.808 160.541 G 112 4d01403
488097.447 95969.618 5.052 161.615 G 112 4d01403
488098.132 95969.069 5.117 162.493 G 112 4d01403
```

- 2) Chainage profiles listed as one, or more, profile with one, or more, surveys (dates) per file

```
1 Site ProfileID Date Chainage Elevation Flag
2 NARRA PF6 1976-04-27 0 6.25 EMERY
3 NARRA PF6 1976-04-27 10 1.68 EMERY
4 NARRA PF6 1976-04-27 20 0.1 EMERY
5 NARRA PF6 1976-04-27 30 -0.95 EMERY
6 NARRA PF8 1976-04-27 0 3.42 EMERY
7 NARRA PF8 1976-04-27 10 2.65 EMERY
8 NARRA PF8 1976-04-27 20 2.24 EMERY
9 NARRA PF8 1976-04-27 30 1.9 EMERY
10 NARRA PF8 1976-04-27 40 1.42 EMERY
11 NARRA PF8 1976-04-27 50 1.18 EMERY
12 NARRA PF8 1976-04-27 60 0.88 EMERY
13 NARRA PF8 1976-04-27 70 0.36 EMERY
14 NARRA PF8 1976-04-27 80 -0.19 EMERY
15 NARRA PF8 1976-04-27 90 -0.51 EMERY
16 NARRA PF8 1976-04-27 0 9.25 EMERY
17 NARRA PF8 1976-04-27 10 7.92 EMERY
18 NARRA PF8 1976-04-27 20 6.75 EMERY
19 NARRA PF2 1976-04-27 30 3.72 EMERY
20 NARRA PF2 1976-04-27 40 2.54 EMERY
21 NARRA PF2 1976-04-27 50 2.15 EMERY
22 NARRA PF2 1976-04-27 60 0.66 EMERY
23 NARRA PF2 1976-04-27 70 0.18 EMERY
24 NARRA PF2 1976-04-27 80 -0.09 EMERY
```

- 3) Chainage profiles listed as one survey (date) with multiple profiles per file

```
1 Site ProfileID Date Chainage Elevation Flag
2 DUCK P-100 1998-01-12 0.00 6.30 GPS
3 DUCK P-100 1998-01-12 12.00 5.85 GPS
4 DUCK P-100 1998-01-12 24.00 3.62 GPS
5 DUCK P-100 1998-01-12 36.00 2.25 GPS
6 DUCK P-100 1998-01-12 48.00 1.13 GPS
7 DUCK P-100 1998-01-12 60.00 -0.01 GPS
8 DUCK P-100 1998-01-12 72.00 -1.19 GPS
9 DUCK P-100 1998-01-12 84.00 -1.86 GPS
10 DUCK P-100 1998-01-12 96.00 -2.14 GPS
11 DUCK P-100 1998-01-12 108.00 -2.29 GPS
12 DUCK P-100 1998-01-12 120.00 -2.26 GPS
13 DUCK P-100 1998-01-12 132.00 -2.17 GPS
14 DUCK P-100 1998-01-12 144.00 -2.00 GPS
15 DUCK P-100 1998-01-12 156.00 -1.88 GPS
16 nnnk P-100 1998-01-12 168.00 -0.07 GPS
```

The CCO format includes a column 'FC' for Feature Codes, which are defined as follows:

1	ZZ	Unknown
2	S	Sand
3	M	Mud



4	MS	Mud and Sand
5	G	Gravel
5	VG	Vegetated gravel
6	GS	Gravel and Sand
7	GM	Gravel and Mud
8	X	Mixture
8	MX	Mixture
9	SH	Shell
10	BO	Boulders
11	R	Rock
12	SM	Saltmarsh
13	HW	High water mark
14	SD	Sea defence
15	W	Water body
16	G	Grass
17	D	Dune
18	DV	Vegetated dune
19	F	Forested
20	FB	Obstruction
21	CT	Cliff top
21	CL	Cliff line
22	CE	Cliff edge
23	CF	Cliff face
24	SP	Start point of line
24	ZCP	Start point of line

For further details see <http://www.channelcoast.org/>

Shoreline Position

Format is as used for the 2018 ShoreCast exercise (Montano *et al.*, 2020)

Header defines columns (NB date and time are 6 columns unlike most other formats provided for).

```
1 Year Month Day Hour[NZST] Min Sec Average[1
2 1999 1 2 9 0 0 56.399675
3 1999 1 3 7 30 0 57.672548
4 1999 1 4 6 0 0 58.945422
5 1999 1 4 11 0 0 58.861482
6 1999 1 4 18 0 0 57.973684
7 1999 1 5 7 0 0 56.324917
8 1999 1 5 11 0 0 56.583697
9 1999 1 6 7 0 0 61.708058
10 1999 1 6 12 0 0 62.101505
11 1999 1 7 10 30 0 61.209084
12 1999 1 8 9 0 0 60.316662
13 1999 1 8 14 0 0 60.458741
14 1999 1 9 10 0 0 60.972464
15 1999 1 10 2 40 0 60.536215
16 1999 1 10 19 20 0 60.099966
17 1999 1 11 12 0 0 59.678588
18 1999 1 11 16 0 0 59.593717
19 1999 1 12 12 40 0 59.155216
20 1999 1 13 9 20 0 58.716715
```



CoastalTools™ manual

February 2026

File formats for Load and Add tabular data

ASCII text file:

Name	ID	JNCC	EWPA	Type	id	Range	Veh	Veh	Veh	Valu	Valu	Valu	Sent	Salv	Ambv	Ant	Anlw
Thames Estuary	117	Coastal Plain	Floodplain	6 - 5.5	6.9	0.7E+00	6.118e+00	4.178e+00	2.008e+00	6.194e+00	6.49e+00	5.81e+00	3.858e+04	2.318e+04			
Thames Estuary	118	Coastal Plain	Floodplain	6 - 5.5	6.9	0.7E+00	6.118e+00	4.178e+00	2.008e+00	6.194e+00	6.49e+00	5.81e+00	3.858e+04	2.318e+04			
Poole Harbour	119	Coastal Plain	Floodplain	6 - 5.5	6.9	0.7E+00	6.118e+00	4.178e+00	2.008e+00	6.194e+00	6.49e+00	5.81e+00	3.858e+04	2.318e+04			
Poole Harbour	120	Coastal Plain	Floodplain	6 - 5.5	6.9	0.7E+00	6.118e+00	4.178e+00	2.008e+00	6.194e+00	6.49e+00	5.81e+00	3.858e+04	2.318e+04			
Chichester Harbour	120	Bat Barri Estuary	Tidal inlet	7 - 4	4.2	5.908e-01	5.14e+00	2.358e+00	3.148e+00	1.668e+00	1.218e+00	1.108e+00	9.300e+03	9.300e+03	2.840e+04	1.528e+04	
Portsmouth Harbour	120	Bat Barri Estuary	Tidal inlet	7 - 4	4.2	5.908e-01	5.14e+00	2.358e+00	3.148e+00	1.668e+00	1.218e+00	1.108e+00	9.300e+03	9.300e+03	2.840e+04	1.528e+04	
Portsmouth Harbour	130	Bat Barri Estuary	Tidal inlet	7 - 4	4.2	7.218e-01	4.790e+00	2.638e+00	3.195e+00	1.158e+00	9.078e+00	6.062e+00	6.238e+03	4.790e+03	3.298e+03	2.382e+03	
Southampton Water	131	Coastal Plain	Spit Enclosed	4 - 6	1.998e+00	1.338e+00	7.638e+00	6.284e+00	2.678e+00	2.008e+00	1.973e+00	1.508e+00	1.028e+04	1.508e+04			
Haslar Harbour	132	Coastal Plain	Spit Enclosed	4 - 6	1.998e+00	1.338e+00	7.638e+00	6.284e+00	2.678e+00	2.008e+00	1.973e+00	1.508e+00	1.028e+04	1.508e+04			
Lympstone Estuary	133	Coastal Plain	Spit Enclosed	4 - 6	2.458e+00	1.418e+00	6.008e+00	3.289e+00	7.444e+00	4.686e+00	2.988e+00	1.796e+00	6.998e+02	4.686e+00	2.988e+00	1.796e+00	
Lympstone Estuary	134	Coastal Plain	Spit Enclosed	4 - 6	2.458e+00	1.418e+00	6.008e+00	3.289e+00	7.444e+00	4.686e+00	2.988e+00	1.796e+00	6.998e+02	4.686e+00	2.988e+00	1.796e+00	
Wootton Creek & Ryde Sands	135	Coastal Plain	Spit Enclosed	4 - 6	3.8	4.278e+00	2.148e+00	5.098e+00	9.568e+00	1.120e+00	1.134e+00	1.018e+00	4.898e+02	4.898e+02	1.170e+00		
Medine Estuary	136	Coastal Plain	Floodplain	4 - 5	4.2	4.728e+00	2.948e+00	1.424e+00	2.438e+00	9.454e+00	7.290e+00	5.704e+00	3.162e+00	1.818e+00	9.180e+02	9.180e+02	
Medine Estuary	137	Coastal Plain	Floodplain	4 - 5	4.2	4.728e+00	2.948e+00	1.424e+00	2.438e+00	9.454e+00	7.290e+00	5.704e+00	3.162e+00	1.818e+00	9.180e+02	9.180e+02	
Var Estuary	138	Coastal Plain	Spit Enclosed	4 - 5	5.598e-01	2.018e+00	9.538e+00	3.668e+00	1.718e+00	1.118e+00	1.418e+00	8.388e+00	2.474e+02				
Christchurch Harbour	139	Bat Barri Estuary	Spit Enclosed	1 - 2	1.958e+00	1.048e+00	5.430e+00	4.622e+00	9.586e+00	7.939e+00	1.118e+00	4.170e+00	1.708e+00				
The Fleet & Portland Harbour	140	Bat Barri Estuary	Tidal inlet	1 - 2	1.958e+00	1.048e+00	5.430e+00	4.622e+00	9.586e+00	7.939e+00	1.118e+00	4.170e+00	1.708e+00				
The Fleet & Portland Harbour	141	Bat Barri Estuary	Tidal inlet	1 - 2	1.958e+00	1.048e+00	5.430e+00	2.220e+00	1.664e+00	1.840e+00	1.068e+00	4.846e+00	3.328e+00	2.958e+00	2.664e+00		
Axe Estuary	142	Bat Barri Estuary	Spit Enclosed	3 - 7	1.128e+00	7.538e+00	6.728e+00	1.792e+00	2.195e+00	8.210e+00	1.598e+00	7.788e+00	4.405e+00	2.814e+00	1.068e+03		
Axe Estuary	143	Bat Barri Estuary	Spit Enclosed	3 - 7	1.128e+00	7.538e+00	6.728e+00	1.792e+00	2.195e+00	8.210e+00	1.598e+00	7.788e+00	4.405e+00	2.814e+00	1.068e+03		
Ese Estuary	144	Bat Barri Estuary	Spit Enclosed	4 - 6	4.698e+00	2.250e+00	5.203e+00	1.918e+00	1.068e+00	7.446e+00	2.814e+00	1.068e+00	7.446e+00	2.814e+00	1.068e+00		
Dart Estuary	145	Bat Barri Estuary	Spit Enclosed	4 - 6	4.698e+00	2.250e+00	5.203e+00	1.918e+00	1.068e+00	7.446e+00	2.814e+00	1.068e+00	7.446e+00	2.814e+00	1.068e+00		
Salcombe & Kingsbridge Estuary	147	Ria Tres	4 - 6	1.618e+00	6.858e+00	1.918e+00	7.068e+00	5.745e+00	9.983e+00	6.083e+00	4.683e+00	1.793e+00	6.452e+00	4.683e+00	1.793e+00		
Salcombe & Kingsbridge Estuary	148	Ria Tres	4 - 6	1.618e+00	6.858e+00	1.918e+00	7.068e+00	5.745e+00	9.983e+00	6.083e+00	4.683e+00	1.793e+00	6.452e+00	4.683e+00	1.793e+00		

Excel spreadsheet:



BlueKenu

See Blue Kenu manual for details of format:

http://www.nrc-cnrc.gc.ca/eng/solutions/advisory/blue_kenu_index.html

CoastalTools™ manual

February 2026

1) Time series at a point *.ts1

```
#####
:FileType ts1 ASCII EnSim 1.0
# Canadian Hydraulics Centre/National Research Council (c) 1998-2012
# DataType Type 1 Time Series
#
:Application      BlueKenu
:Version         3.3.4
:WrittenBy       Ian
:CreationDate    Fri, Feb 17, 2017 03:04 PM
#
#-----
:Name  Resampled FREE SURFACE (X 618062.01 Y 5633731.79)
#
:AttributeUnits 1 M
#
:LocationX      618062.009194
:LocationY      5633731.789242
#
:StartTime       2010/01/01 12:00:00.000
:DeltaT          0:15:00.000
#
:EndHeader
1.500000
1.500000
1.500000
1.500000
1.500539
```

2) Time series at a point *.ts2

Can be velocity and direction (MAGDIR), as shown here, or two velocity components (UV):

```
#####
:FileType ts2 ASCII EnSim 1.0
# Canadian Hydraulics Centre/National Research Council (c) 1998-2012
# DataType Type 2 Time Series
#
:Application      BlueKenu
:Version         3.3.4
:WrittenBy       Ian
:CreationDate    Fri, Feb 17, 2017 04:43 PM
#
#-----
:SourceFile      Solent1.xes
:ExtractPointSet Sample point
#
:Name  VELOCITY UV (X 618062.01 Y 5633731.79)
:Title VELOCITY UV: Solent1
#
:AttributeUnits 1 M/S
#
:LocationX      618062.009194
:LocationY      5633731.789242
#
:DataDefinition  MAGDIR
#
:StartTime       2010/01/01 12:00:00.000
:DeltaT          0:15:00.000
#
:EndHeader
0.000000 0.000000
0.000000 248.689590
0.000000 104.149414
0.000000 345.505493
0.000574 333.952698
0.053124 -0.000170
```



3) Time series at a point *.ts3

```
#####
:FileType ts3 ASCII EnSim 1.0
# Canadian Hydraulics Centre/National Research Council (c) 1998-2012
# DataType          Type 3 Time Series
#
:Application      BlueKenuue
:Version          3.3.4
:WrittenBy        Ian
:CreationDate     Fri, Feb 17, 2017 03:17 PM
#
#-----
:Name  Value(1) (X 621304.24 Y 5630374.26)
#
:AttributeUnits 1 M
#
:LocationX       0.000000
:LocationY       0.000000
#
#
:EndHeader
2010/01/01 12:00:00.000 1.500000
2010/01/01 12:15:00.000 1.500000
2010/01/01 12:30:00.000 1.500000
2010/01/01 12:45:00.000 1.500013
2010/01/01 13:00:00.000 1.509651
2010/01/01 13:15:00.000 1.686642
2010/01/01 13:30:00.000 1.480736
2010/01/01 13:45:00.000 0.585087
2010/01/01 14:00:00.000 -0.250650
2010/01/01 14:15:00.000 -0.681176
```

4) Time series at a point *.ts4

Can be velocity and direction (MAGDIR), or two velocity components (UV) as shown here:

```
#####
:FileType ts4 ASCII EnSim 1.0
# Canadian Hydraulics Centre/National Research Council (c) 1998-2012
# DataType          Type 4 Time Series
#
:Application      BlueKenuue
:Version          3.3.4
:WrittenBy        Ian
:CreationDate     Sun, Feb 19, 2017 11:03 AM
#
#-----
:Name  VELOCITY UV (X 618291.73 Y 5633143.44)
:Title VELOCITY UV: Solent1                               SERAFIN
#
:AttributeUnits 1 M/S
#
:LocationX       618291.732987
:LocationY       5633143.444948
#
:DataDefinition  UV
#
:EndHeader
2010/01/01 12:00:00.000 0.000000 0.000000
2010/01/01 12:15:00.000 -0.000000 -0.000000
2010/01/01 12:30:00.000 -0.000000 0.000000
2010/01/01 12:45:00.000 -0.000000 0.000000
2010/01/01 13:00:00.000 -0.000466 0.000647
2010/01/01 13:15:00.000 -0.034492 0.048785
2010/01/01 13:30:00.000 -0.113091 0.158124
2010/01/01 13:45:00.000 0.256879 -0.387983
2010/01/01 14:00:00.000 0.847288 -1.242919
```



Appendix B – Data set properties (DSproperties)

Data are stored in a *dstable*, which extends a Matlab *table* to hold more comprehensive metadata for multi-dimensional data sets. This makes use of a *dsproperties* class object to hold the metadata. The *dstable* and *dsproperties* classes are part of the *dstoolbox*. When loading data or saving model results the DSProperties can be defined, loaded and saved when creating a new Case within the application. These data are used in the application to provide descriptions of variables and dimensions in UIs, define units and formats and generic labels which are used for plots and analysis outputs. Further details of the *dstable* and *dsproperties* classes can be found in the Matlab Supplemental Software Documentation for the *dstoolbox*. An example of the code to load DSProperties for a time series and a variable with 2 spatial dimensions are shown below.

DSproperties for a set of timeseries variables.

```
dsp = struct('Variables',[],'Row',[],'Dimensions',[]);

dsp.Variables = struct(...  
    'Name',{'AvSpeed','MaxSpeed','Dir'},...  
    'Description',{'Mean wind speed','Maximum wind speed','Mean wind direction'},...  
    'Unit',{'m/s','m/s','deg'},...  
    'Label',{'Wind speed (m/s)','Wind speed (m/s)','Wind direction (deg')},...  
    'QCflag',repmat({'raw'},1,3));

dsp.Row = struct(...  
    'Name',{'Time'},...  
    'Description',{'Time'},...  
    'Unit',{'h'},...  
    'Label',{'Time'},...  
    'Format',{'dd-MM-yyyy HH:mm:ss'});

dsp.Dimensions = struct(...  
    'Name',{}),...  
    'Description',{}),...  
    'Unit',{}),...  
    'Label',{}),...  
    'Format',{}));
```

DSproperties for a 2D variable with 2 spatial dimensions.

```
dsp = struct('Variables',[],'Row',[],'Dimensions',[]);

dsp.Variables = struct(... %cell arrays can be column or row vectors  
    'Name',{'u'}),...  
    'Description',{'Transport property'},...  
    'Unit',{'m/s'},...  
    'Label',{'Transport property'},...  
    'QCflag',{'model'});

dsp.Row = struct(...  
    'Name',{'Time'},...  
    'Description',{'Time'},...  
    'Unit',{'s'},...  
    'Label',{'Time (s')},...  
    'Format',{'s'});

dsp.Dimensions = struct(...  
    'Name',{'X','Y','Z'},...  
    'Description',{'X co-ordinate','Y co-ordinate','Z co-ordinate'},...  
    'Unit',{'m','m','m'},...  
    'Label',{'X co-ordinate (m)','Y co-ordinate (m)','Z co-ordinate (m')},...  
    'Format',{'-','-','-'});
```



Appendix C – Sample DSProperties for data import

Text file of variable definitions of DSproperties:

```
1 name --> description unit --> label --> qcflag/format
2 id --> Index --> -> Index --> none
3 JNCC_Type --> JNCC_Type --> -> Estuary_type --> none
4 ERP2_Type --> ERP2_Type --> -> Estuary_type --> none
5 Type_id --> Type_index --> -> Estuary_type --> none
6 Range --> Tidal_range --> m --> Range --> raw
7 Vmhw --> Volume at Mean High Water --> m^3 --> Volume --> model
8 Vmtl --> Volume at Mean Tidel Level --> m^3 --> Volume --> model
9 Vmlw --> Volume at Mean Low Water --> m^3 --> Volume --> model
10 Smhw --> Surface area at Mean High Water --> m^2 --> Surface_area --> model
11 Smtl --> Surface area at Mean Tide Level --> m^2 --> Surface_area --> model
12 Smlw --> Surface area at Mean Low Water --> m^2 --> Surface_area --> model
13 Amhw --> Cross-section area at Mean High Water --> m^2 --> Cross-section_area --> model
14 Amtl --> Cross-section area at Mean Tide Level --> m^2 --> Cross-section_area --> model
15 Amlw --> Cross-section area at Mean Low Water --> m^2 --> Cross-section_area --> model
```

Matlab function with definition of all DSproperties:

```
function dsp = sample_dsproperties()
    %sample function to define the dsproperties for a data set
    %define a dsproperties struct and add the model metadata
    dsp = struct('Variables',[],'Row',[],'Dimensions',[]);
    %define each variable to be included in the data table and any
    %information about the dimensions. dstable Row and Dimensions can
    %accept most data types but the values in each vector must be unique

    %struct entries are cell arrays and can be column or row vectors
    dsp.Variables = struct(...%
        'Name',{...,'id','JNCC_Type','ERP2_Type','Type_id','Range','Vmhw',...
        'Vmtl','Vmlw','Smhw','Smtl','Smlw','Amhw','Amtl','Amlw'},...
        'Description',{...,'Index','JNCC_Type','ERP2_Type',...
        'Type index','Tidal range',...
        'Volume at Mean High Water',...
        'Volume at Mean Tidel Level',...
        'Volume at Mean Low Water',...
        'Surface area at Mean High Water',...
        'Surface area at Mean Tide Level',...
        'Surface area at Mean Low Water',...
        'Cross-sectional area at Mean High Water',...
        'Cross-sectional area at Mean Tide Level',...
        'Cross-sectional area at Mean Low Water'},...
        'Unit',{...,'-','-','-','-',...
        'm','m^3','m^3','m^2','m^2','m^2','m^2','m^2'},...
        'Label',{...,'Index','Estuary type','Estuary type',...
        'Estuary type','Range','Volume','Volume',...
        'Surface area','Surface area','Surface area',...
        'Cross-sectional area','Cross-sectional area','Cross-sectional area'},...
        'QCflag',repmat({'data'},1,14));
    dsp.Row = struct(...%
        'Name',{...,'Location'},...
        'Description',{...,'Location'},...
        'Unit',{...,''},...
        'Label',{...,'Location'},...
        'Format',{...,''}));
    dsp.Dimensions = struct(...%
        'Name',{...,''},...
        'Description',{...,''},...
        'Unit',{...,''},...
        'Label',{...,''}},...
        'Format',{...,''}));
end
```



CoastalTools™ manual

February 2026

	A	B	C	D	E	F
1	Name	Description	Unit	Label	QCflag	
2	id	Index	-	Index	none	
3	JNCC_Type	JNCC Type	-	Estuary type	none	
4	ERP2_Type	ERP2 Type	-	Estuary type	none	
5	Type_id	Type index	-	Estuary type	none	
6	Range	Tidal range	m	Range	raw	
7	Vmhw	Volume at Mean High Water	m^3	Volume	model	
8	Vmtl	Volume at Mean Tidel Level	m^3	Volume	model	
9	Vmlw	Volume at Mean Low Water	m^3	Volume	model	
10	Smhw	Surface area at Mean High Water	m^2	Surface area	model	
11	Smtl	Surface area at Mean Tide Level	m^2	Surface area	model	
12	Smlw	Surface area at Mean Low Water	m^2	Surface area	model	
13	Amhw	Cross-section area at Mean High Water	m^2	Cross-section area	model	
14	Amtl	Cross-section area at Mean Tide Level	m^2	Cross-section area	model	
15	Amlw	Cross-section area at Mean Low Water	m^2	Cross-section area	model	
16						
17						



Appendix D - Date and Time Locale

The system was developed to provide rapid access to data from the Channel Coastal Observatory. It was therefore developed to use British date and time formats. On some computers, with a different system language, the date and time formats will be different and this can result in some problems with the “Locale” settings. One way to get around this issue is to change the date and time settings in the “Time & Language” section of Settings, or in the “Clock and Region” section in the Control Panel. Change the “Country or region” to United Kingdom. And then click “Additional date, time & regional settings” under “Related settings”; in the “Clock and Region” dialog box select “Change date, time or number formats”, and set the format to “English (United Kingdom)” and other date/time formats are as shown in the picture below.

[Language preferences](#)

Date and time formats

Short date:	dd/MM/yyyy
Long date:	dd MMMM yyyy
Short time:	HH:mm
Long time:	HH:mm:ss
First day of week:	Monday