



Upgrade · The Home Creator Way

CUTTING PLOTTER MACHINE

MODEL:SK-720L, SK-870L

VEVOR

Upgrade · The Home Creator Way

CUTTING PLOTTER MACHINE

MODEL:SK-720L, SK-870L



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

CONTENTS

Precautions.....	1
Symbol Indication.....	1
Introduction for Main Parts.....	3
Technical Parameters.....	4
Accessory Box.....	5
Bracket Assembly Diagram.....	5
Control Buttons Description and Operation Instructions.....	6
Product Assembly Steps.....	6
Software and Driver Installation.....	8
Connection of Software and Machine.....	11
App Operation Guide.....	13
Troubleshooting.....	15
Disposal.....	16
Attention.....	16

PRECAUTIONS

- Protective material must be removed before turning on the cutting plotter.
- Check the label on the backside of the plotter to confirm that the rated voltage required by the plotter matches the voltage of the power base.
- Firstly make sure that the power switch is off, then plug the power supply into a grounded power outlet.
- Please do not touch the power cord with wet hands to avoid electric shock.
- Use only the power cord and data cable provided by the product or the replacement approved by the manufacturer.
- Please do not drop metal objects and liquids into the machine to avoid malfunction.
- After shutting down, you must wait another 5 seconds to turn on the cutting plotter again, otherwise it will cause damage to the cutting plotter.
- In thunderstorms, turn the power switch to OFF and unplug the power cord.
- Please do not privately change the manufacturer's components.
- Manufacturer reserves the right to change product specifications without prior notice.
- The manufacturer only bears the legal obligations of the product itself sold to the users and does not bear other losses caused by the malfunction of the products.
- Without our company's permit, no part of this manual can be copied or transmitted in any name.
- Do not drag the carriage by hand.
- If there is an abnormal sound after powering on the machine, please turn off the power immediately and contact the after-sales department for feedback.


SYMBOL INDICATION


To ensure that the plotter can be used correctly and avoid causing damage, users should follow the instructions below while operating.

1. Ensure Safe Use Methods


	Warning	Improper operation can result in injury
		Improper operation may cause damage to the machine
	Attention	Improper operation may result in personal injury or damage to other objects


2. Symbol Description

	Warning	
	This symbol indicates that users need to pay close attention. The picture on the left means "Be careful of electric shock".	
	• Do not use a power supply that does not meet the rated voltage. • Using an unqualified power supply can cause fire or electric shock.	
	• If the machine gives out smoke, smell, noise and other abnormal circumstances, please power off immediately. • Continuing to use machine under these conditions could cause a fire or electric shock.	
	• Do not plug or remove the power plug when the power is on. • Unplugging the power plug while the power is on will damage the machine.	
	Ensure machine grounding. If not grounded, the machine will cause electrical shock or mechanical failures.	
	• Ensure machine grounding. Doing so will result in fire or electric shock, resulting in personal injury.	
	Attention	
	• The machine can not penetrate into liquids, fall into metal objects, etc. • These objects may cause fires.	
	• Do not destroy or replace the original power cord, and do not allow the power cord to be excessively bent, pulled, tied or pressed under heavy objects. • Doing so could damage power supply, causing an electric shock or fire.	
	If the machine is not used for a long time, please unplug the power cord from the socket. Otherwise it could cause a fire.	

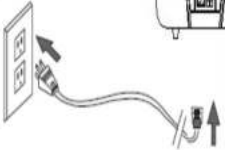Q	When operating, do not put your hands on the roller. • This may cause injury.	
!	The machine should be placed on a stable surface. Otherwise the machine will fall down and cause injury.	
1	• When unplugging the power cord from the socket, the plug should be pulled, not the cable. • Pulling on the cable can cause electric shock or fire.	
1	It is prohibited to use in thunderstorms and lightning weather. To avoid lightning damage to the machine.	
1	• Before inserting the power plug, check whether the power supply voltage and power cable are normal. • Make sure you connect the device without exceptions.	

INTRODUCTION FOR MAIN PARTS

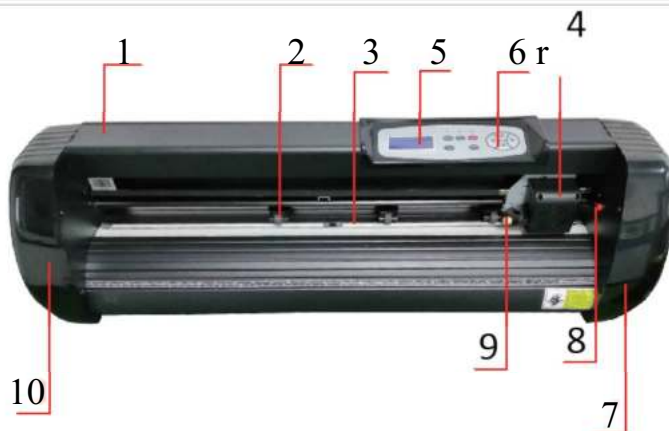

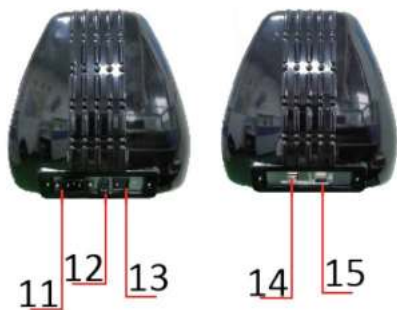

Left Side

Right Side

1. Cover for Rail Guide
2. Pinch Roller Kit
3. Roller for Feeding Paper
4. Carriage
5. Screen
6. Buttons
7. Right Cover
8. Reset Switch
9. Blade Clamp
10. Left Cover
11. Power Connection
12. Fuse Holder
13. Power Switch
14. USB Port
15. COM Port

TECHNICAL PARAMETERS


Item \ Model	SK-720L	SK-870L
Max Feeding Width	720mm	870mm
Max Cutting Width	630mm	780mm
Cutting Thickness	≤ 1mm	
Speed/Pressure	20-800mm/s 20-500g	
Buffer	1-4M	
LCD Display	CN/EN	
Real-Time Speed Adjusting	Support	
Interface	COM+USB +Bluetooth	
Re-Cutting Function	Support	
Re-Cutting Accuracy	0.127mm	
Resolution Ratio	0.0245mm/step	
Language Format	DMPL/HPGL	
Voltage and Current	AC85-264V 2.5A	
Package Size	104*33*36CM	119*33*36CM
Weight	17KG	19KG
Storage Environment and Working Environment	Temperature: +10±35°C Relative humidity: 30%-50%	

ACCESSORY BOX

	Item	Quantity	Unit
1	Cutting Plotter	1	Set
2	Power Supply Cable	1	Pc
3	Blade	1	Box
4	Blade Holder	1	Pc
5	Pen Holder	1	Pc
6	Ball Pen Core	1	Pc
7	COM Connection Cable	1	Pc
8	USB Cable	1	Pc
9	Spanner	1	Pc
10	USB Driver	1	Pc
11	Bracket Screws	1	Bag


To protect the machine, use only the accessories in this accessory box

BRACKET ASSEMBLY DIAGRAM

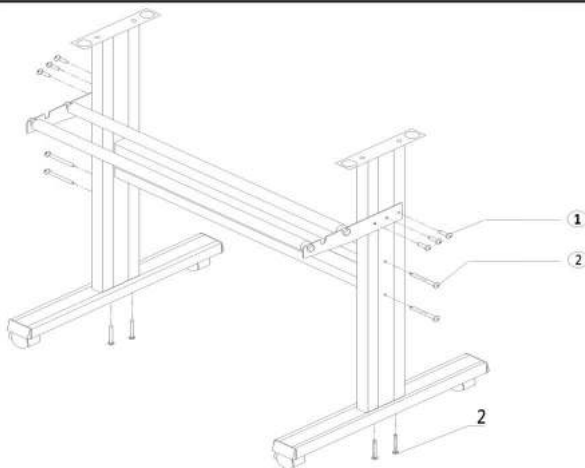


1. Self-tapping screw 4*16 6pcs
 2. Self-tapping screw 4*40 8pcs

CONTROL BUTTONS DESCRIPTION AND OPERATION INSTRUCTIONS

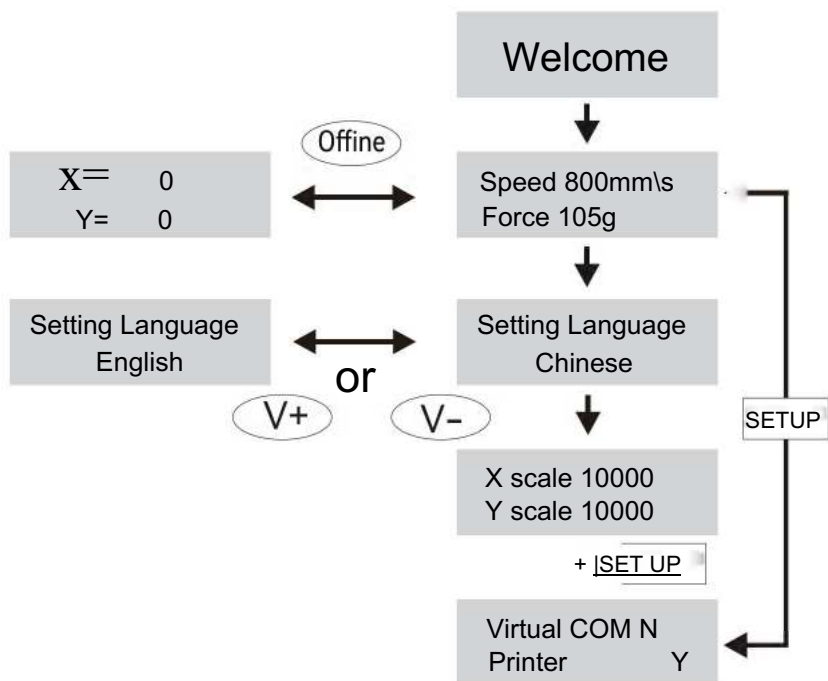


PRODUCT ASSEMBLY STEPS

A: Put the machine on the stand

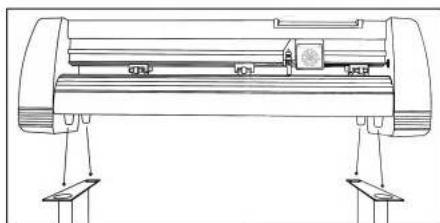


B: Connect the power supply

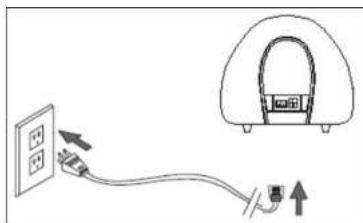

Before connecting the power supply, check the power supply voltage and the power cord. Under normal conditions, the power can be directly energized.


C: Blade assembly



1. Unscrew the cap from the Blade Carriage.



2. Set Brass Ring on Blade Carriage to the fully down position.




3. Remove the protective cover from a new blade. Insert the blade into the top of the Blade Carriage.



5. Screw the cap back onto the Blade Carriage.




6. Adjust the carriage cap until the blade is protruding approximately 1/64 of an inch.



7. Adjust the Brass Ring until it fits snug against the Cap. This will help keep the cap in place during operation.

a. Assembly the blade into holder, see as below:


finishing




Appearance view

Exploded view


b. Loosen the blade adjustment nut and rotate the shank to adjust the length of the exposed blade tip. Determine the tip length according to the thickness of the material.

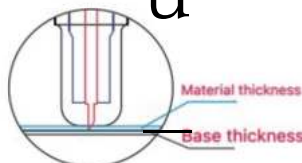

Correct

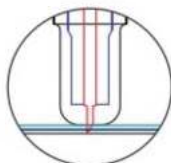


Blade tip is too long

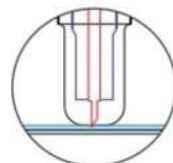

Blade tip is too short

c. Press the pressing rod when you want to change blade. Take out the blade when it is exposed.


- d. Assembly the blade holder into wagon:
 1. Loosen the fixed screw on tool holder
 2. Put the blade holder into tool holder
 3. Tighten and fix the blade holder when it arrives to correct position

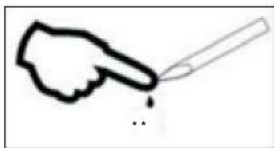


Tips:

Do not touch the blade tip by finger, otherwise, your finger will be injured and the tip will be blunt.


d: Installation Procedure of Knife Holder

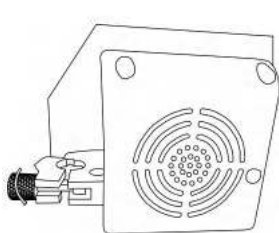

1. Loosen the locking knob on the carriage arm.

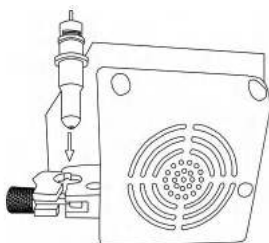

2. Place blade carriage into the carriage arm.

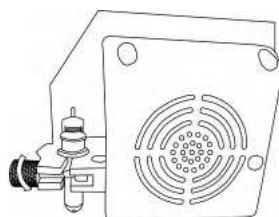

3. Tighten the locking knob on the carriage arm.

Note: The cutting plotter can process soft coiled materials with a thickness of no more than 1 mm of adhesive backing. It is forbidden to process metal materials.

SOFTWARE AND DRIVER INSTALLATION

1. Open the software box **pic 1**, take the disk and put it into CD optical drive **pic 2**.




pic 1



pic 2

2. Open the computer, double click or right click optical drive to install the software, **pic 3**

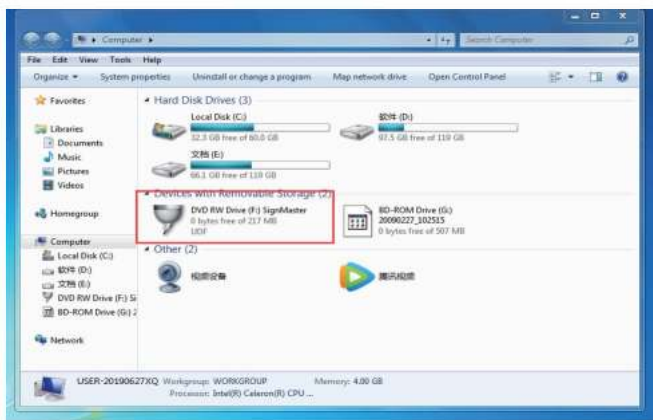

pic 3

3. After opening optical drive, click Install Software, **pic 4**



Click on the icon in the red box
pic 4-1




Select the language
pic 4-2



Agree to click next
pic 4-3




Enter the PSN code
pic 4-4

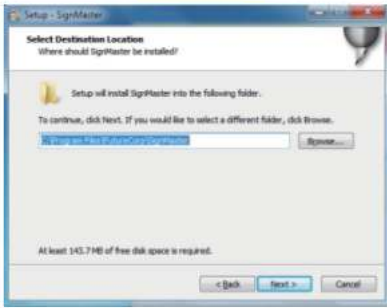

Default installation path, click next

pic 4-5

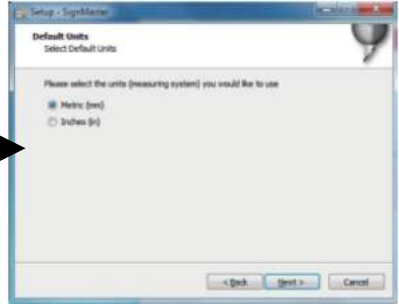

Select the unit

pic 4-6



Select machine model

pic 4-7




Please select install COM port driver

pic 4-8



Next

pic 4-9

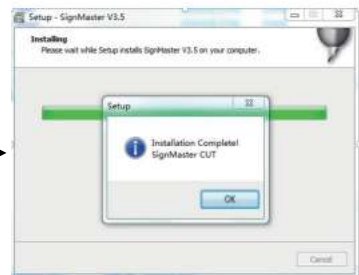


The installation is complete

pic 4-10




This activation window appears when you open the software

pic 4-11

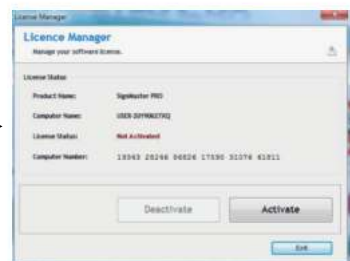


Click activate and enter your email twice

pic 4-12

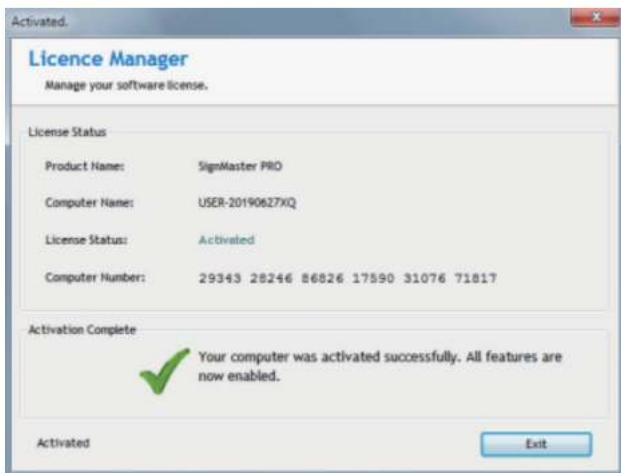


CONNECTION OF SOFTWARE AND MACHINE

Open the software, select cut content, and click send to the cutting plotter

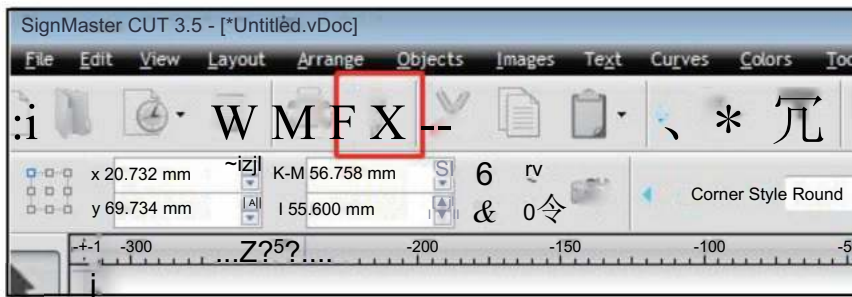

Click the cutter icon in the red box

pic 5-1

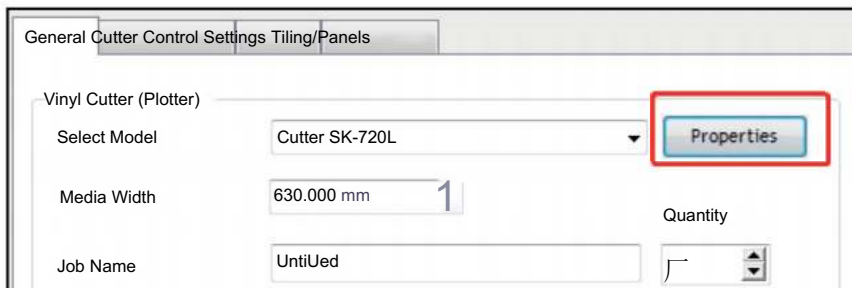

Click properties

pic 5-2



Click connection
pic 5-3




Select machine model
pic 5-4



Select Direct USB Port
pic 5-5



Drop-down select driver
pic 5-6

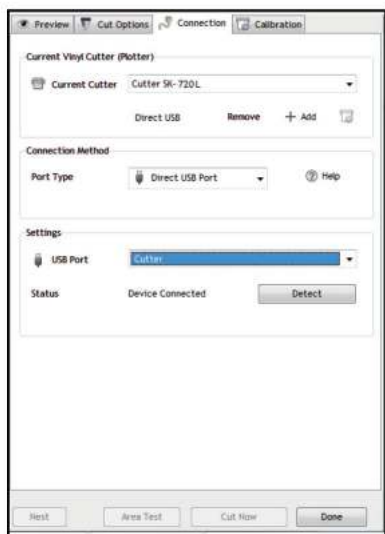

Click finish
pic 5-7



Click cut now
pic 5-8



Click cut now
pic 5-9



The output is completed,
the cutting plotter is cutting,
pic 5-10

Note: Specific operation can refer to USB flash drive operation video, including as follows:

1. Ordinary cutting video.
2. Automatic contour video.
3. Automatic deviation correction video.
4. Software installation video.

APP OPERATION GUIDE


Note: This APP can only support Android system, there is no need to choose the language when installing, software installation will follow the phone system language installation.

1. First download the APP in any of the following ways.

- a. Download link: <http://apk.ahroto.com/CUT.apk>
- b. You can download the APP by scanning the following QR code through your browser.



2. Connection Operation Guide

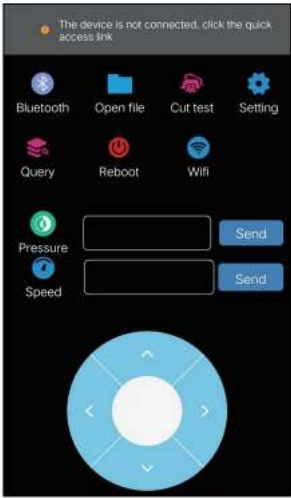


Open the APP

Power up the machine
and turn it on



Turn on Bluetooth
and search for pairing

3. Function is introduced

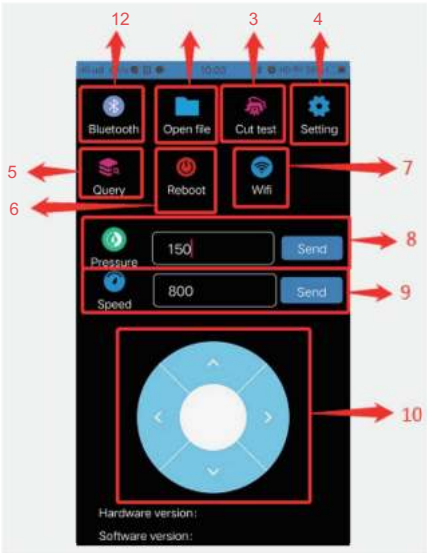

- ① **Bluetooth management:** Connect the plotter through Window.
- ② **File management:** Search for downloaded PLT files and send cutting files.
- ③ **Cutting test:** After loading the materials, you can click the test cutting function to check whether the knife pressure is appropriate
- ④ **Set up:** Port mode, gear ratio and machine language can be changed. Light settings and camera settings are not related to this machine. Do not change these parameters.
- ⑤ **Version of the query:** Query the hardware version and software version.
- ⑥ **Restart function:** Pressing this button will restart the machine.
- ⑦ **WiFi Connection window:** This machine does not support WiFi function, do not need to set and connect this function.

- ⑧ **Pressure display bar:** Here you can display the current pressure value of the machine and change the pressure value.
- ⑨ **Speed display bar:** Here you can display current machine speed values and change speed values.
- ⑩ **Sports carriage and material control area:** After connecting the machine, you can control the carriage of the machine and move the material to determine the cutting position.

4. Send Cutting file




Open file Management



Click auto Search to start searching for PLT files saved on the phone



Effect of cutting

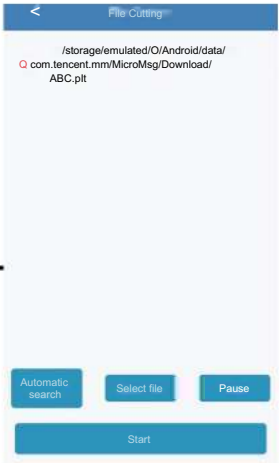

Select the file and click cut

TROUBLESHOOTING


1. PSN code is required during software installation. Where is this code?

Solution: The software code is in the CD box, you can see it when you open it, as shown below:



2. Computer software can't connect to the plotter?

Solution: The software is not set properly. Open the software cutting background and select USB as the port type, as shown below:

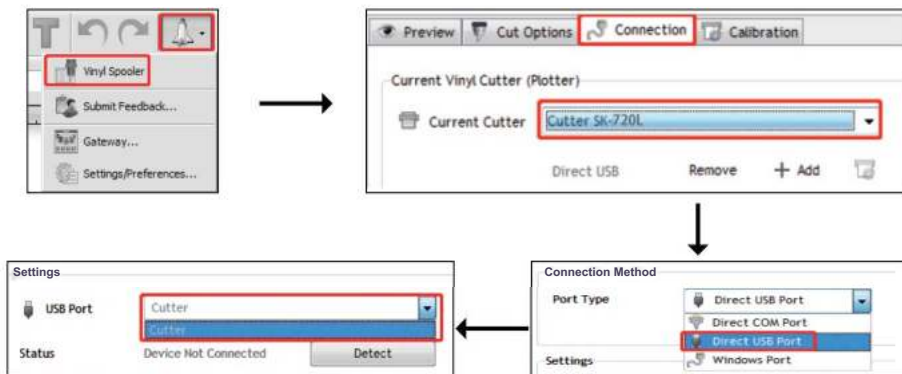

3. What should I do if MY mobile APP cannot connect to the cutting plotter?

Solution: Restart the plotter because the Bluetooth port is occupied.

4. What should I do if the display blinks or blue screen when I start it?

Solution: In this case, the control card is damaged, and you need to contact the after-sales service to replace the accessories.

DISPOSAL

This product is subject to the provisions of European Directive 2012/19/ EC.

Products marked with the logo on the right require separate waste collection in the EU.

This rule applies to all products and accessories bearing this mark.

Products containing the label on the right must not be discarded with general household waste*MI must be sent to a collection point for recycling of electrical and electronic equipment.



ATTENTION

Attention: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
2. this device must accept any interference received, including interference that may cause undesired operation.