

Academic Program Workshop: Microchip PyKit Explorer Troubleshooting



A Leading Provider of Smart, Connected and Secure Embedded Control Solutions



SMART | CONNECTED | SECURE


Troubleshooting!

Read Only File System Error When Saving

- If student cannot save file and board gives Read Only File System error:
 - First: Try Ejecting the drive, then press Reset button, then try saving file again
 - If that fails:
 - Filesystem may be corrupted!
 - Most likely source:
 - Board has been reset/disconnected while performing write operations
 - Before starting solution – save files from CIRCUITPY to host computer!!
- **Solution:**
 - Enter REPL
 - Type:

```
import storage
storage.erase_filesystem()
```

Then copy saved files back to D:\CIRCUITPY

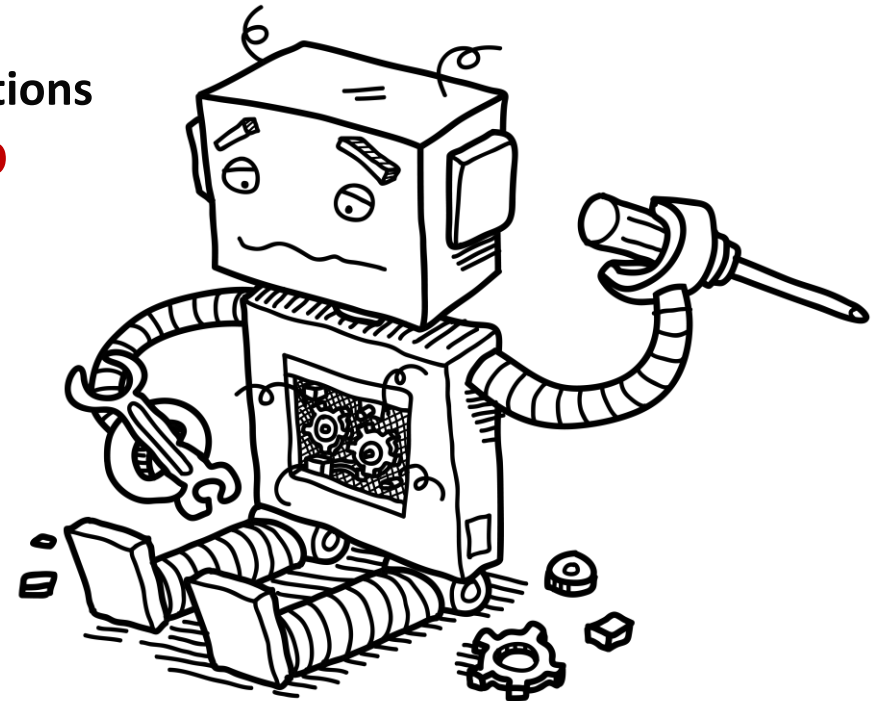

Troubleshooting!


My CIRCUITPY drive disappeared!

If the user was previously successfully writing to D:\CIRCUITPY
But now the drive has disappeared:

1. Check you can access the CPYNANOBOOT drive

1. Double click the RESET button (near the USB connector)
 - You should see the Red LED fading in and out
 - In Windows Explorer you should see D:\CPYNANOBOOT
 - This means the board is likely OK!

(continued on next slide)

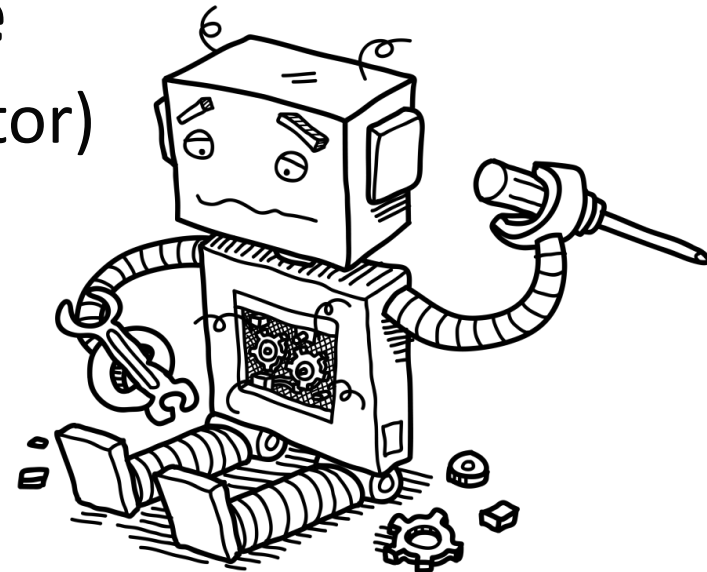

Troubleshooting!

CIRCUITPY drive disappeared!

2. Enter *Safe Mode*:


- Press RESET button on Curiosity CircuitPython board
- Immediately you will see 4 Yellow flashes in one second
 - During this time press the RESET button again
 - You will then see 2 yellow flashes and the CIRCUITPY drive will appear!

3. Now you can enter the REPL and erase the filesystem

- Enter REPL, then at prompt `>>>`
- Type:

```
import storage  
storage.erase_filesystem()
```


CIRCUITPY drive should reappear!

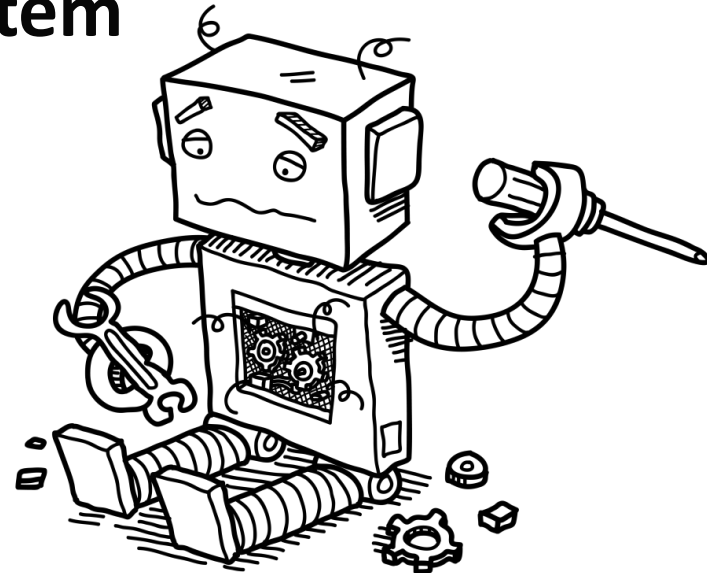


How To Eject The CIRCUITPY Drive

Always Eject before disconnecting cable or pressing reset button

- Before Ejecting D:\CIRCUITPY
 - **Close VS Code first!**
- Failure to close VS Code will give this popup:

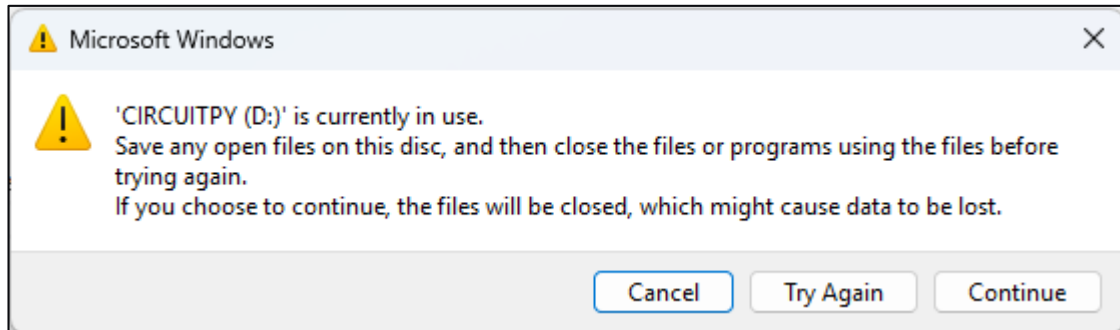


- Click *Cancel*, then close VS Code

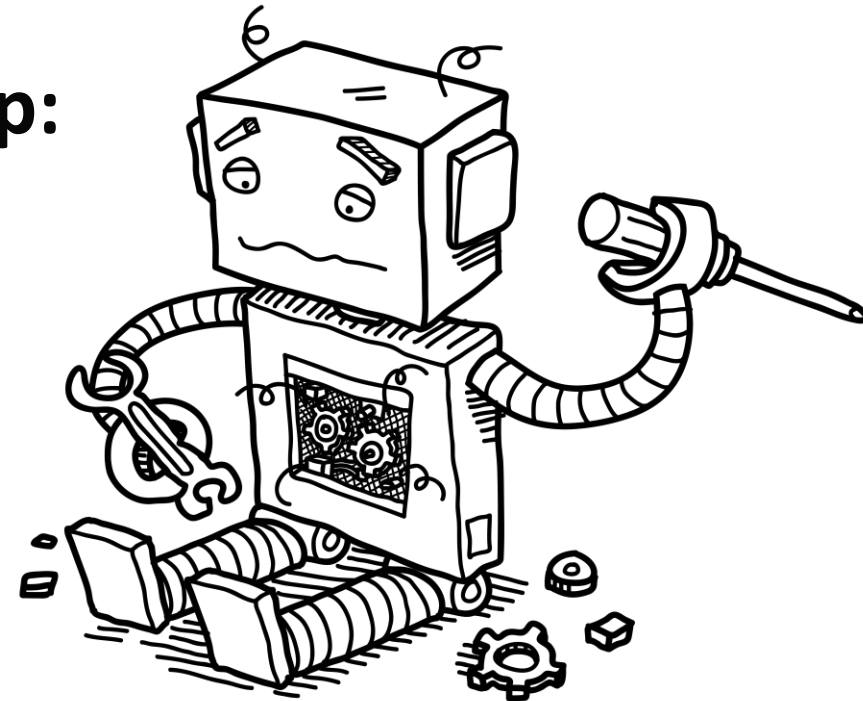

How To Eject The CIRCUITPY Drive

Always Eject before disconnecting cable or pressing reset button

- Click ***Safely Remove Hardware and Eject Media*** button
 - Bottom right corner of Windows

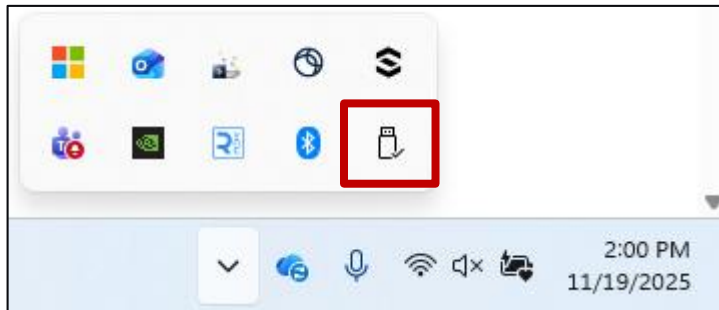

- Click ***Eject CIRCUITPY (D:)***

