1 2 3 4 5 6

7
8
9
10
11
12
13
14
15
16
17
18
19
20
21

POWER SOURCE
12 V DC, 3A

RELAY 1A 30V DC

PIN	Description
1	Wiegand Data0
2	Wiegand Data1
3	Wiegand GND
4	INT BAT GND
5	INT BAT +5V
6	Not Connected
7	Door Relay NO
8	Door Relay NC
9	Door Relay COM
10	Fault Relay NO
11	Fault Relay NC
12	Fault Relay COM
13	Not Connected
14	GND
15	Inactive (Fire) (NO)
16	GND
17	PIR (NC)
18	GND
19	Exit Button (NO)
20	GND
21	CM (NC)
22	- 12V
23	+12V

Cable
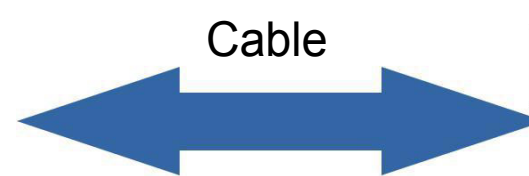
Position	Description	Color
R1	Wiegand Data0	
R2	Wiegand Data1	
R3	Wiegand GND	
R4	- 12V	
R5	+12V	
R6	Not Connected	
R7	Door Relay NO	
R8	Door Relay NC	
R9	Door Relay COM	
R10	Fault Relay NO	
R11	Fault Relay NC	
R12	Fault Relay COM	
R13	Not Connected	
R14	GND1	verde
R15	Inactive / Fire (NO)	a-verde
R16	GND2	albastru
R17	PIR (NC)	a-albastru
R18	GND3	maro
R19	Exit Button (NO)	a-maro
R20	GND4	portocaliu
R21	Magnetic Contact (NC)	a-porto
R22	TAMPER	
R23	TAMPER	
R24	GROUND	