OnScreen Description

Collin Aycock

Revision History

Version	Date	Description	Author
1.0	2026.10.06	First version of this document, for the first submission of OnScreen (app version 1.1.0).	Collin Aycock
1.1	2026.10.19	App version 1.1.2 for the resubmission: RETURN on the first screen opens an "Exit OnScreen?" confirmation popup (Return Key Policy). UI structure and usage scenario updated.	Collin Aycock

Contents

- App overview and test accounts
- UI Structure
- Usage Scenario
- Menu & function description
- Key policy
- How to change languages

App Overview & Test Accounts

OnScreen is the TV app for a self-hosted OnScreen media server. The user runs the server on their own computer or NAS; the app plays the movies, TV shows, music, audiobooks and photos on it. The app ships no content, has no ads, purchases or subscriptions, and needs a server address to work.

Item	Value
Test server URL	https://onscreen-beta.wolverscreen.com (enter it on the app's first screen)
Test accounts (ID)	reviewer1, reviewer2, reviewer3, reviewer4, reviewer5, reviewer6, reviewer7, reviewer8
Passwords	In the account / password fields of the Seller Office submission
Account differences	None. All eight accounts are identical: same content, no ads, no paid tiers, no Live TV, no 4K titles. One account per tester keeps watch progress and favorites separate.
Account validity	The accounts do not expire.
Content on the test server	Openly licensed works only: Blender Foundation open movies and the Caminandes series (CC BY), Kevin MacLeod music (CC BY), LibriVox audiobooks and NASA photos (public domain).
Login, activation, payment	Username and password on the TV's on-screen keyboard. No activation, no payment, no phone or computer needed.

UI Structure

Whole UI structure (tree): every screen and where OK / Return leads.

OnScreen — Navigation Structure

```
OnScreen (launch)
|
|-- Add your OnScreen server   (first launch only: enter the server address)
|-- Sign in                    (username + password, or a PIN from another device)
|
+-- Home
    |-- Continue Watching rows   -> Detail or Playback   (hold OK: options)
    |-- Trending                 -> Detail
    |-- Recently Added rows      -> Detail
    |-- Collections              -> Collection -> Detail
    |
    +-- Top navigation
        |-- Libraries   -> Library grid (sort, genre, watched filters) -> Detail
        |-- Search      -> results -> Detail
        |-- Favorites   -> Detail
        |-- History     -> Detail
        |-- Live TV / Recordings   (only when the server has a tuner)
        +-- Settings    (languages, forced subtitles, scrobbling, privacy, about, sign out)


Detail (movie / show / album / audiobook)
|-- Play / Resume, Mark watched, Favorite, Report a problem
|-- Seasons -> Episodes / Tracks / Chapters   -> Playback
+-- Photos  -> Photo viewer (left / right, OK: slideshow)

Playback (full screen)
|-- Play / pause, seek (left / right 10 s, FF / RW 30 s), progress bar
|-- Audio, Subtitles and Chapters pickers
|-- Skip Intro / Skip Credits
+-- Up Next at the end of an episode   -> next episode

Remote keys
|-- Return on Home / first-launch screens  -> "Exit OnScreen?" popup (Exit: closes the app, Cancel: stays)
|-- Return elsewhere                       -> previous screen
|-- Return during Playback                 -> Detail
+-- Exit (anywhere)                        -> closes the app
```

Usage Scenario (1/2)

- First launch and sign-in

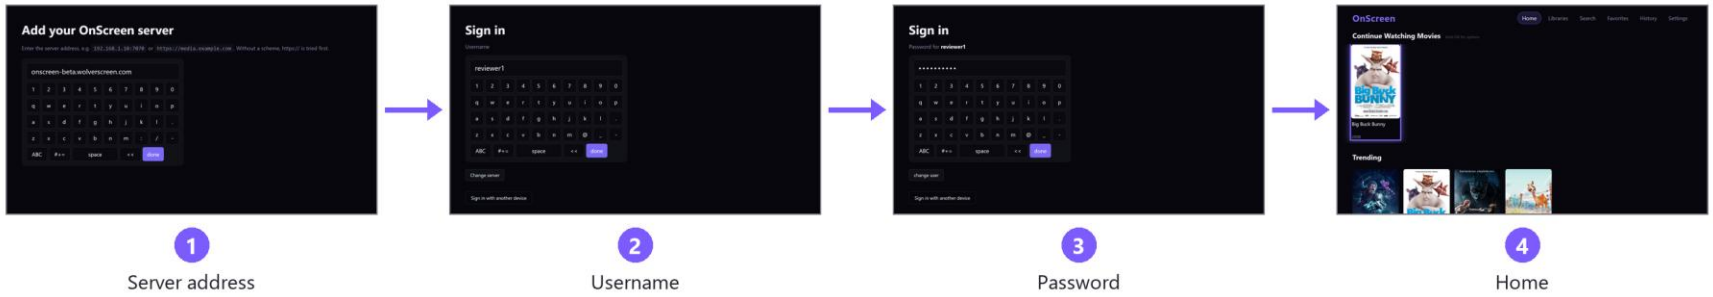


1. Launch OnScreen. "Add your OnScreen server" opens. Type onscreen-beta.wolverscreen.com with the on-screen keyboard and select done. The app checks the server.
2. "Sign in": type the username (for example reviewer1) and select done.
3. Type the password and select done.
4. Home opens. The app stays signed in after it is closed; Settings > Sign out signs out, and Settings > Forget server goes back to step 1.

Alternative to steps 2-3: "Sign in with another device" shows a PIN to enter at the server's /pair page from a phone or computer (not needed for testing).

No activation, payment or account creation in the app.

Usage Scenario (2/2)

- Browse and play

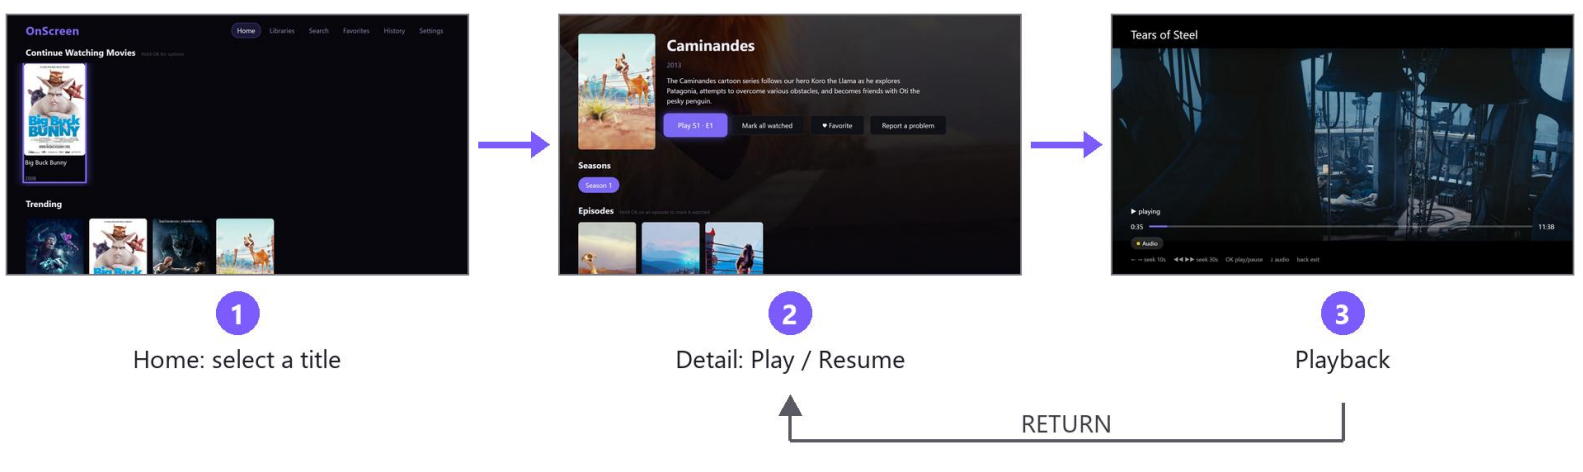


1. On Home, move to a title with the arrow keys and press OK (or open Libraries / Search from the top navigation).
2. The detail page opens. Select Play (or Resume). A series lists its seasons and episodes.
3. Playback is full screen. OK / Up / Down show the controls; Left / Right seek 10 s; Down reaches Audio, Subtitles and Chapters. At the end of an episode, Up Next starts the next one.
4. RETURN goes back to the detail page, and again to Home. RETURN on Home opens the "Exit OnScreen?" popup: Exit closes the app (Smart Hub), Cancel stays. EXIT closes the app from anywhere.

Suggested titles: Sintel (subtitle tracks), Big Buck Bunny (two audio tracks), Caminandes (series, Up Next), a Music album, an audiobook (chapters, speed), Photos (OK starts a slideshow).

Menu & function description


- Home

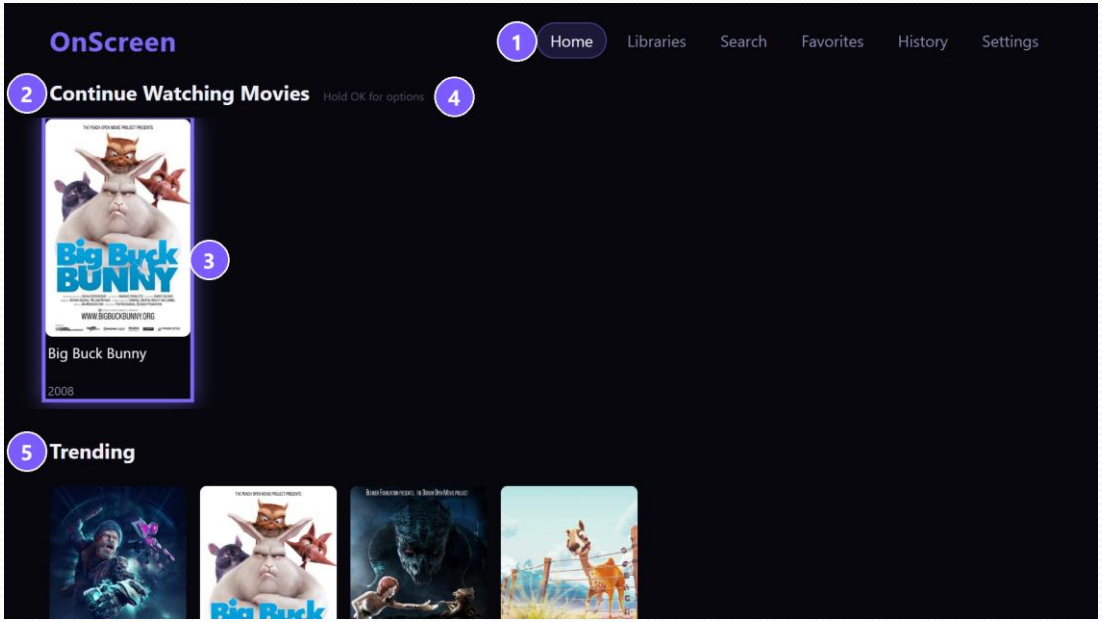

No	Element	Attribute
1	Top navigation	Home, Libraries, Search, Favorites, History, Settings.
2	Row title	Continue Watching (TV, movies, other), Trending, Recently Added, a row per library, Collections.
3	Focused card	The purple frame is the focus. OK opens the title; a Continue Watching card resumes playback.
4	Hint	Hold OK on a Continue Watching card for its options (remove from the row, open).
5	Trending	Titles others on the server watched in the last 7 days.

Menu & function description


- Detail (a series)

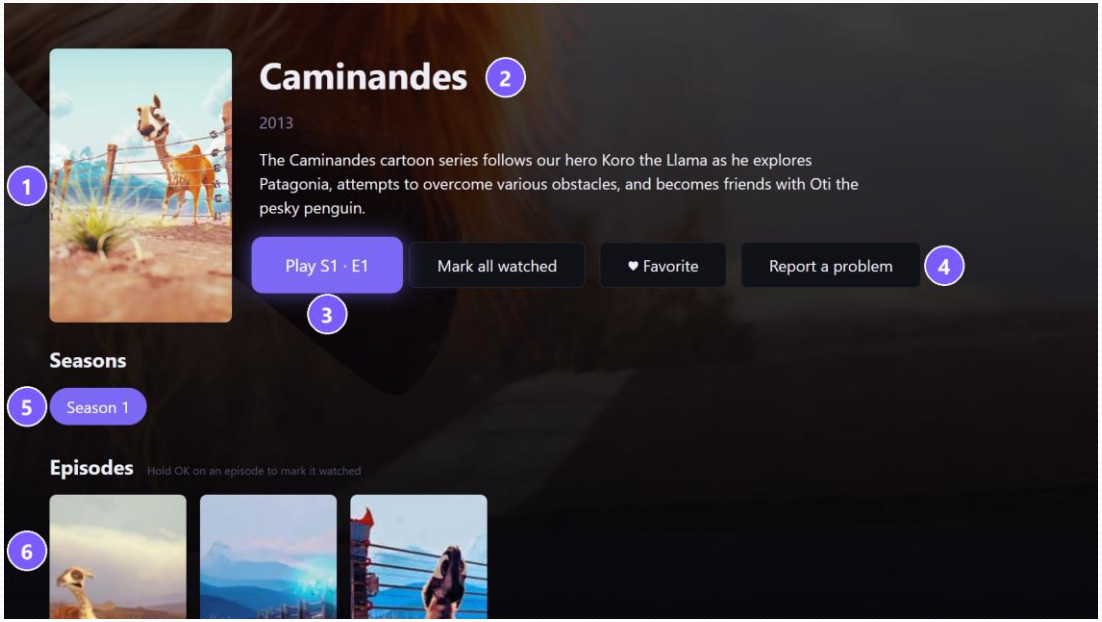

No	Element	Attribute
1	Poster	The title's artwork.
2	Title	Title, year, rating and description.
3	Play / Resume	Plays the next episode, or resumes where the user stopped.
4	Actions	Mark (all) watched, Favorite, Report a problem (a note to the server's administrator).
5	Seasons	Selects the season listed below.
6	Episodes	OK plays the episode; hold OK to mark it watched.

Menu & function description


- Library

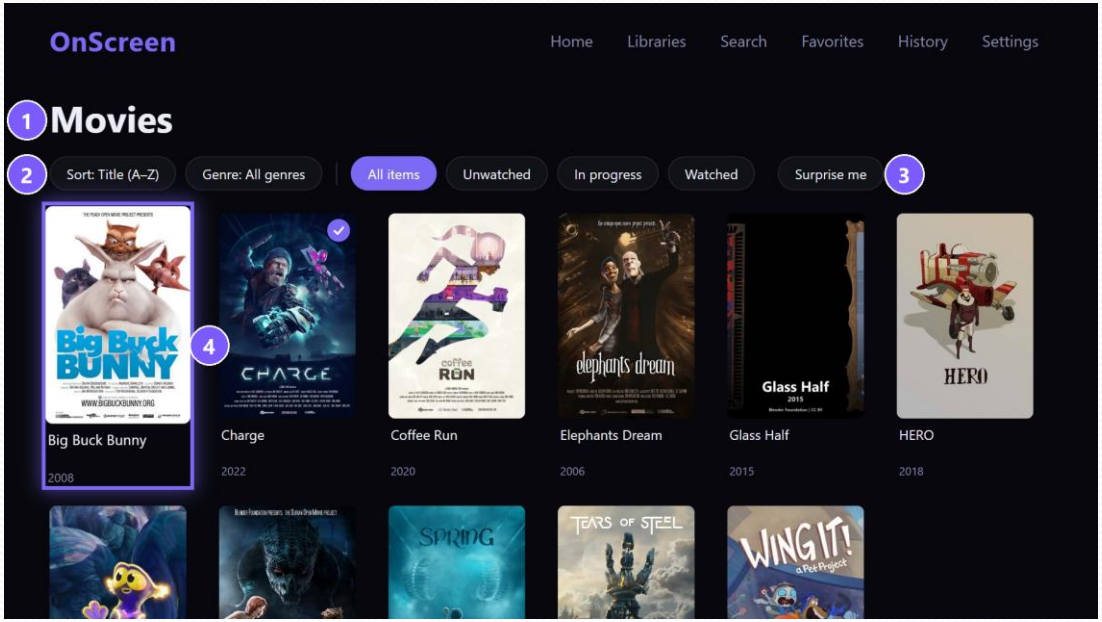

No	Element	Attribute
1	Library name	The library being browsed (opened from Libraries).
2	Sort / Genre	Changes the order (title, year, added ...) and filters by genre.
3	Filters	All items / Unwatched / In progress / Watched; Surprise me opens a random title.
4	Focused card	OK opens the title. More titles load as the focus moves down.

Menu & function description


- Playback

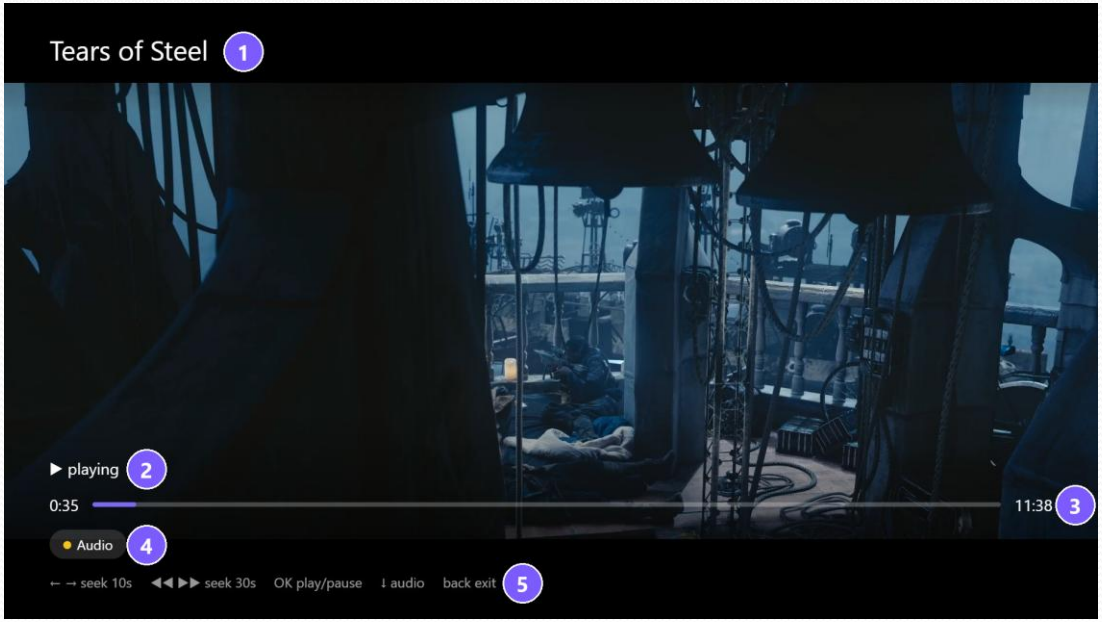

No	Element	Attribute
1	Title	The title playing.
2	Play state	Playing / paused, or the seek target while seeking.
3	Progress bar	Elapsed and remaining time. Left / Right seek 10 s (with thumbnails while seeking).
4	Track row	Audio, Subtitles and Chapters pickers, when the title has them. Down moves here.
5	Key help	The remote keys this screen uses.

Menu & function description

- Music

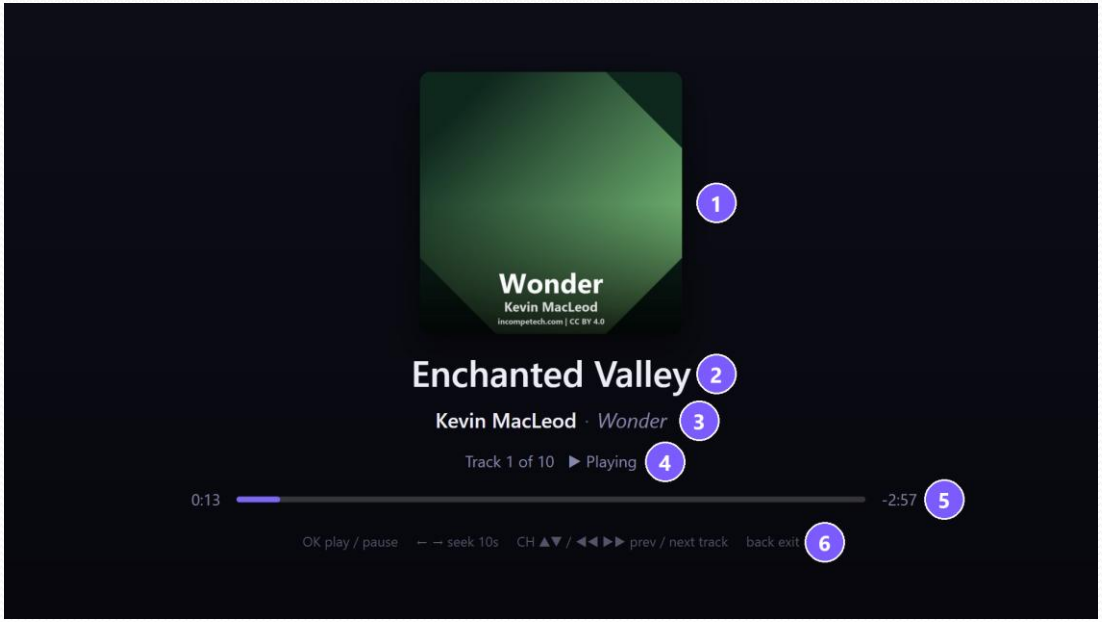

No	Element	Attribute
1	Album art	The album's cover.
2	Track title	The track playing.
3	Artist / Album	Artist and album.
4	Track / state	Track number in the album, and playing / paused.
5	Progress bar	Elapsed and remaining time; the next track starts by itself.
6	Key help	OK play/pause, Left/Right seek 10 s, CH / FF / REW previous and next track, RETURN exits.

Menu & function description

- Other screens

Screen	Function
Search	On-screen keyboard; results from the user's own libraries. OK opens a result; RETURN keeps the query.
Favorites	Titles marked with Favorite. OK opens one.
History	What was played recently. OK opens the title.
Photo viewer	Full-screen photo. Left / Right: previous / next photo in the album. OK or PLAY: start / stop the slideshow.
Audiobook player	Like the music player, by chapter; Speed sets 0.5x to 3x.
Settings	Audio language, subtitle language, forced subtitles only; optional ListenBrainz / Last.fm / Trakt link; privacy policy (QR code); About (version); Sign out; Forget server.
Live TV / Recordings	Only when the user's server has a TV tuner. The test server has none, so these screens do not appear.

Key Policy

- OnScreen's remote-key behaviour on every screen and in the player.

Button	Action	Remarks
ENTER (OK)	Select the focused item. Hold on a card: options. Player: show the controls / play-pause.	
UP / DOWN / LEFT / RIGHT	Move the focus. Player with the controls hidden: LEFT / RIGHT seek 10 s; UP / DOWN show the controls.	
RETURN	**Previous page. On Home and the first-launch screens: closes the app to Smart Hub. Player: closes an open menu or Up Next first, then back to the detail page.**	**Samsung Mandatory**
EXIT	**Close the app.**	**Samsung Mandatory**
PLAY / PAUSE	Player: play, pause (PLAY/PAUSE toggles). Photos: start / stop the slideshow.	
STOP	Player: pause.	
FF / REW	Video and audiobooks: forward / back 30 s. Music: next / previous track.	
CH UP / DOWN	Player: next / previous track, audiobook chapter or episode (or chapter of a film). Live TV: next / previous channel.	Elsewhere: N/R
RED / GREEN	Player: previous / next chapter.	Elsewhere: N/R
YELLOW / BLUE	Player: open the Audio / Subtitles picker.	Elsewhere: N/R
0-9	N/R	
VOLUME / MUTE	Handled by the TV (system volume OSD).	

How to change languages

Items	Contents
How to change languages	Not applicable: the app's menus are in English only. With another TV menu language (Settings > General > System Manager > Language) the app stays in English, with no broken layout or missing text. Titles and descriptions come from the user's server in the language of its metadata. Audio and subtitle track languages are chosen in the player or in the app's Settings (Audio language, Subtitle language).