TEENSY ADAPTER / CONTINUOUS WIRING

Same circuit and PCB pin numbers | One sheet, no electrical net labels | Review copy 20 Oct 2026


Dots join wires. Crossings without dots do not join. Connector units are parts of the SAME physical socket.

TEENSY 4.1 SOCKETS


01 DIGITAL OUTPUTS / Teensy -> 5 V buffers -> backplane



02 PHOTOSENSORS / backplane -> divider + filter -> Teensy ADC

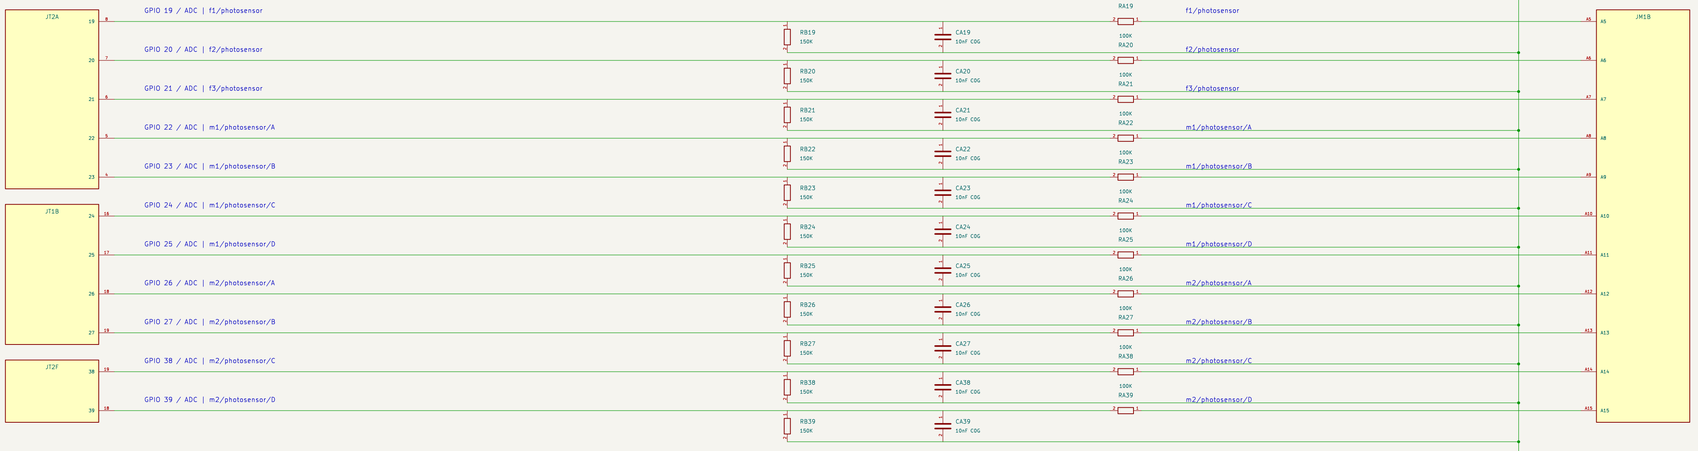

03 MICROPHONES / direct analog input + 1 nF shunt

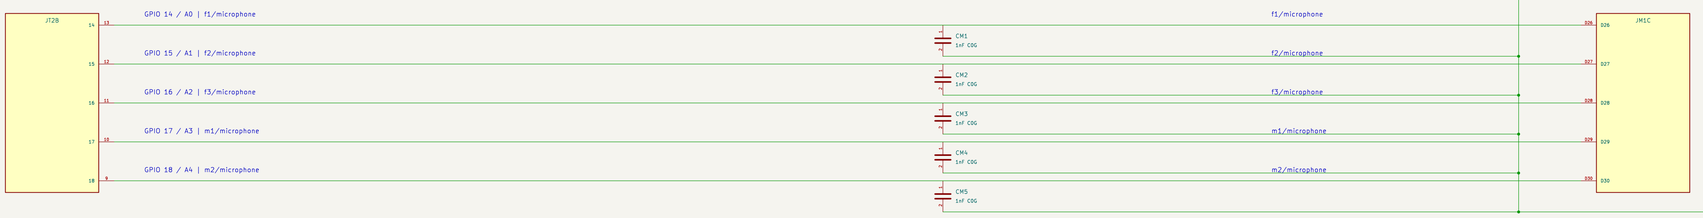


U1–U4: SN74LV4T125PWR | RDx: 100K pulldown | PWR_FLAG symbols retained from original; no physical parts.

f1–f3 = female 1–3; m1–m2 = male 1–2. Wire captions are plain text, not electrical connections.

MEGA-PATTERN SOCKET / BACKPLANE

GND

04 POWER / SAME SHARED RAILS

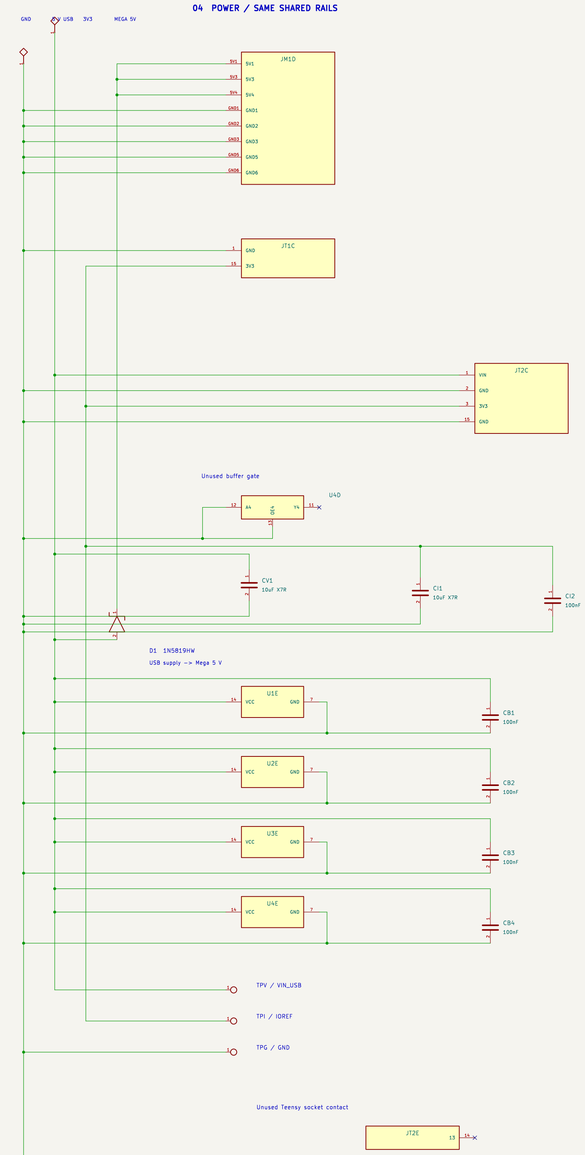


05 SPARE GPIO / TEST POINTS





06 UNUSED SOCKET CONTACTS / X = NO CONNECTION

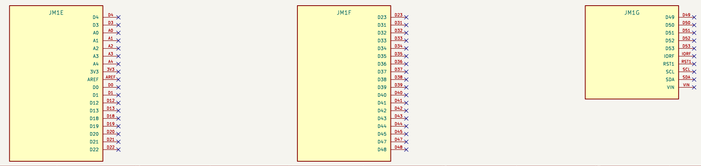

Reading copy; same circuit; original schematic and PCB retained

Colloquy of Mobiles

Sheet: /

File: teensy-adapter-wired.kicad_sch

Title: Teensy adapter / continuous wiring / reading copy

Size: A1	Date: 2026-10-20	**Rev: A wired copy**
KiCad E.D.A. 9.0.7		Id: 1/1