



Paradox Paradome DG467 - Ceiling-Mount Digital Motion Detector Manual

[Manuals](#) / [Brands](#) / [Paradox Manuals](#) / [Security Sensors](#) / [Paradome DG467](#) / [User manual](#) / PDF

Contents


1. Installation
 - 1.1. Opening and Closing the Cover
 - 1.2. Operational Modes
2. Detector Settings
3. Utilities
 - 3.1. Powering The DG467
 - 3.2. Walk-testing
 - 3.3. Technical Specifications
4. Documents / Resources
 - 4.1. References
 - 4.2. In Other Languages
 - 4.3. Other ManualsLib Projects



Installation

Select the detector installation site, usually in the center of the protected area. Please note that coverage area is more elliptical than circular (see figure 2). Avoid proximity to any of the following: reflective surfaces; direct air flow from vents, fans and windows; sources of steam/oil vapor; objects causing temperature changes such as heaters, refrigerators and ovens; and infrared light sources.

Figure 2

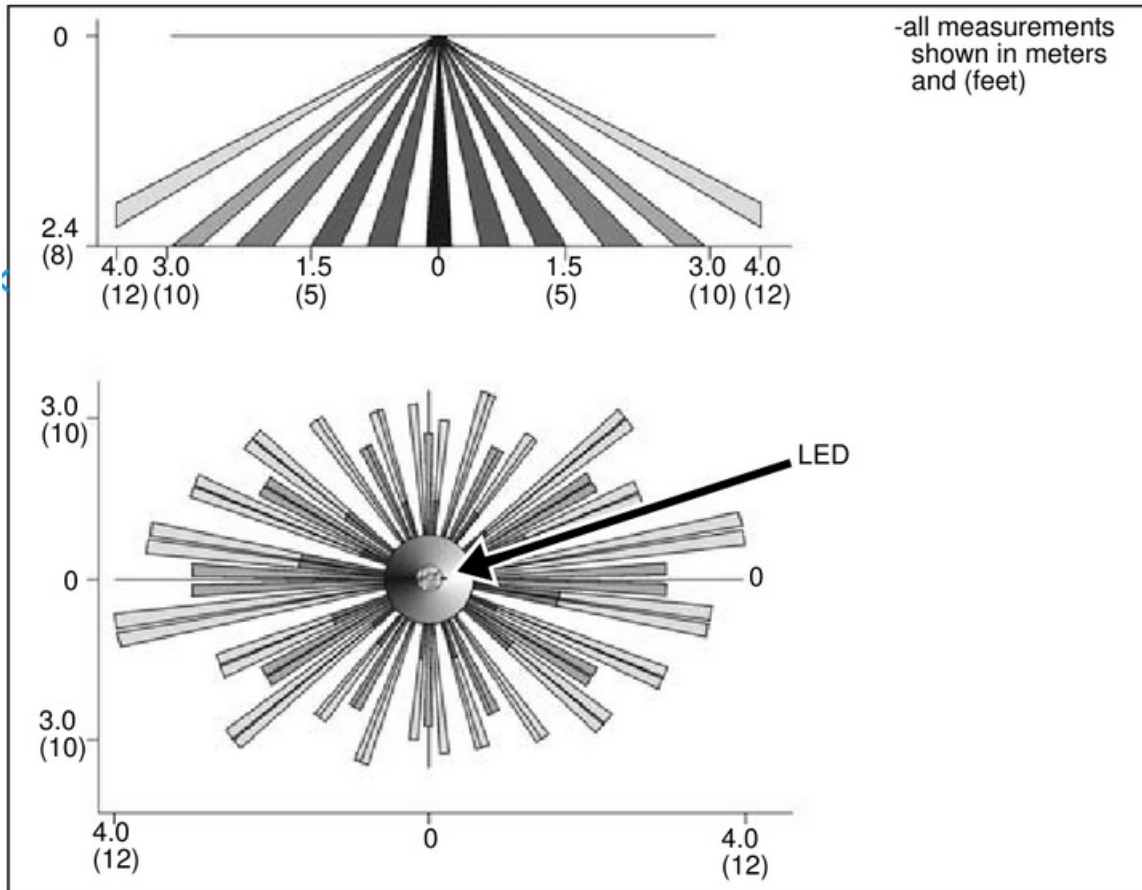


The DG467 provides ATC (Automatic Temperature Compensation) but it is still highly recommended to retest unit coverage with a walk-test if temperatures reach over 30°C (85°F). This is extremely important in nonventilated areas.

To Install the DG467:

1. Remove the PCB screw, then carefully remove the PCB (see figure 3).
2. Drill screw / wire holes (see figure 3).
3. Run the wires through entry holes and connect them according to the PCB markings (see figure 1).


Figure 1

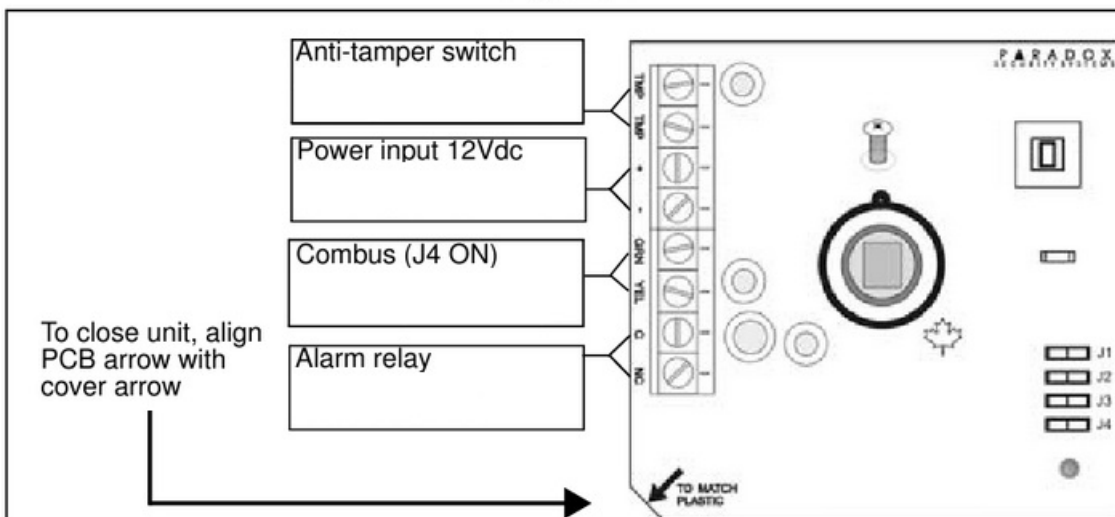

Opening and Closing the Cover

(see figure 3)

Figure 3

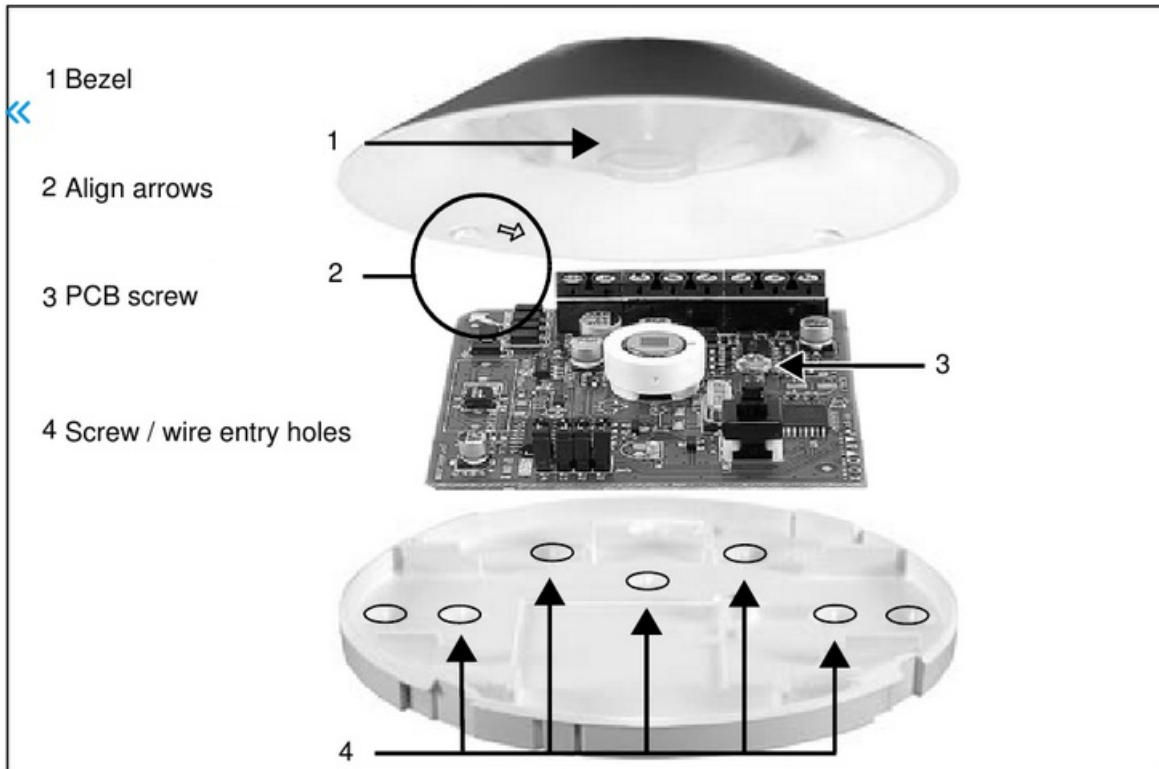

1. Bezel
2. Align arrows
3. PCB screw
4. Screw / wire entry holes

To replace the lens: Gently push the lens and bezel out of the cover.

To reinstall the lens: Align the bezel pin with the matching hole in the lens and cover.

To close the detector: Align the arrow in the cover with the arrow on the PCB and turn the cover clockwise.

 Do not touch the sensor surface as this could result in detector malfunction. If necessary, clean with a soft cloth and pure alcohol.

Operational Modes

The DG467 can function in two different operational modes: combus mode or relay mode. This option can only be configured using the **J4** jumper.

Relay Mode: (J4 = OFF)

When set to Relay Mode, the DG467 functions as would any standard motion detector by communicating its alarm and tamper signals via relays. The **GRN** and **YEL** terminals

are not used in relay mode. In Relay Mode, the detector's settings can only be modified using the jumpers (see figure 1).

Combus Mode: (J4 = ON)

When set to combus mode, the DG467 communicates alarm signals, tamper signals, data and detector settings via the panel's 4-wire combus. The detector's relay output always remains active even when set to combus mode and can be used to activate other devices.

In combus mode, the motion detector can be modified using the jumpers or by entering module programming mode.

i In combus mode, the DG467 will respect the most recent modification whether it is made through the jumpers or through section programming. As a result, current jumper positions may not represent actual settings. All settings are stored in the DG467 even after it has been powered down.

Detector Settings

Step	Section / Jumper	Details
1 Operational Mode	J4	J4 OFF = Relay mode △ (go to step 3) J4 ON = Combus mode (go to step 2)
2		Enter detector programming mode. Press and hold [0] + [INSTALLER CODE] + [4003] (EVO) or [953] (DGP-848) + SN.
3 Signal Processing Mode	[001] or J3	Single edge processing should be used in normal environments with minimal sources of interference. Dual Edge Processing provides better false alarm rejection if the detector is placed near sources of interference that can adversely affect it. [1] OFF = Dual edge [1] ON = Single edge △ <u>or</u> J3 OFF = Dual edge J3 ON = Single edge △
4 LED Settings	[001] or J1	LED flash = Movement without alarm (see step 5) LED on 5 sec. = Movement with alarm [2] OFF = LED disabled [2] ON = LED enabled △ <u>or</u> J1 OFF = LED disabled J1 ON = LED enabled △
		Detects movement signals that do not reach the required

5 Movement Without Alarm	[001]	energy levels for an alarm. The LED flashes once, indicating the signal was kept in memory. Note: The LED must be enabled. (see step 4) [3] OFF =Movement Without Alarm disabled [3] ON = Movement Without Alarm enabled △ Note: In relay mode, this feature is always enabled.
6 Tamper Recognition	[001]	The detector can send a tamper signal to the control panel via the combus. [5] OFF = Tamper recognition disabled △ [5] ON =Tamper recognition enabled
7 Digital Shield	[002] or J2	In High Shield mode, the detector is set for high-risk environments (potential interferences) and therefore provides greatly increased false alarm immunity. However, response time and detector speed may be slower. 000 = Very low shield (very high sensitivity) △ 001 =Low shield (high sensitivity) 002 =Normal shield (normal sensitivity) 003 =High shield (low sensitivity) or J2 OFF =High shield J2 ON = Very low shield △

△= default settings

Utilities

Voltage Meter	[900]	Used for trouble-shooting, the voltage meter Indicates the DG467's input voltage. Displays [3-digit number] which represents input voltage x 10 e.g. [133] = 13.3V
--------------------------------	-------	--

Powering The DG467

Self-testing program: Turning on the detector initiates a self-testing program for the signal processor, memory and relay. The LED flashes rapidly for approximately 4 seconds. The detector then switches to "stand-by" mode.

Walk-testing

At 20°C (68°F) you should not be able to cross more than one complete zone

(consisting of 2 beams, left and right sensor detecting elements) in the coverage area with any kind of movement. When using a higher level digital shield settings, the amount of movement required to generate an alarm is increased.

When conducting a walk test, move slowly in order to generate weak signals. Try to move to the maximum coverage distance. An alarm is indicated by a constant light for 5 seconds.



Motion detectors should be walk-tested annually.

Technical Specifications

Sensor type:	Dual Opposed Element Infrared	
Sensor geometry:	Rectangular	
Detection speed:	0.2m/s to 3.5m/s (0.6ft/s to 11.5ft/s)	
Coverage:	360°, 7m X 6m (24ft X 20ft) at a height of 2.4m (8ft) 360°, 11m X 6m (35ft X 20ft) at a height of 3.7m (12ft)	
Installation height:	2.1m to 4m (7ft to 12ft)*	
Operating temperature:	-20°C to +50°C (-4°F to +122°F)	
Power input:	9 to 16Vdc, 29mA maximum at 12V	
Lens:	LODIFF® segment Fresnel ceiling mount array	
EMI / RFI rejection:	10V/m	
Alarm output:	N.C. 28Vdc, 0.15A / via combus	
Anti-tamper output	N.C. 0.15A, 38Vdc, opens when cover is removed / via combus	
Size	10.8cm dia. X 3.5cm height (4.25" X 1.38" height)	
Compatibility	Combus Mode	All Digiplex series (DGP/DGPNE) and all EVO series control panels.
	Relay Mode	All major security system manufacturers

* Can be installed as high as 4.5m (14ft), however sensitivity will be compromised.

paradox.com



Documents / Resources

References

 [Paradox - Headquarters](#)

Available languages

 [Deutsch](#)  [Français](#)  [Español](#)  [Mexicano](#)  [Dutch](#)  [Italiano](#)  [Dansk](#)  [Norsk](#)

 [Polski](#)  [Suomi](#)  [Português](#) [Español \(Latinoamérica\)](#)  [Русский](#)  [Български](#)

 [Čeština](#)  [ελληνικά](#) [English \(UK\)](#)  [Eesti](#)  [Hrvatski](#)  [Magyar](#)

 [Bahasa indonesia](#)  [Қазақша](#)  [Lietuvių](#) [Português \(Brasil\)](#)  [Română](#)

[Română \(Moldova\)](#)  [Slovenčina](#)  [Slovenščina](#)  [Shqip](#) [Kiswahili](#)  [Türkçe](#)

 [O'zbekcha](#)

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ languages