# JIANT FM · CONTROLS

every button, knob, layer, combo and page

firmware v0.6.71 · M-VAVE FM-1 · juanjiant-bit.github.io/JIANT

## THE PANEL

### KNOBS AND TRANSPORT

| | |
|---|---|
| **MASTER** | Master volume. |
| **SELECT** | **Scrolls the section's pages** (HOME: DICE EVERYTHING?). Held with a button, its **dice** (OK keeps, CANCEL back): HOME everything, EDIT the sound, SEQ the sequence, LFO the LFO, FX the effects. GLO + SELECT: the tempo. |
| **PRESETS** | Browses the sounds (factory and user). On step, list and song pages: the cursor / the row. **Hold a page button + PRESETS: jump through its pages.** |
| **ALGORITHM** | Selects the track from any page: T1–T4, or T1–T6 with TRACKS 6. |
| **KNOB 1–4** | The four columns on screen. Fast sweeps the whole range, slow fine-tunes. With a layer held: the layer's. |
| **OCT– · OCT+** | The keyboard's octave (both together: back to 0). On action pages and dialogs: back / confirm. |
| **PLAY** | Start / stop. GLO + PLAY: restart from the top. |
| **REC** | Arms live recording on the selected track (notes and knob moves, overdub). |
| **HOME** | Tap: the ecosystem. **Hold: the MENU.** |
| **KEYS** | 27 keys play the selected track in its scale; with a layer held they become that layer's. |

### PAGE BUTTONS

| BUTTON | TAP: ITS PAGES, ONE PER TAP | HOLD |
|---|---|---|
| **ENV** | ENV · ENV DEST | – |
| **LFO** | LFO · LFO DEST · MOD · MSEQ · MSEQ 2 | MACROS M1–M4 (stay latched) |
| **FX** | TRACK · SLICER · DELAY · REVERB · CHORUS · MASTER (two quick taps: next section) | PUNCH-IN FX |
| **SCL** | SCL · SCL 2 | ROOT by key |
| **EDIT** | EDIT 1 · EDIT 2 · FILTER · VOICE (FM6: OPERATOR · OP ENV · OPERATOR 2; DRUM: KIT · KIT 2 · KIT 3 · X-MOD · FILTER · SOUND 1–4 · LEVELS 1–2 · STEREO) | INIT · RECALL · sound mutes |
| **GLO** | MIXER · GLOBAL · SYSTEM | MUTE · SOLO · LEVEL · TAP |
| **SAVE** | PRESETS · USER · PROJECT · ARRANGE · TOOLS | SONG layer |
| **ARP** | ARP · ARP 2 | – |
| **SEQ** | STEP · COMP · PATTERN · AUTOMATION · AUTO LIST · MUTATE · FUGUE · SHIFT | SEQ TOOLS |
| **REC** | (transport) | CLEAR · CLICK |

BUTTON + PRESETS jumps through its pages (no wrap). SELECT alone scrolls the section's pages.

## LAYERS · HOLD A BUTTON

### FX · PUNCH-IN EFFECTS

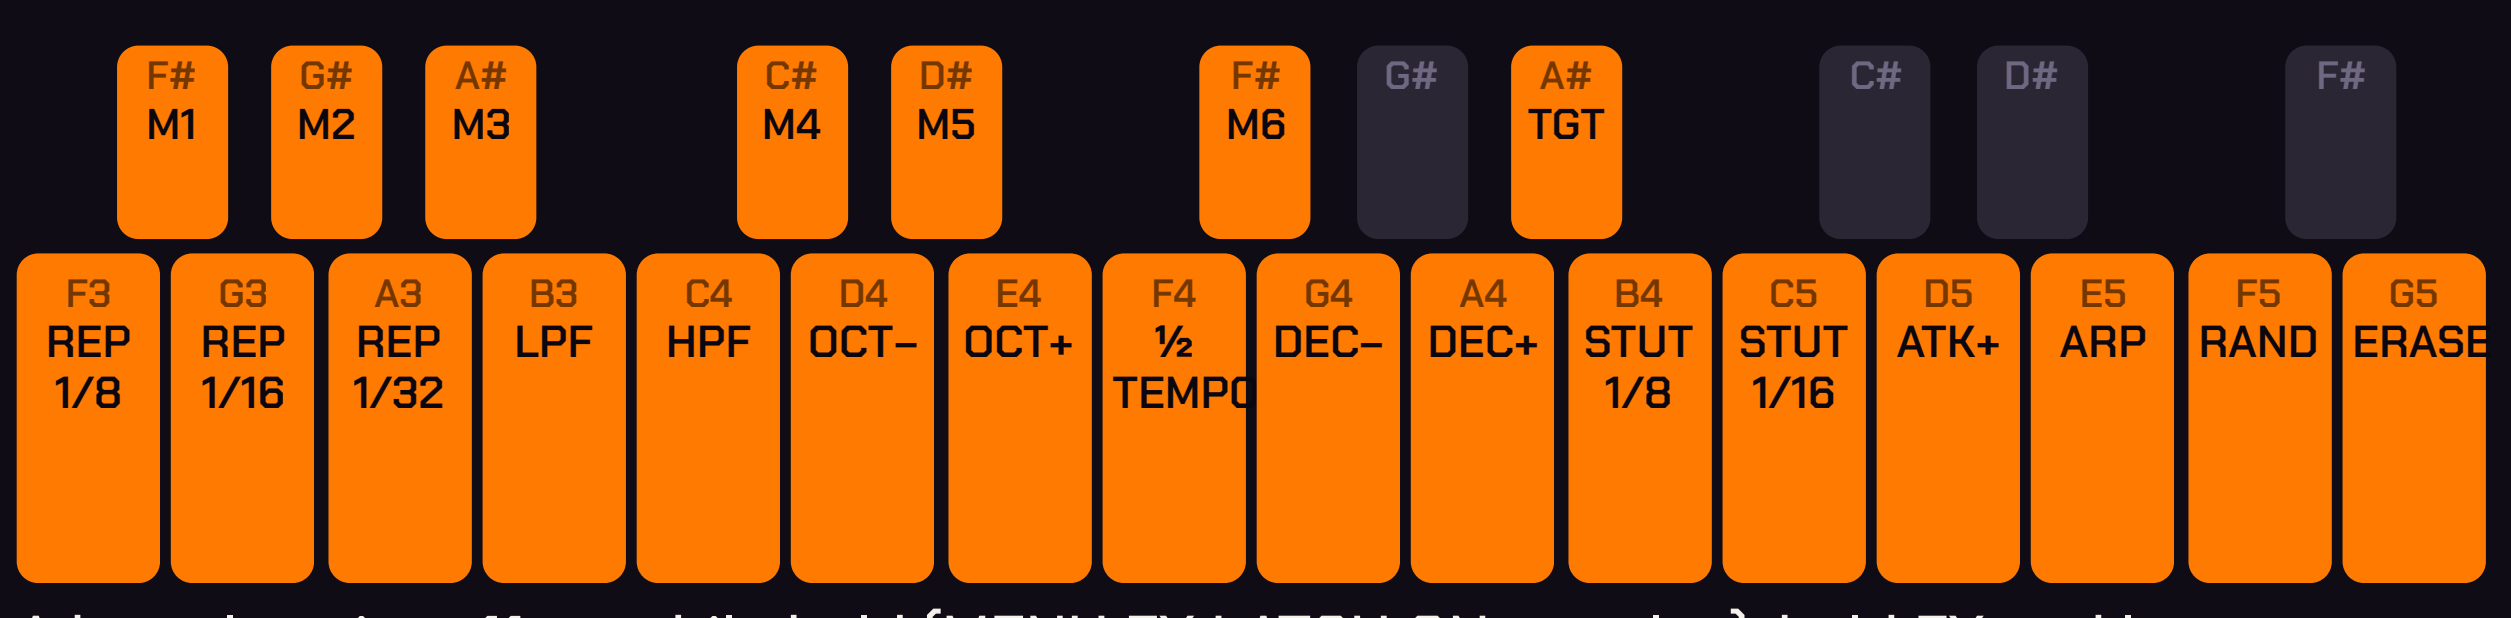

A key plays its effect while held (MENU FX LATCH ON: toggles); hold FX and let go untouched: **LOCKED** open, FX again unlocks; OCT- all off. In on the next 1/16. Black 1–6 mute T1–T6, A#4 picks which tracks the MIDI ones touch (all · synths · drums). With REC armed and playing they record into the section's lane; G5 erases it.

KNOBS

| | | | |
|---|---|---|---|
| FILTER | CRUSH | THROW | DEPTH |

### GLO · MIX

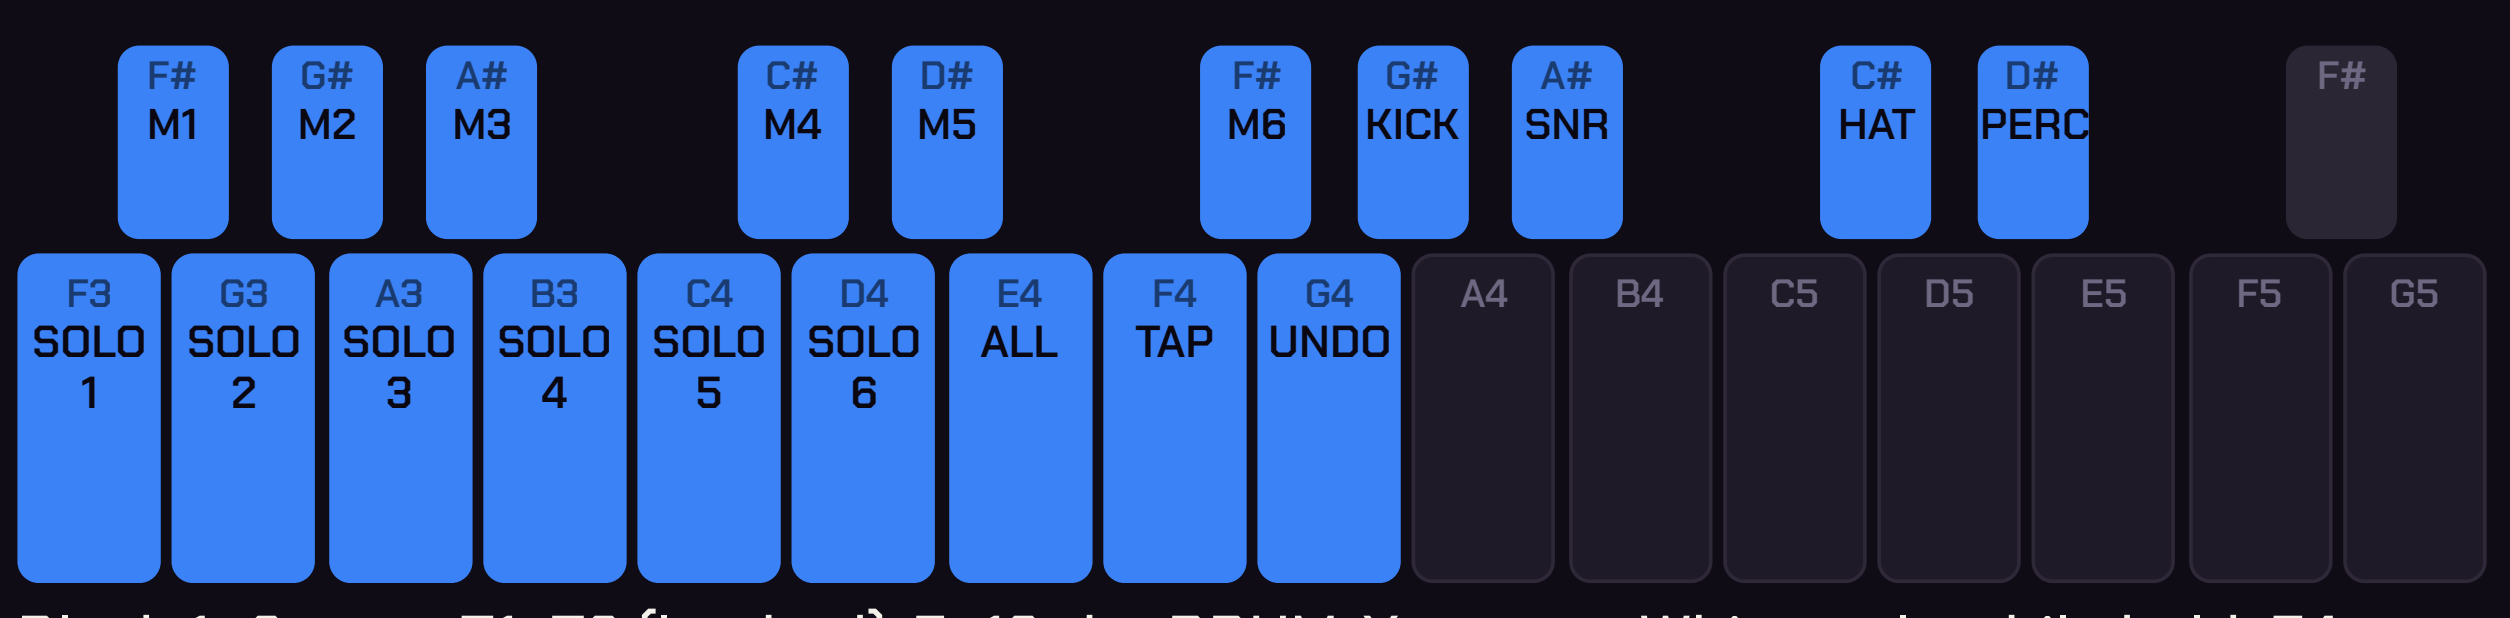

Black 1–6 mute T1–T6 (latched), 7–10 the DRUM-X groups. White: solo while held, E4 unmutes all, F4 tap tempo, G4 **UNDO** the last big change (again: redo), A4 **FREEZE** MUTATE. SELECT: the tempo. PLAY: restart.

KNOBS

| | | | |
|---|---|---|---|
| LEVEL T1 | LEVEL T2 | LEVEL T3 | LEVEL T4 |

T5 or T6 selected: the knobs are T3–T6.

### SAVE · SONG

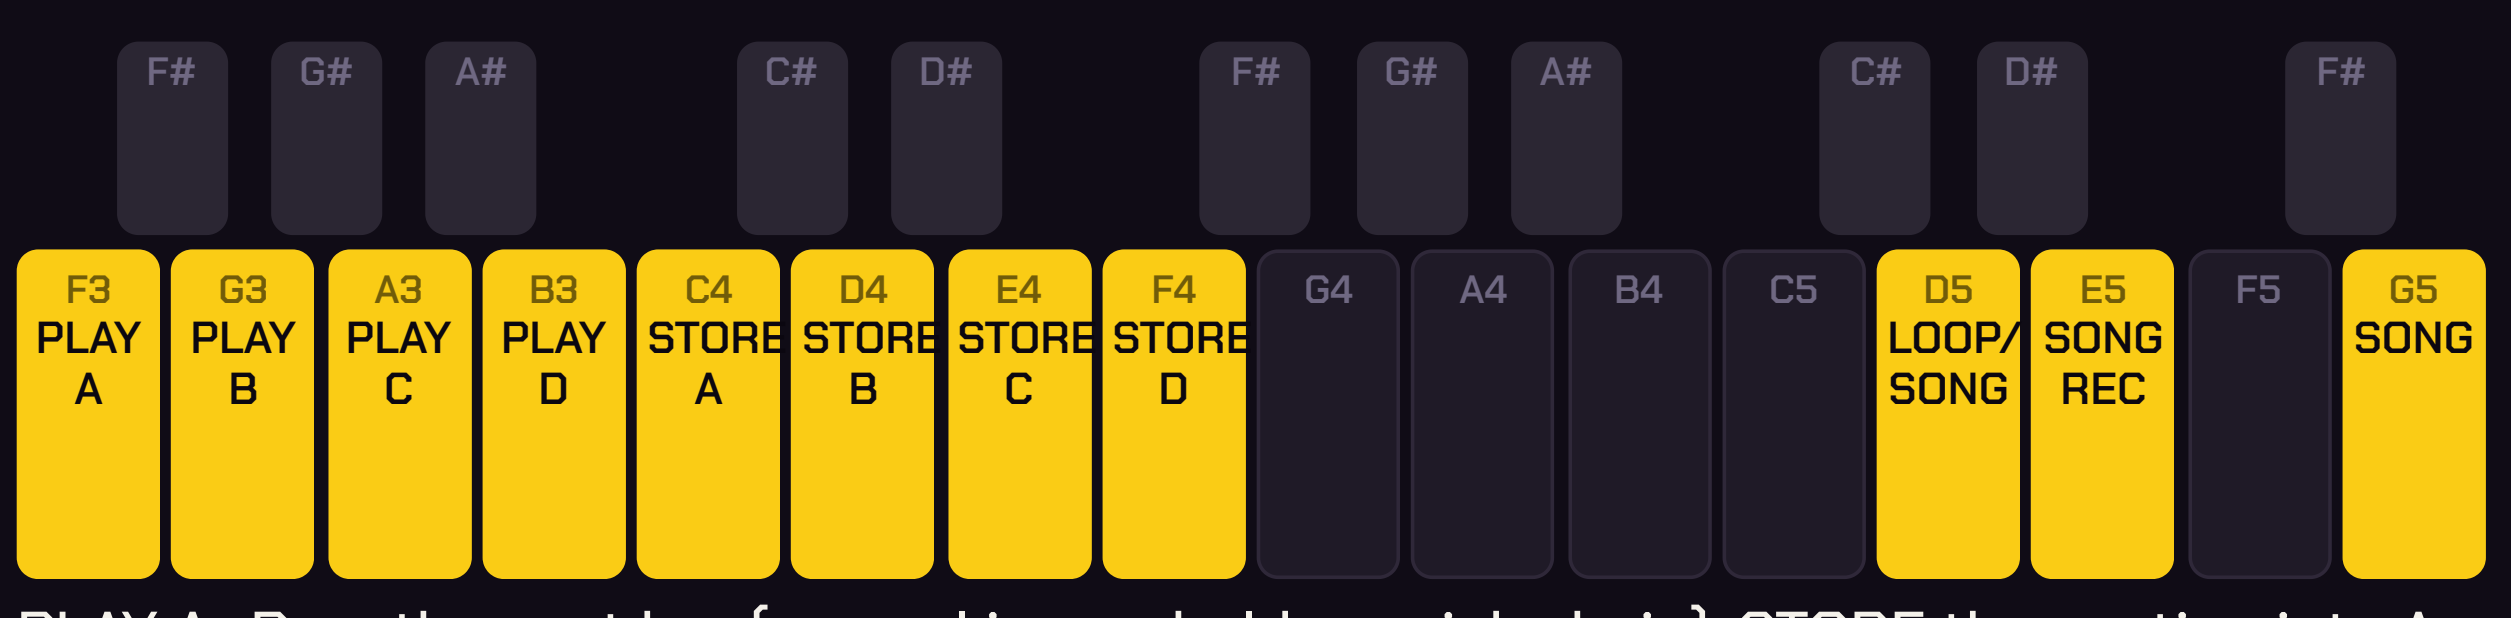

PLAY A–D on the next bar (several in one hold: a quick chain), STORE the section into A–D. OCT+ stores the playing section, OCT– recalls it. On the SONG page KNOB 4 stores a scene.

KNOBS

| | | | |
|---|---|---|---|
| SONG 1–8 | - | - | - |

### EDIT · SOUND

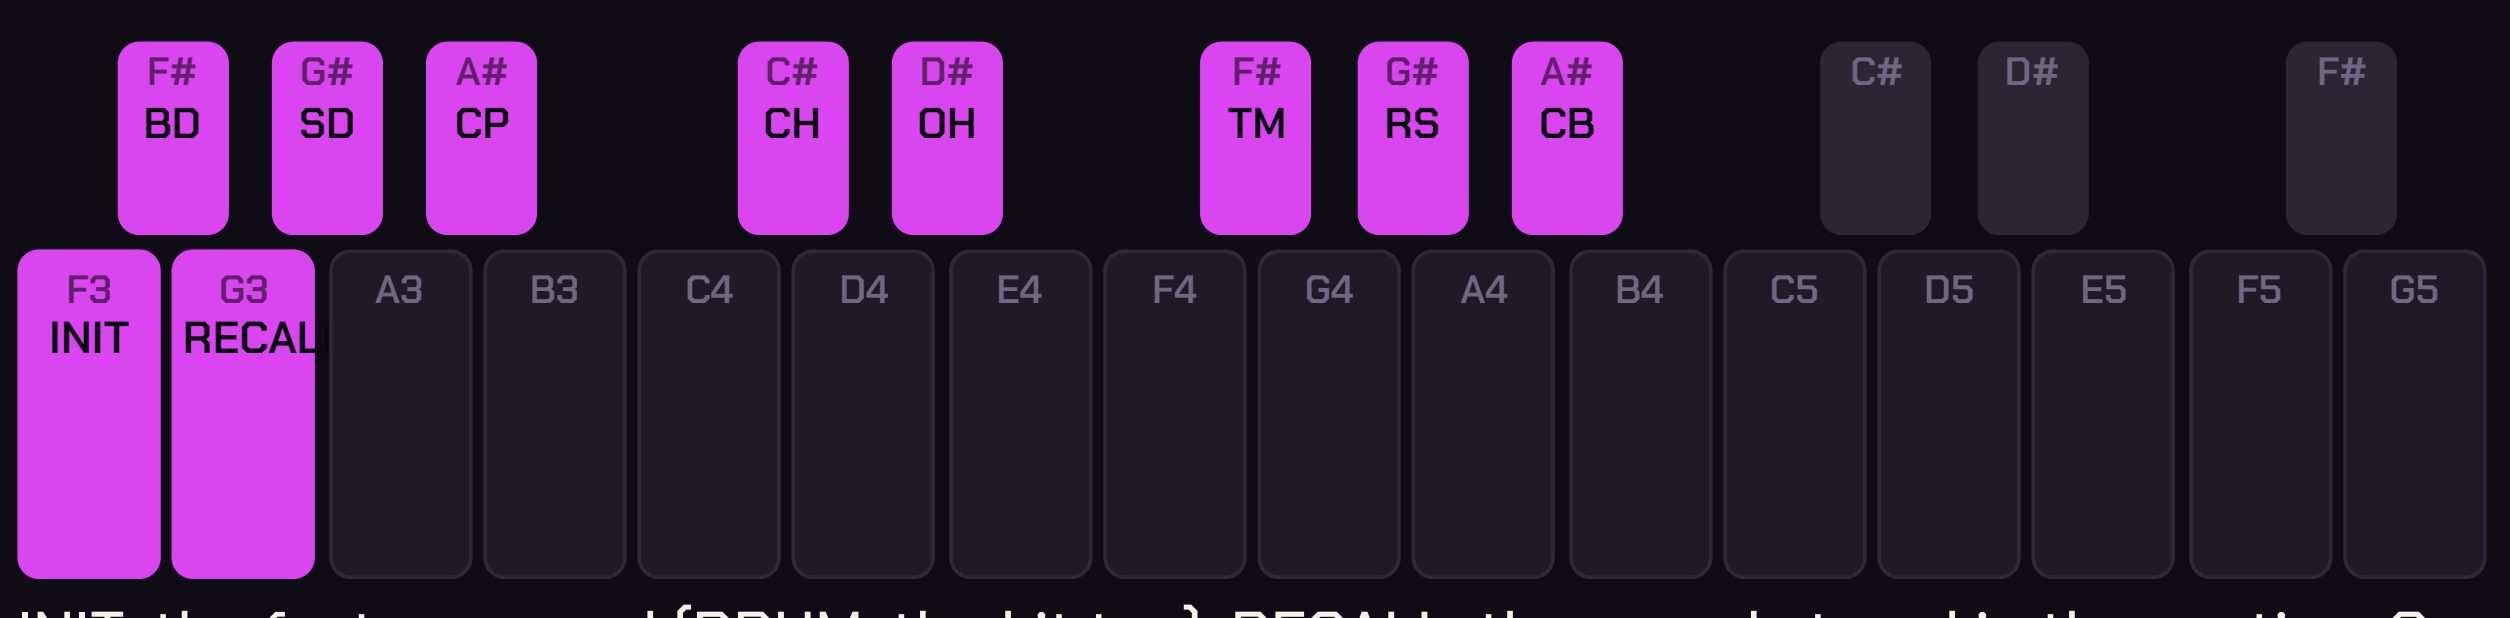

INIT: the factory sound (DRUM: the kit too). RECALL: the sound stored in the section. On a DRUM track black 1–8 mute each DRUM-X sound.

KNOBS

| | | | |
|---|---|---|---|
| EDIT 1 | EDIT 2 | EDIT 3 | EDIT 4 |

### LFO · MACROS

Knobs M1–M4; they stay latched when let go (LFO again: off). F3 rolls new routes, G3 clears them (only tracks that sound). LFO + SELECT: the track's LFO diced.

KNOBS

| | | | |
|---|---|---|---|
| M1 | M2 | M3 | M4 |

### SCL · SCALE

Any key sets the ROOT. ROOT and SCALE are every melodic track's (and RESO's).

KNOBS

| | | | |
|---|---|---|---|
| ROOT | SCL | OFS | PIT |

### SEQ · TOOLS

On the SEQ pages: F3 CLEAR · G3 REVERSE · A3 B3 SHIFT · C4 RANDOM · D4 COOK · E4 BEAT · F4 CLR AUTO (the automation).

KNOBS

| | | | |
|---|---|---|---|
| LEN | DIV | SWING | GATE |

### REC · RECORD

F3 CLEAR the track (at once; GLO + G4 undoes it), G3 the metronome CLICK.

KNOBS

| | | | |
|---|---|---|---|
| CLICK | - | - | - |

## COMBOS

### BUTTONS TOGETHER

| | |
|---|---|
| HOME · EDIT · SEQ · LFO · FX + SELECT | Their dice: everything · sound · sequence · LFO · effects (KEEP? OK / CANCEL). |
| PAGE BUTTON + PRESETS | Jump through that button's pages. |
| REC + FX EDIT ENV LFO SCL ARP GLO | Clear that part's automation on the selected track (FX: the punch-in lane too). |
| SEQ + REC | CLEAR ALL SEQUENCES? (OCT+ confirms). |
| SAVE + OCT+ / OCT– | Store / recall the playing section. |
| GLO + PLAY | Restart from the top. |
| GLO + SELECT | Tempo (from any page). |
| STEP HELD + KNOB | A parameter lock on that step (roll, grid). |
| HOME held | MENU: knob accel, FX latch, hold time, USB level, palettes, animation... |

## EVERY PAGE · KNOB 1 – 4

### ENV

| | | | | |
|---|---|---|---|---|
| ENV | ATK | DEC | SUS | REL |
| ENV DEST | FILTER | PITCH | SHAPE | LOOP |

### LFO

| | | | | |
|---|---|---|---|---|
| LFO | RATE | WAVE | PHASE | FADE |
| LFO DEST | PITCH | FILTER | SHAPE | AMP |
| MOD | SLOT | SRC | DEST | AMT |
| MSEQ | STEP | LEVEL | LEN | SLEW |
| MSEQ 2 | DIV | - | - | - |

### SCL · ARP

| | | | | |
|---|---|---|---|---|
| SCL | ROOT | SCALE | QUANT | TRANS |
| SCL 2 | ALL TR - - - | | | |
| ARP | MODE | RATE | OCT | GATE |
| ARP 2 | SWING | PROB | HOLD | ORDER |

### FX

| | | | | |
|---|---|---|---|---|
| FX | DIST | CHORUS | DLY | REV |
| DIST | DIST | TYPE | TONE | - |
| AUTOPAN | DEPTH | RATE | SYNC | WAVE |
| SLICER | MODE | PAT | RATE | DEPTH |
| SL BUS | T1 | T2 | T3 | T4 |
| SL BUS 2 | T5 | T6 | FX | - |
| SL PITCH | STEP | PITCH | LEN | QUANT |
| DLY | TIME | FEEDBK | TONE | MIX |
| DLY 2 | WIDE | PITCH | SPRAY | - |
| REVERB | TYPE | SIZE | DAMP | PRE/AIR |
| REVERB 2 | MOD | RATE | FILT | WIDE |
| CHORUS | RATE | DEPTH | STEREO | - |
| MASTER | CLIP | PUNCH | DUCK | REL |

### EDIT

| | | | | |
|---|---|---|---|---|
| EDIT 1 | E1 | E2 | E3 | E4 |
| EDIT 2 | E5 | E6 | E7 | E8 |
| RETRIG | RTRG | - | - | - |
| OPERATOR | OP | RATIO | FINE | LEVEL |
| OP ENV | OP | STAGE | RATE | LEVEL |
| OPERATOR 2 | OP | MODE | DETUNE | VEL |
| FILTER | TYPE | CUT | RES | DRIVE |
| VOICE | VOICE | GLIDE | MODE | PRIO |
| KIT 3 | BP | FEEDBK | - | - |
| X-MOD | RATE | DEPTH | SHAPE | RAND |
| LEVELS | KICK | SNARE | CLAP | HATCL |
| LEVELS 2 | HATOP | TOM | RIM | BELL |
| SOUND | SOUND | SIDE | PITCH | PMOD |
| SOUND 2 | SOUND | DECAY | NOISE | COLOR |
| SOUND 3 | SOUND | MODE | PM.TYPE | DRIVE |
| SOUND 4 | SOUND | LAYER | FEEDBK | SEND |
| STEREO | IMAGE | - | - | - |

### SEQ

| | | | | |
|---|---|---|---|---|
| STEP | STEP | NOTE | TIME | FLAG |
| STEP · DRUM | STEP | LANE | HIT | ACC |
| COMP | STEP | TYPE | VAL | VAL |
| PATTERN | LEN | DIV | SWING | GATE |
| AUTOMATION | PLAY | EVENT | LOCK | CLEAR |
| AUTO LIST | ROW | STEP | PARAM | VALUE |
| MUTATE | SOUND | PATTERN | AMOUNT | MODE |
| FUGUE | HEAD | RATE | DIR | INTVL |
| SHIFT | OFFSET | PITCH | CHANCE | C.LEN |

### GLO · SAVE

| | | | | |
|---|---|---|---|---|
| MIXER | LEVEL | PAN | REV | MUTE |
| GLOBAL | BPM | SWING | CLOCK | TUNE |
| SYSTEM | TRACKS | LOAD | ROUTE | CPU |
| PRESETS | No. | ENG | FAV | LIST |
| USER | SLOT | LOAD | ERASE | SAVE |
| PROJECT | PROJ | SECT | LOAD | SAVE |
| ARRANGE | ROW | SECT | BARS | SCENE |
| TOOLS | CLEAR SEQ · INIT SOUND · DEL ROW · CLEAR SONG · NEW PROJECT: K1 picks, OCT+ | | | |

GPL-3.0 · fork of Felucca (Hügelton Instruments) · song mode from SLOOP