

LOW-COST LORA GATEWAY: A STEP-BY-STEP TUTORIAL



PROF. CONG DUC PHAM
[HTTP://WWW.UNIV-PAU.FR/~CPHAM](http://WWW.UNIV-PAU.FR/~CPHAM)
UNIVERSITÉ DE PAU, FRANCE




CONTENTS

- We will show how to build a low-cost LoRa gateway to collect data from end-devices
- Configuration and update procedures will also be shown
- The device part will be shown in a separate tutorial
- The hardware platform is a Raspberry PI. RPI 1B/B+, 2B and 3B have been successfully tested
- But it is also necessary to read information from
 - <https://github.com/CongducPham/LowCostLoRaGw>
 - https://github.com/CongducPham/LowCostLoRaGw/tree/master/gw_full_latest
- As there are many issues that are not described here
- Let's get started...

ASSEMBLING THE HARDWARE





GET THE RASPBERRY

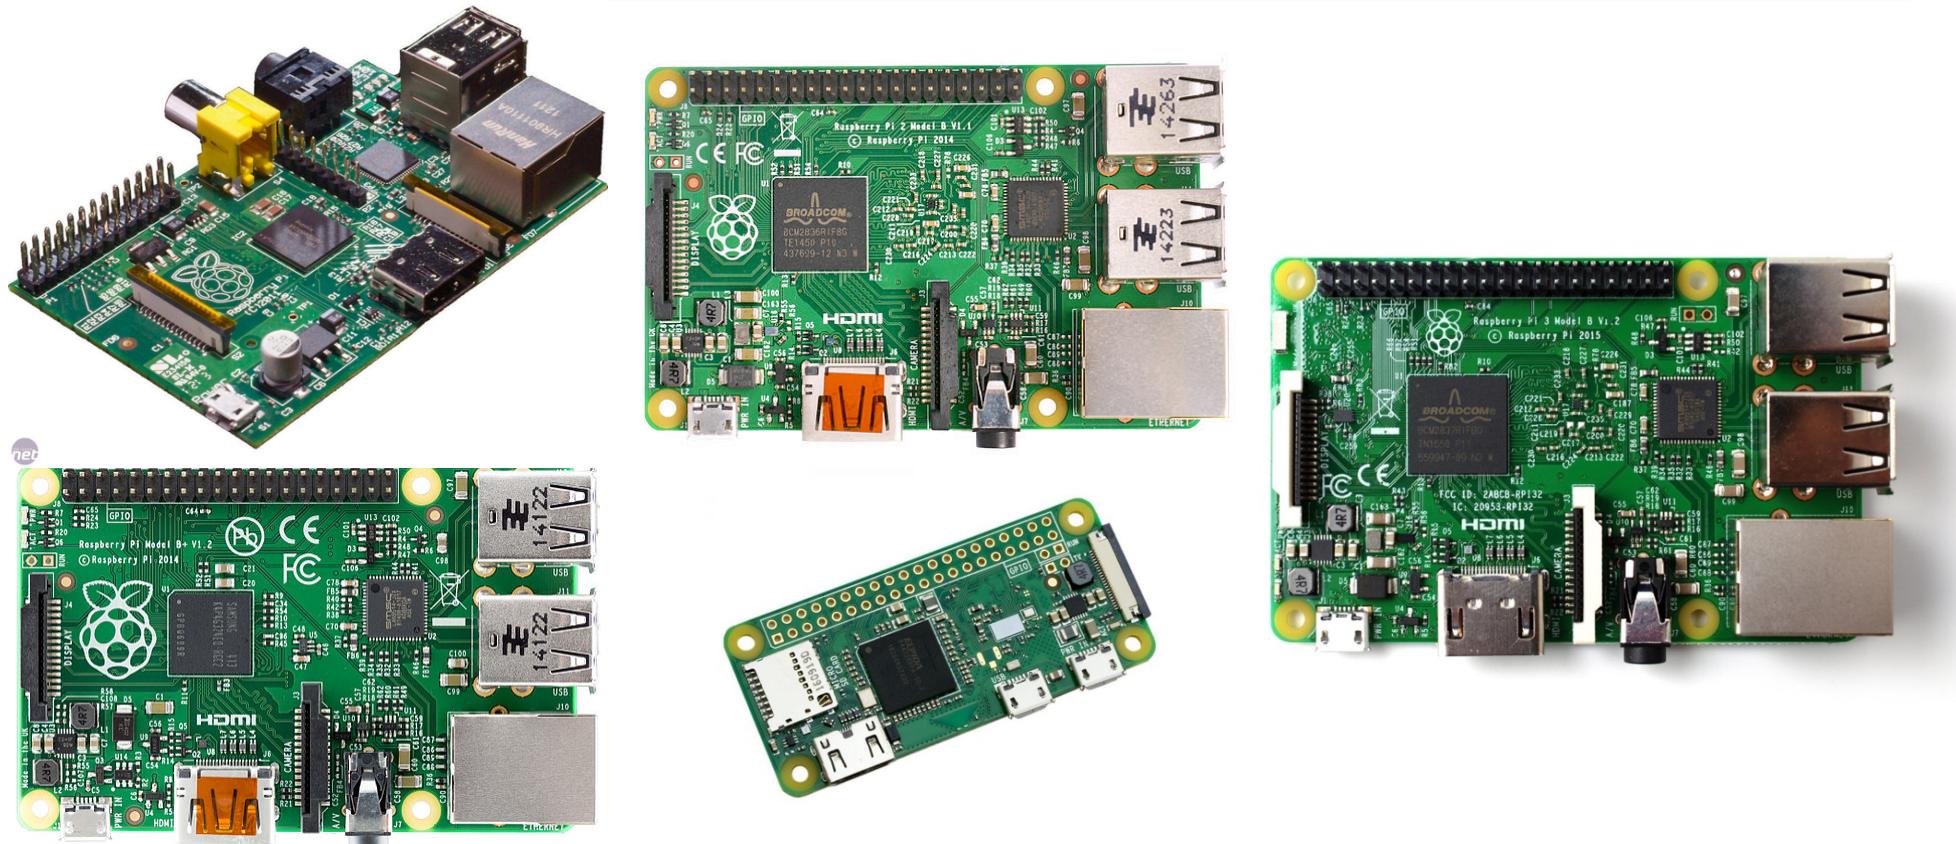



You can use RaspberryPi 1 model B or B+, RaspberryPi 2 model B, RaspberryPi 3 model B and RaspberryPi Zero (W). The most important usefull feature is the Ethernet interface for easy Internet connection. You can add WiFi with a WiFi USB dongle to use access-point features. With the RPI3 & RPI0W, WiFi and Bluetooth are embedded on the board.

NOW THE RADIO MODULE (1)

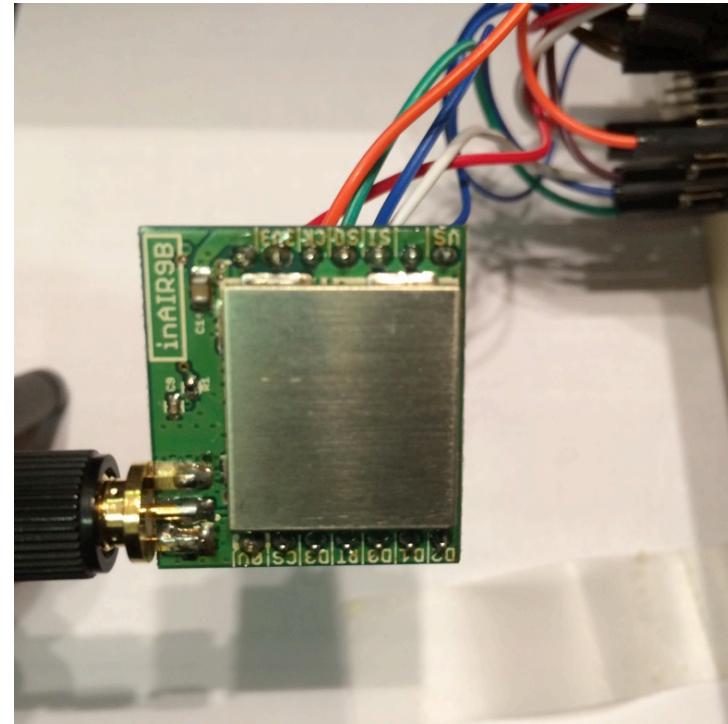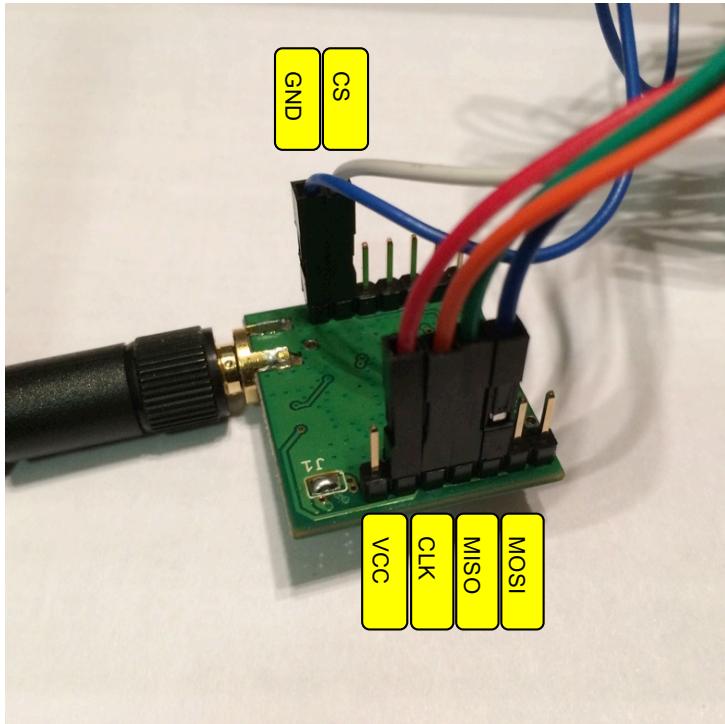


If you go for the inAir (9,9B,4) from Modtronix, the header pins can come fully assembled. Take the 6mm header pins to have enough length to connect F/F breadboard cables (left). Connect the SPI pins with the F/F cables. Try to use different colors. I use the following colors: MOSI (blue), MISO (green), CS (white), CLK (orange). Then connect also the VCC (red) and the GND (black or any other dark color) of the radio board.

NOW THE RADIO MODULE (2)

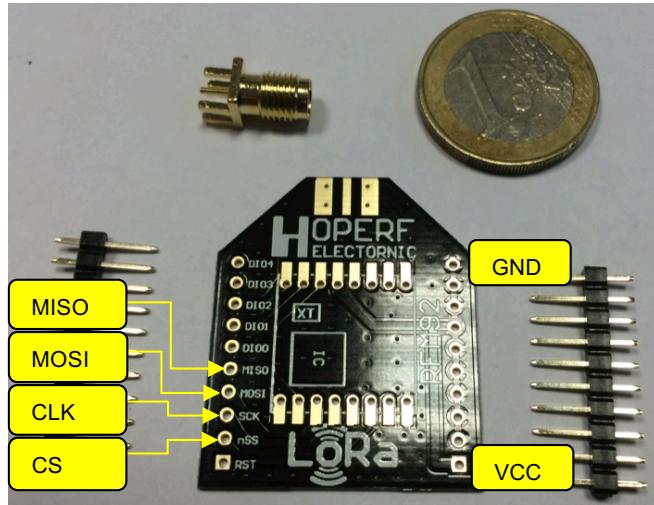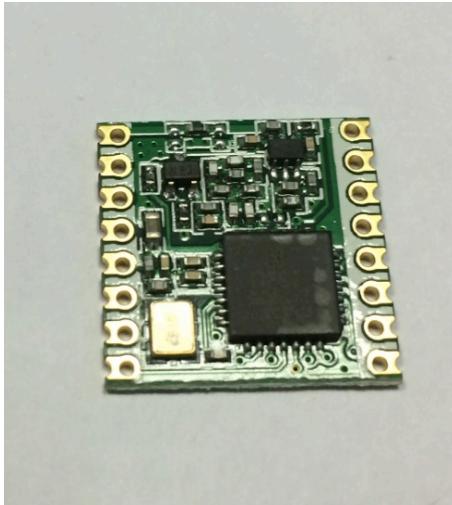

If you take the HopeRF RFM 92W/95W you may need the adaptor breakout and to go through some delicate but simple soldering tasks! It is not difficult but you have to trained a bit before! Then, like for the inAir9, use F/F breadboard cable to connect the SPI pins, using different colors as explained previously.

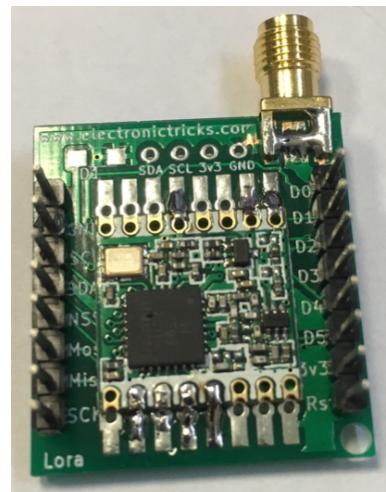


Another breakout from
https://github.com/ccadic/RFM95LORA_Breadboard



Another breakout from Tindie
<https://www.tindie.com/products/leonaхи/rfm95-lora-breakout-board/>

CONNECTING THE RADIO MODULE (1)

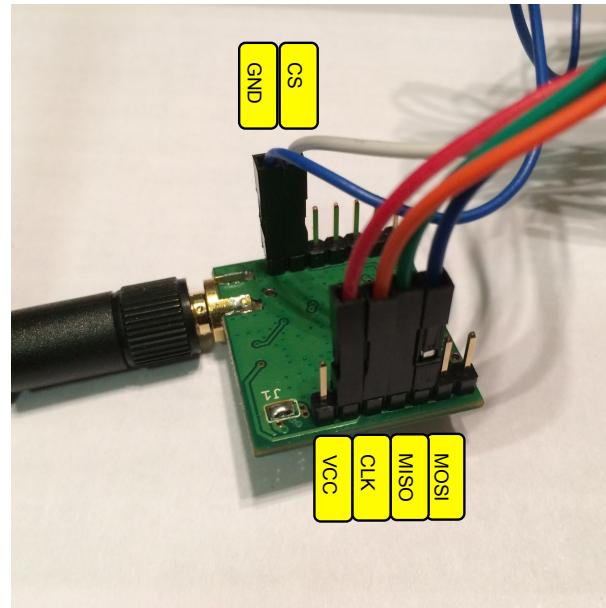


GPIO#	2nd func.	Pin#	Pin#	2nd func.	GPIO#
	+3.3 V	1	2	+5 V	
2	SDA1 (I2C)	3	4	+5 V	
3	SCL1 (I2C)	5	6	GND	
4	GCLK	7	8	TXD0 (UART)	14
	GND	9	10	RXD0 (UART)	15
17	GEN0	11	12	GEN1	18
27	GEN2	13	14	GND	
22	GEN3	15	16	GEN4	23
	+3.3 V	17	18	GEN5	24
10	MOSI (SPI)	19	20	GND	
9	MISO (SPI)	21	22	GEN6	25
11	SCLK (SPI)	23	24	CE0_N (SPI)	8
	GND	25	26	CE1_N (SPI)	7

(RPI1 Models A and B stop here)


EEPROM	ID_SD	27	28	ID_SC	EEPROM
5	N/A	29	30	GND	
6	N/A	31	32		12
13	N/A	33	34	GND	
19	N/A	35	36	N/A	16
26	N/A	37	38	Digital IN	20
	GND	39	40	Digital OUT	21

Depending on the model, you can have the « short » or the « long » GPIO interface. However, the SPI pins are at the same location therefore it does not change the way you connect the radio module if you take pin 1 as the reference. Connect the SPI pins (MOSI, MISO, CLK, CS) of the radio to the corresponding pins on the RPI. Note that CS goes to CE0_N on the RPI.

CONNECTING THE RADIO MODULE (2)

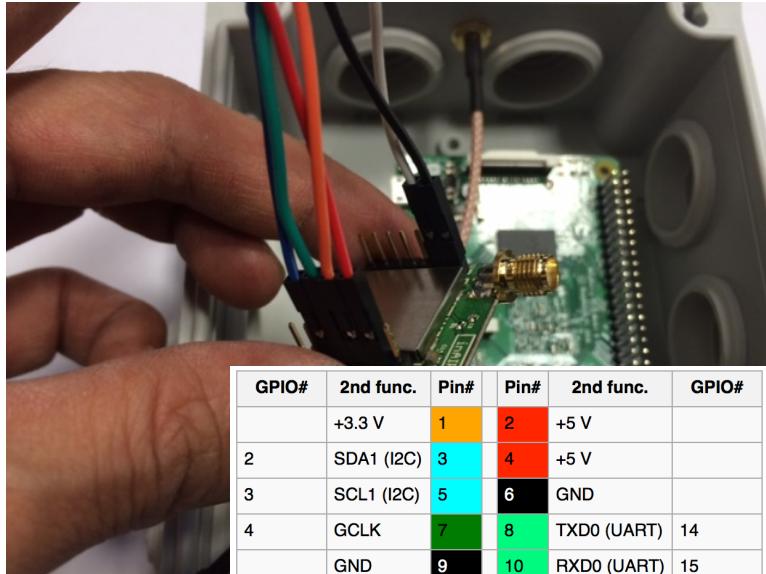


GPIO#	2nd func.	Pin#	Pin#	2nd func.	GPIO#
	+3.3 V	1	2	+5 V	
2	SDA1 (I2C)	3	4	+5 V	
3	SCL1 (I2C)	5	6	GND	
4	GCLK	7	8	TXD0 (UART)	14
	GND	9	10	RXD0 (UART)	15
17	GEN0	11	12	GEN1	18
27	GEN2	13	14	GND	
22	GEN3	15	16	GEN4	23
	+3.3 V	17	18	GEN5	24
10	MOSI (SPI)	19	20	GND	
9	MISO (SPI)	21	22	GEN6	25
11	SCLK (SPI)	23	24	CE0_N (SPI)	8
	GND	25	26	CE1_N (SPI)	7
(RPi 1 Models A and B stop here)					
EEPROM	ID_SD	27	28	ID_SC	EEPROM
5	N/A	29	30	GND	
6	N/A	31	32		12
13	N/A	33	34	GND	
19	N/A	35	36	N/A	16
26	N/A	37	38	Digital IN	20
	GND	39	40	Digital OUT	21

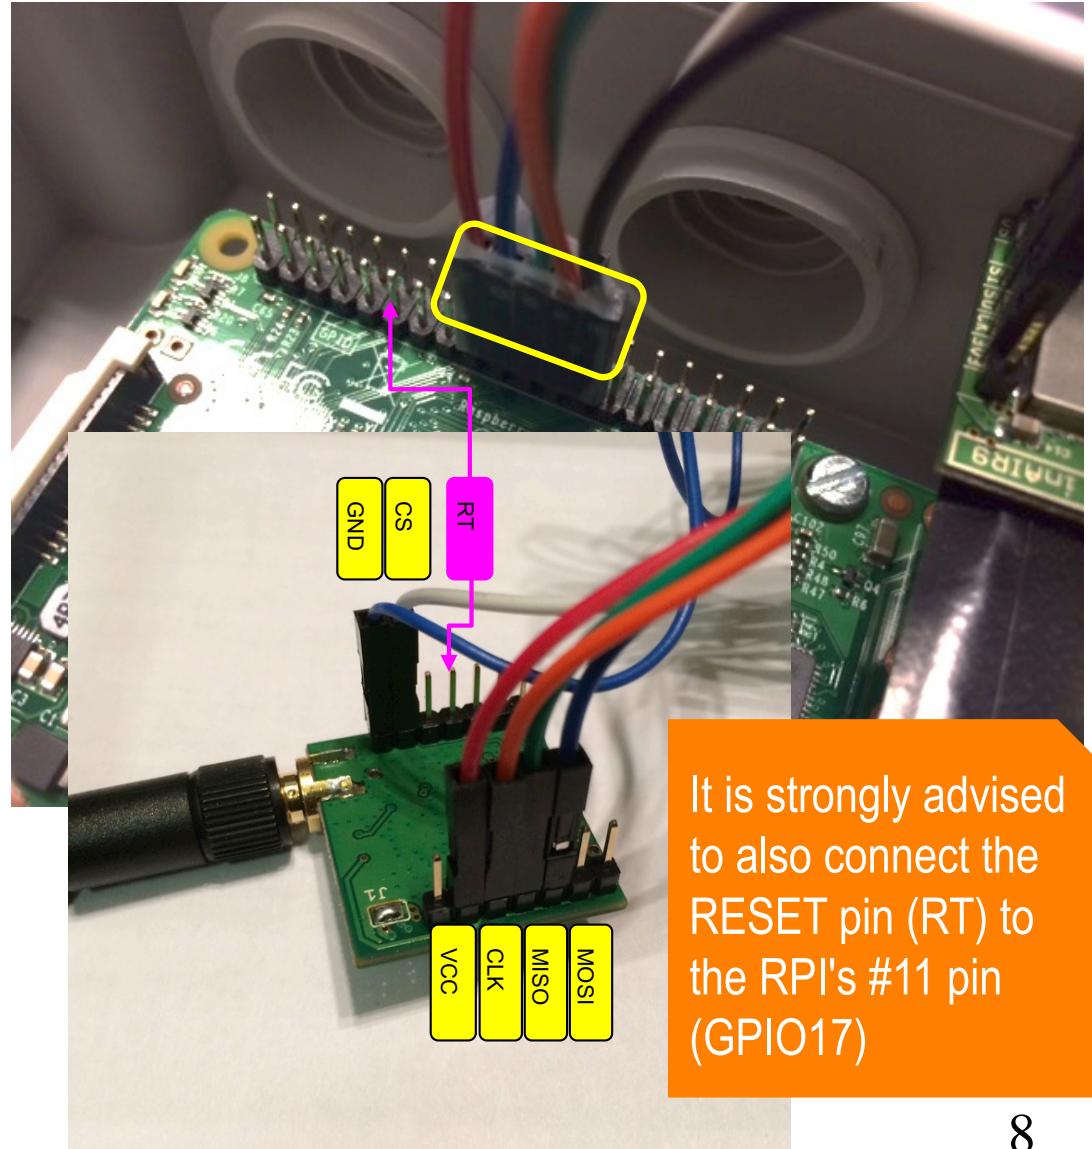

It is strongly advised to also connect the RESET pin (RT) to the RPi's #11 pin (GPIO17)


THE LORASPI HAT

- The LoRasPI hat from
<https://github.com/hallard/LoRasPI>

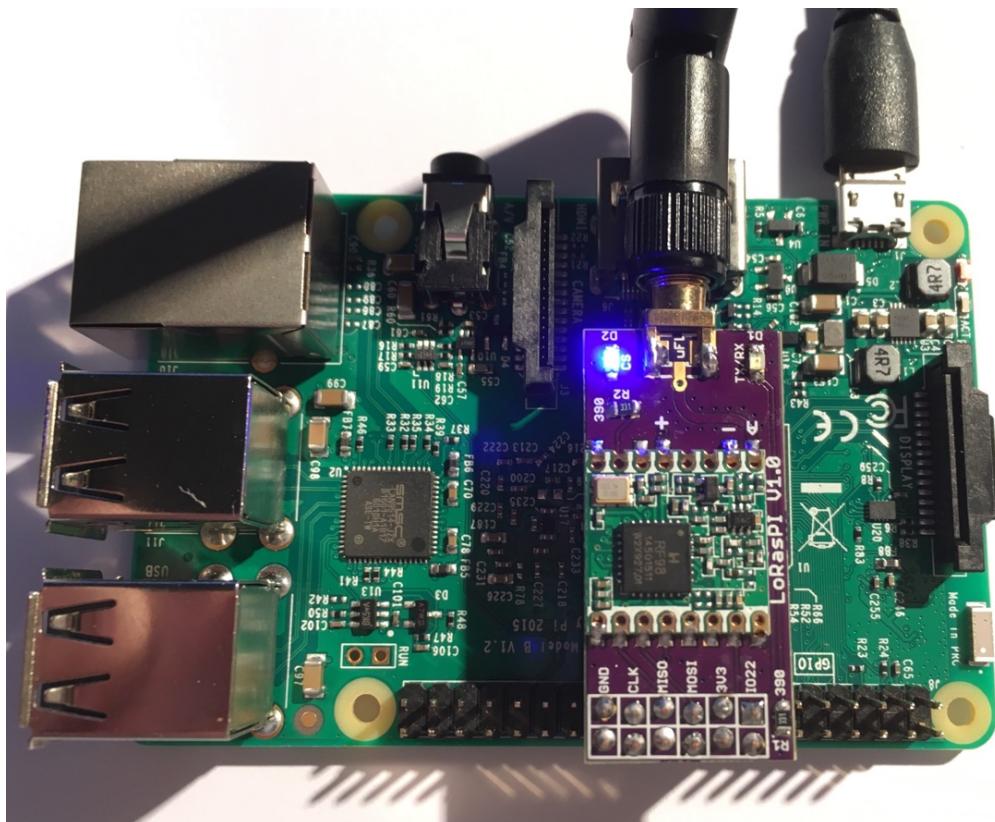

THE WAZIHAT PCB

- ❑ WAZIUP has a simple RFM95 breakout for the gateway
- ❑ Contact A. Rahim (arahim"at"fbk.eu) for more information

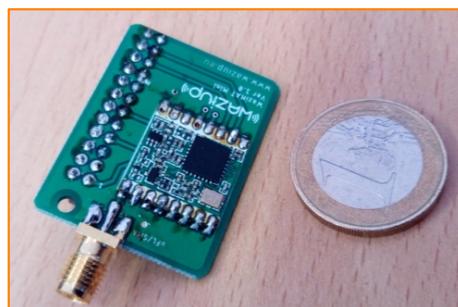



The short WAZIHAT version can be used for end-device as well



GPIO#	2nd func.	Pin#	Pin#	2nd func.	GPIO#
	+3.3 V	1	2	+5 V	
2	SDAT (I2C)	3	4	+5 V	
3	SCL1 (I2C)	5	6	GND	
4	GCLK	7	8	TXD0 (UART)	14
	GND	9	10	RXD0 (UART)	15
17	GEN0	11	12	GEN1	18
27	GEN2	13	14	GND	
22	GEN3	15	16	GEN4	23
	+3.3 V	17	18	GEN5	24
10	MOSI (SPI)	19	20	GND	
9	MISO (SPI)	21	22	GEN6	25
11	SCLK (SPI)	23	24	CE0_N (SPI)	8
	GND	25	26	CE1_N (SPI)	7

FREELY AVAILABLE RFM95 BREAKOUT

- We also propose a very simple RFM95 breakout that can be used for gateway and end-device

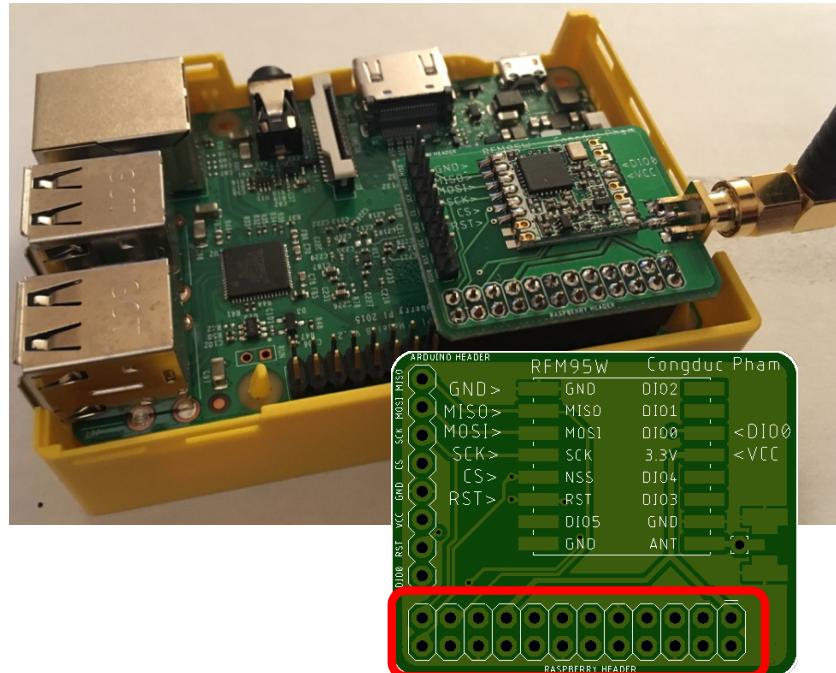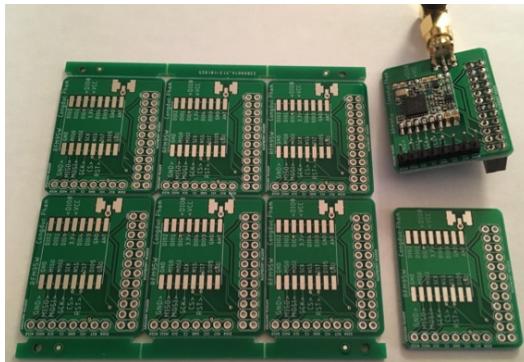


Raspberry Pi2 GPIO Header		
Pin#	NAME	NAME
01	3.3v DC Power	DC Power 5v
03	GPIO02 (SDA1 , I ^C)	DC Power 5v
05	GPIO03 (SCL1 , I ^C)	Ground
07	GPIO04 (GPIO_GCLK)	(TXD0) GPIO14
09	Ground	(RXD0) GPIO15
11	GPIO17 (GPIO_GEN0)	GPIO18
13	GPIO27 (GPIO_GEN2)	Ground
15	GPIO22 (GPIO_GEN3)	(GPIO_GEN4) GPIO23
17	3.3v DC Power	GPIO24
19	GPIO10 (SPI_MOSI)	Ground
21	GPIO09 (SPI_MISO)	(GPIO_GEN6) GPIO25
23	GPIO11 (SPI_CLK)	(SPI_CE0_N) GPIO08
25	Ground	(SPI_CE1_N) GPIO07
27	ID_SD (I ^C ID EEPROM)	Ground
29	GPIO05	ID_SC
31	GPIO06	Ground
33	GPIO13	GPIO12
35	GPIO19	Ground
37	GPIO26	GPIO16
39	Ground	GPIO20
		GPIO21

Rev. 1
26/01/2014
<http://www.element14.com>



- The zipped Gerber archive can be freely downloaded from
<https://github.com/CongducPham/LowCostLoRaGw>

PUT IT IN A BOX (1)

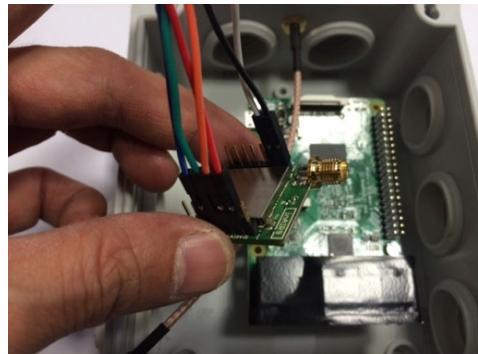

You can have a more integrated version, with a box for outdoor usage and PoE splitter to power the Raspberry with the Ethernet cable. See how we also use a DC-DC converter to get the 5V for the RPI.


PUT IT IN A BOX (2)

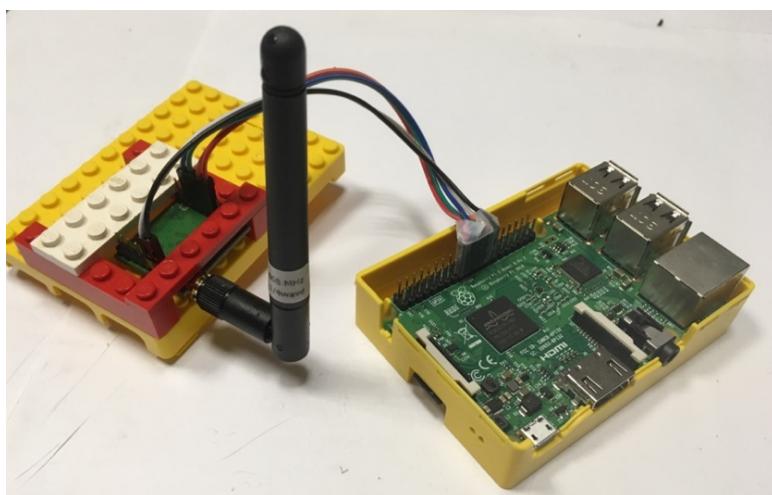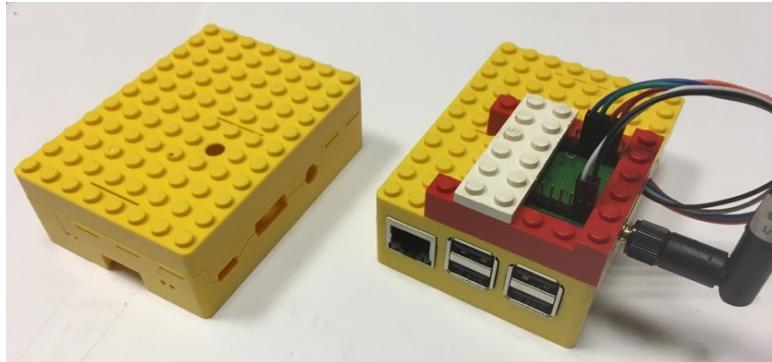

A simple, cheap and funny box is also very suitable for an indoor gateway. Actually, indoor deployment is probably the best option with an outdoor antenna as it will be shown in next slides.

ANTENNAS FOR GATEWAY

- Antennas for gateways can be placed on a building, at a high location.
- You can easily use ground plane or dipole antennas (e.g. sleeve dipole). More complex high gain antenna or a directional Yagi antenna can be purchased depending on your budget and whether the deployment allows it.

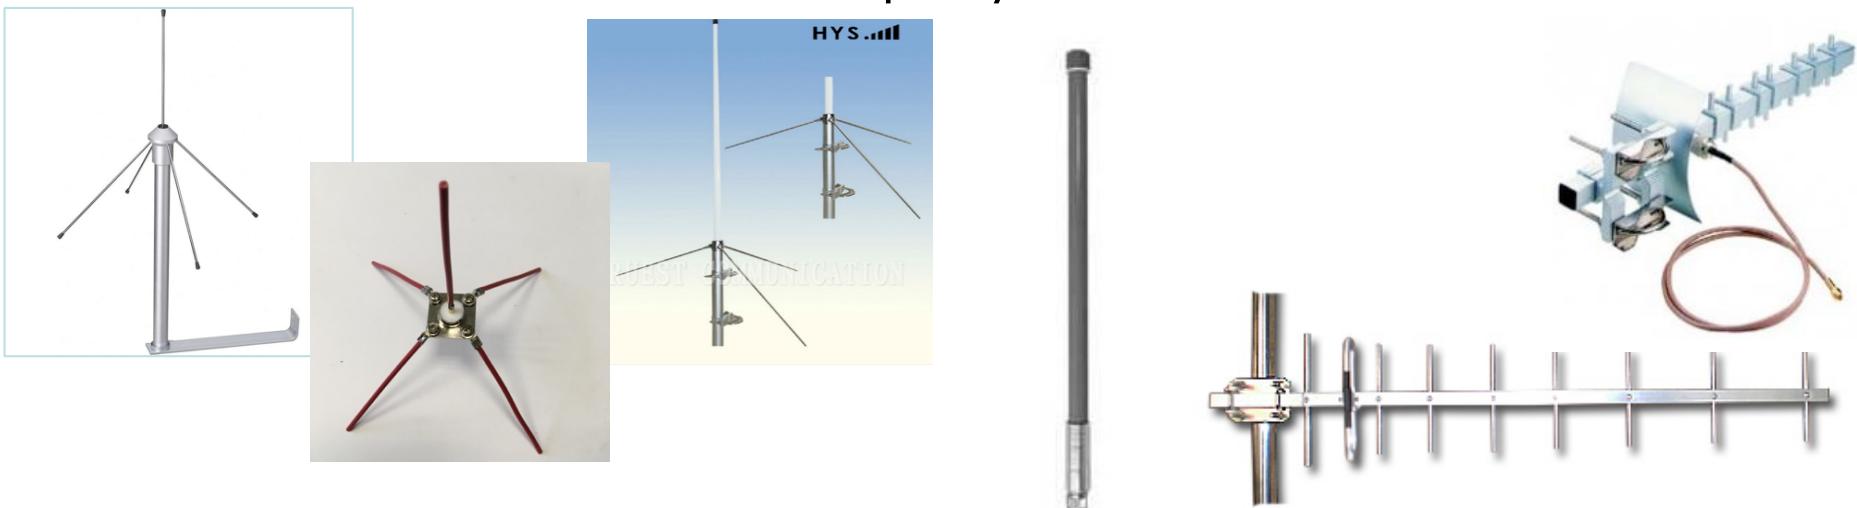

USING A CABLE ANTENNA

- Using an extension coaxial cable between the antenna and the radio module greatly ease the deployment of the gateway **but:**
 - Take a good quality cable (e.g. RG58 minimum) to limit attenuation
 - The antenna cable should not be too long to avoid high attenuation: 2m-5m
 - A simple $\frac{1}{4}$ wave monopole antenna WILL NOT provide good performance, TAKE a sleeve dipole if you need something compact




Look at the antenna cable tutorial for instructions on how to build your own cable (with adequate connectors) at the correct length.



ANTENNA WITH A COAXIAL CABLE


- At the end of a coaxial cable, it is possible to connect a ground plane antenna (usually $\frac{1}{4}$ wave) or a $\frac{1}{2}$ wave dipole antenna.

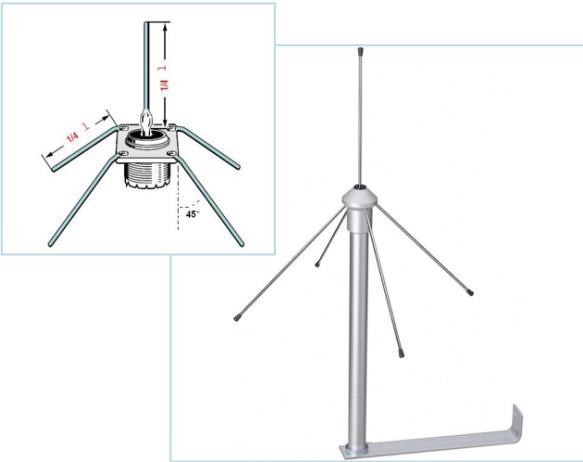

Ground plane



Sleeve dipole

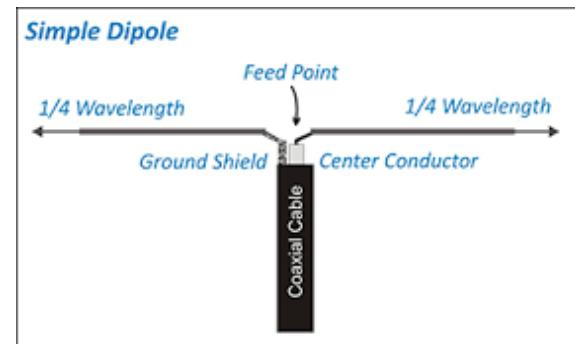

Simple dipole




More complex:
collinear,
array,...

- Some of them are easy to build (ground plane and simple dipole) and there are many tutorials.

SIMPLE $\frac{1}{2}$ WAVE DIPOLE ANTENNA



- A very simple dipole can be made with 2 pieces of $\frac{1}{4}$ wave wires. $\frac{1}{4}$ wave in 868MHz is about 8.2cm.

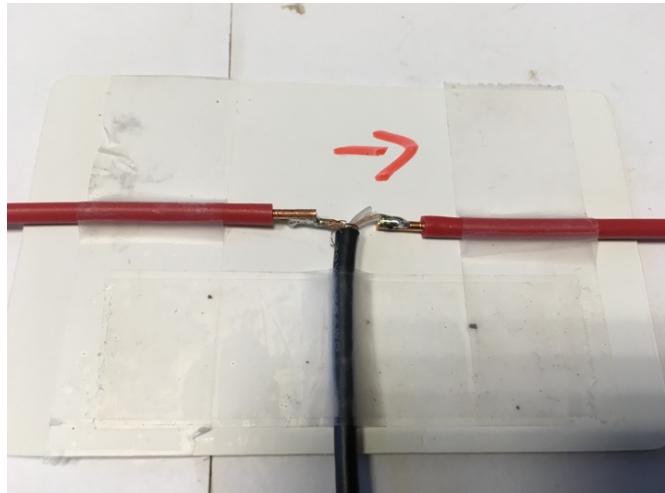

- There is no balun here but it is still better than the $\frac{1}{4}$ wave monopole if a coaxial cable is used
- You can buy a 3m RG58 cable (SMA-m to SMA-f for instance), keep the male side, cut the female side and solder the core conductor and the braid as shown.

SIMPLE $\frac{1}{4}$ WAVE GROUND PLANE ANTENNA




- The ground plane antenna can be made with 5 pieces of $\frac{1}{4}$ wave wires. $\frac{1}{4}$ wave in 868MHz is about 8.2cm.

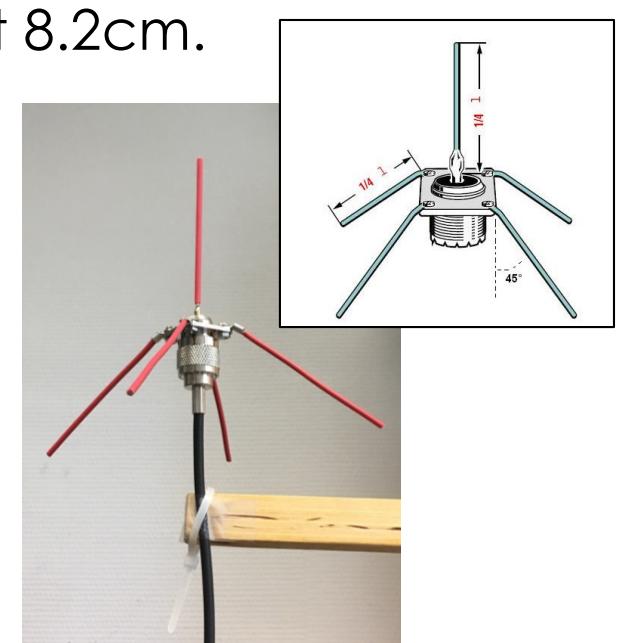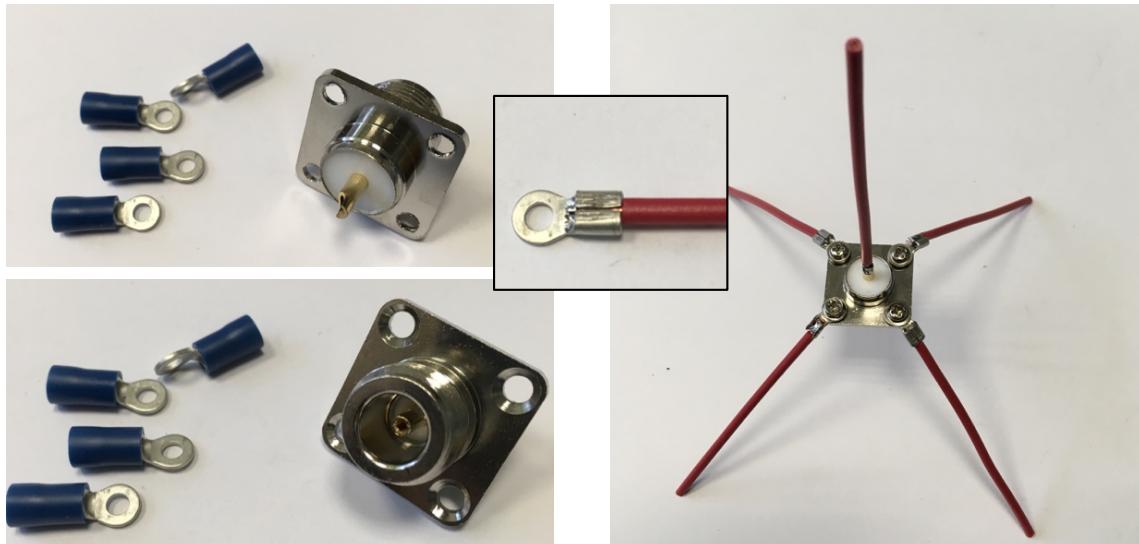

- You can buy a 3m-5m RG58 cable with an SMA-male at one end and a male N-connector at the other end. Or build your own cable.

EVEN SIMPLER $\frac{1}{4}$ WAVE GROUND PLANE ANTENNA


- With an existing SMA-m/SMA-f cable, you can also build a ground plane antenna by adding 4 radiant wires to the $\frac{1}{4}$ wave monopole.

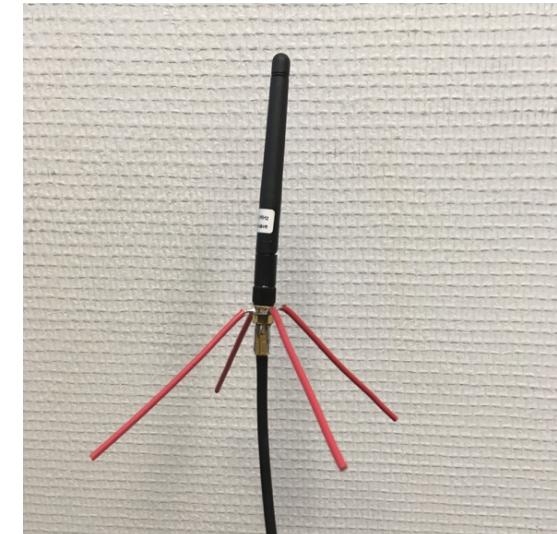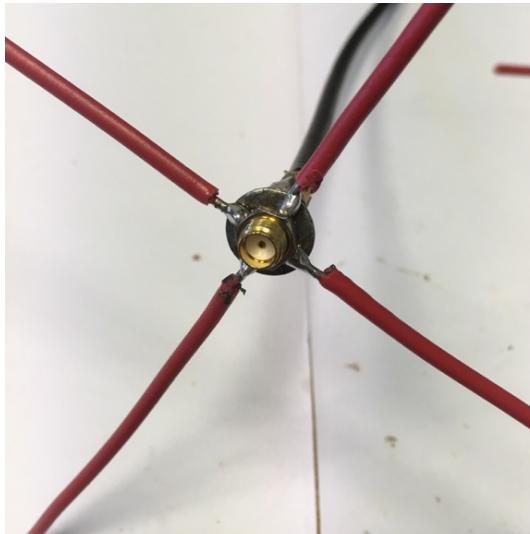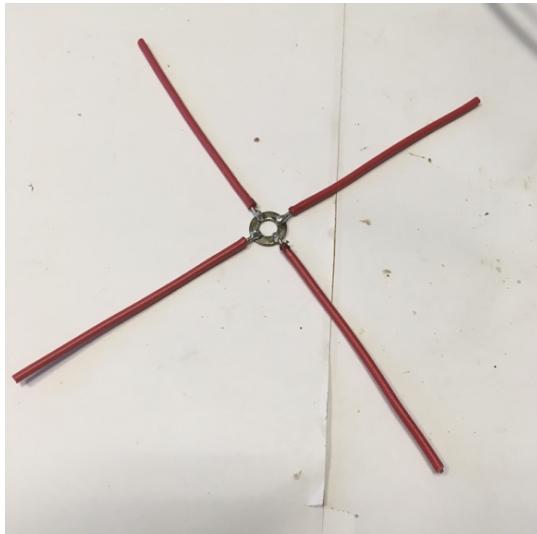

- This is a cheaper solution for sensing devices



GETTING, COMPILING & INSTALLING THE SOFTWARE

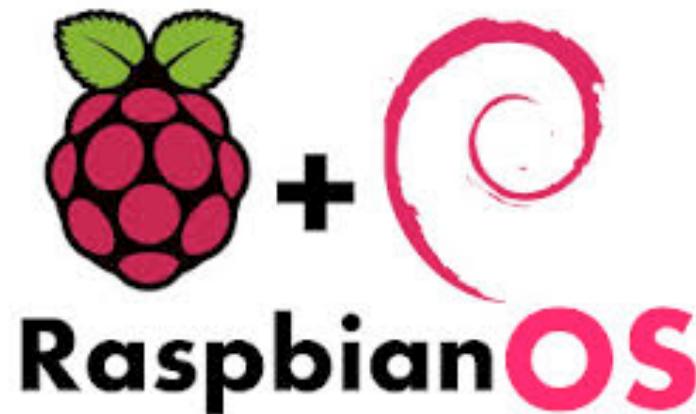

FLASHING THE OS

<http://cpham.perso.univ-pau.fr/LORA/WAZIUP/raspberrypi-jessie-WAZIUP-demo.dmg.zip>

- An SD card image with a Raspberry Raspbian Jessie version is provided.
- You will need an 8GB SD card. Be careful, some SD cards will not work. This one has been successfully tested. It has to be class 10.
- Look at
<https://www.raspberrypi.org/documentation/installation/installing-images/> to see the procedure depending on your OS. 7948206080 bytes should be written, otherwise you may have a problem.
- Once flashed, insert the SD card and power-up the Raspberry-based gateway.


GATEWAY WEB ADMIN INTERFACE (1)

- ❑ A gateway web admin interface has been added to the latest version
- ❑ Note that the SD card image includes the web admin interface installed, so you may skip the installation procedure (but it is strongly advised to update)
- ❑ To install the web admin interface, check if you have the `gw_web_admin` folder in your `lora_gateway` folder
- ❑ If you don't, then update to the latest version
- ❑ Then, go into `gw_web_admin` and run `install.sh`
 - ❑ `cd gw_web_admin`
 - ❑ `sudo ./install.sh`
- ❑ Web admin interface tutorial:
[https://github.com/CongducPham/tutorials/blob/master/
Low-cost-LoRa-GW-web-admin.pdf](https://github.com/CongducPham/tutorials/blob/master/Low-cost-LoRa-GW-web-admin.pdf)

GATEWAY WEB ADMIN INTERFACE (2)

□ <http://192.168.200.1/admin>

- Login: admin
- Password: loragateway

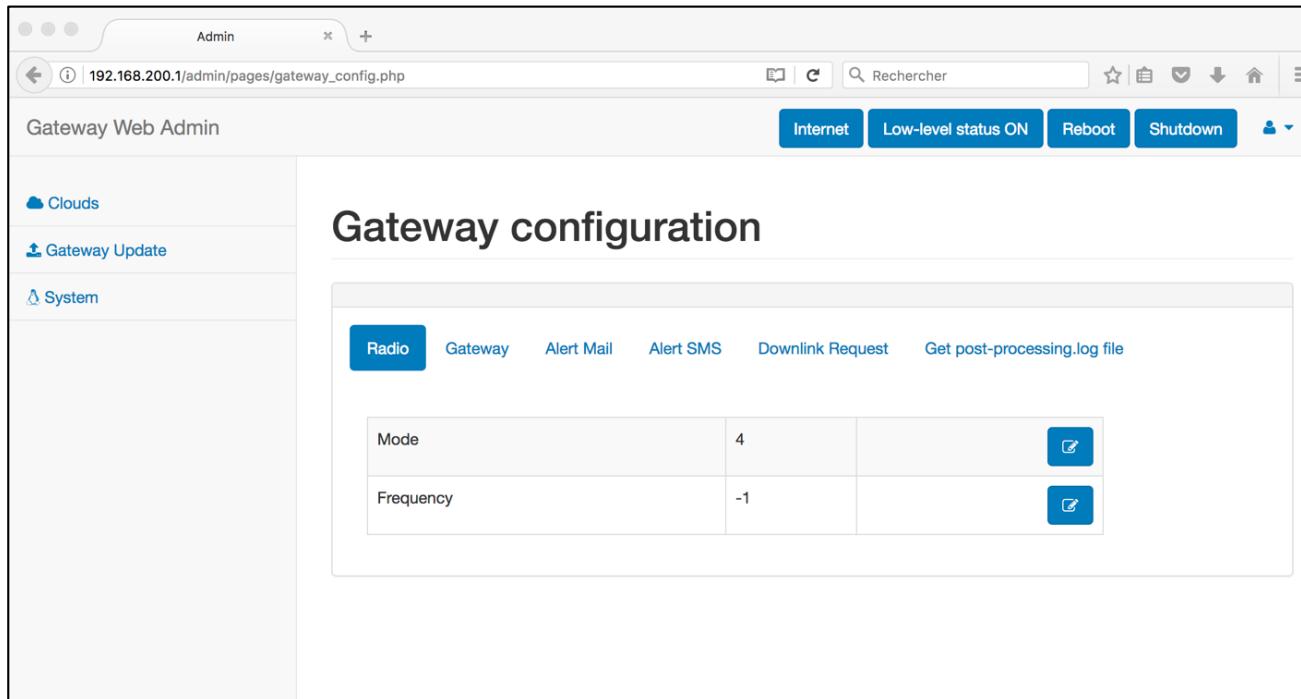

The screenshot shows a web browser window titled "Admin" with the URL "192.168.200.1/admin/pages/gateway_config.php". The page is titled "Gateway configuration". On the left, there is a sidebar with icons for "Clouds", "Gateway Update", and "System". The main content area has tabs for "Radio", "Gateway", "Alert Mail", "Alert SMS", "Downlink Request", and "Get post-processing.log file". Under the "Radio" tab, there is a table with two rows: "Mode" (value: 4) and "Frequency" (value: -1). Each row has an edit icon (pencil) in the last column.

WEB ADMIN FEATURES


- Currently, you can use the web admin to:
 - Update your gateway with the latest github version while preserving your configuration files
 - Perform the basic configuration procedure.
 - Configure the gateway as WiFi client to connect to a WiFi network
 - Test Internet connectivity
 - Easily reboot and shutdown your gateway
 - Be carefull, if you shut down the gateway, you need to physically access the gateway to power it on again
 - Change LoRa mode and frequency
 - Set your gateway id and configure alerting system (mail, SMS)
 - Change the WiFi SSID and password
 - Enable/Disable local AES decryption
 - Enable/Disable some selected clouds such as WAZIUP and ThingSpeak
 - For ThingSpeak, you can specify a new write key
 - For WAZIUP, you can specify the project name, the organization name and the service tree

GATEWAY UPDATE

- ❑ The gateway must be updated to the latest version.
- ❑ Internet access for the gateway is necessary
- ❑ The update procedure can easily be done with the web admin interface, connect to the gateway WiFi first
- ❑ The update steps are
 - 1 Full Update
 - 2 Basic Config
 - 3 Update Web Interface


GATEWAY UPDATE PAGE

☐ Gateway update section

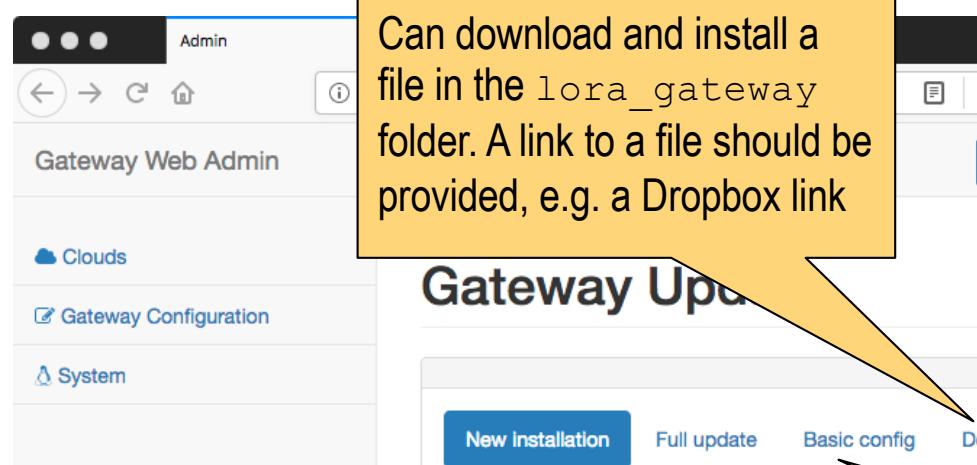

Install a new gateway by removing the existing `lora_gateway` folder, all existing configuration files will be overwritten.

If you install a new gateway with our SD card image, you can use this option.

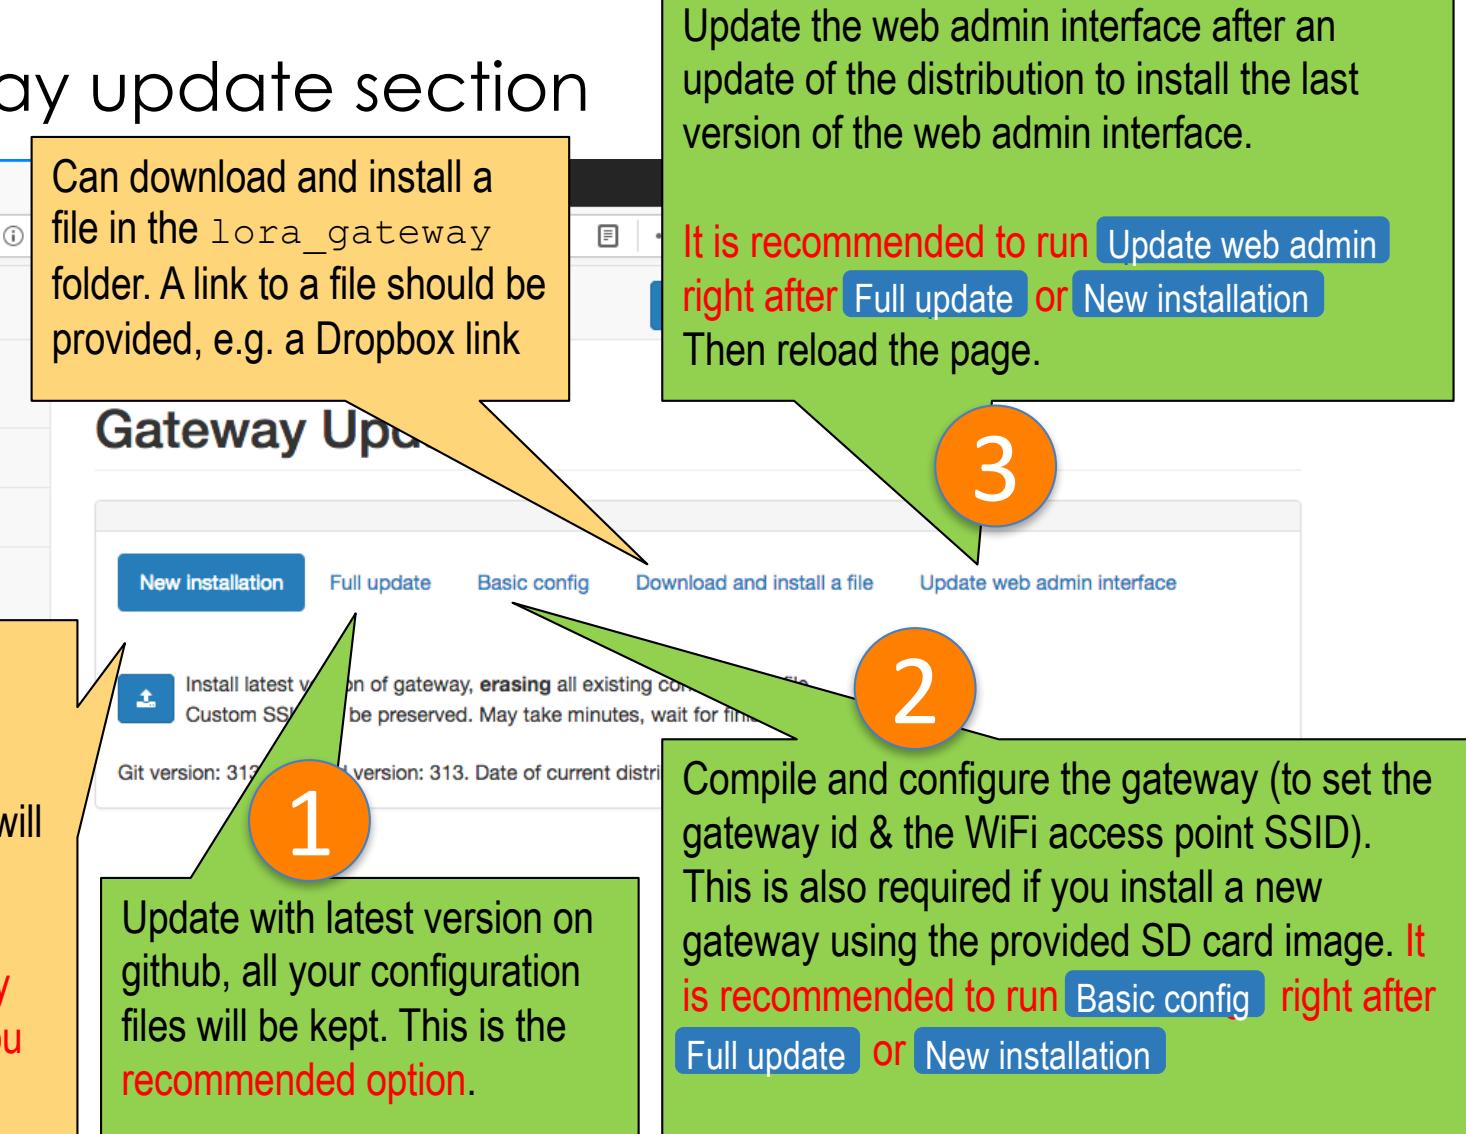

SOFTWARE VERSION NUMBER

Gateway Update

New installation Full update Basic config Download and install a file Update web admin interface

 Install latest version of gateway, **erasing** all existing configuration file.
Custom SSID will be preserved. May take minutes, wait for finish notification.

Git version: 313. Installed version: 313. Date of current distribution is 2018-06-21 16:28:07.326390425 +0200

- The software version number on github and the installed version number are displayed
- Click on  to obtain the latest software version number on github

Internet connection successful. github version number has been obtained.

Internet

Low-level status ON

Reboot

Shutdown



GATEWAY ACCESS &

CONFIGURATION INTERFACES

- ❑ There are 2 interfaces
 - ❑ The web admin interface
 - ❑ The command line interface that needs ssh
- ❑ The web interface is sufficient for most users
 - ❑ Easy basic configuration and easy update
 - ❑ Pre-defined cloud configuration
 - ❑ dedicated tutorial:
<https://github.com/CongducPham/tutorials/blob/master/Low-cost-LoRa-GW-web-admin.pdf>
- ❑ The command line interface has some more options and can easily be extended
- ❑ We are going to describe the command line interface and some of the gateway's internal

SSH TO THE GATEWAY

- ❑ The Raspbian image sets the Raspberry for DHCP on wired Ethernet and as a WiFi access point.
- ❑ If you connected the gateway to your LAN or laptop using wired Ethernet then the gateway will be assigned an IP address. Use this address to connect with SSH to the gateway
- ❑ You can use Angry IP Scanner (<http://angryip.org/>) to know the assigned address
- ❑ Use `ssh pi@rpi_addr`, where `rpi_addr` is the IP address assigned to the gateway
- ❑ Login password is `loragateway` if you installed from the SD card image
- ❑ However, using the built-in WiFi access point is easier as shown in the next slide

SSH TO THE GATEWAY WITH WiFi

- The gateway is also configured as a WiFi access point with address 192.168.200.1
- Select the WAZIUP_PI_GW_xxxxxxxx WiFi
- WiFi password is loragateway
- Then ssh pi@192.168.200.1
- Login password is loragateway

You can use an iOS or Android smartphone or tablet to connect to the gateway with an SSH client app! See next slide.





```
MacBookProRetina-de-Congduc-Pham:~ cpham$ ssh pi@192.168.200.1
pi@192.168.200.1's password:

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
Last login: Thu Aug  4 17:19:00 2016 from 192.168.200.102
pi@raspberrypi:~ $ cd lora_gateway/
pi@raspberrypi:~/lora_gateway $ ll
total 864
-rw----- 1 pi    pi    44155 Aug  3 16:55 arduPi.cpp
-rw----- 1 pi    pi    16715 Aug  3 16:55 arduPi.h
-rw-r--r-- 1 pi    pi    35164 Aug  3 17:01 arduPi.o
-rw----- 1 pi    pi    43310 Aug  3 16:55 arduPi_pi2.cpp
-rw----- 1 pi    pi    14043 Aug  3 16:55 arduPi_pi2.h
-rw----- 1 pi    pi    77976 Aug  3 16:55 bcm2835.h
```

WAZIUP SMARTPHONE OR TABLET

- On iOS we tested Termius
- On Android we tested JuiceSSH

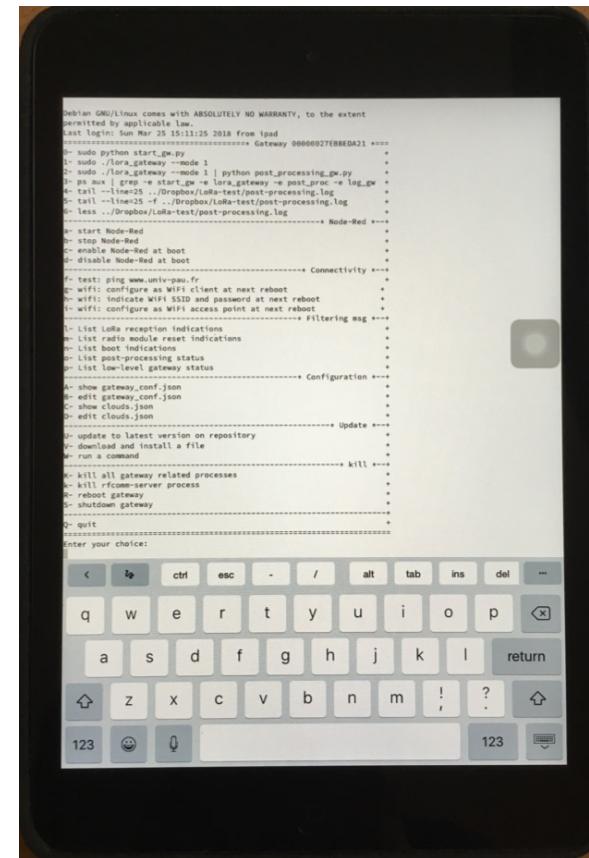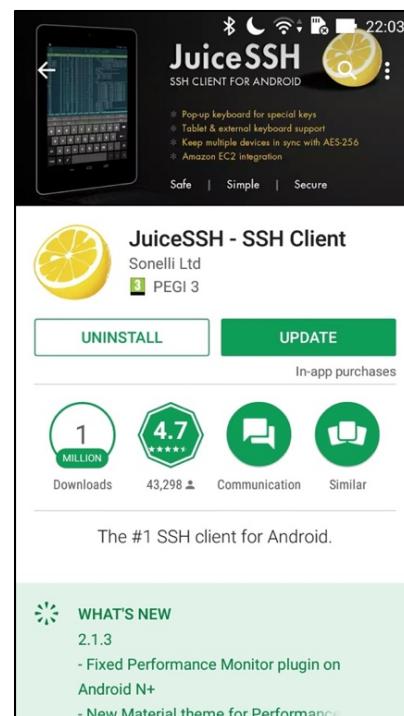

GATEWAY'S SIMPLE COMMAND INTERFACE

- ❑ Once logged on the gateway, you may directly enter in a simple command interface
- ❑ This command interface consists in a cmd.sh shell script
- ❑ **In image versions after May 2017, this script is launched when you log into the gateway with ssh**
- ❑ If this happens, select Q and hit RETURN to quit this interface
- ❑ You should be in the lora_gateway folder

```
pi@raspberrypi:~/lora_gateway $ ./cmd.sh
=====
* Gateway 00000027EB84C456 ===
0- sudo python start_gw.py +
1- sudo ./lora_gateway --mode 1 +
2- sudo ./lora_gateway --mode 1 | python post_processing_gw.py +
3- ps aux | grep -e start_gw -e lora_gateway -e post_proc -e log_gw +
4- tail --line=25 ../Dropbox/LoRa-test/post-processing.log +
5- tail --line=25 -f ../Dropbox/LoRa-test/post-processing.log +
6- less ../Dropbox/LoRa-test/post-processing.log +
-----* Connectivity *---+
f- test: ping www.univ-pau.fr +
g- wifi: configure as WiFi client at next reboot +
h- wifi: indicate WiFi SSID and password at next reboot +
i- wifi: configure as WiFi access point at next reboot +
-----* Filtering msg *---+
l- List LoRa reception indications +
m- List radio module reset indications +
n- List boot indications +
o- List post-processing status +
p- List low-level gateway status +
-----* Configuration *---+
A- show gateway_conf.json +
B- edit gateway_conf.json +
C- show clouds.json +
D- edit clouds.json +
-----* ngrok *---+
M- get and install ngrok +
N- ngrok authtoken +
O- ngrok tcp 22 +
-----* Update *---+
U- update to latest version on repository +
V- download and install a file +
W- run a command +
-----* kill *---+
K- kill all gateway related processes +
k- kill rfcomm-server process +
R- reboot gateway +
S- shutdown gateway +
-----+
Q- quit +
=====

Enter your choice:
```

DEFAULT GATEWAY CONFIGURATION

- ❑ The gateway software is **launched** when the Raspberry is powered on, i.e. booting
 - ❑ /home/pi/lora_gateway/scripts/start_gw.sh has been added in /etc/rc.local
 - ❑ start_gw.sh can perform some tasks and finally calls /home/pi/lora_gateway/start_gw.py
 - ❑ start_gw.py parses the configuration files to launch the low-level gateway and the post-processing stage
- ❑ The gateway works by default in LoRa mode 1 (BW=125kHz, SF=12) and listen on frequency 865.2MHz (see <https://github.com/CongducPham/LowCostLoRaGw#annexa-lora-mode-and-predefined-channels>)
- ❑ The gateway_conf.json file contains the gateway configuration

GATEWAY_CONF.JSON

- The gateway_conf.json file contains the gateway configuration


```
  "radio_conf": {  
    "mode": 1,  
    "bw": 500,  
    "cr": 5,  
    "sf": 12,  
    "ch": -1,  
    "freq": -1  
  },  
  "gateway_conf": {  
    "gateway_ID": "000000XXXXXXDEF0",  
    "ref_latitude": "my_lat",  
    "ref_longitude": "my_long",  
    "wappkey": false,  
    "raw": false,  
    "aes": false,  
    "log_post_processing": true,  
    "log_weekly": false,  
    "dht22": 0,  
    "dht22_mongo": false,  
    "downlink": 0,  
    "status": 600,  
    "aux_radio": 0  
  },  
  ...
```

Set "mode" to -1 if you want to use bw, cr and sf parameters


Set "ch" to a channel number if you don't want to use the default channel (which is channel 10 in the 868 band channel 05 in 900 band and channel 00 in the 433 band).

Set "freq" to a frequency, e.g. 865.2, if you want to specify a given frequency, "freq" has priority over "ch"

DEFAULT CONFIGURATION

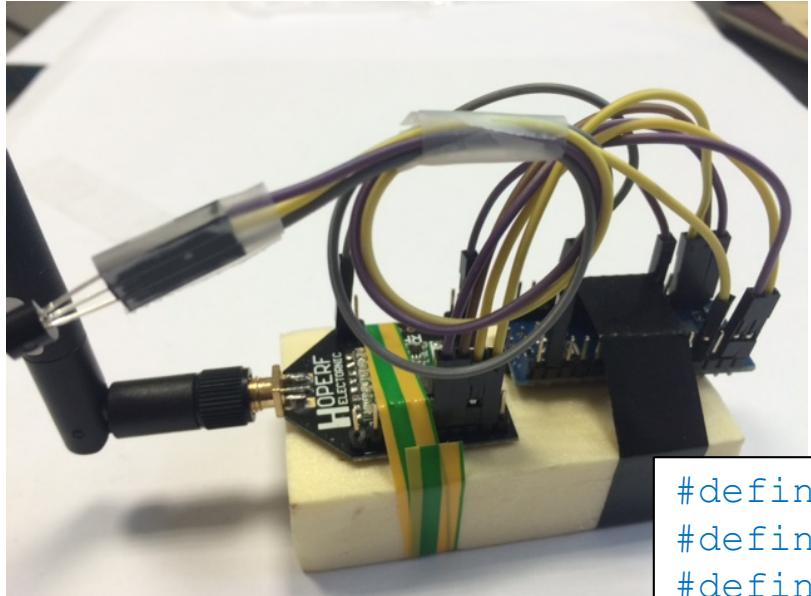

\!##TC/18.5

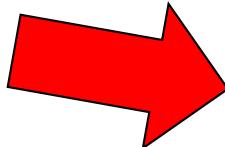

```
#define DEFAULT_DEST_ADDR 1
#define LORAMODE 1
#define node_addr 6
```



The default configuration in the Arduino_LoRa_Simple_temp example is:

Send packets to the gateway (one or many if in range)
LoRa mode 1 & Node short address is 6

The default gateway configuration is also LoRa mode 1

CHECK THAT THE GATEWAY IS RUNNING

- Use option 3 of the text interface

```
BEGIN OUTPUT
Check for lora_gateway process
#####
root    4119  0.0  0.3   6780  3184 ?      S  10:21  0:00 sudo python start_gw.py
root    4123  0.0  0.5   9228  5180 ?      S  10:21  0:00 python start_gw.py
root    4124  0.0  0.0   1912   364 ?      S  10:21  0:00 sh -c sudo ./lora_gateway --mode 1 --ndl | python p
root    4125  0.0  0.3   6780  3188 ?      S  10:21  0:00 sudo ./lora_gateway --mode 1 --ndl
root    4131 88.5  0.2   3700  2176 ?      R  10:21  3:31 ./lora_gateway --mode 1 --ndl
pi      4176  0.0  0.2   4276  1948 pts/1    S+ 10:25  0:00 grep -e start_gw -e lora_gateway -e post_processing
#####
The gateway is running if you see the lora_gateway process
END OUTPUT
Press RETURN/ENTER...
```

- IMPORTANT NOTICE:** Do not launch a new gateway instance with an existing one as there will be conflict on the SPI bus.

FULL UPDATE OF GW SOFTWARE FROM GITHUB

[CongducPham / LowCostLoRaGw](#)

Code Issues Pull requests Projects Pulse Graphs

Watch 50 Star 161 Fork 95

Low-cost LoRa IoT & gateway with SX1272/76, Raspberry and Arduino

122 commits 1 branch 0 releases 2 contributors

Branch: master New pull request Find file Clone or download

Congduc Pham bug fix in lora_gateway.cpp	Latest commit a0daa4a a day ago
Arduino update SMS scripts	15 days ago
gw_full_latest bug fix in lora_gateway.cpp	a day ago
tutorials update SMS scripts	15 days ago
.gitignore .DS_Store banished	10 months ago
README.md update README	11 days ago

Branch: master LowCostLoRaGw / gw_full_latest /	
Congduc Pham update README	
..	
aes-python-lib/LoRaWAN	add the gw_full_latest folder for easier
downlink	add the gw_full_latest folder for easier
php	add the gw_full_latest folder for easier
rapidjson	add the gw_full_latest folder for easier
scripts	add the gw_full_latest folder for easier
sensors_in_raspi	add the gw_full_latest folder for easier
CloudFireBase.py	update Cloud management with separa
CloudFireBaseAES.py	some more bug fixes
CloudFireBaseLWAES.py	some more bug fixes
CloudGroveStreams.py	update Cloud management with separa
CloudMongoDB.py	update cloud scripts
CloudThingSpeak.py	update Cloud management with separa
MongoDB.py	add the gw_full_latest folder for easier
README-NewCloud.md	update Cloud management with separa
README-advanced.md	update README

The software should be installed in a `lora_gateway` folder. Delete any previous folder.

```
> rm -rf lora_gateway
```

then

```
> mkdir lora_gateway
> git clone https://github.com/CongducPham/LowCostLoRaGw.git
> cp -r LowCostLoRaGw/gw_full_latest/* lora_gateway/
```

or

```
> svn checkout https://github.com/CongducPham/LowCostLoRaGw/trunk/gw_full_latest lora_gateway
```

COMPILING THE GW SOFTWARE

```
> cd lora_gateway  
> make lora_gateway  
g++ -DRASPERRY -DIS_RCV_GATEWAY -c lora_gateway.cpp -o lora_gateway.o  
g++ -c arduPi.cpp -o arduPi.o  
g++ -c SX1272.cpp -o SX1272.o  
g++ -lrt -lpthread lora_gateway.o arduPi.o SX1272.o -o lora_gateway
```

Edit radio.makefile for PABOOST setting. If inAir9B, RFM92W/FM95W, NiceRF1272, uncomment:

CFLAGS=-DPABOOST

If inAir9/inAir4, Libelium SX1272, leave commented:

#CFLAGS=-DPABOOST

If you have a RPI 2 or RPI3, then type:

```
> make lora_gateway_pi2
```

USE A SCRIPT TO UPDATE THE GATEWAY

- Alternatively, the gateway can also be updated to the latest version with the `update_gw.sh` script (this script is called by the web interface).
- The first step is to get the latest version of the update script

```
> cd  
> svn checkout https://github.com/CongducPham/LowCostLoRaGw/trunk/gw_full_latest/scripts  
> cd scripts  
> ll  
total 48  
-rw-r--r-- 1 pi pi 3561 May 10 17:31 bashrc.sh  
-rwxr-xr-x 1 pi pi 10562 May 10 17:31 config_gw.sh  
-rw-r--r-- 1 pi pi 230 May 10 17:31 interfaces_ap  
-rwxr-xr-x 1 pi pi 99 May 10 17:31 mnt-dropbox  
-rwxr-xr-x 1 pi pi 610 May 10 17:31 mongodb_repair.sh  
-rwxr-xr-x 1 pi pi 816 May 10 17:31 start_access_point.sh  
-rwxr-xr-x 1 pi pi 57 May 10 17:31 start_gw.sh  
-rwxr-xr-x 1 pi pi 673 May 10 17:31 stop_access_point.sh  
-rwxr-xr-x 1 pi pi 37 May 10 17:31 unmnt_dropbox  
-rwxr-xr-x 1 pi pi 1537 May 10 17:31 update_gw.sh
```

UPDATING THE GATEWAY SOFTWARE

- ❑ It is also possible to get only this script
 - ❑ wget
https://raw.githubusercontent.com/CongducPham/LowCostLoRaGw/master/gw_full_latest/scripts/update_gw.sh
- ❑ Then type the following commands
 - ❑ rm -rf lora_gateway
 - ❑ ./update_gw.sh
- ❑ Removing any previous lora_gateway folder triggers a full update
- ❑ The gateway will obtain the latest distribution from our github repository and will create a new lora_gateway folder
- ❑ Next periodic updates without deleting the existing lora_gateway folder, i.e. preserving existing configuration files, will be presented later on

CONFIGURING THE GATEWAY

- ❑ Go into the scripts folder in the newly created lora_gateway folder
- ❑ Run the basic_config_gw.sh script
 - ❑ ./basic_config_gw.sh
- ❑ The script will get the hardware address of the gateway to define the gateway'id, using the last 5 bytes of the MAC address
 - ❑ ifconfig

```
[pi@raspberrypi:~ $ ifconfig
eth0      Link encap:Ethernet HWaddr b8:27:eb:79:5c:47
          inet addr:10.0.13.185 Bcast:10.0.13.255 Mask:255.255.255.0
          inet6 addr: fe80::ba27:ebff:fe79:5c47/64 Scope:Link
            UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
            RX packets:3500 errors:0 dropped:0 overruns:0 frame:0
```

- ❑ It will also compile the low-level gateway software, remember to check compilation options of radio.makefile
- ❑ If you need advanced configuration, use config_gw and follow the instructions as shown in the next slides **otherwise you are all done**

ADVANCED CONFIGURATION ONLY (1)

```
*****  
*** compile lora_gateway executable Y/N ***  
*****
```

Enter Y

```
*****  
*** create log symb link to ~/Dropbox/LoRa-test Y/N ***  
*****
```

Enter Y

```
*****  
*** configure hostapd.conf Y/N ***  
*****
```

Enter Y

```
*****  
*** configure a newly installed hostapd/dnsmasq package Y/N ***  
*****
```

Enter N

```
*****  
*** configure bluetooth network name Y/N ***  
*****
```

Enter N

```
*****  
*** install DHT22 support Y/N ***  
*****
```

Enter Y

ADVANCED CONFIGURATION ONLY (2)

```
*****  
*** edit gateway_conf.json now? Y/N ***  
*****
```

Enter N

```
*****  
*** activate DHT22 MongoDB Y/N/Q ***  
*****
```

Enter Q

```
*****  
*** edit LoRa data MongoDB local storage option? Y/N ***  
*****
```

Enter N

```
*****  
*** run gateway at boot Y/N ***  
*****
```

Enter Y

```
*****  
*** check configuration (recommended) Y/N ***  
*****
```

Enter N

```
*****  
*** reboot Y/N ***  
*****
```

Enter N

GATEWAY'S ID

- The gateway's ID is derived from the RPI MAC address, using the last 5 bytes

```
pi@raspberrypi:~ $ ifconfig
eth0      Link encap:Ethernet HWaddr b8:27:eb:79:5c:47
          inet addr:10.0.13.185 Bcast:10.0.13.255 Mask:255.255.255.0
          inet6 addr: fe80::ba27:ebff:fe79:5c47/64 Scope:Link
          UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
          RX packets:3500 errors:0 dropped:0 overruns:0 frame:0
```

- Here the gateway's ID is 00000027EB795C47
- This information is stored in `gateway_id.txt` and in `gateway_conf.json`
 - `"gateway_conf": {
 "gateway_ID": "00000027EB795C47",
 ...
}`
- `basic_config_gw.sh` also builds the MD5 hash version of the gateway's ID and stores it in `gateway_id.md5`
- The ID is re-created at boot so that a newly installed gateway has the correct ID
- It is recommended to use this default gateway ID

START THE COMMAND INTERFACE

```
> ./cmd.sh
```

As you can see, the gateway id shown by the command interface is now correct

```
pi@raspberrypi:~/lora_gateway $ ./cmd.sh
=====
Gateway 00000027EB795C47 ====
+-----+
0- sudo python start_gw.py
1- sudo ./lora_gateway --mode 1
2- sudo ./lora_gateway --mode 1 | python post_processing_gw.py
3- ps aux | grep -e start_gw -e lora_gateway -e post_proc -e log_gw
4- tail --line=25 ../Dropbox/LoRa-test/post-processing.log
5- tail --line=25 -f ../Dropbox/LoRa-test/post-processing.log
6- less ../Dropbox/LoRa-test/post-processing.log
-----* Connectivity *---+
f- test: ping www.univ-pau.fr
g- wifi: configure as WiFi client at next reboot
h- wifi: indicate WiFi SSID and password at next reboot
i- wifi: configure as WiFi access point at next reboot
-----* Filtering msg *---+
l- List LoRa reception indications
m- List radio module reset indications
n- List boot indications
o- List post-processing status
p- List low-level gateway status
-----* Configuration *---+
A- show gateway_conf.json
B- edit gateway_conf.json
C- show clouds.json
D- edit clouds.json
-----* ngrok *---+
M- get and install ngrok
N- ngrok authtoken
O- ngrok tcp 22
-----* Update *---+
U- update to latest version on repository
V- download and install a file
W- run a command
-----* kill *---+
K- kill all gateway related processes
k- kill rfcomm-server process
R- reboot gateway
S- shutdown gateway
-----+-
Q- quit
=====

Enter your choice:
```

PERIODIC UPDATE PROCEDURE

- You can use option **U** to update from repository and still keep all your configuration files: gateway_conf.json, clouds.json and key*
- This simply call update_gw.sh
- You can also install a single file with option **V** that will prompt for a URL
- You can enter a URL that has been provided by some administrator
- Example in the next slide

```
pi@raspberrypi:~/lora_gateway $ ./cmd.sh
=====
* Gateway 00000027EB795C47 ===+
0- sudo python start_gw.py
1- sudo ./lora_gateway --mode 1
2- sudo ./lora_gateway --mode 1 | python post_processing_gw.py
3- ps aux | grep -e start_gw -e lora_gateway -e post_proc -e log_gw
4- tail --line=25 ../Dropbox/LoRa-test/post-processing.log
5- tail --line=25 -f ../Dropbox/LoRa-test/post-processing.log
6- less ../Dropbox/LoRa-test/post-processing.log
-----* Connectivity *---+
f- test: ping www.univ-pau.fr
g- wifi: configure as WiFi client at next reboot
h- wifi: indicate WiFi SSID and password at next reboot
i- wifi: configure as WiFi access point at next reboot
-----* Filtering msg *---+
l- List LoRa reception indications
m- List radio module reset indications
n- List boot indications
o- List post-processing status
p- List low-level gateway status
-----* Configuration *---+
A- show gateway_conf.json
B- edit gateway_conf.json
C- show clouds.json
D- edit clouds.json
-----* ngrok *---+
M- get and install ngrok
N- ngrok authtoken
O- ngrok tcp 22
-----* Update *---+
U- update to latest version on repository
V- download and install a file
W- run a command
-----* kill *---+
K- kill all gateway related processes
k- kill rfcomm-server process
R- reboot gateway
S- shutdown gateway
-----* ---+---+
Q- quit
=====

Enter your choice:
```

DOWNLOAD AND INSTALL A FILE (1)

- With option **V**, you can enter an URL that points to a file. The file will be downloaded and installed in the `lora_gateway` folder.

```
Enter your choice:
```

```
V
```

```
-----  
BEGIN OUTPUT
```

```
Download and install a file
```

```
Enter the URL of the file:
```

```
https://www.dropbox.com/s/mcmg4yeksr340c2/example-install-file.txt
```

```
Download and install a file
Enter the URL of the file:
https://www.dropbox.com/s/mcmg4yeksr340c2/example-install-file.txt
--2017-05-09 22:16:53--  https://www.dropbox.com/s/mcmg4yeksr340c2/example-install-file.txt
Resolving www.dropbox.com (www.dropbox.com)... 162.125.65.1
Connecting to www.dropbox.com (www.dropbox.com)|162.125.65.1|:443... connected.
HTTP request sent, awaiting response... 302 Found
Location: https://dl.dropboxusercontent.com/content\_link/Veb5Tx1XY65zpGTJ9ZUYQAuAwhDY9GiEmw9HUxcQXuMh62IneXy7BUp1EF450L0l/file [following]
--2017-05-09 22:16:54--  https://dl.dropboxusercontent.com/content\_link/Veb5Tx1XY65zpGTJ9ZUYQAuAwhDY9GiEmw9HUxcQXuMh62IneXy7BUp1EF450L0l/file
Resolving dl.dropboxusercontent.com (dl.dropboxusercontent.com)... 162.125.65.6
Connecting to dl.dropboxusercontent.com (dl.dropboxusercontent.com)|162.125.65.6|:443... connected.
HTTP request sent, awaiting response... 200 OK
Length: 167 [text/plain]
Saving to: 'example-install-file.txt'

example-install-file.txt      100%[=====]      167  --.-KB/s   in 0s

2017-05-09 22:16:55 (17.2 MB/s) - 'example-install-file.txt' saved [167/167]

Done
END OUTPUT
Press RETURN/ENTER...
```

DOWNLOAD AND INSTALL A FILE (2)

- This feature is very useful for end-users to simply update some files on the gateway.
 - gateway_conf.json and clouds.json
 - radio.makefile
 - ...
- An administrator can write appropriate configuration files for the end-user and generate an URL to this file (with Dropbox for instance)
- The URL can be either be sent by mail or SMS to the end-user.
- The end-user has to simply log into the gateway (using an Android smartphone or tablet connecting to the gateway's WiFi) and select option **V** to enter the URL.
- The end-user will then just reboot the gateway with option R for the new configuration to run.



DOWNLOAD AND INSTALL A FILE (3)



- System files can also be installed with option **W** that will prompt for a command

```
Enter your choice:  
W  
-----  
BEGIN OUTPUT  
Run a command  
Enter the command to run:  
sudo wget -O /etc/test.txt https://www.dropbox.com/s/mcmg4yeksr340c2/example-install-file.txt
```


- Here, the previous example file will be installed in /etc under the name test.txt
- Like previously, the exact command can be sent to the end-user

OUR LOW-COST GATEWAY ARCHITECTURE

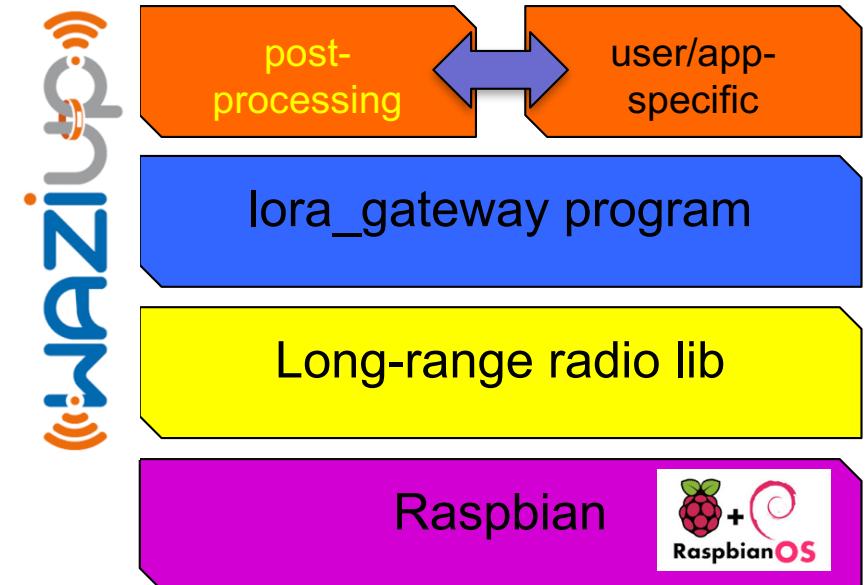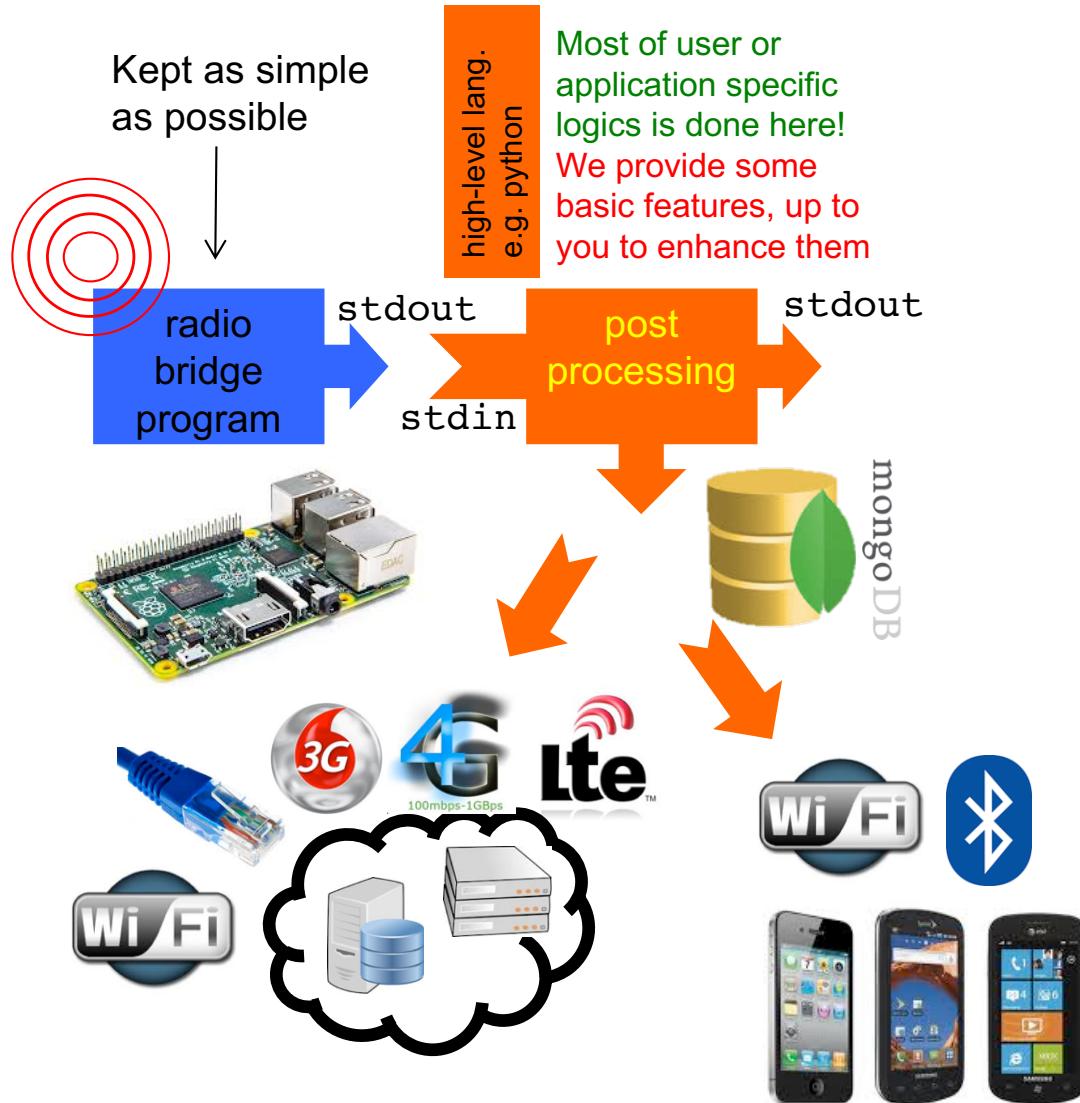

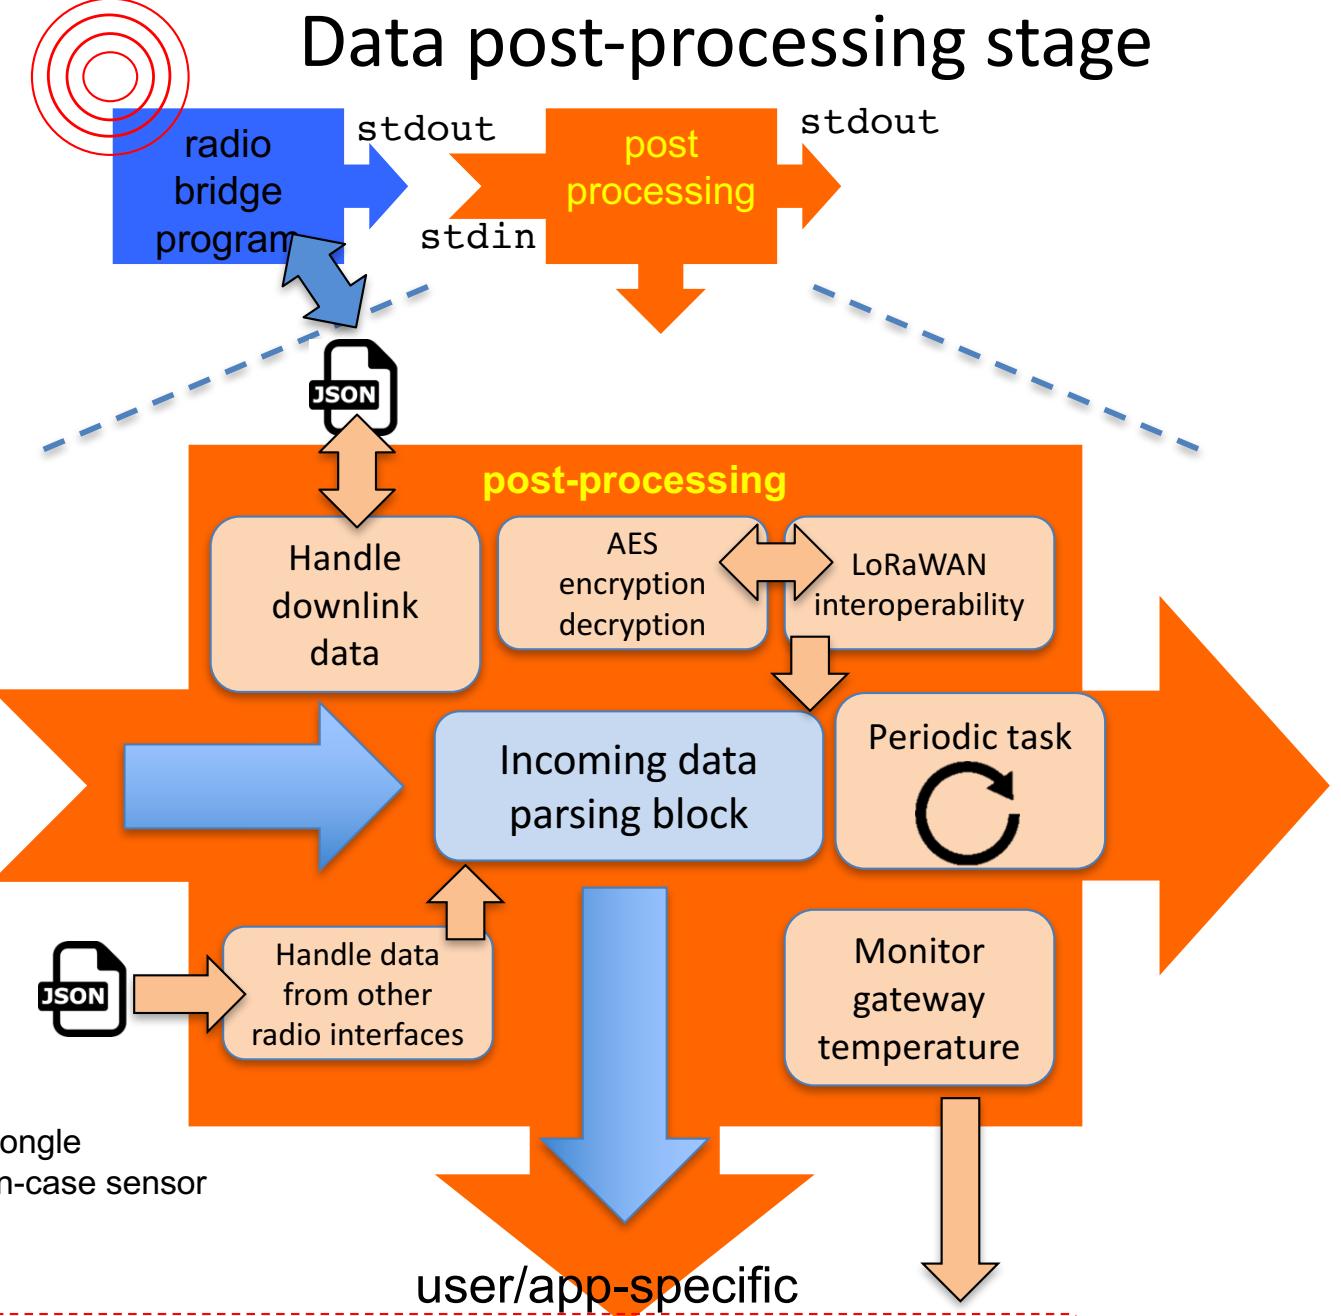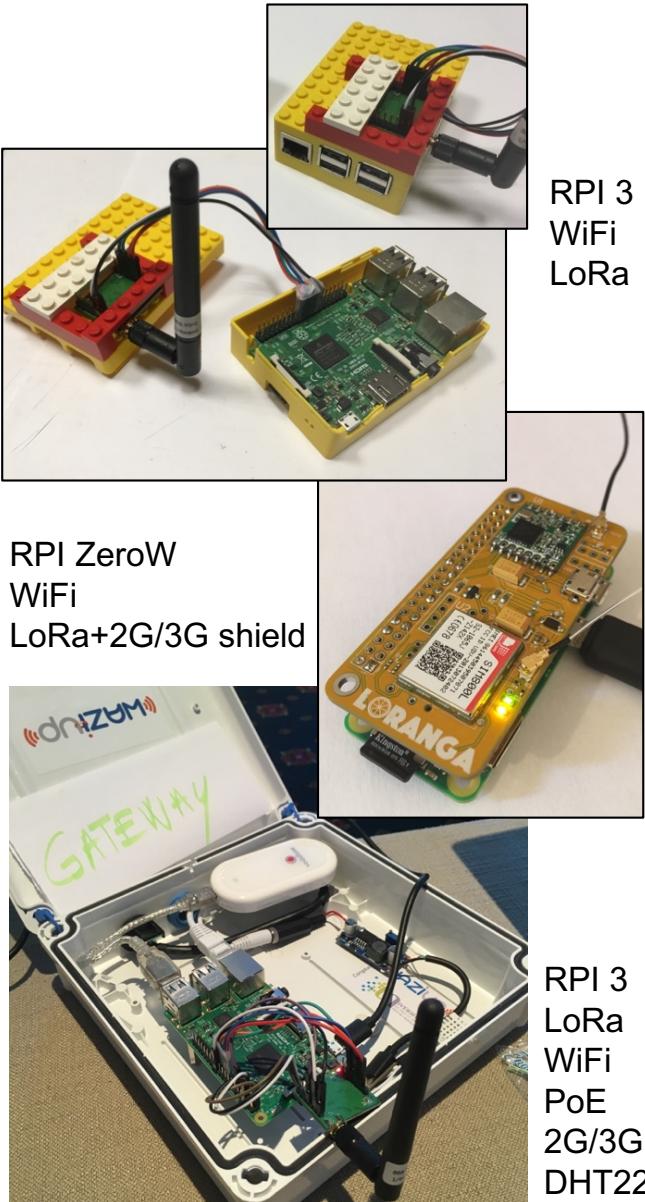

Cloud definition

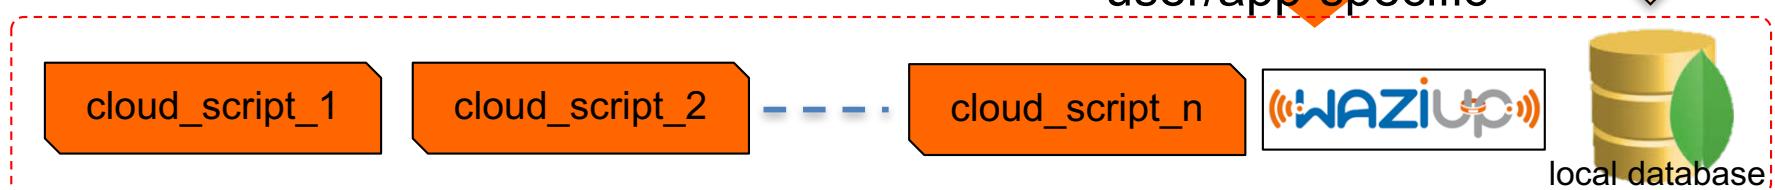


STARTING THE GATEWAY

- ❑ Remember that the gateway software is **launched** when the Raspberry is powered on
- ❑ In the next 4 slides, we will show you some details that is useful to know but that you **DO NOT** need when launching a production gateway
- ❑ If you use our SD card image and powered on your Raspberry, then you can use option 3 as explained in slide 24 to see if the gateway is running, then use option K to kill all gateway-related process to test the next 4 slides.

STARTING THE BASIC GATEWAY

```
> sudo ./lora_gateway
*****Power ON: state 0
Default sync word: 0x12
LoRa mode: 1
Setting mode: state 0
Channel CH_10_868: state 0
Set LoRa Power to M: state 0
Get Preamble Length: state 0
Preamble Length: 8
LoRa addr 1 : state 0
SX1272/76 configured as LR-BS. Waiting RF input for transparent RF-serial bridge
--- rxlora. dst=1 type=0x10 src=10 seq=0 len=4 SNR=9 RSSIpkt=-54
^p1,16,10,0,4,9,-54
^r125,5,12
^t2016-02-25T01:51:11.058
T/23
--- rxlora. dst=1 type=0x10 src=3 seq=0 len=4 SNR=8 RSSIpkt=-54
^p1,16,3,0,4,8,-54
^r125,5,12
^t2016-02-25T01:53:13.067
H/85
```

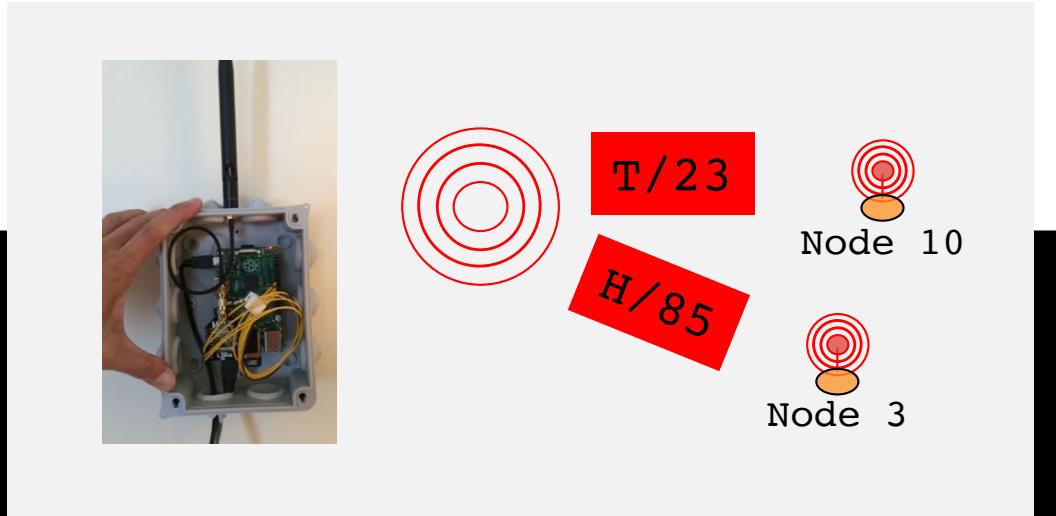

POST-PROCESSING RECEIVED DATA

```
> sudo ./lora_gateway | python ./post_processing_gw.py
*****Power ON: state 0
Default sync word: 0x12
LoRa mode: 1
Setting mode: state 0
Channel CH_10_868: state 0
Set LoRa Power to M: state 0
Get Preamble Length: state 0
Preamble Length: 8
LoRa addr 1 : state 0
SX1272/76 configured as LR-BS. Waiting RF input for transparent RF-serial bridge
--- rxlora. dst=1 type=0x10(DATA) src=10 seq=0 len=4 SNR=9 RSSIpkt=-54
Rcv ctrl packet info 1,16,10,0,4,9,-54
(dst=1 type=0x10 src=10 seq=0 len=4 SNR=9 RSSI=-54)
rcv ctrl radio info (^r): 125,5,12
splitted in: [125, 5, 12]
(BW=500 CR=5 SF=12)
rcv timestamp (^t): 2016-02-25T01:53:13.067
got first framing byte
--> got data prefix
T/23
```

All lines that are not prefixed by specific character sequence are displayed unchanged

^{^p} provides information on the last received packet: dst, type, src, seq, len, SNR & RSSI

^{^r} provides radio information on the last received packet: bw, cr & sf

^{^t} provides timestamp information on the last received packet

Pre-defined sequences inserted by the gateway or the end-device allow for information exchanged between the gateway and the post-processing program

LOG RECEIVED MESSAGES

USING CLOUD SERVICES



\!T/23



Node 10

```
SX1272/76 configured as LR-BS. Waiting RF input for transparent RF-serial bridge
--- rxlora. dst=1 type=0x10 src=10 seq=0 len=6 SNR=9 RSSIpkt=-54
Rcv ctrl packet info 1,16,10,0,6,9,-54
(dst=1 type=0x10(DATA) src=10 seq=0 len=6 SNR=9 RSSI=-54)
rcv ctrl radio info (^r): 125,5,12
splitted in: [125, 5, 12]
(BW=500 CR=5 SF=12)
rcv timestamp (^t): 2016-02-25T01:53:13.067
got first framing byte
--> got data prefix
number of enabled clouds is 1
--> cloud[0]
uploading with python CloudThingSpeak.py
ThingSpeak: uploading
rcv msg to log (\!) on ThingSpeak ( default , 4 ): 23
ThingSpeak: will issue curl cmd
curl -s -k -X POST --data field4=23 https://api.thingspeak.com/...
ThingSpeak: returned code from server is 156
--> cloud end
```


\\$ or \! before the data indicates that the data should be logged on a file or a cloud. It is up to the end-device to decide which option

STARTING THE COMPLETE GATEWAY

- The complete gateway also logs all output to a post-processing.log file. Use `sudo python start_gw.py`

```
> cd lora_gateway
> sudo python start_gw.py
sudo ./lora_gateway --mode 1 | python post_processing_gw.py | python log_gw.py
Starting thread to report gw status
2017-09-01 12:08:11.751649
post status: gw ON, lat my_lat long my_long
Current working directory: /home/pi/lora_gateway
SX1276 detected, starting.SX1276 LF/HF calibration...
*****Power ON: state 0
Default sync word: 0x12
LoRa mode 1
Setting mode: state 0
Channel CH_10_868: state 0
Set LoRa power dBm to 14
Power: state 0
Get Preamble Length: state 0
Preamble Length: 8
LoRa addr 1: state 0
SX1272/76 configured as LR-BS. Waiting RF input for transparent RF-serial bridge
```


GATEWAY TO CLOUD

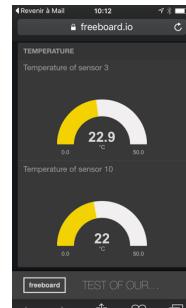

freeboard



FIWARE

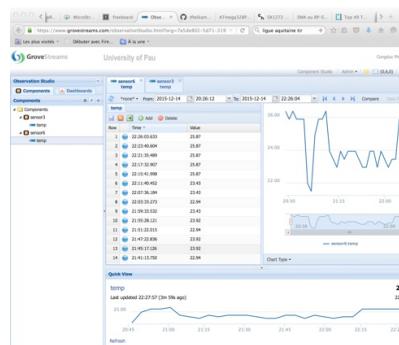

GroveStreams

SensorCloud™

Data received at the gateway can be pushed to IoT clouds. We provide python script examples for many IoT cloud platforms. Most of clouds with REST API can be easily integrated.


USING Dropbox

- A message starting with '\\$' is logged in a file 'telemetry.log' in a folder shared through Dropbox (if enabled)

```
(src=10 seq=0 len=6 SNR=9 RSSI=-54) 2015-11-04T10:14:30.328413> T/23  
(src=10 seq=1 len=8 SNR=8 RSSI=-54) 2015-11-04T10:14:37.443350> T/23.2  
(src=10 seq=2 len=6 SNR=8 RSSI=-53) 2015-11-04T10:16:23.343657> T/24  
...
```

\\$T/23

Node 10

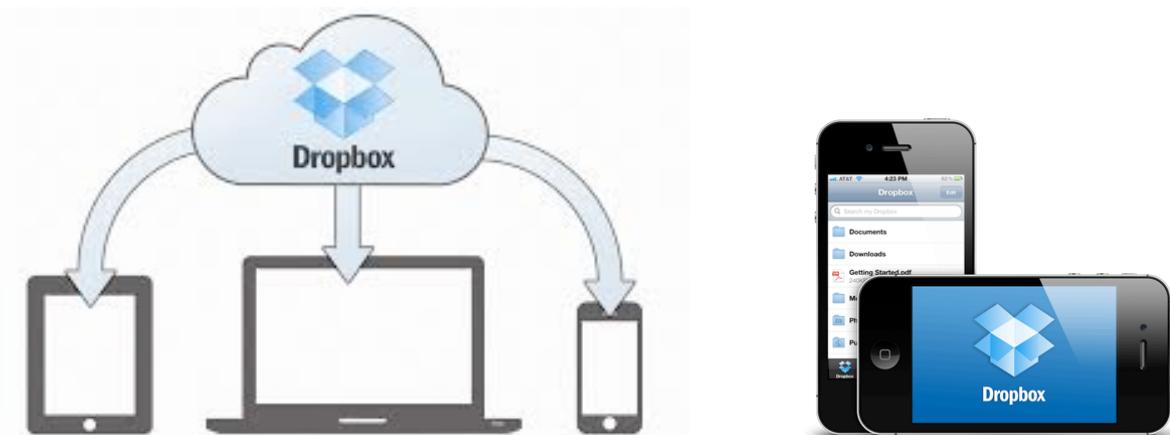

PUSHING TO IOT DATA CLOUDS

- A message starting with '\!' is uploaded on a cloud
- clouds.json file defines enabled clouds

```
{  
  "clouds": [  
    {  
      "name": "Local gateway MongoDB",  
      "notice": "do not remove the MongoDB cloud declaration, just change en.  
      "script": "python CloudMongoDB.py",  
      "type": "database",  
      "max_months_to_store": 2,  
      "enabled": false  
    },  
    {  
      "name": "WAZIUP Orion cloud new API",  
      "script": "python CloudWAZIUP.py",  
      "type": "iotcloud",  
      "enabled": true  
    },  
    {  
      "name": "ThingSpeak cloud",  
      "script": "python CloudThingSpeak.py",  
      "type": "iotcloud",  
      "enabled": true  
    },  
    {  
      "name": "NodeRed flow",  
      "script": "python CloudNodeRed.py",  
      "type": "nodered",  
      "enabled": false  
    },  
    {  
      "name": "MQTT cloud",  
      "script": "python CloudMQTT.py",  
      "type": "MQTT on test.mosquitto.org",  
      "enabled": false  
    },  
    {  
      "name": "Firebase cloud",  
      "script": "python CloudFireBase.py",  
      "type": "jsoncloud",  
      "enabled": false  
    },  
    {  
      "name": "example template",  
      "script": "name of your script, preceded by the script launcher",  
      "type": "whatever you want FYI",  
      "server": "",  
      "login": "",  
      "password": "",  
      "folder": "",  
      "write_key": "",  
      "enabled": false  
    }  
  ]  
}
```

For each cloud, you have to provide a script and the launcher program (e.g. python)

Enabled clouds will be called by the post-processing stage

EXAMPLE WITH WAZIUP CLOUD

- To use the WAZIUP cloud:

```
{  
    "name": "WAZIUP Orion cloud new API",  
    "script": "python CloudWAZIUP.py",  
    "type": "iotcloud",  
    "enabled": true  
},
```

- Edit and modify clouds.json according to your need
- CloudWAZIUP.py script will use information from key_WAZIUP.py to configure data management for each organization
- Therefore you need to configure this file for each organization/gateway

KEY_WAZIUP.PY

```
#####
#server: CAUTION must exist
orion_server="http://api.waziup.io/api/v1"

#project name
project_name="waziup"

#your organization: CHANGE HERE
#choose one of the following: "DEF", "UPPA", "EGM", "IT21", "CREATENET", "CTIC", "UI", "ISPACE",
#"UGB", "WOELAB", "FARMERLINE", "C4A", "PUBD"
organization_name="ORG"

#service tree: CHANGE HERE at your convenience
#should start with -
#service_tree='TESTS'
#can be empty
service_tree=''

#sensor name: CHANGE HERE but maybe better to leave it as Sensor
#the final name will contain the sensor address
sensor_name="Sensor"

#service path: DO NOT CHANGE HERE
service_path='-' + organization_name + service_tree

#SUMMARY
#with a domain vision, the domain will be project_name+service_path, e.g waziup-UPPA-TESTS
#the entity name will then be organization_name+"_"+sensor_name+scr_addr, e.g. "UPPA_Sensor2"

source_list=[]
```

You need to change the organization_name.

service_tree is optional

EDITING KEY_WAZIUP.PY

```

pi@raspberrypi: ~/lo... pi@raspberrypi: ~/lo... pi@raspberrypi: ~/lo... pi@raspberrypi: ~/lo... nano key_WAZIUP.py ...WaterSense — -bash + 
GNU nano 2.0.6 File: key_WAZIUP.py Modified

#####
#server: CAUTION must exist
orion_server="http://api.waziup.io/api/v1"

#project name
project_name="waziup"

#your organization: CHANGE HERE
#choose one of the following: "DEF", "UPPA", "EGM", "IT21", "CREATENET", "CTIC", "UI", "ISPACE", "UGB", "WOELAB",
organization_name="ORG"

#service tree: CHANGE HERE at your convenience
#should start with -
#service_tree='TESTS'
#can be empty
service_tree=''

#sensor name: CHANGE HERE but maybe better to leave it as Sensor
#the final name will contain the sensor address
sensor_name="Sensor"

#service path: DO NOT CHANGE HERE
service_path='-' + organization_name + service_tree

#SUMMARY
#with a domain vision, the domain will be project_name+service_path, e.g waziup-UPPA-TESTS
#the entity name will then be organization_name+"_"+sensor_name+scr_addr, e.g. "UPPA_Sensor2"

source_list=[]

```

^G Get Help ^O WriteOut ^R Read File ^Y Prev Page ^K Cut Text ^C Cur Pos

^X Exit ^J Justify ^W Where Is ^V Next Page ^U Uncut Text ^T To Spell

Use nano to edit the file:


> nano key_WAZIUP.py

Then CTRL-O + RETURN to
save

CTRL-X to quit

THE WAZIUP CLOUD PLATFORM

□ dashboard.waziup.io

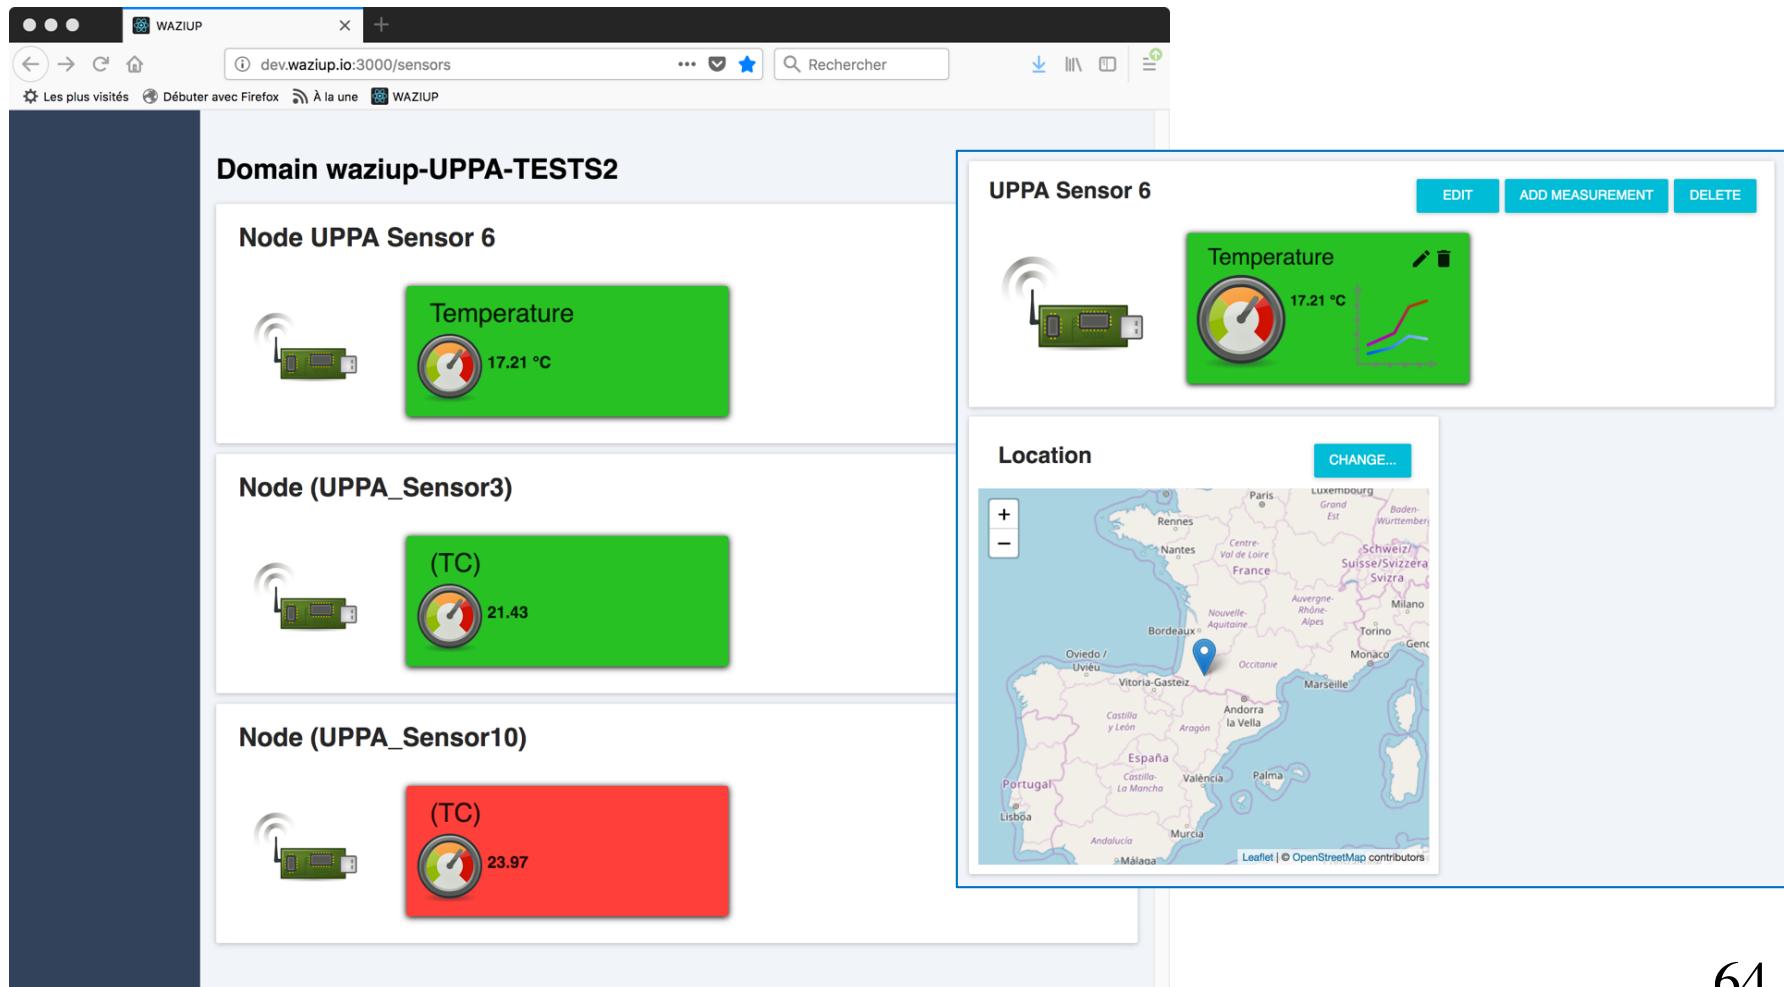

The screenshot shows the WAZIUP Cloud Platform dashboard. At the top, a browser window displays the URL dev.waziup.io:3000/sensors. The main content area is divided into several sections:

- Domain waziup-UPPA-TESTS2**:
 - Node UPPA Sensor 6**: Shows a green card with a temperature sensor icon and the value **17.21 °C**.
 - Node (UPPA_Sensor3)**: Shows a green card with a temperature sensor icon and the value **21.43**.
 - Node (UPPA_Sensor10)**: Shows a red card with a temperature sensor icon and the value **23.97**.
- UPPA Sensor 6**: A detailed view of the first sensor, showing a green card with a temperature sensor icon, the value **17.21 °C**, and a line graph.
- Location**: A map of Europe with a blue marker indicating the location of the sensor. Labels include Rennes, Nantes, Paris, Luxembourg, Baden-Württemberg, Schweiz/Suisse/Svizzera, Suisse/Svizzera, Milano, Torino, Genova, Marseille, Bordeaux, Vitoria-Gasteiz, Andorra la Vella, Palma, and various regions of France and Spain.

EXAMPLE: ThingSpeak




ThingSpeak

User: cpham


Test LoRa UPPA

Channel ID: 66583
Author: cpham
Test of LoRa gateway at University of Pau, France


Test, lora, uppa

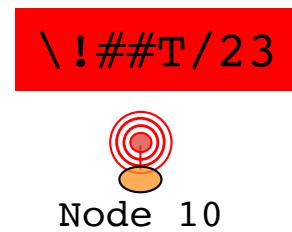

\!write_key#field_index#T/23

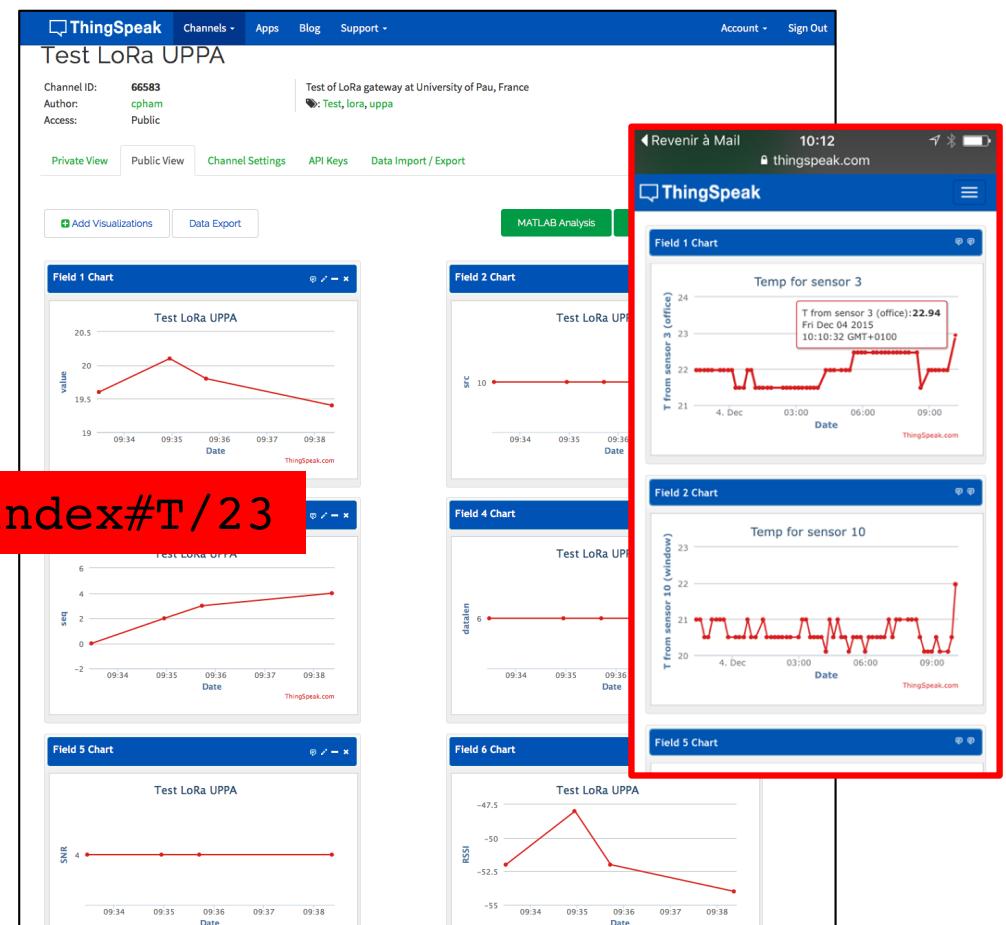

EXAMPLE: Firebase

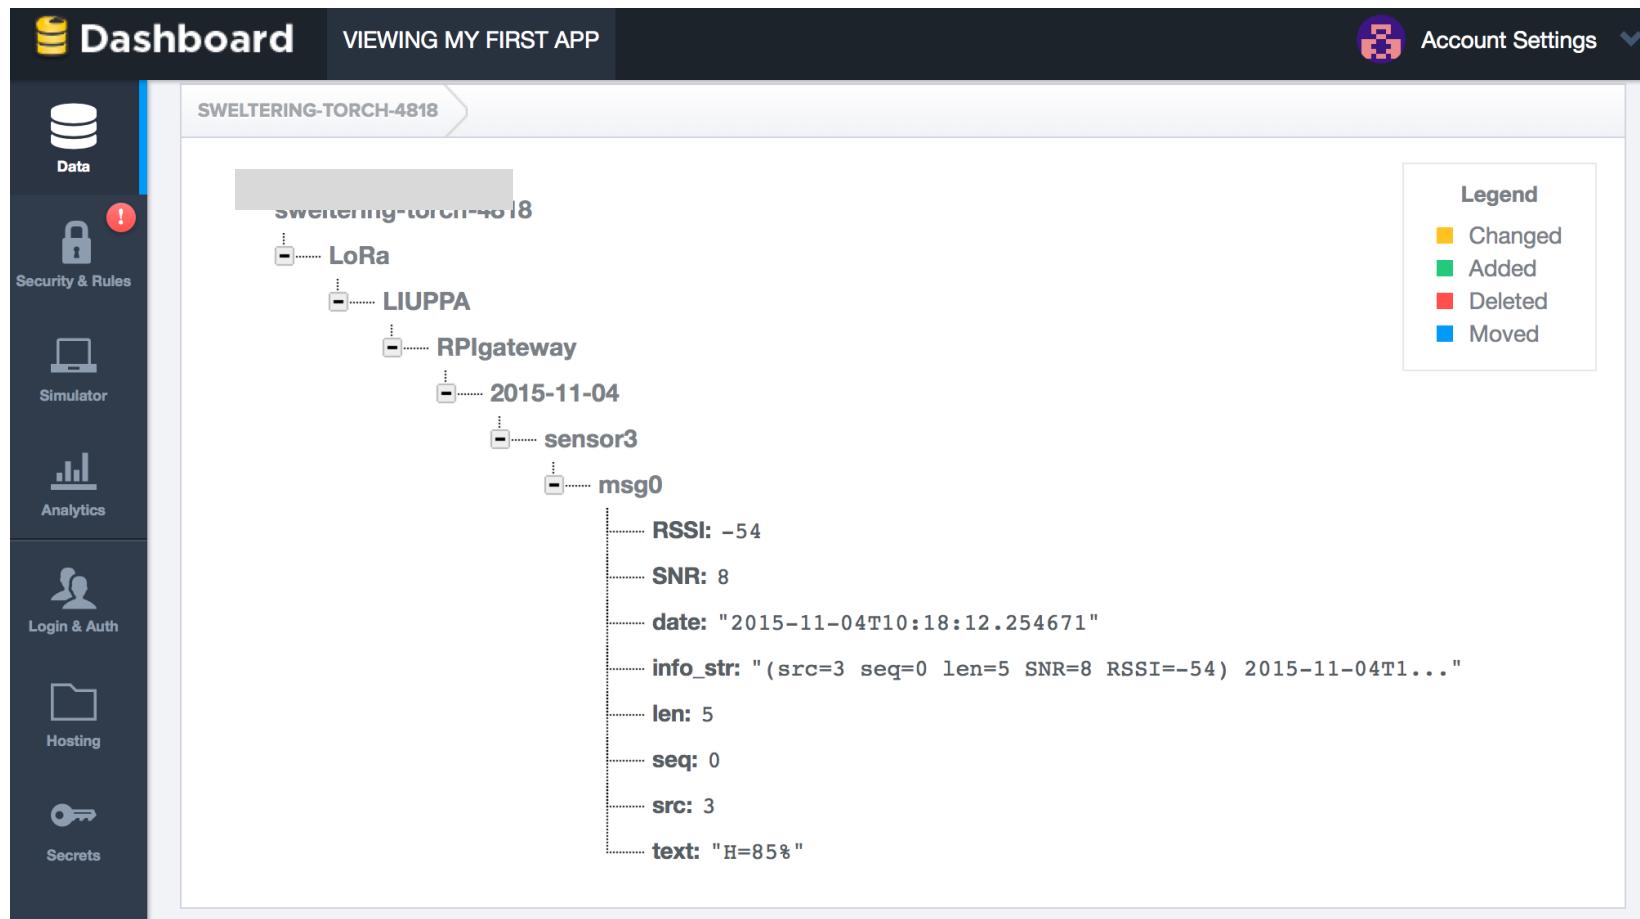


The screenshot shows the Firebase Realtime Database interface. The left sidebar contains navigation links: Dashboard (selected), Data, Security & Rules (with a red exclamation mark), Simulator, Analytics, Login & Auth, Hosting, and Secrets. The main area displays a tree structure under the app name "SWELTERING-TORCH-4818". The tree includes nodes for "LoRa", "LIUPPA", "RPIgateway", and a timestamp node "2015-11-04". Under "2015-11-04", there is a node "sensor3/msg0" which contains the following data:

```
RSSI: -54
SNR: 8
date: "2015-11-04T10:18:12.254671"
info_str: "(src=3 seq=0 len=5 SNR=8 RSSI=-54) 2015-11-04T1..."
len: 5
seq: 0
src: 3
text: "H=85%"
```


A legend on the right side defines the color coding for database changes: yellow for Changed, green for Added, red for Deleted, and blue for Moved.

EXAMPLE: **GroveStreams**

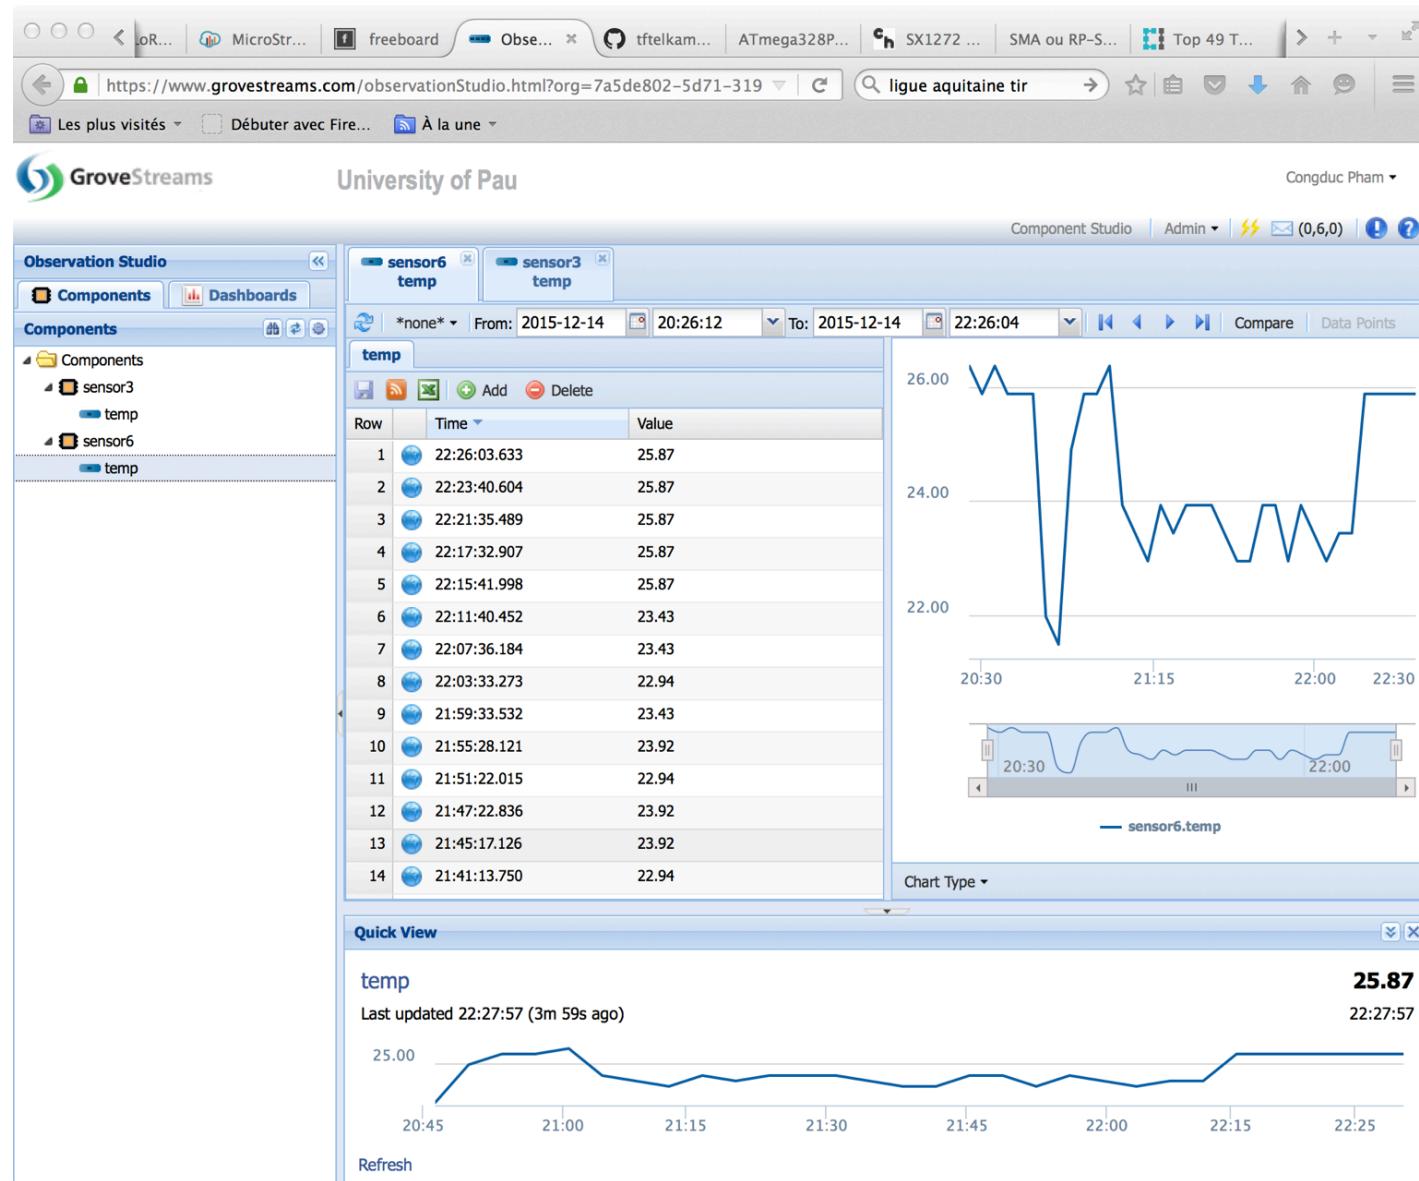

CUSTOMIZING/EXTENDING YOUR GATEWAY

- The flexible gateway architecture offers high versatility by customization
- There are 3 options for customization
- **The geek way**
 - Modify/extend post-processing script
- **The "smarter" way**
 - Add "cloud" scripts
 - On packet reception
 - Add periodic tasks
 - Independant from packet reception

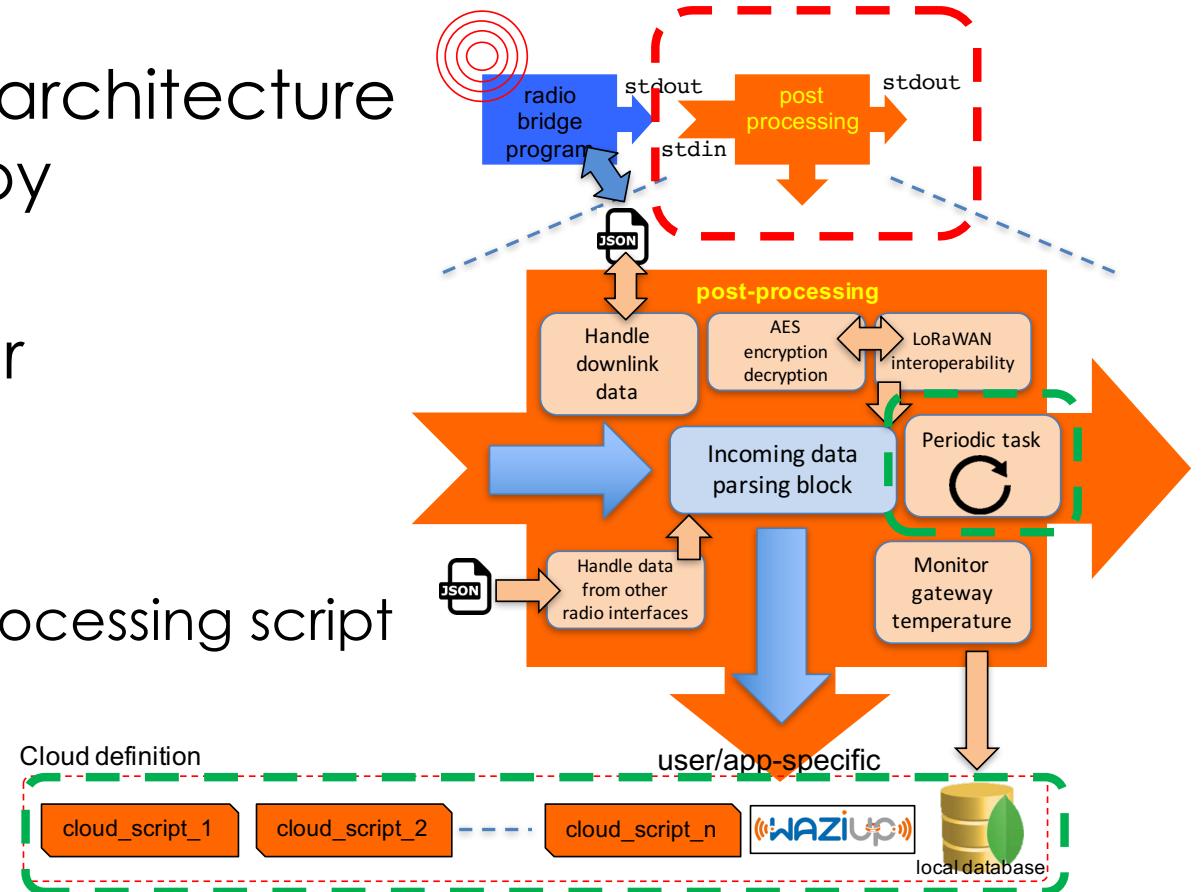

WRITE YOUR OWN CLOUD SCRIPT


- Use our templates to write your own cloud script
 - CloudWAZIUP.py, CloudMongoDB.py,
CloudThingSpeak.py, CloudGroveStreams.py,
CloudNoInternet.py, CloudNodeRed.py, ...
- A cloud script is called with 5 arguments
 - ldata: the received data
 - e.g. #4#TC/21.5 as 1st argument (sys.argv[1] in python)
 - pdata: packet information
 - e.g. "1,16,3,0,10,8,-45" as 2nd argument (sys.argv[2] in python)
 - interpreted as dst,ptype,src,seq,len,SNR,RSSI for the last received packet
 - rdata: the LoRa radio information
 - e.g. "500,5,12" as 3rd argument (sys.argv[3] in python)
 - interpreted as bw,cr,sf for the last received packet
 - tdata: the timestamp information
 - e.g. "2016-10-04T02:03:28.783385" as 4th argument (sys.argv[4] in python)
 - gwid: the gateway id
 - e.g. 00000027EBBEDA21 as 5th argument (sys.argv[5] in python)

These parameters are passed to the script. It is up to the cloud script to use these parameters or not.

EXAMPLE WITH NODE-RED


- ❑ CloudNodeRed.py shows how interface with Node-Red can be simply implemented to benefit from the facility offered by Node-Red
- ❑ We use key_NodeRed.py to define 3 variables that will be used by CloudNodeRed.py
 - ❑ project_name="waziup"
 - ❑ organization_name="UPPA"
 - ❑ sensor_name="Sensor"
- ❑ when a device which address is 2 sends "TC/22.5/HU/85" to the gateway, CloudNodeRed.py will generate the following json entries in nodered/nodered.txt file
 - ❑ {"source": "waziup_UPPA_Sensor2", "measure": "TC", "value": 22.5}
 - ❑ {"source": "waziup_UPPA_Sensor2", "measure": "HU", "value": 85}

NODE-RED FLOW (1)

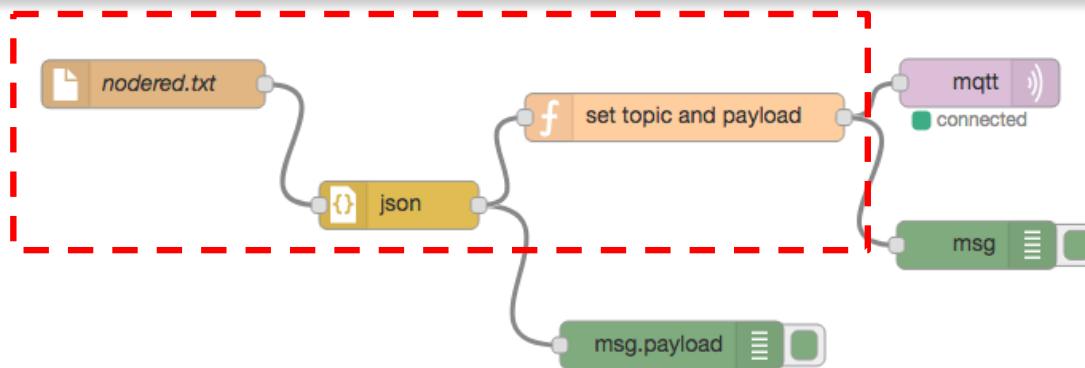

- The Node-Red flow is composed of a tail node that follows the nodered/nodered.txt file for new entries. Each entry will be converted into a json object with a json node. A function node will use the json entry to build a message as follows
 - `msg.topic=msg.payload.source+'/'+msg.payload.measure`
 - `msg.payload=msg.payload.value`
 - `return msg;`


NODE-RED FLOW (2)

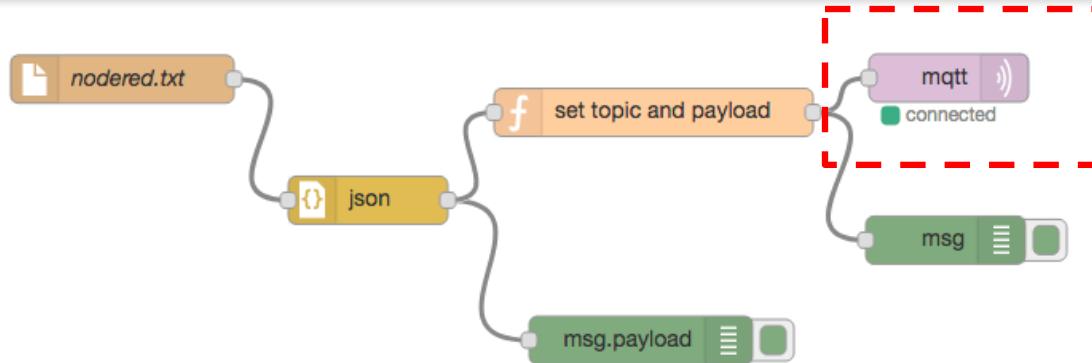

- An MQTT node using the test.mosquitto.org broker will receive the messages with the topic defined as waziup_UPPA_Sensor2/TC and waziup_UPPA_Sensor2/HU
- It will then respectively publish 22.5 and 85 under these topics
- More information on:
 - https://github.com/CongducPham/LowCostLoRaGw/blob/master/gw_full_latest/README-NodeRed.md

REBOOTING THE GATEWAY

- Your gateway is now updated and configured
- You can now reboot the gateway

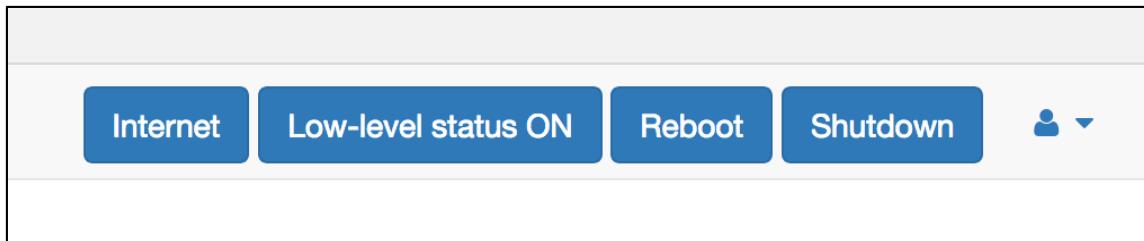

- After reboot, check the WiFi SSID which now should meet your gateway's id
- In general, try to avoid unplugging power cable to shutdown your gateway. Use the web admin interface instead
- Your gateway is now ready to be deployed.


STANDALONE GATEWAY



CONNECT TO THE EMBEDDED WEB DATA SERVER


- Received data are also stored on the gateway if CloudMongoDB.py is enabled
- On the WiFi interface
 - Gateway address is 192.168.200.1
- On the Ethernet interface
 - Gateway address is the IP address assigned by the DHCP server (of your LAN or laptop)
- Choose any of these solutions and open a web browser to enter the gateway IP address in the URL bar
 - <http://192.168.200.1>

DATA FROM THE LOCAL WEB SERVER


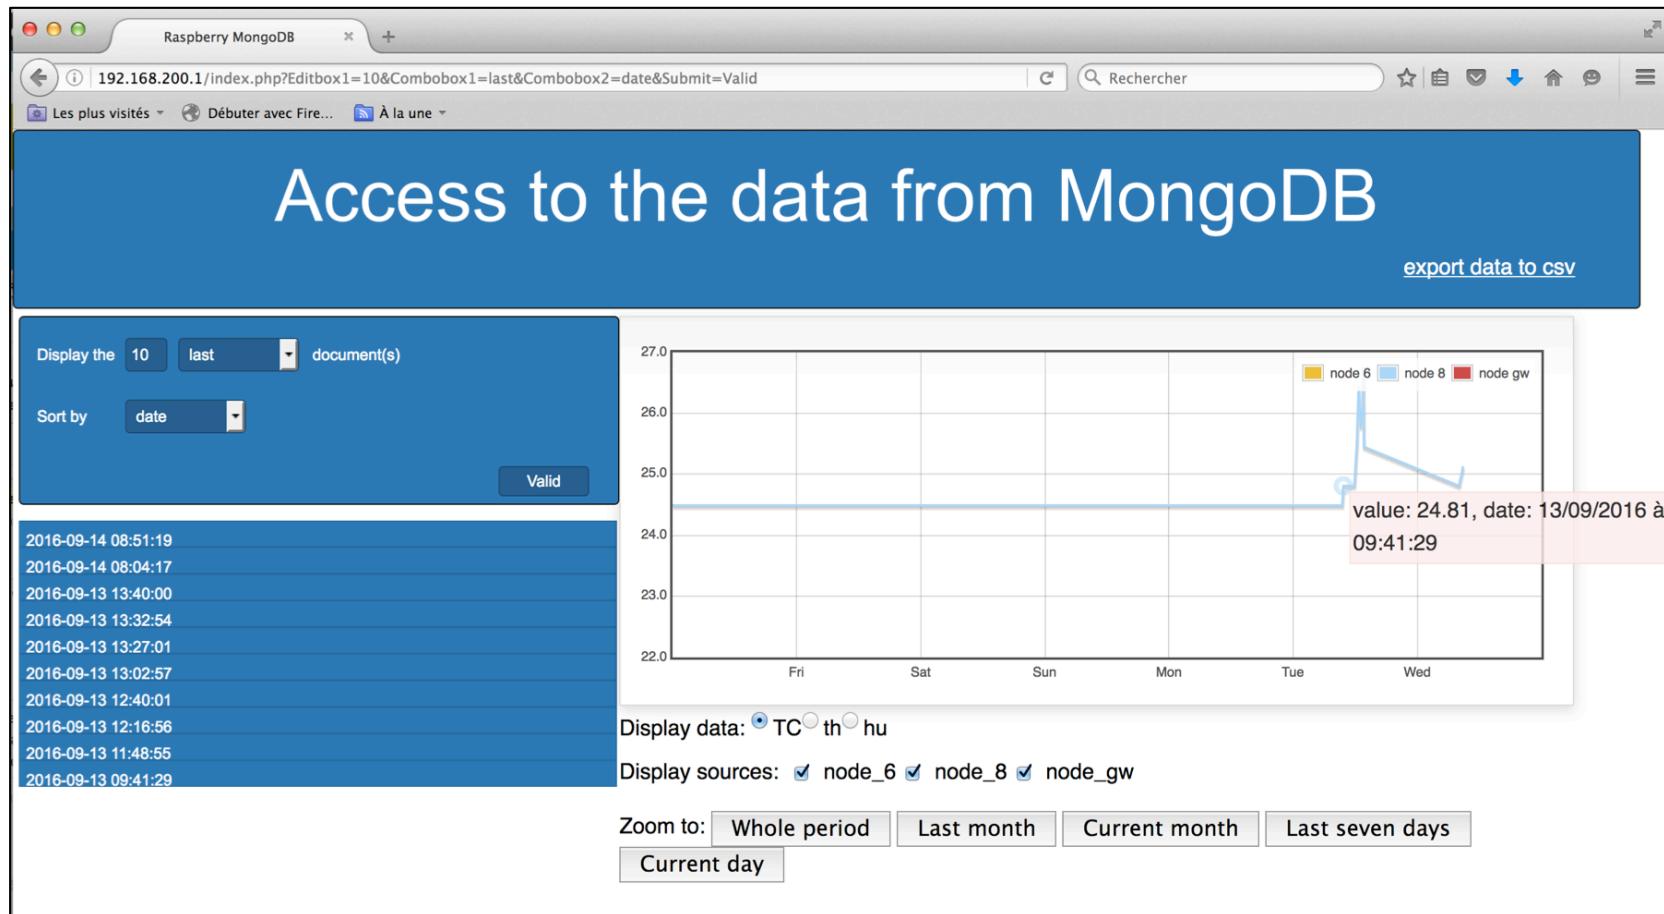


VISUALIZE IT ON YOUR SMARTPHONE!

- Don't forget to join the WAZIUP_PI_GW_xxxxxxxxxx WiFi

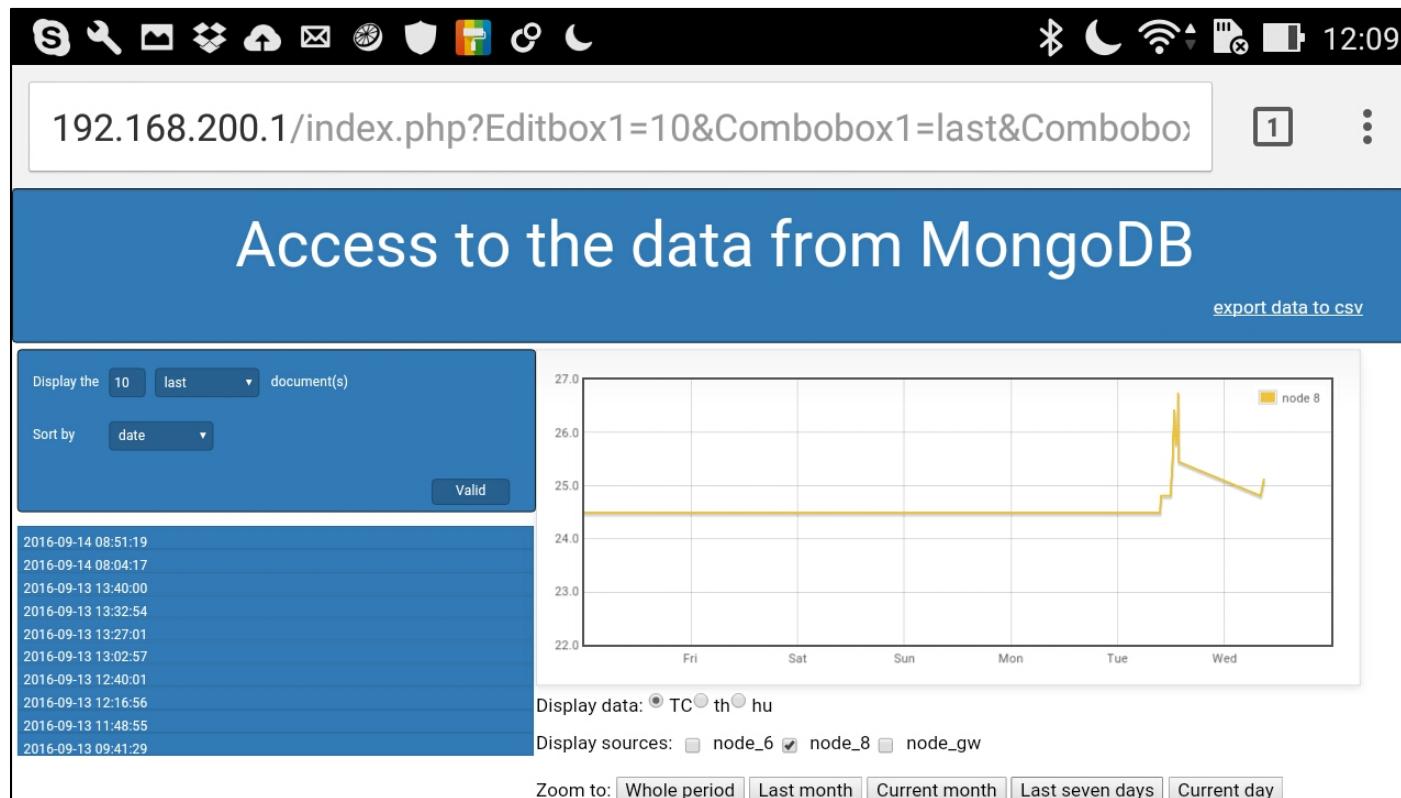

RUNNING THE GATEWAY WITHOUT INTERNET ACCESS

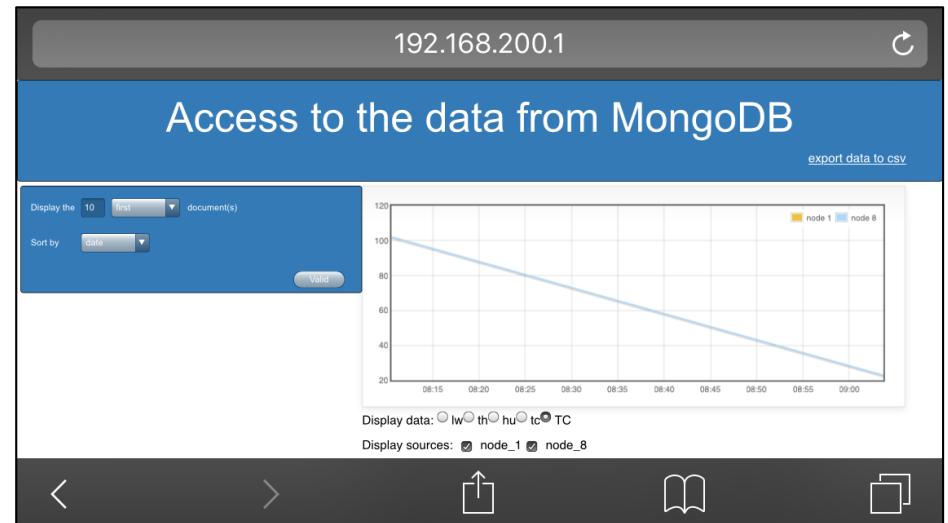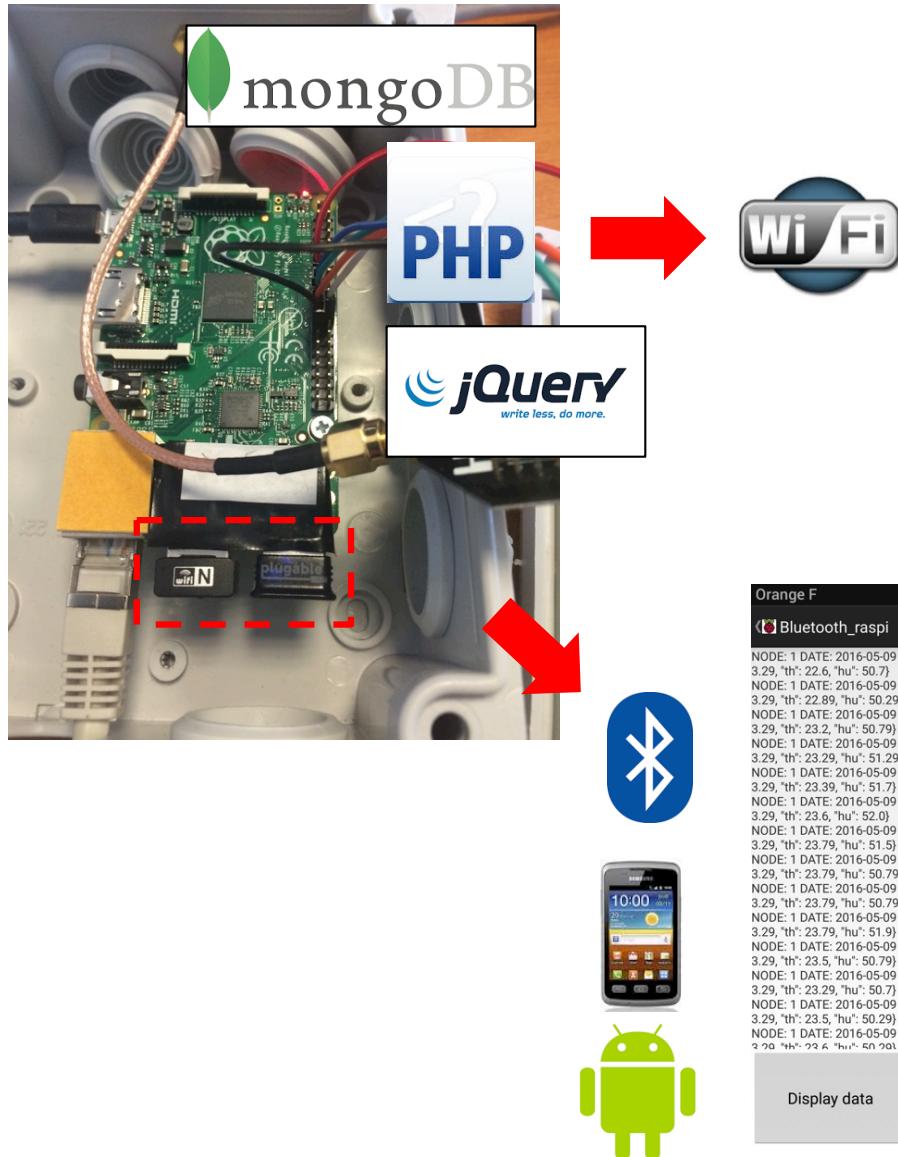

Orange F * N N 10:34
Bluetooth_raspi

```

NODE: 1 DATE: 2016-05-09 08:04:59.807000 DATA: {"lw": 3.29, "th": 22.6, "hu": 50.7}
NODE: 1 DATE: 2016-05-09 08:28:52.993000 DATA: {"lw": 3.29, "th": 22.89, "hu": 50.29}
NODE: 1 DATE: 2016-05-09 08:53:04.317000 DATA: {"lw": 3.29, "th": 23.2, "hu": 50.79}
NODE: 1 DATE: 2016-05-09 09:05:00.997000 DATA: {"lw": 3.29, "th": 23.29, "hu": 51.29}
NODE: 1 DATE: 2016-05-09 09:17:24.482000 DATA: {"lw": 3.29, "th": 23.39, "hu": 51.7}
NODE: 1 DATE: 2016-05-09 09:41:27.437000 DATA: {"lw": 3.29, "th": 23.6, "hu": 52.0}
NODE: 1 DATE: 2016-05-09 10:05:39.032000 DATA: {"lw": 3.29, "th": 23.79, "hu": 51.5}
NODE: 1 DATE: 2016-05-09 10:17:45.186000 DATA: {"lw": 3.29, "th": 23.79, "hu": 50.79}
NODE: 1 DATE: 2016-05-09 10:29:24.285000 DATA: {"lw": 3.29, "th": 23.79, "hu": 50.79}
NODE: 1 DATE: 2016-05-09 10:53:09.347000 DATA: {"lw": 3.29, "th": 23.79, "hu": 51.9}
NODE: 1 DATE: 2016-05-09 11:17:02.953000 DATA: {"lw": 3.29, "th": 23.5, "hu": 50.79}
NODE: 1 DATE: 2016-05-09 11:52:53.334000 DATA: {"lw": 3.29, "th": 23.29, "hu": 50.7}
NODE: 1 DATE: 2016-05-09 12:04:32.437000 DATA: {"lw": 3.29, "th": 23.5, "hu": 50.29}
NODE: 1 DATE: 2016-05-09 12:16:56.116000 DATA: {"lw": 3.29, "th": 22.6, "hu": 50.29}

```

Display data Retrieve data in a csv file

Orange F * N N 10:37
Bluetooth_raspi

NODES PREFERENCES

1 check to retrieve its data

8 check to retrieve its data

DATES PREFERENCES

Pick a begin date
Retrieve data since 09-05-2016

Pick an end date
Retrieve data until 17-05-2016

Display data Retrieve data in a csv file

Orange F * N N 10:39
Bluetooth_raspi

Creating .csv file with the data received...
File 17-05-2016_10h39m36s.csv created and saved in the folder /storage/emulated/0/Raspberry_local_data

Display data Retrieve data in a csv file

IMPROVING CASING AND ADDING POE TO GATEWAY




OVERVIEW OF THE PARTS




FIXING THE RASPBERRY TO THE CASE



PREPARE THE DC STEP-DOWN (LM2596)

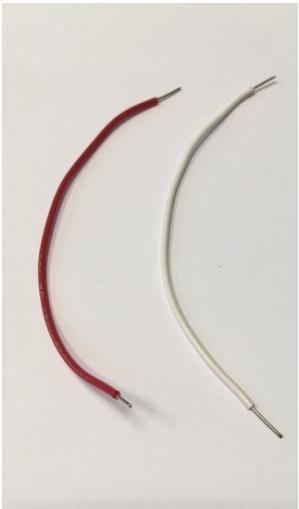


It is advised to connect the DC plugs before soldering

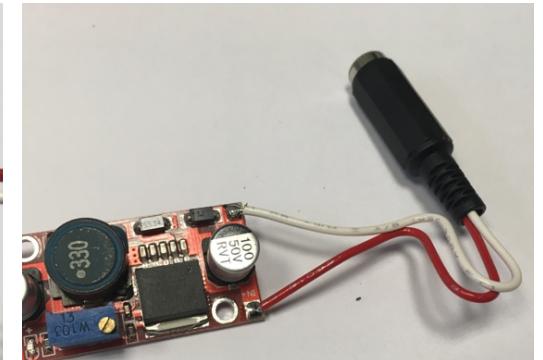

Solder to the IN part of the step-down module






Cut a USB cable, keeping the micro-USB side

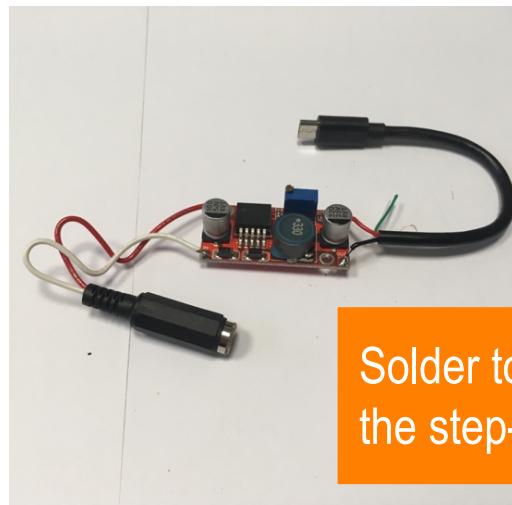


Solder to the OUT part of the step-down module

SETTING THE STEP-DOWN MODULE

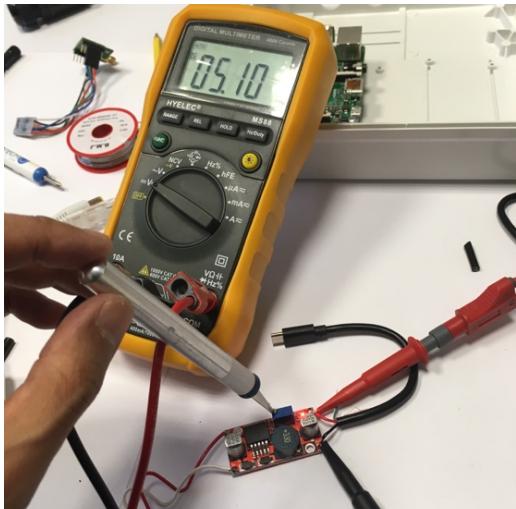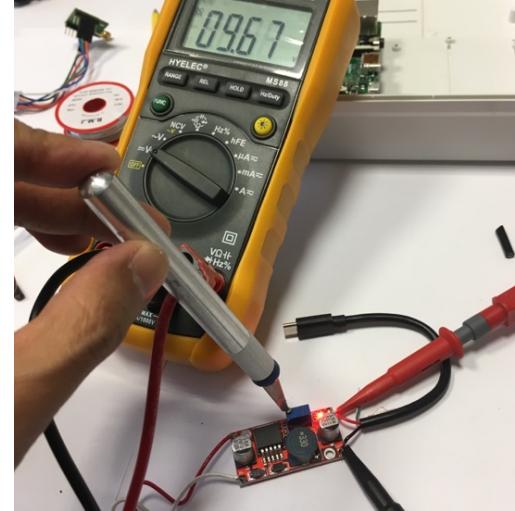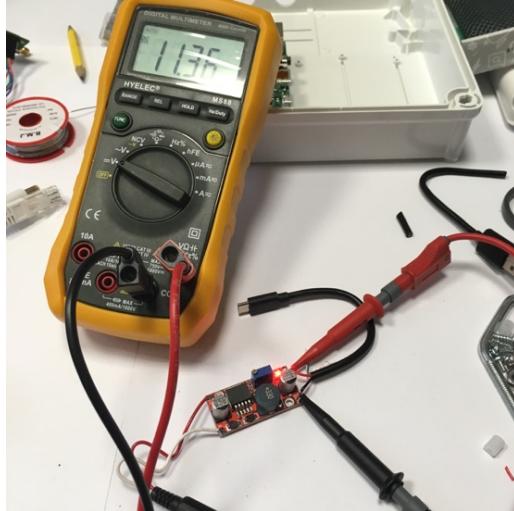


Use for instance a 9v, 12v or 18V AC-DC adaptor, connect to the IN plug, then check the output voltage with a voltmeter and turn the regulation screw until output is about 5.1v.

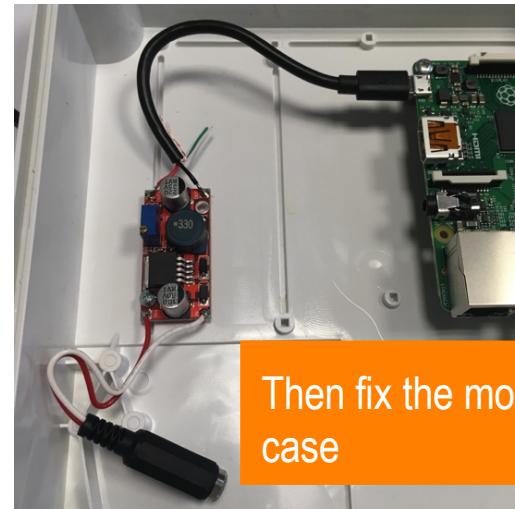


Then fix the module to the case

INSTALLING THE POE INJECTOR AND WATER-RESISTANT ETHERNET PLUG

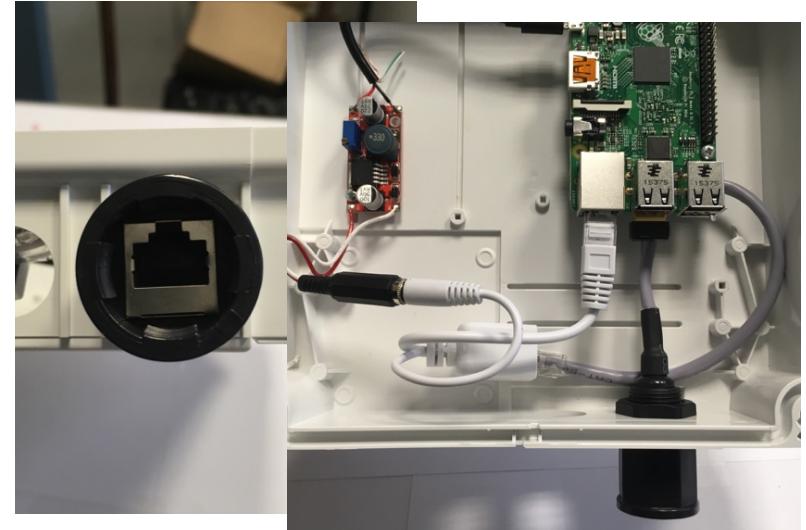

CONNECT THE RADIO MODULE

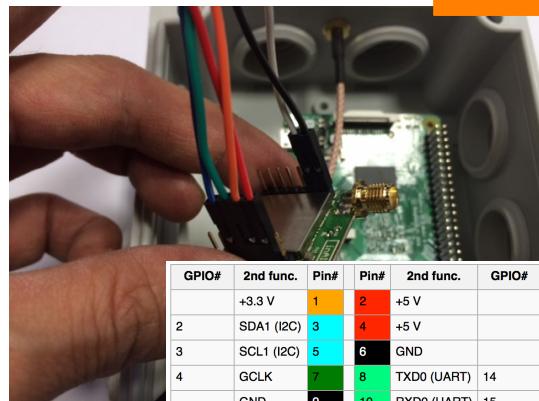


GPIO#	2nd func.	Pin#	Pin#	2nd func.	GPIO#
+3.3 V		1	2	+5 V	
2	SDA1 (I2C)	3	4	+5 V	
3	SCL1 (I2C)	5	6	GND	
4	GCLK	7	8	TXD0 (UART)	14
	GND	9	10	RXD0 (UART)	15
17	GEN0	11	12	GEN1	18
27	GEN2	13	14	GND	
22	GEN3	15	16	GEN4	23
+3.3 V		17	18	GEN5	24
10	MOSI (SPI)	19	20	GND	
9	MISO (SPI)	21	22	GEN6	25
11	SCLK (SPI)	23	24	CE0_N (SPI)	8
	GND	25	26	CE1_N (SPI)	7

(RPI 1 Models A and B stop here)

EEPROM	ID_SD	27	28	ID_SC	EEPROM
5	N/A	29	30	GND	
6	N/A	31	32		12
13	N/A	33	34	GND	
19	N/A	35	36	N/A	16
26	N/A	37	38	Digital IN	20
	GND	39	40	Digital OUT	21

Like previously shown

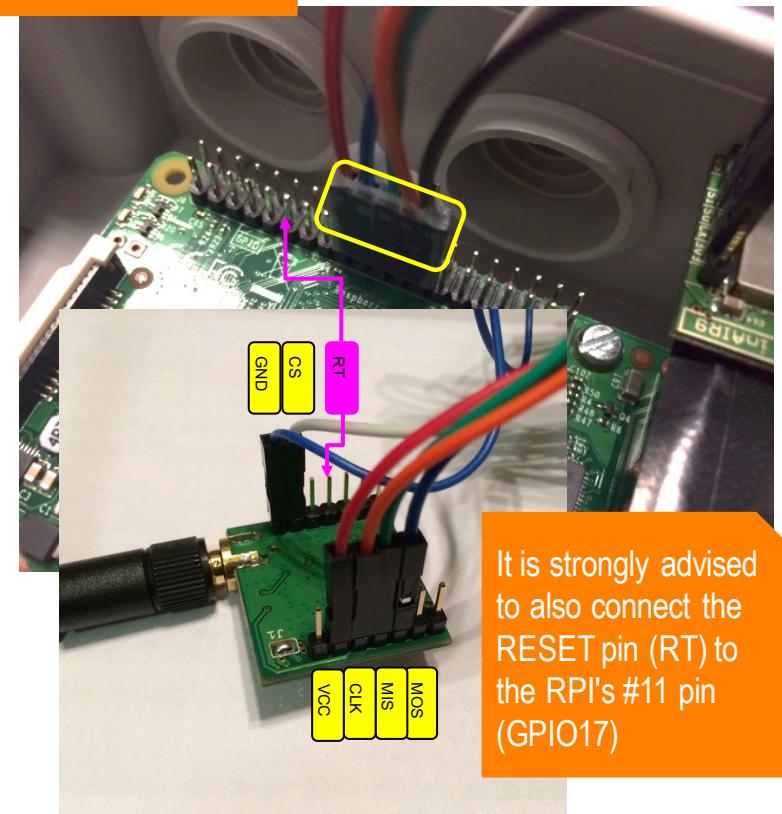

INSTALL FIXING PARTS OF THE CASE




These parts of course depends on the case that you have.

Here we use the GentleBOX JE-200 case from MHzShop.



FIXING THE ANTENNA CABLE

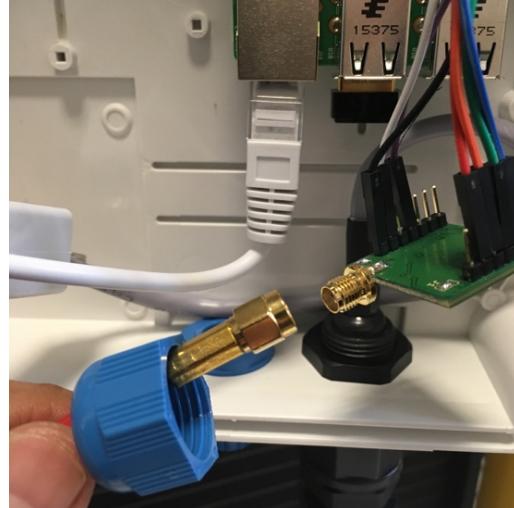

Look at the Antenna tutorial to see how an antenna cable can be made to adapt both the cable length and the antenna connectors

CONNECTING AND POWERING YOUR GATEWAY

